

VACCUM HEAD

MODEL: CE310 CE311 CE312



- Connect the swimming pool floor cleaner to end of the hose and attach to the handle. Immerse the floor cleaner and place the hose in the water in order to fill it and avoid any air entering same. Connect the hose to the awimming pool suction intel, open the suction valve resrict the flow of water through the catch batch and skimmer valves in order to increase the speed of the water circulation through the suction pipes and thus increase the suction power of the floor cleaner. When carrying out this operation, care must be taken to avoid the formation of air pockets in the installation, if this occurs, open the catch basin and skimmer valves slowly.
 - Every time floor cleaner is used, it is advisable to wash the filter afterwards and also to clean the pro-filter on the pump.
- The vacuum head has been designed to function at a flow of between 4 and 5 feet second. Use at a highter speed may cause the vacuum head to adhere to the bottom of the pool. In order to avoid too much suction, regulate flow either by adjusting the trimmer valve plates or by removing one of the baffles (rubber deflectors).
- The screw at both ends of the vacuum head can be adjusted, to increase or decrease spring strength for better swimming pool cleaning effect.

Parts list

Key NO.	Part NO.	Product Description	QTY
1	50054606802	CE310-CE312 Handle	1
2	500566094	CE310-CE312 Plastic Clip	1
3	500806068	CE310-CE312 Connector	2
4	500656071	CE310-CE312 Short Pin	2
5	11205003	CE310 Main Body	1
	11205004	CE311 Main Body	1
	11205005	CE312 Main Body	1
6	500496069	CE310-CE311 Hose Head	1
	500496070	CE312 Hose Head	1
7	112010050	Hexagon Screw	2
8	112010051	Spring	2
9	500346068	Wheel	4
10	500356068	Wheel Rack	2
11	500656072	Long Pin	4
12	112362675	M4X8 Round Cross Screw	4
13	E101601	CE310 Sink Stick	2
	E101602	CE311-CE312 Sink Stick	2
14	112050001	CE310 Brush	1
	112050002	CE311-CE312 Brush	1
15	5005516073	CE310-CE312 Hair	2
16	5005516074	CE311-CE312 Hair	1
17	111000024	CE310 Scratch Stick	2
	111000025	CE311-CE312 Scratch Stick	2

