

Power Quality Analyser UMG 512-PRO

User manual and technical data

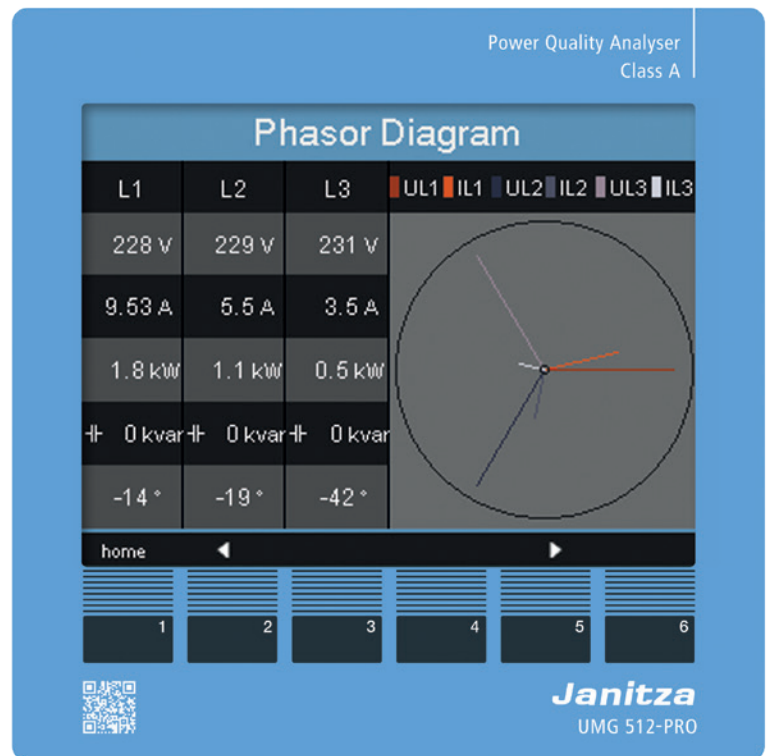


Table of contents

| | | |
|-----------|------------------------------------|-----------|
| 1. | General | 1 |
| 1. 1 | Disclaimer | 1 |
| 1. 2 | Copyright notice | 1 |
| 1. 3 | Technical changes | 1 |
| 1. 4 | Declaration of conformity | 1 |
| 1. 5 | Comments on the manual | 1 |
| 1. 6 | Meaning of symbols | 1 |
| 2. | Safety | 3 |
| 2. 1 | Safety information | 3 |
| 2. 2 | Safety measures | 4 |
| 2. 3 | Qualified staff | 4 |
| 3. | Proper use | 5 |
| 3. 1 | Inspection on receipt | 5 |
| 3. 2 | Scope of delivery | 6 |
| 3. 3 | Available accessories | 6 |
| 4. | Product description | 7 |
| 4. 1 | Measuring process | 7 |
| 4. 2 | Usage concept | 7 |
| 4. 3 | GridVis® network analysis software | 7 |
| 4. 4 | Features | 8 |
| 4. 5 | Product overview | 9 |
| 5. | Installation | 11 |
| 5. 1 | Position of installation | 11 |
| 5. 2 | Mounting position | 11 |
| 5. 3 | Mounting | 11 |
| 6. | Network systems | 13 |
| 6. 1 | Three-phase 3-conductor systems | 14 |
| 6. 2 | Three-phase 4-conductor systems | 14 |
| 6. 3 | Rated voltages | 15 |

| | | |
|------------|--|-----------|
| 7. | Installation | 17 |
| 7. 1 | Connection to a PC | 17 |
| 7. 2 | Ground wire connection | 18 |
| 7. 3 | Disconnectors | 18 |
| 7. 4 | Supply voltage | 18 |
| 7. 5 | Measured voltage | 19 |
| 7. 5. 1 | Overvoltage | 19 |
| 7. 5. 2 | Frequency | 19 |
| 7. 6 | Current measurement | 20 |
| 7. 6. 2 | Current direction | 21 |
| 7. 6. 3 | Total current measurement | 21 |
| 7. 6. 1 | Ammeter | 21 |
| 7. 7 | Connection variants | 22 |
| 7. 7. 1 | Baseline measurement | 22 |
| 7. 7. 2 | Supporting measurement | 24 |
| 7. 8 | Residual current monitoring | 25 |
| 7. 8. 1 | Failure monitoring | 25 |
| 7. 8. 2 | Example: Residual current transformer insulation | 26 |
| 7. 8. 3 | Temperature measurement | 27 |
| 7. 8. 4 | Example of temperature sensor insulation | 27 |
| 8. | Interfaces | 29 |
| 8. 1 | Shielding | 29 |
| 8. 2 | RS485 interface | 30 |
| 8. 2. 1 | Termination resistors | 30 |
| 8. 3 | Profibus interface | 31 |
| 8. 3. 1 | Connecting the bus lines | 31 |
| 8. 4 | Bus structure | 32 |
| 8. 5 | Ethernet interface | 33 |
| 9. | Digital inputs and outputs | 35 |
| 9. 1 | Digital inputs | 35 |
| 9. 1. 1 | S0 pulse input | 36 |
| 9. 2 | Digital outputs | 37 |
| 10. | Operation | 39 |
| 10. 1 | Button allocation | 39 |
| 10. 2 | "Home" measured value indication | 39 |
| 10. 3 | Measured value indication | 40 |
| 10. 3. 1 | Main values | 40 |
| 10. 3. 2 | By-values | 40 |
| 10. 4 | Selecting a measured value indication | 41 |
| 10. 5 | View additional information | 42 |
| 10. 6 | Deleting values | 42 |
| 10. 7 | Transients list | 43 |
| 10. 8 | Event list | 44 |

| | | |
|------------|---|-----------|
| 11. | Configuration | 45 |
| 11. 1 | Languages | 45 |
| 11. 2 | Communication | 45 |
| 11. 2. 1 | Ethernet (TCP/IP) | 46 |
| 11. 2. 2 | Field bus | 46 |
| 11. 3 | Measurement | 47 |
| 11. 3. 1 | Measuring transducer | 48 |
| 11. 3. 2 | Transients | 50 |
| 11. 3. 3 | Events | 52 |
| 11. 3. 4 | Relevant voltage | 53 |
| 11. 3. 5 | Nominal frequency | 53 |
| 11. 3. 6 | Flicker | 54 |
| 11. 3. 7 | Temperature | 54 |
| 11. 4 | System | 55 |
| 11. 4. 1 | Password | 55 |
| 11. 4. 2 | Reset | 56 |
| 11. 5 | Display | 57 |
| 11. 6 | Colours | 58 |
| 11. 7 | Extensions | 59 |
| 11. 8 | PTP configuration | 61 |
| 11. 8. 1 | Important Modbus parameters for the PTP configuration of the device | 61 |
| 11. 8. 2 | PTP parameter _MODE_NTP | 61 |
| 11. 8. 3 | Example: PTP timing according to IEEE 1588-2008 and clock types | 62 |
| 12. | Commissioning | 63 |
| 12. 1 | Supply voltage | 63 |
| 12. 2 | Measured voltage | 63 |
| 12. 3 | Frequency measurement | 64 |
| 12. 4 | Phase sequence | 64 |
| 12. 5 | Measured current | 65 |
| 12. 5. 1 | Phasor diagram examples | 66 |
| 12. 6 | Residual current | 66 |
| 12. 7 | Failure monitoring (RCM) | 67 |
| 12. 7. 1 | Alarm status | 67 |
| 12. 8 | Measurement range exceeded | 68 |
| 12. 9 | Checking the power measurement | 68 |
| 12. 10 | Checking the communication | 68 |
| 12. 11 | Communication in the bus system | 69 |
| 12. 11. 1 | RS485 | 69 |
| 12. 11. 2 | Profibus | 70 |
| 12. 12 | Digital inputs/outputs | 75 |
| 12. 12. 1 | Digital inputs | 75 |
| 12. 12. 2 | Pulse output | 75 |

| | | |
|------------|---|------------|
| 13. | Device homepage | 79 |
| 13. 1 | Measured values | 80 |
| 13. 1. 1 | Short overview | 80 |
| 13. 1. 2 | Detailed measured values | 81 |
| 13. 1. 3 | Diagrams | 82 |
| 13. 1. 4 | RCM - residual current monitoring | 82 |
| 13. 1. 5 | Events | 83 |
| 13. 2 | Power quality | 84 |
| 13. 3 | Apps | 85 |
| 13. 3. 1 | Push Service | 85 |
| 13. 4 | Information | 86 |
| 13. 4. 1 | Device information | 86 |
| 13. 4. 2 | Display | 86 |
| 13. 4. 3 | Downloads | 86 |
| 14. | Service and maintenance | 87 |
| 14. 1 | Repair and calibration | 87 |
| 14. 2 | Front film | 87 |
| 14. 3 | Disposal | 87 |
| 14. 4 | Service | 87 |
| 14. 5 | Device calibration | 87 |
| 14. 6 | Calibration intervals | 87 |
| 14. 7 | Firmware update | 87 |
| 14. 8 | Battery | 88 |
| 15. | Procedure in the event of faults | 89 |
| 16. | Technical data | 91 |
| 16. 1 | Supply voltage | 91 |
| 16. 2 | Voltage and current measurement | 92 |
| 16. 3 | Residual current monitoring | 93 |
| 16. 4 | Thermistor input | 94 |
| 16. 5 | Digital inputs and outputs | 95 |
| 16. 6 | Interfaces | 96 |
| 16. 7 | Function parameters | 97 |
| 16. 7. 1 | Measurements with 50/60 Hz | 97 |
| 16. 7. 2 | Measurements in the range 15 to 45 / 65 to 440 Hz | 98 |
| 16. 8 | Specifications as per IEC 61000-4-30 | 99 |
| 16. 9 | Dimension diagrams | 100 |
| 17. | Menu guide overview | 101 |
| 17. 1 | Configuration menu overview | 101 |
| 17. 2 | Overview of measured value indications | 102 |
| 18. | Connection example | 105 |

1. General

1.1 Disclaimer

Observing the information products for the devices is the prerequisite for safe operation and in order to obtain the specified performance and product features. Janitza electronics GmbH accepts no liability for injuries to personnel, property damage or financial losses arising due to a failure to comply with the information products. Ensure that your information products are accessible and legible.

1.2 Copyright notice

© 2017 - Janitza electronics GmbH - Lahnau. All rights reserved.

Duplication, editing, dissemination and other utilisation, also in part, is prohibited. All trademarks and the resulting rights are the property of their respective owners.

1.3 Technical changes

- Please ensure that your device complies with the installation manual.
- Please read and understand the documents enclosed with the product first.
- Keep the documents enclosed with the product available throughout the entire service life of the product and pass them on to subsequent users if applicable.
- Inform yourself of any new device versions and the associated updates to the documentation enclosed with the product at www.janitza.com.

1.4 Declaration of conformity

For information on the laws, standards and directives that Janitza electronics GmbH has applied for the device, see the declaration of conformity on www.janitza.com.

1.5 Comments on the manual

We welcome your comments. If anything in this manual seems unclear, please let us know by sending us an **e-mail** to:
info@janitza.com

1.6 Meaning of symbols

This manual uses the following pictograms:



Ground wire connection.



Inductive.

The current lags behind the voltage.



Capacitive.

The voltage lags behind the current.

2. Safety

Please read this user manual and all other publications that must be consulted to work with this product. This applies particularly to installation, operation and maintenance.

Observe all safety instructions and warnings. Failure to comply with the instructions can result in personal injuries and/or damage to the product.

Any unauthorised changes or use of this device, which go beyond the mechanical, electrical or otherwise stated operating limitations, can result in bodily injury and/or damage to the product.

Any such unauthorised change constitutes "misuse" and/or "negligence" according to the warranty for the product and thus excludes the warranty for covering possible damage resulting from this.

The user manual:

- must be read before using the device.
- must be kept throughout the entire service life of the product and be readily available for reference.

Follow additional legal and safety regulations required for the respective application when using the device.

2.1 Safety information

Symbols used:



This symbol is used as an addition to the safety instructions and warns of an electrical hazard.



This symbol with the word note describes:

- Procedures that do not pose any risk of injuries.
- Important information, procedures or handling steps.

Safety information is highlighted by a warning triangle and is indicated as follows depending on the degree of danger:



DANGER!

Indicates an imminent danger that causes severe or fatal injuries.



WARNING!

Indicates a potentially hazardous situation that can cause severe injuries or death.



CAUTION!

Indicates a potentially hazardous situation that can cause minor injuries or damage to property.

2.2 Safety measures

When operating electrical devices, certain parts of these devices are invariably subjected to hazardous voltage. Therefore, severe bodily injuries or damage to property can occur if they are not handled properly:



Risk of injury due to electric voltage!

WARNING!

Severe bodily injuries or death can occur due to dangerous voltages.

Therefore, note the following:

- **Before connecting connections, earth the device at the ground wire connection if present.**
- **Hazardous voltages may be present in all switching parts that are connected to the power supply.**
- **Hazardous voltages may also be present in the device even after disconnecting the supply voltage.**
- **Provide single core conductors with sleeves.**
- **Only connect screw-type terminals with a matching number of pins and of the same type.**
- **De-energise the system before starting work.**

2.3 Qualified staff

This device must only be operated and repaired by specialised personnel.

Specialised personnel are people who are qualified to recognise risks and prevent potential dangers that can be caused by the operation or maintenance of the device based on their respective training and experience.



WARNING!

Risk of injury due to improper use

If the device is not operated according to the documentation, protection is no longer ensured and hazards can be posed by the device.

3. Proper use

3.1 Inspection on receipt

The prerequisites of faultless, safe operation of this device are proper transport and proper storage, set-up and installation, as well as careful operation and maintenance.

Packing and unpacking must be carried out with customary care without the use of force and only using suitable tools.

Visually inspect the devices for flawless mechanical condition.

Please check the delivered items for completeness before you start installing the device.

If it can be assumed that risk-free operation is no longer possible, the device must be immediately put out of operation and secured against being put back into operation again. It can be assumed that risk-free operation is no longer possible if the device, for example:

- has visible damage,
- no longer works despite the mains power supply being intact
- has been exposed to prolonged adverse conditions (e.g. storage outside the permissible climate limits without being adapted to the room climate, condensation, etc.) or rough handling during transportation (e.g. falling from a height, even if there is no visible external damage, etc.)

**NOTE!**

All screw-type terminals included in the scope of delivery are attached to the device.

**NOTE!**

All supplied options and versions are described on the delivery note.

3.2 Scope of delivery

| Number | Part no. | Designation |
|--------|-------------------------|---|
| 1 | 52.17.xxx ¹⁾ | UMG 512-PRO |
| 1 | 33.03.336 | Installation manual |
| 1 | 33.03.347 | “GridVis software” quick guide |
| 1 | 10.01.855 | Screw-type terminal, pluggable, 2-pin (auxiliary supply) |
| 1 | 10.01.847 | Screw-type terminal, pluggable, 5-pin (voltage measurement 1-4) |
| 1 | 10.01.853 | Screw-type terminal, pluggable, 8-pin (current measurement 1-4) |
| 1 | 10.01.873 | Screw-type terminal, pluggable, 6-pin (digital inputs/outputs) |
| 1 | 10.01.888 | Screw-type terminal, pluggable, 7-pin (RCM, thermistor input) |
| 1 | 10.01.859 | Screw-type terminal, pluggable, 3-pin (RS 485) |
| 1 | 08.01.505 | 2m patch cable, twisted, grey (UMG PC/switch connection) |
| 1 | 52.19.301 | Mounting clips |

¹⁾ For the item number, see the delivery note

3.3 Available accessories

| Part no. | Designation |
|-----------|---|
| 21.01.102 | CR2450 lithium battery, 3 V (approval according to UL 1642) |
| 13.10.539 | Profibus connector, 9-pin, D-SUB |
| 13.10.543 | Profibus connector, 9-pole, D-SUB, wound |
| 29.01.903 | Seal, 144 x 144 |

4. Product description

The device is:

- intended for measuring power quality according to EN61000-4-30 in building installations, on distribution units, circuit breakers and busbar trunking systems.
- suitable for installation in fixed and weatherproof switchboards in indoor areas.
- usable in 2, 3 and 4-conductor networks and in TN and TT networks.
- provided with external $\dots/1A$ or $\dots/5A$ current transformers for current measurement.
- only suitable for measurements in medium and high-voltage networks via current and voltage transformers.
- suitable for use in residential and industrial applications.
- suitable for residual current monitoring (RCM) via external residual current transformers with a rated current of 30 mA.
- not an independent protective device against electric shocks.

The measurement results can be displayed, read out and further processed via the device's interfaces.

4.1 Measuring process

The device:

- measures continuously and calculates all effective values over a 200 ms interval.
- measures the real effective value (TRMS) of the voltages and currents connected to the measurement inputs.

4.2 Usage concept

You can program and call up the measured values via many routes using the device:

- **Directly on the device** via 6 buttons and the display.
- Using the **GridVis®** programming software.
- Using the **device homepage**.
- You can use the **Modbus protocol** to modify and call up the data using the Modbus address list. The list can be called up via the device's home page.

This operation manual only describes how to operate the device using the 6 buttons. The GridVis® network analysis software has its own "online help".

4.3 GridVis® network analysis software

You can use the GridVis® network analysis software that is available at www.janitza.de to program the device and read out data. To do this, a PC must be connected to the device via a serial interface (RS485/Ethernet).

You can use the GridVis® network analysis software to:

- program the device.
- configure and read out recordings.
- analyse the read out data according to EN 61000-2-4.
- save the data to a database.
- display measured values graphically.
- program customer-specific applications.



CAUTION!

Malfunction due to incorrect connection

If the device is connected incorrectly, incorrect measured values may be returned.

Therefore, note the following:

- **Measured voltages and measured currents must derive from the same network.**
- **Do not use the device to measure DC current.**
- **Earth active switchboards.**



CAUTION!

Risk of injury due to electric voltage

Residual current monitoring monitors residual currents via external current transformers and can trigger a warning impulse when a threshold value is exceeded. **The device is therefore not an independent protective device against electric shocks.**

4. 4 Features


General

- Front panel integration device with dimensions 144 x 144 mm
- Connection via pluggable screw terminals
- Colour graphical display 320 x 240, 256 colours
- Operation via 6 buttons
- 4 voltage and 4 current measurement inputs
- 2 Residual current inputs with failure monitoring
- 1 Thermistor input
- 2 digital outputs and 2 digital inputs
- 16-bit A/D converter, memory 256 Mbyte Flash, SDRAM 32 Mbyte
- RS485 interface (Modbus RTU, slave, up to 921 kbps)
- Profibus DP/V0
- Ethernet (web server, e-mail)
- Capture more than 2000 measured values
- Clock and battery
- Working temperature range -10 °C to +55 °C

Measurement

- Measurement in TN and TT networks
- Continuous sampling of the voltage and current measurement inputs at 25.6 kHz
- Frequency range of the fundamental oscillation 15 Hz to 440 Hz
- Capture transients >39 µs and store up to approx. 330,000 sampling points
- Current metering range 0.001 to 7 Amps
- Real effective value measurement (TRMS)
- Continuous sampling of the voltage and current measurement inputs
- Continuous monitoring of residual currents with failure monitoring
- Temperature measurement
- Measurement of the power quality in accordance with DIN EN61000-4-30, Class A
- Flicker measurement in accordance with DIN EN61000-4-15:2011, Class F1
- Working measurement, measurement uncertainty in accordance with DIN EN50470-3:
 - Class C for/5 A converter
 - Class B for/1 A converter
- Measurement of harmonics 1 to 63 in accordance with DIN EN61000-4-7 Class 1, for:
 - Ull, Uln, I, P (consumption/supply)
 - Q (ind./cap.)
- Measurement of interharmonics 1 to 63 in accordance with DIN EN 61000-4-7 Class 1, for (Uln, Ull, I)
- Analysis and evaluation in accordance with DIN EN 50160 with the GridVis® programming software supplied as standard
- Programming separate applications in Jasic

4.5 Product overview

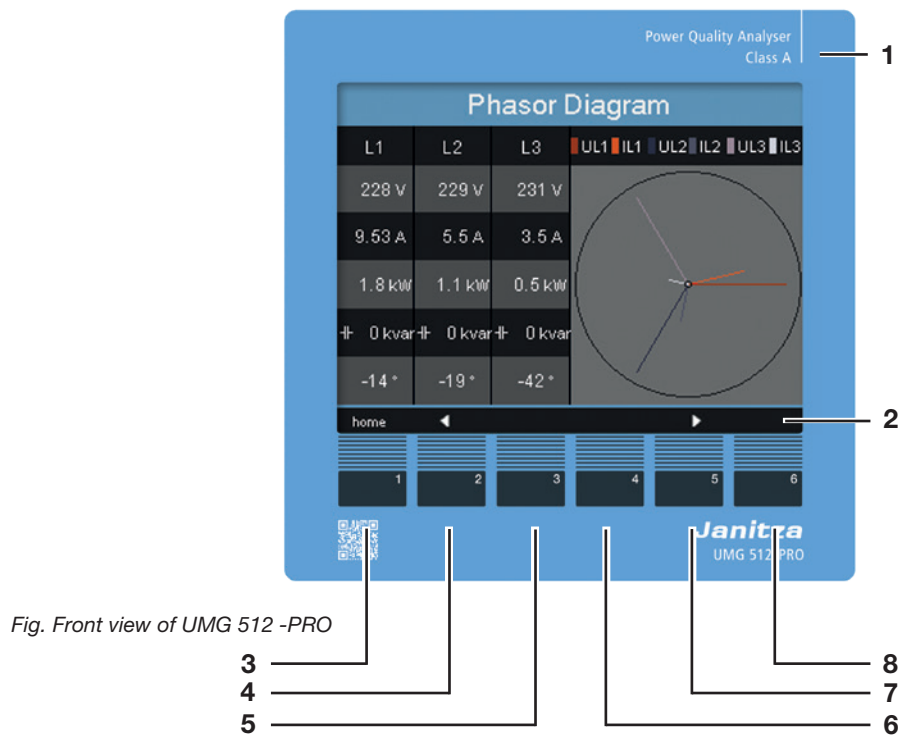

- 1 Device type
- 2 Description of the function keys
- 3 Button 1: Configuration menu, back
- 4 Button 2: Select number, switch between main values
- 5 Button 3: Reduce the number by 1, select menu item
- 6 Button 4: Increase the number by 1, select menu item
- 7 Button 5: Select number, switch between main values
- 8 Button 6: Activate input, confirm selection

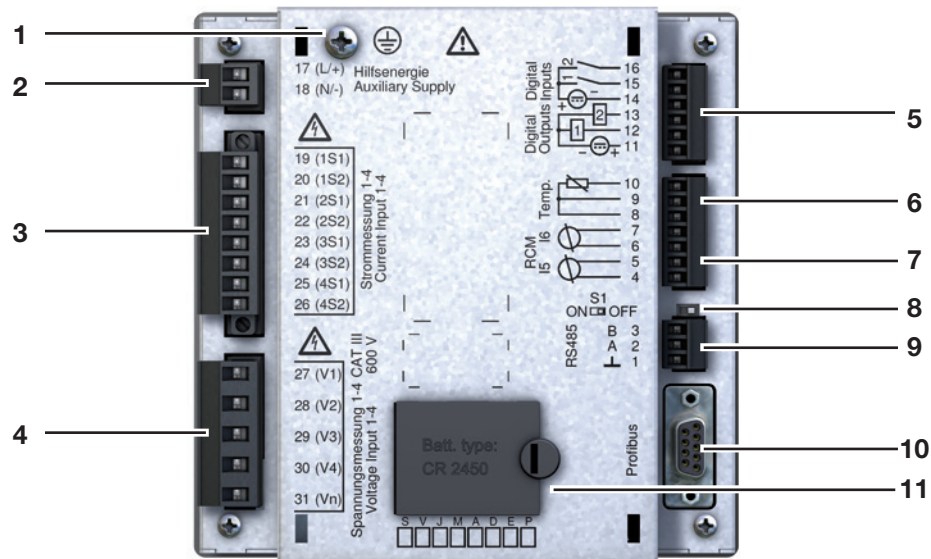


Fig. Rear view of UMG 512 -PRO

- 1 Ground wire connection
- 2 Supply voltage
- 3 Current measurement inputs I1 to I4
- 4 Voltage measurement inputs V1 to V4 and Vn
- 5 Digital inputs / outputs
- 6 Thermistor inputs
- 7 Residual current monitoring inputs I5 and I6
- 8 DIP switch S1
- 9 RS485 interface
- 10 Profibus interface
- 11 Battery compartment

5. Installation

5.1 Position of installation

The device is suitable for installation in fixed and weatherproof switchboards in indoor areas.

Provide an earth for active switchboards.

5.3 Mounting

The device is mounted in the switchboard with two mounting clips at the top and bottom. Attach the mounting clips to the device in advance.



CAUTION!

Damage to property due to a failure to adhere to the installation instructions!

Failing to observe the installation instructions can damage or destroy your device.

Adhere to the specifications for the installation position in sections “5. Installation” and “16. Technical data”.

5.2 Mounting position

The cut-out dimension in the switchboard is $138^{+0.8}$ mm x $138^{+0.8}$ mm.

To ensure adequate ventilation, adhere to the following specifications:

- install the device vertically.
- keep a gap of 50 mm at the top and bottom.
- keep a minimum gap of 20 mm.

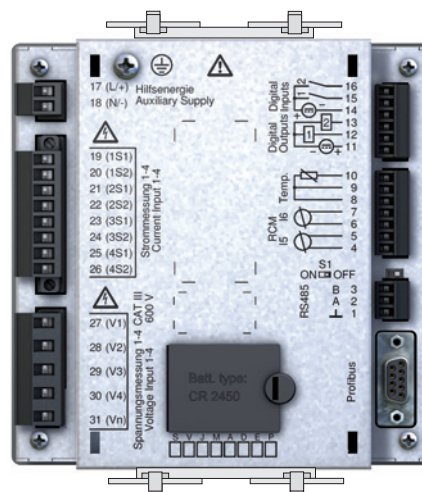


Fig. Arrangement of the mounting clips on the UMG 512-PRO

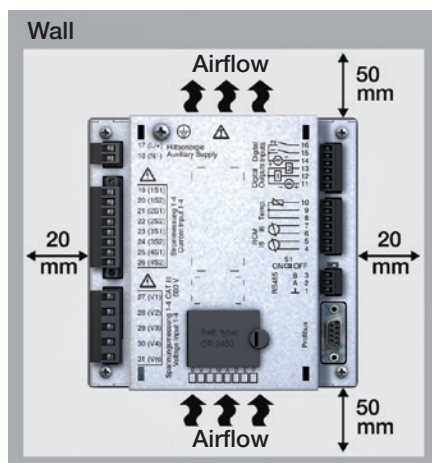


Fig. Rear view of the UMG 512-PRO installation position

6. Network systems

Network systems and maximum rated voltages in accordance with DIN EN 61010-1/A1:

| Three-phase four-conductor systems with earthed neutral conductor | | Three-phase four-conductor systems with non-earthed neutral conductor (IT networks) | Three-phase three-conductor systems Not earthed | Three-phase three-conductor systems with earthed phase |
|--|---|---|--|---|
| | | | | |
| IEC | U_{L-N} / U_{L-L} : 417 VLN / 720 VLL | Only partially suitable for use in non-earthed networks | | U_{L-L} 600 VLL |
| UL | U_{L-N} / U_{L-L} : 347 VLN / 600 VLL | | | |

| Dual-phase two-conductor systems Not earthed | Single-phase two-conductor systems with earthed neutral conductor | | Separated single-phase three-conductor system with earthed neutral conductor | |
|--|--|-------------------|---|---|
| | | | | |
| Only partially suitable for use in non-earthed networks | IEC | U_{L-N} 480 VLN | IEC | U_{L-N} / U_{L-L} : 400 VLN / 690 VLL |
| | UL | U_{L-N} 480 VLN | UL | U_{L-N} / U_{L-L} : 347 VLN / 600 VLL |

Application areas for the device:

- 2, 3 and 4 conductor networks (TN and TT networks).
- In residential and industrial applications.



**Risk of injury due
to electric voltage!**

If the device is subjected to measurement voltage surges higher than the permissible overvoltage category, safety-relevant insulations in the device can be damaged, which means that the product's safety can no longer be guaranteed.

Only use the device in environments in which the permissible measurement voltage surge is not exceeded.

6.1 Three-phase 3-conductor systems

The device is only suitable to a limited extent for use in IT networks, as the measured voltage relative to the housing potential is measured and the input impedance of the device creates residual current against the earth. The residual current can trigger insulation monitoring in IT networks.

The connection variants with voltage transformers are suitable for unlimited use in IT networks.

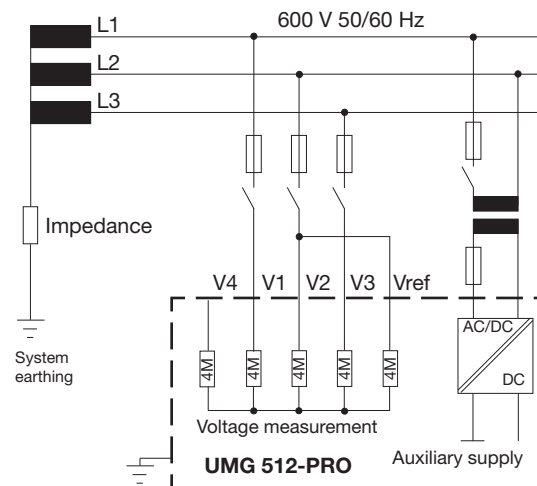


Fig. Schematic diagram, UMG 512-PRO in an IT network without N

6.2 Three-phase 4-conductor systems

The device can be used in three-phase 4-conductor systems (TN, TT networks) with an earthed neutral conductor. The bodies of the electrical system are earthed.

Voltage measurement in the device is designed for overvoltage category 600 V CAT III (measurement voltage surge 6 kV).

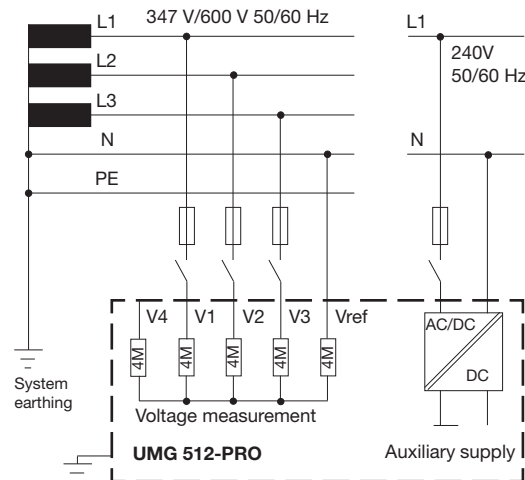


Fig. Schematic diagram, UMG 512-PRO in a TN network

6.3 Rated voltages

The following illustrations show lists of networks and the corresponding rated network voltages in which the device can be used.

| U _{L-N} / U _{L-L} | |
|-------------------------------------|---|
| 66V / 115V | |
| 120V / 208V | |
| 127V / 220V | |
| 220V / 380V | |
| 230V / 400V | |
| 240V / 415V | |
| 260V / 440V | |
| 277V / 480V | |
| 347V / 600V | Maximum network rated voltage according to UL |
| 400V / 690V | |
| 417V / 720V | Maximum network rated voltage |

Fig. Rated network voltages that are suitable for measurement inputs in the **three-phase 4-conductor network with earthed neutral conductor** in accordance with EN 60664-1:2003

| U _{L-L} | |
|------------------|-------------------------------|
| 66V | |
| 115V | |
| 120V | |
| 127V | |
| 200V | |
| 220V | |
| 230V | |
| 240V | |
| 260V | |
| 277V | |
| 347V | |
| 380V | |
| 400V | |
| 415V | |
| 440V | |
| 480V | |
| 500V | |
| 577V | |
| 600V | Maximum network rated voltage |


Fig. Rated network voltages that are suitable for measurement inputs in the **non-earthed three-phase 3-conductor network** in accordance with EN 60664-1:2003

7. Installation


7.1 Connection to a PC

You have the following options for connecting the device to a PC:


1. Connection via an interface converter:

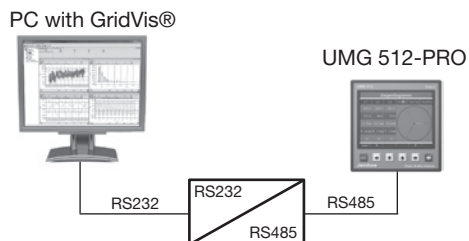


3. Connection via the network:

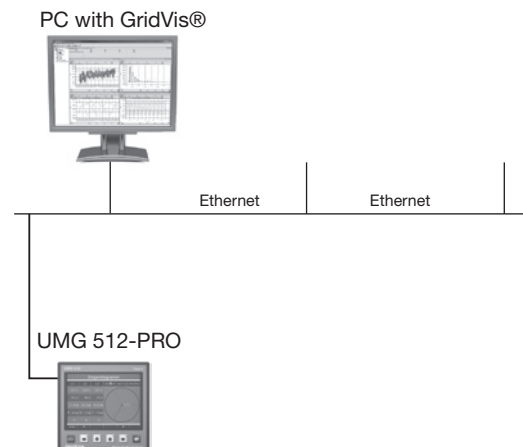

2. Direct connection via Ethernet:

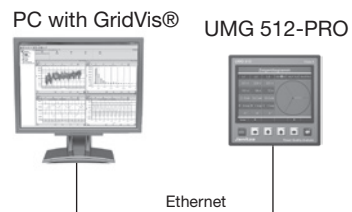

4. Using the UMG 512-PRO as a gateway for additional UMGs

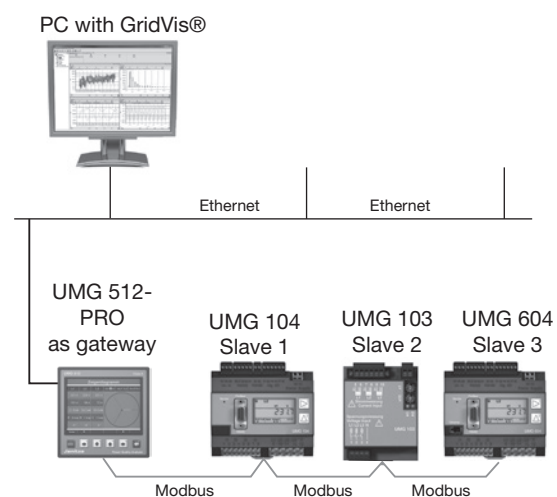

7.2 Ground wire connection

Use a ring cable lug to connect the ground wire connection to the device.

7.3 Disconnectors

During building installation, provide a suitable disconnector in order to disconnect the device from the current and voltage.

- Install the disconnector close to the device so that it is easily accessible to the user.
- Label the switch as a disconnection device.

7.4 Supply voltage

The device requires supply voltage to operate. The supply voltage level for your device is specified on the rating plate.

Before connecting the supply voltage, ensure that the voltage and frequency correspond to the details on the rating plate.

The supply voltage is connected via terminal blocks on the rear of the device.

Connect the supply voltage via a UL/IEC approved fuse.



Damage to property due to not observing the connection conditions

Failure to observe the connection conditions can damage or destroy your device.

Therefore, note the following:

- Adhere to the specifications for voltage and frequency on the rating plate.
- Connect the supply voltage via a fuse in accordance with the technical data.
- Do not connect the supply voltage to the voltage transformers.
- Provide a fuse for the neutral conductor if the source's neutral conductor connection is not earthed.



Risk of injury due to electric voltage!

Severe bodily injuries or death can occur due to

- touching bare or stripped wires that are live,
- device inputs that are dangerous to touch.

Therefore, note the following:

- The inputs for the supply voltage are hazardous if touched!
- De-energise your system before starting the work!
- Connect the device's ground wire connection to the system earthing.

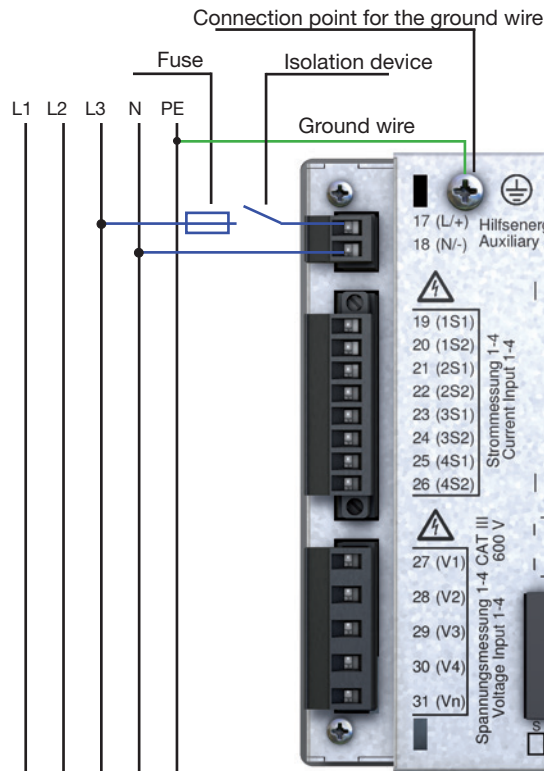


Fig. Example connection for the supply voltage

7.5 Measured voltage

The device has 4 voltage measurement inputs (V1 to V4) that are located on the rear of the device.

- V1 to V3 for the baseline measurement.
- V4 for the supporting measurement

The connections are called supporting and baseline measurement below.

7.5.1 Overvoltage

The voltage measurement inputs are suitable for measurements in networks where overvoltages of overvoltage category 600V CATIII can occur.

7.5.2 Frequency

The device

- is suitable for measurements in networks in which the fundamental oscillation of the voltage is in the range of 15Hz to 440Hz.
- only measures the frequency on the measurement inputs for baseline measurement.

To automatically determine (wide range) the mains frequency, an L1-N voltage of greater than 10 Veff must be applied to voltage measurement input V1.

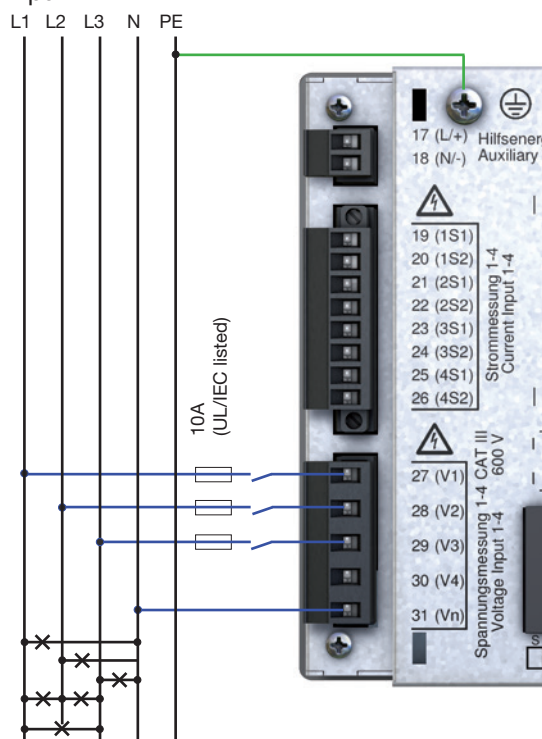


Fig. Connection example for voltage measurement.



CAUTION!

Malfunction due to incorrect connection

If the device is connected incorrectly, incorrect measured values may be returned.

Therefore, note the following:

- Measured voltages and currents must derive from the same network.
- The device is not suitable for measuring DC voltage.



WARNING!

Risk of injury due to electric voltage!

Severe bodily injuries or death can occur due to a failure to observe the connection conditions for the voltage measurement inputs.

Therefore, note the following:

- Do not use the device for voltage measurement in SELV circuits (safe extra low voltage).
- Connect the voltages higher than the permitted network rated voltages using voltage transformers.
- The voltage measurement inputs on the device are dangerous if touched!
- Install a disconnecter as described in "7.3 Disconnectors".
- Use a UL/IEC-approved overcurrent protection with a rated value, which is suitable for the short circuit current at the connection point.



NOTE!

When carrying out a baseline measurement on a three-phase 3-conductor network, the supporting measurement can no longer be used as a measurement input.



NOTE!

For measurement with the supporting measurement, a voltage must be connected to the baseline measurement for frequency determination.

7.6 Current measurement

The device:

- is intended for connecting current transformers with secondary currents of $\dots/1$ A and $\dots/5$ A.
- does not measure DC.
- has current measurement inputs that can be loaded with 120 A for 1 second.

The factory default for the current transformer ratio is 5/5 A and must be adapted to the current transformer employed if necessary.

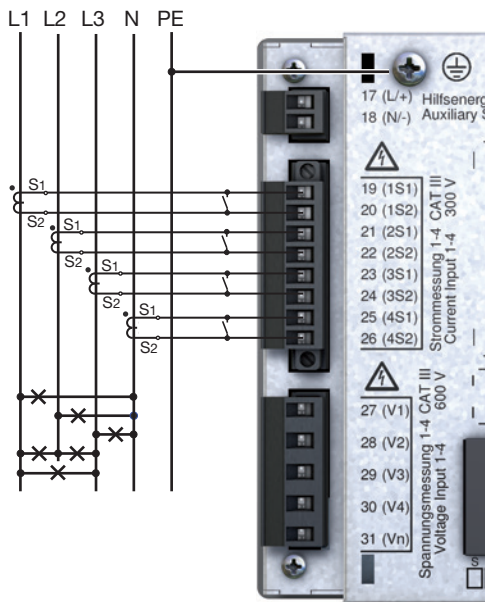


Fig. "Current measurement via current transformers" connection example.



WARNING!

Risk of injury due to electric voltage on current transformers!

On current transformers that are operated open on the secondary side, high voltage peaks that are dangerous to touch can occur, which can cause severe bodily injuries or death.

Therefore, note the following:

- Avoid operating the current transformers open.
- Short circuit all unloaded current transformers.
- Connect the earthing connections provided on the current transformer to the earth.
- You must short circuit the secondary connections on the current transformer before interrupting the power supply.
- If a test switch, which automatically short-circuits the secondary wires of the current transformer is available, it is sufficient to set this to the "Test" position as long as the short-circuiting device has been checked beforehand.
- Only use current transformers that have a basic insulation in accordance with IEC 61010-1:2010.
- Ensure that the attached screw-type terminal is affixed to the device sufficiently using the two screws.
- Safe open-circuit current transformers are also dangerous to touch when they are operated open.



WARNING!

Risk of injury due to electric voltage!

Temperatures of up to 80 °C can occur on the connections if there are high measured currents.

Therefore, use lines that are designed for an operating temperature of at least 80 °C

7. 6. 2 Current direction

You can correct the current direction on the device or via the existing serial interfaces for each phase individually. If the connection is incorrect, a subsequent re-connection of the current transformer is not required.

7. 6. 3 Total current measurement

For a summation measurement via two current transformers, first set their total transformation ratio on the device. For information on setting the current transformer ratios, see “11. 3. 1 Measuring transducer”.

Example:

The current is measured via two current transformers. Both current transformers have a transformation ratio of 1000/5 A. The summation measurement is performed using a 5+5/5 A total current transformer.

The device must then be set up as follows:

Primary current: 1000 A + 1000 A = 2000 A
Secondary current: 5 A

7. 6. 1 Ammeter

If you wish to measure the current not only with the UMG but rather with an ammeter too, connect the ammeter to the UMG in series.

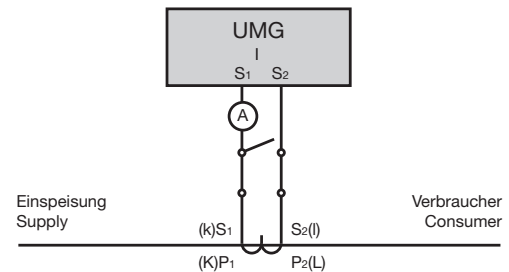


Fig. Circuit diagram with additional ammeter switched in series

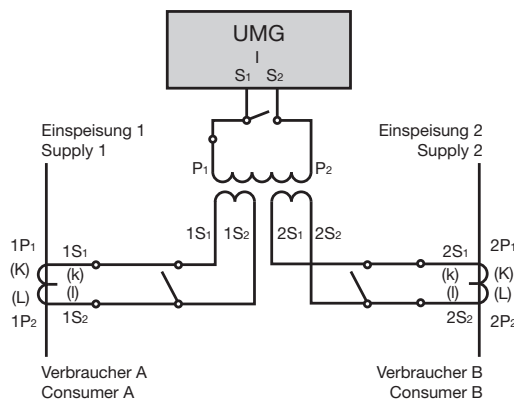



Fig. Example for current measurement via a total current transformer

7.7 Connection variants


7.7.1 Baseline measurement

Here, you can obtain various diagrams for the most common connection methods and the measured voltage on the device for baseline measurement.


Measurement in a three-phase 4-conductor network with asymmetric loading.

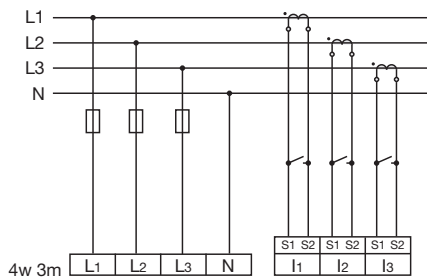


Measurement via 3 voltage transformers in a three-phase 4-conductor network with asymmetric loading.

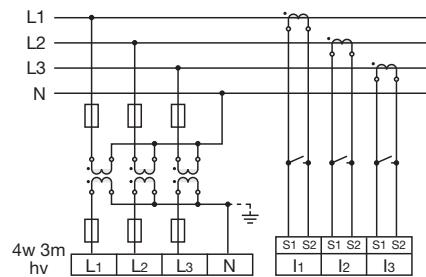


Measurement in a three-phase 4-conductor network with symmetrical loading.

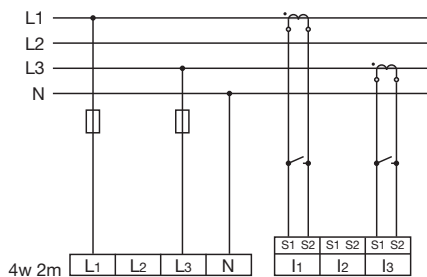


Measurement via 2 voltage transformers in a three-phase 4-conductor network with asymmetric loading.

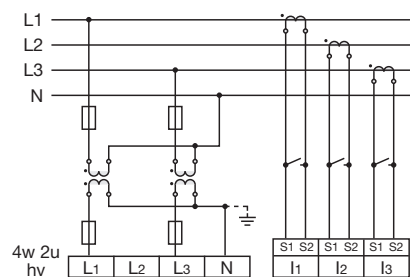


Measurement via 2 current transformers in a three-phase 3-conductor network with symmetrical loading.

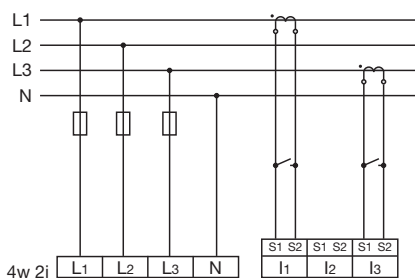


Measurement in a three-phase 3-conductor network with asymmetric loading.

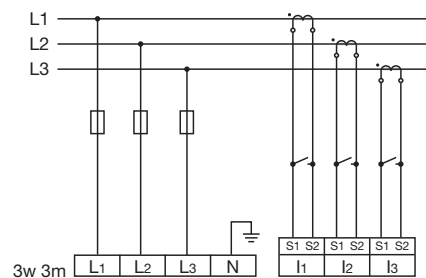


Measurement in a three-phase 4-conductor network with asymmetric loading.

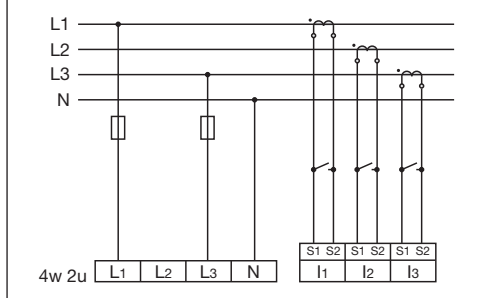


Measurement in a three-phase 3-conductor network with asymmetric loading.

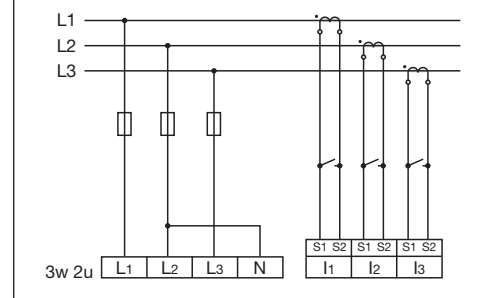


Measurement in a three-phase 3-conductor network with asymmetric loading.

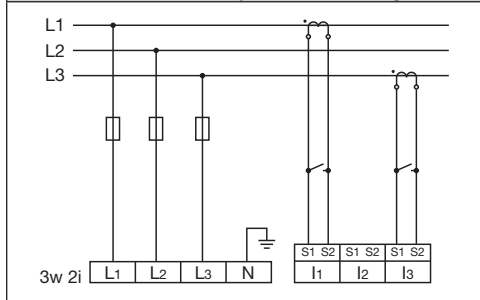


Measurement in a three-phase 3-conductor network with asymmetric loading.

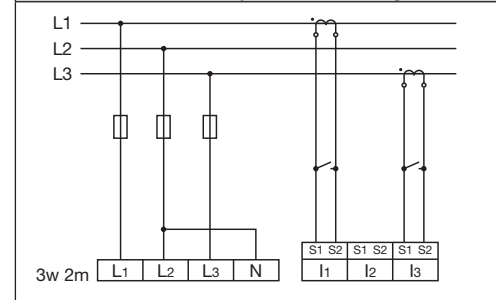


Measurement in a three-phase 3-conductor network with asymmetric loading.

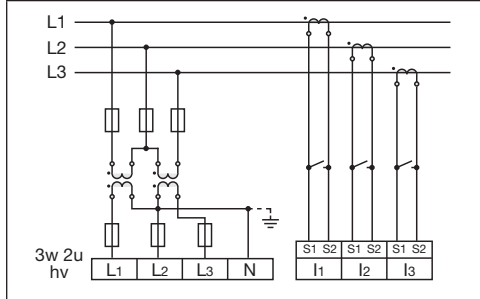


Measurement of one phase in a three-phase 4-conductor network.

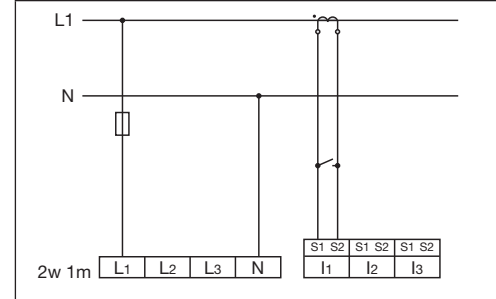

Measurement in a three-phase 3-conductor network with asymmetric loading.

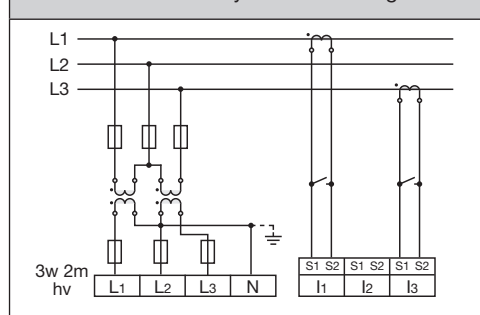


Measurement in a single-phase 3-conductor network. I3 and U3 are not calculated and set to zero.

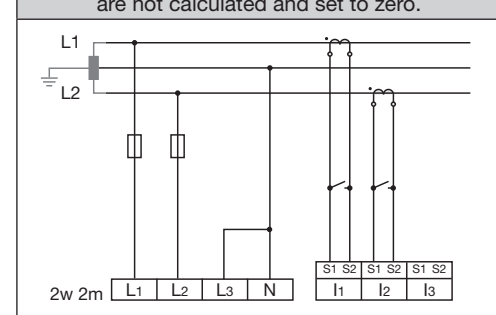

7.7.2 Supporting measurement

Measurement in a three-phase 4-conductor network with symmetrical loading.

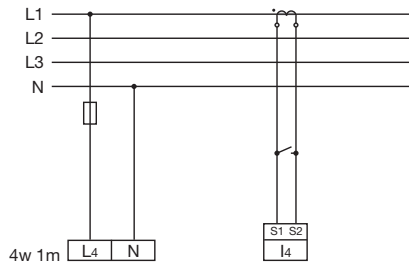

NOTE!

If the a baseline measurement is connected to a three-phase 3-conductor network, the supporting measurement can no longer be used as a measurement input.


NOTE!

For measurement with the supporting measurement, a voltage must be connected to the baseline measurement for frequency determination.


NOTE!

Measured voltages and measured currents must derive from the same network.

Measurement in a three-phase 3-conductor network with symmetrical loading.

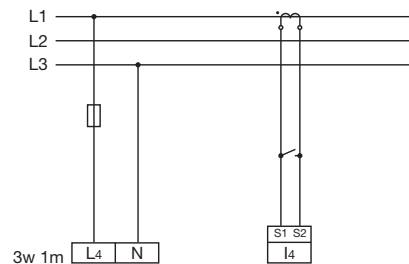


Measurement of the voltage between N and PE.
Measurement of the current in the neutral conductor.

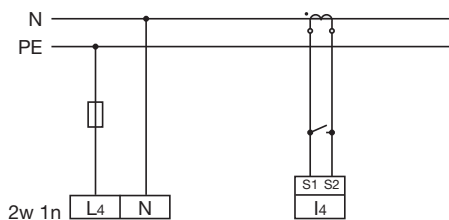

7.8 Residual current monitoring

The device:

- is suitable for use as a residual current monitoring device (RCM) as well as for monitoring AC and pulsing DC.
- can measure residual currents in accordance with IEC/TR 60755 (2008-01)  of type A.
- does not measure in a directionally sensitive manner. There is therefore no directional sensitivity of the residual currents on the network and load sides.

The connection of suitable external residual current transformers with a rated current of 30 mA is performed via the residual current transformer inputs I5 (terminals 4/5) and I6 (terminals 6/7).

7.8.1 Failure monitoring

The device monitors the ohmic resistance at the residual current measurement inputs.

If this is greater than 300 Ohm, residual current monitoring fails. This can occur due to a cable break for example

For further information on failure monitoring, see section “12. 7 Failure monitoring (RCM)”.



CAUTION!

Risk of injury due to high voltages

Insufficient insulation of the operating equipment on the analogue inputs (temperature measurement and residual current monitoring) to the mains supply circuits can cause hazardous voltages on these inputs.

Ensure that there is reinforced or double insulation to the mains supply circuits!

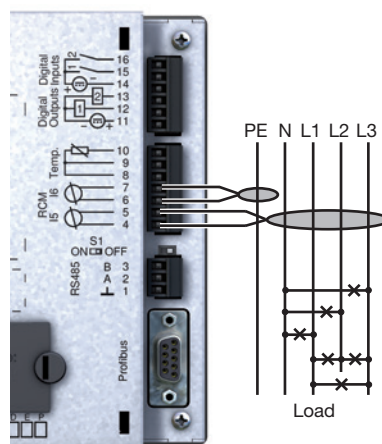


Fig. “Residual current monitoring via current transformers” connection variant



NOTE!

- The transformation ratios for the residual current transformer inputs can be configured via the GridVis® software. (see www.janitza.de)
- It is not necessary to configure a connection schematic for measurement inputs I5 and I6!

7.8.2 Example: Residual current transformer insulation

A residual current transformer should measure on isolated mains cables within a 300 V CAT III network.

The insulation of the mains cables and the insulation of the residual current transformer must fulfil the basic insulation requirements for 300 V CAT III.



CAUTION!

Transmission errors and damage to property due to electrical faults

If the line is longer than 30 m, there is an increased probability of transmission errors and damage to the device due to atmospheric discharge.

Use a shielded cable for connection to the residual current transformer.

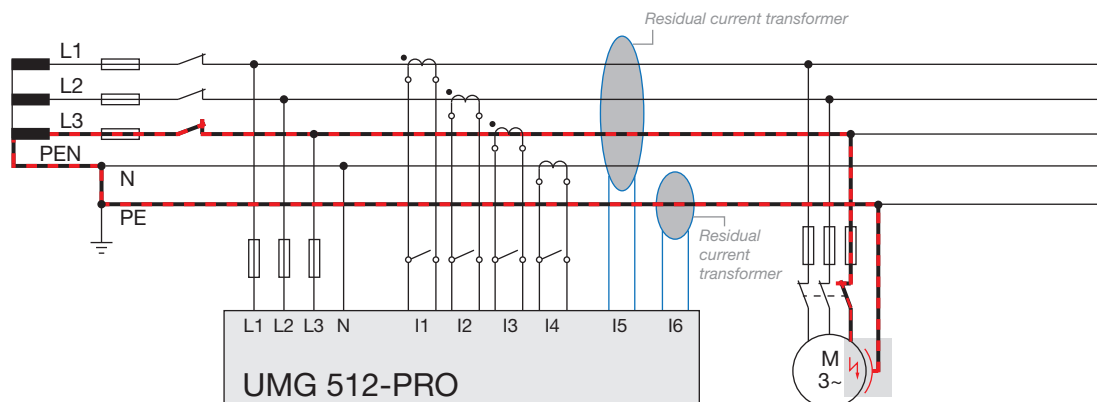


Fig. Example of a UMG 512-PRO with residual current monitoring via measuring inputs I5/I6.



WARNING!

Risk of injury due to electric voltage!

The Profibus, RS485, thermistor input and residual current monitoring input are not galvanically separated from each other.

Therefore, be aware that hazardous voltages on these inputs may have effects on the other connections.

7.8.3 Temperature measurement

The device has a thermistor input that is designed for a maximum total burden of 4 kOhm.

This refers to sensors and the line.

The temperature is measured here via terminals 8 to 10.

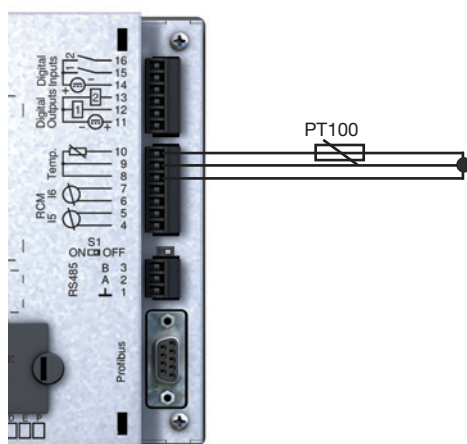


Fig. Connection example for temperature measurement with a PT100

7.8.4 Example of temperature sensor insulation

A temperature sensor in close proximity to non-insulated mains cables should measure within a 300V CAT III network.

The temperature sensor must be equipped with reinforced or double insulation for 300V CAT III.

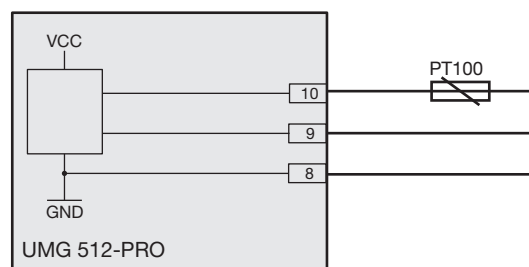


Fig. Schematic illustration of the connection example



CAUTION!

Transmission errors and damage to property due to electrical faults

If the line is longer than 30 m, there is an increased probability of transmission errors and damage to the device due to atmospheric discharge.

Use a shielded cable to connect to the temperature sensor.



WARNING!

Risk of injury due to electric voltage

The Profibus, RS485, thermistor input and residual current monitoring input are not galvanically separated from each other.

Therefore, be aware that hazardous voltages on these inputs may have effects on the other connections.



CAUTION!

Risk of injury due to high voltage

Insufficient insulation of the operating equipment on the analogue inputs (temperature measurement and residual current monitoring) to the mains supply circuits can cause hazardous voltages on these inputs.

Ensure that there is reinforced or double insulation to the mains supply circuits!

8. Interfaces

The device has the following interfaces that can be used to connect it to other devices:

- RS485
- Profibus
- Ethernet

8.1 Shielding

Provide a twisted and shielded cable for connections via the interfaces and observe the following points for the shielding:

- Earth the shields of all cables that lead to the cabinet and at the cabinet entry.
- Connect the screens over a generous area and in a manner that will conduct well, to a low-noise earth.
- Gather the cables mechanically above the earthing clamp in order to avoid damage due to cable movements.
- Use suitable cable glands to feed the cables into the cabinet, for example, armoured conduit couplings.

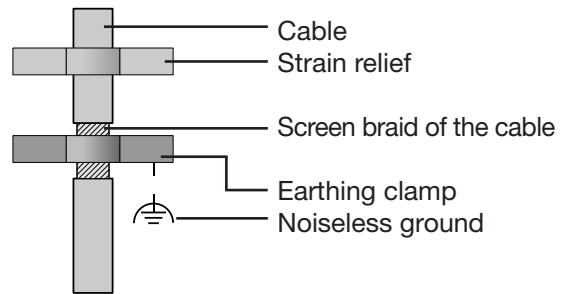


Fig. Shielding procedure at cabinet entry.



Transmission errors and risk of injury due to electrical faults

Atmospheric discharge can cause transmission errors and hazardous voltages on the device.

Therefore, note the following:

- **Connect the shielding to at least one functional earth (PE).**
- **If there are more significant sources of interference, connect the shield to the functional earth (PE) as close as possible to the device.**
- **Adhere to the maximum cable length of 1200 m at a baud rate of 38.4 kbps.**
- **Use shielded cables.**
- **Lay the interface lines with a spatial separation or with additional insulation to live system parts.**

8.2 RS485 interface

The RS485 interface on this device is designed as a 3-pin plug contact and communicates via the Modbus RTU protocol.

The cables used must be suitable for an environmental temperature of at least 80 °C.

Recommended cable type:

- Unitronic Li2YCY(TP) 2x2x0.22 (from Lapp Kabel)

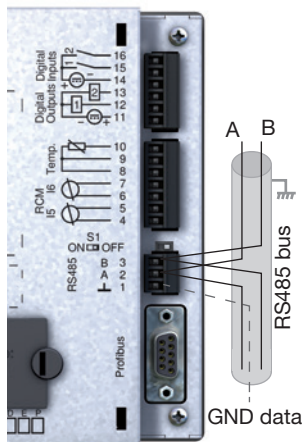


Fig. RS485 connection example



WARNING!

Risk of injury due to electric voltage!

The Profibus, RS485 and the thermistor input are not galvanically separated from each other.

Therefore, be aware that hazardous voltages on these inputs may have effects on the other connections.

8.2.1 Termination resistors

The cable is terminated with resistors (120 Ohm 1/4 W) at the beginning and at the end of a segment.

Termination within the device is possible via the S1 DIP switch on the device.

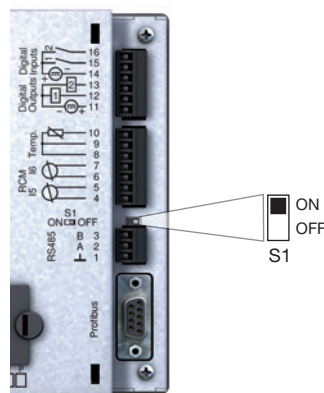
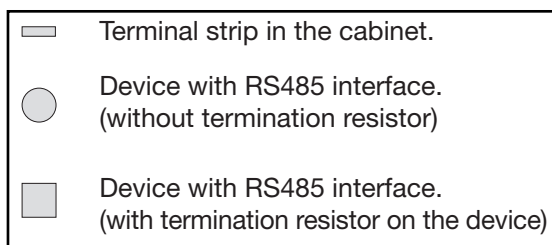
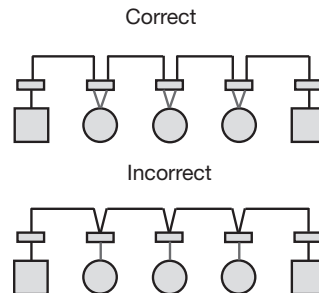


Fig. Termination via DIP switch activated (ON).

8.3 Profibus interface

This 9-pole D-sub receptacle RS485 interface supports the Profibus DP V0 slave protocol.

For a simple connection of inbound and outbound bus wiring, connect it to the device via a Profibus plug.

For the connection, we recommend a 9-pin Profibus connector, e.g. type "SUBCON-Plus-ProfIB/AX/SC" from Phoenix, item number 2744380.

(Janitza item no.: 13.10.539)

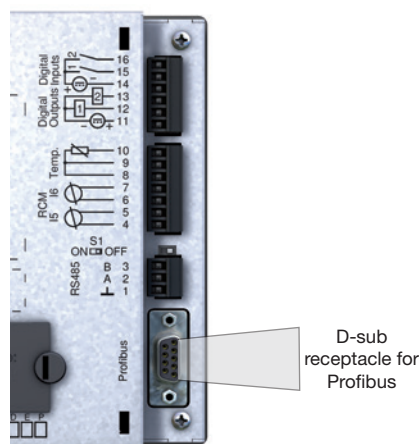


Fig. Rear view UMG 512-PRO with D-sub receptacle for Profibus



NOTE!

When using the device in a Profibus system, define the device address using the configuration menu as described in "11. 2. 2 Field bus"!

8.3.1 Connecting the bus lines

1. Connect the inbound bus line to terminals 1A and 1B on the Profibus connector.
2. Connect the continuing bus wiring for the next device in line to terminals 2A and 2B.
3. If there are no subsequent devices in the line, terminate the bus line with resistors by moving the switch on the Profibus connector to ON.

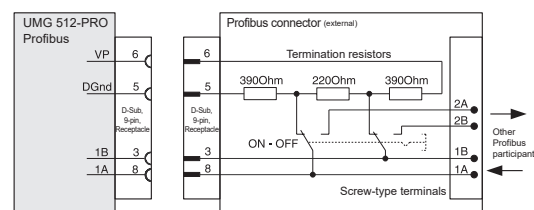


Fig. Profibus connector with termination resistors

| Transmission speeds in kBit/s | max. segment length |
|-------------------------------|---------------------|
| 9.6, 19.2, 45.45, 93.75 | 1200 m |
| 187.5 | 1000 m |
| 500 | 400 m |
| 1,500 | 200 m |
| 3000, 6000, 12000 | 100 m |

Table Segment lengths per Profibus specification.



WARNING!

Risk of injury due to electric voltage!

The Profibus, RS485 and the thermistor input are not galvanically separated from each other.

Therefore, be aware that hazardous voltages on these inputs may have effects on the other connections.

8.4 Bus structure

- All devices are connected in a bus structure (line).
- Each device has its own address within the bus (also see programming parameters).
- Up to 32 participants can be connected together in a single segment.
- The cable is terminated with resistors (bus terminator, 120 Ohm, 1/4 W) at the beginning and at the end of a segment.
- If there are more than 32 participants, repeaters (amplifiers) must be used to connect the individual segments.
- Devices for which the bus connection is switched on must be under current.
- It is recommended that the master be placed at the end of a segment.
- If the master is replaced with a bus connection, the bus must be switched off.
- Replacing a slave with a bus connection that is either switched off or de-energised can destabilise the bus.
- Devices that are not connected to the bus can be replaced without destabilising the bus.

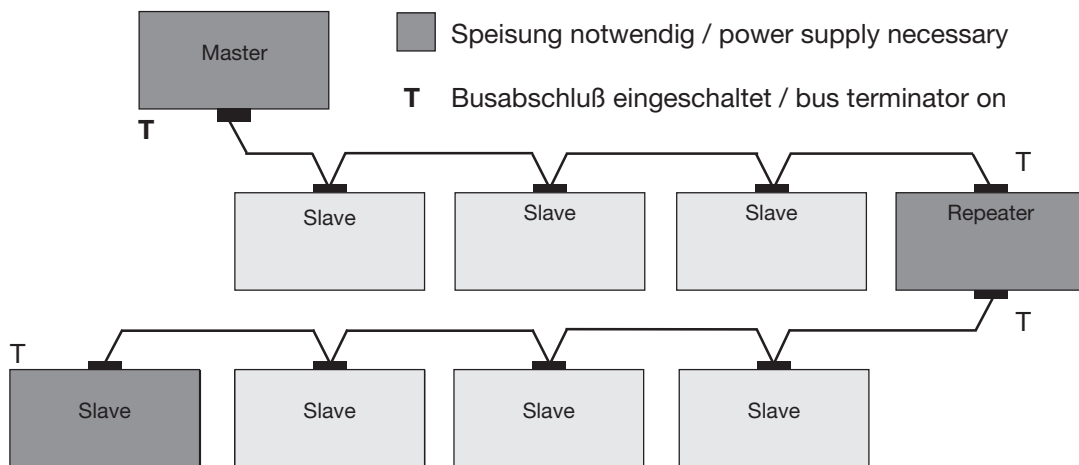


Fig. Bus structure illustration



NOTE!

CAT cables are not suitable for bus wiring. Use the recommended cable types for this.

8.5 Ethernet interface

The Ethernet interface is on the bottom of the device. When connecting, ensure that you provide a sufficient connection area depending on the bending radius and plug type for the Ethernet cable.

This connection area must not be smaller than 50 mm.



CAUTION!

Damage to property due to incorrect network settings

Incorrect network settings can cause faults in the IT network.

Before connecting the device, obtain information from your network administrator about the correct settings for your device.




ATTENTION!

Property damage due to security vulnerabilities in programs, IT networks and protocols

Security vulnerabilities can result in data misuse, faults and even cause your IT infrastructure to shut down.

- **To protect your IT system, network, data communications and measurement devices:**
- **Notify your network administrator and/or IT manager.**
- **Always keep the measurement device firmware up to date and protect the communication to the measurement device with an external firewall. Close any unused ports.**
- **Take protective measures against viruses and cyber attacks from the Internet, e.g. through firewall solutions, security updates and antivirus programs.**
- **Eliminate security vulnerabilities and update or renew existing protection for your IT infrastructure.**

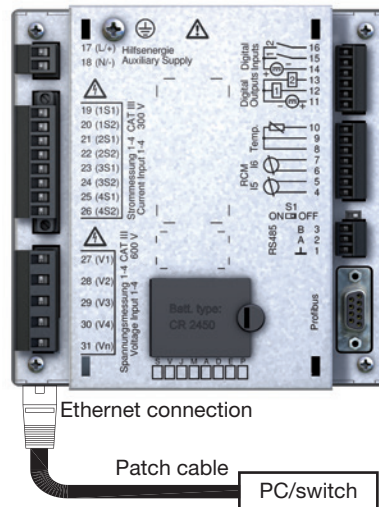

NOTE!

The device is factory-set to dynamic IP address allocation (**DHCP mode**). You can change these settings as described in “11. 2. 1 Ethernet (TCP/IP)” or using the GridVis® software. (see www.janitza.de)



NOTE!

We recommend using at least CAT5 cables for connection.

9. Digital inputs and outputs



CAUTION!

Transmission errors and damage to property due to electrical faults

If the line is longer than 30 m, there is an increased probability of transmission errors and damage to the device due to atmospheric discharge.

Use a shielded cable for connection to the digital inputs and outputs.

9.1 Digital inputs

The device has two digital inputs.

An input signal is detected on a digital input if a voltage of at least 18 V and maximum 28 V DC (typically at 4 mA) is applied.

There is no input signal for a voltage of 0 to 5 V and a current less than 0.5 mA.

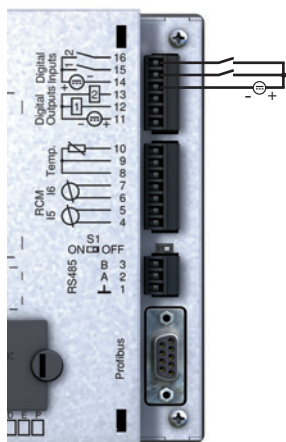


Fig. Connection of digital inputs



NOTE!

Pay attention to the supply voltage's polarity.

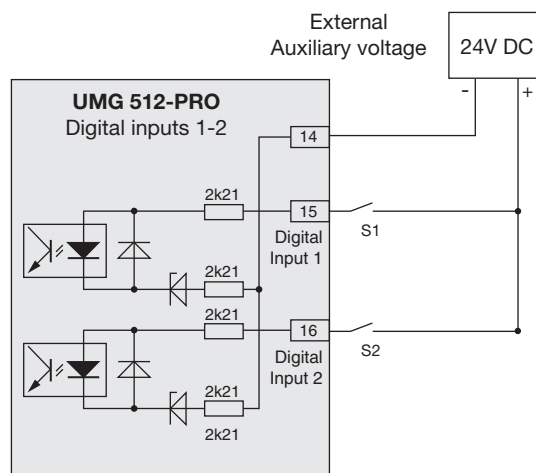


Fig. Example for connecting external contacts S1 and S2 to digital inputs 1 and 2

9.1.1 S0 pulse input

You can connect an S0 pulse transducer per DIN EN62053-31 to any digital input.

This requires an external auxilliary voltage with an output voltage in the range 18 to 28 V DC and a resistor of 1.5 kOhm.

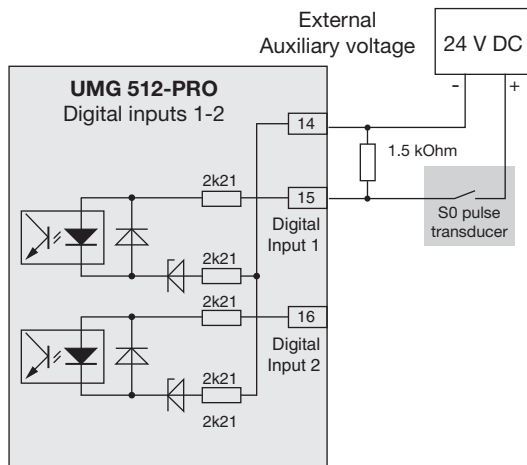


Fig. Example for connecting an S0 pulse transducer to digital input 1

9.2 Digital outputs

The device has two digital outputs, which:

- are galvanically separated from the analysis electronics using opto couplers.
- have a joint consumption.
- require an external auxiliary voltage.
- can be used as pulse outputs.
- can switch DC loads.

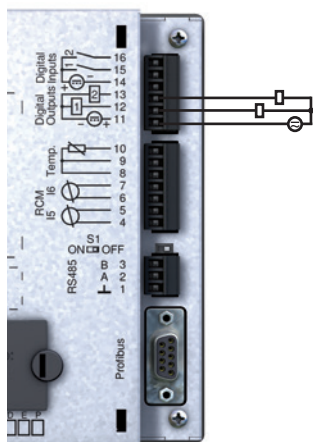


Fig. Connection of digital outputs



NOTE!

You can use the GridVis® software to set functions for the digital outputs clearly. (see www.janitza.de)



CAUTION!

Measurement errors when using as a pulse output

When using the digital outputs as pulse outputs, measurement errors may arise due to the residual ripple.

Therefore, use a mains adapter for the supply voltage for the digital inputs and outputs, which has a residual ripple of less than 5% of the supply voltage.



CAUTION!

Damage to property due to connection errors

The digital outputs are not short-circuit proof! Connection errors can therefore cause damage to the connections.

Ensure that the wiring is correct when connecting the outputs.

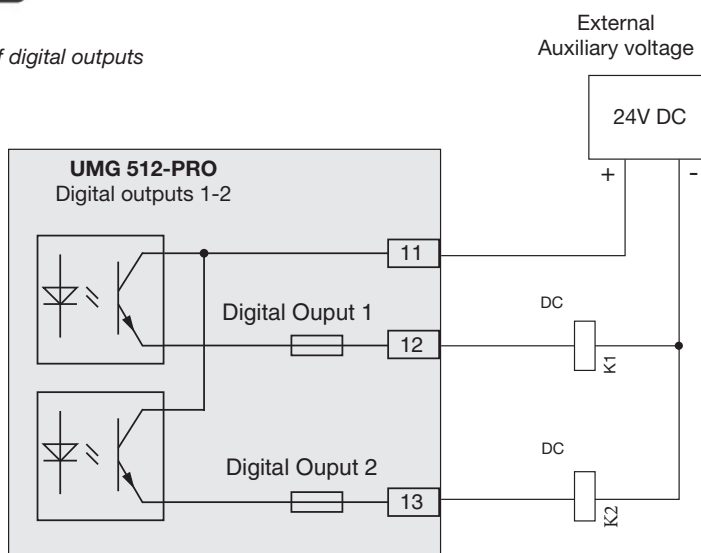


Fig. Example for connecting 2 relays to digital outputs 1 and 2

10. Operation

The device is operated via six function keys that have different functional assignments depending on the context:

- selecting measured value indications.
- navigation within the menus.
- editing device settings.

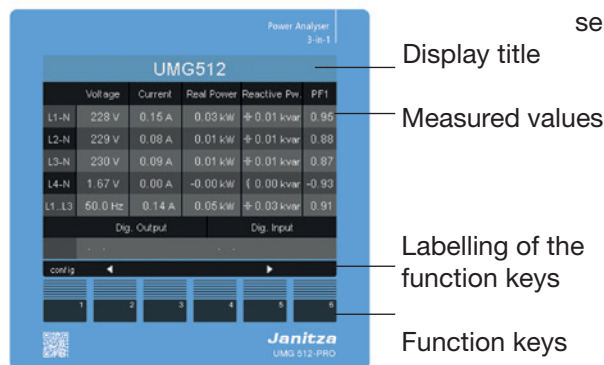


Fig. UMG 512-PRO "Home" measured value indication

10.2 "Home" measured value indication

After the power returns, the device starts with the "Home" measured value indication.

This measured value indication contains the device names and an overview of important measured values. In its delivery condition, the unit name consists of the device type and the serial number of the device.

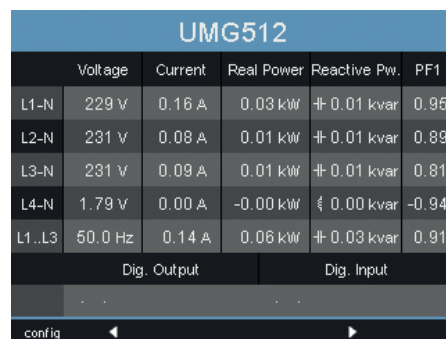


Fig. UMG 512-PRO "Home" measured value indication

10.1 Button allocation

| Button | Function |
|--------|--|
| | <ul style="list-style-type: none"> • Returns to the first screen (home) • Exits selection menu |
| | <ul style="list-style-type: none"> • Selects number • Selects main values (U, I, P ...) |
| | <ul style="list-style-type: none"> • Changes (number -1) • By-values (select) • Selects menu item |
| | <ul style="list-style-type: none"> • Changes (number +1) • By-values (select) • Selects menu item |
| | <ul style="list-style-type: none"> • Selects number • Selects main values (U, I, P ...) |
| | <ul style="list-style-type: none"> • Opens selection menu • Confirm selection |

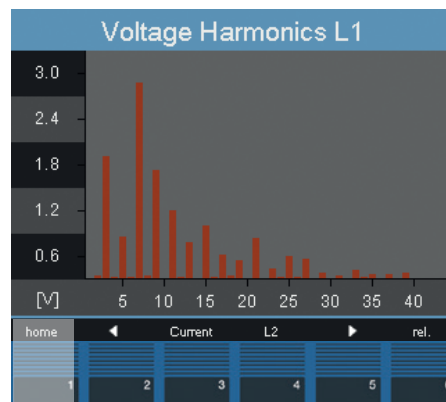


Fig. UMG 512-PRO Harmonics of voltage L1

Using the "Home - button 1", you navigate directly to the first "Home" measured value indication from the measured value indications for the main values


10.3 Measured value indication

10.3.1 Main values

Using buttons 2 and 5, you can scroll between the main values of the measured value indications. You can find an overview of the measured value indications in section “17.2 Overview of measured value indications”.

10.3.2 By-values

Using buttons 3 and 4, you can select the by-values of a measured value indication. These are also provided in the overview in section “17.2 Overview of measured value indications”.

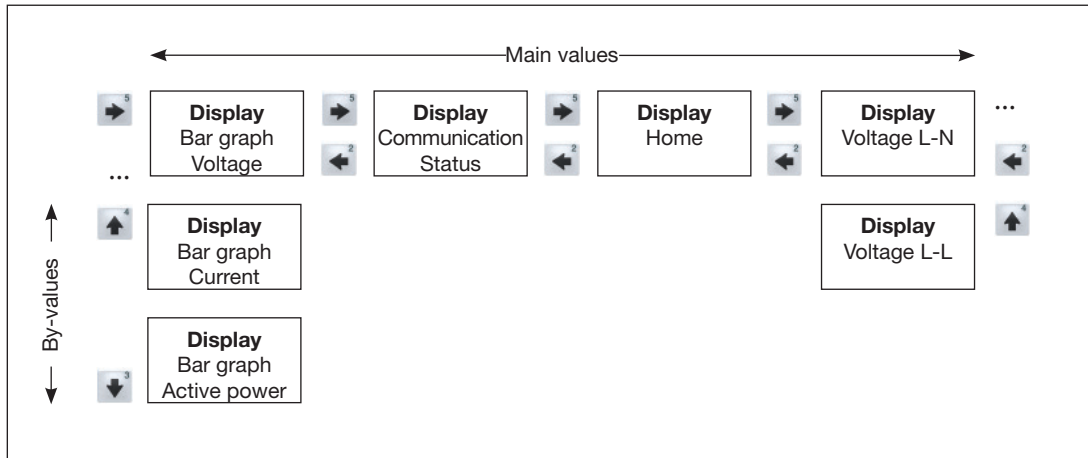

10.4 Selecting a measured value indication

In order to switch to a measured value indication with main values, use function keys 2 to 5 to select the required measured value indications with main values.

Using the 1 (home) function key, you always navigate to the first measured value indication.

Proceed as follows to switch to a measured value indication with by-values:

1. Select the measured value indication with the main values.
2. Use function keys 3 and 4 to select the measured value indication for the required by-values.

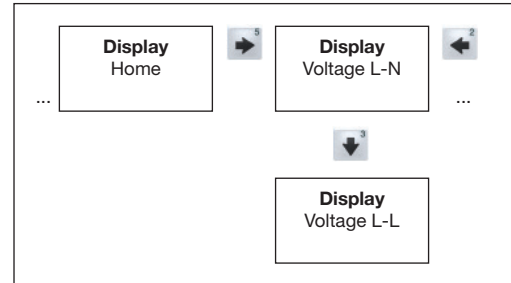


Fig. Example: Selecting the voltage by-values.

| Voltage L-N | | | |
|--|--------|-----------|-----------|
| | Value | Min Value | Max Value |
| L1-N | 227 V | 0.01 V | 236 V |
| L2-N | 228 V | 0.01 V | 237 V |
| L3-N | 228 V | 0.01 V | 237 V |
| L4-N | 1.12 V | 0.01 V | 1.69 V |
| <div> <div>home</div> <div>◀</div> <div>L-L</div> <div>▶</div> <div>select</div> </div> | | | |
| <div> <div>1</div> <div>2</div> <div>3</div> <div>4</div> <div>5</div> <div>6</div> </div> | | | |

| Voltage L-L | | | |
|---|--------|-----------|-----------|
| | Value | Min Value | Max Value |
| L1-L2 | 394 V | 0.01 V | 409 V |
| L2-L3 | 395 V | 0.01 V | 410 V |
| L3-L1 | 394 V | 0.01 V | 409 V |
| L4-N | 1.20 V | 0.01 V | 1.69 V |
| <div> <div>home</div> <div>◀</div> <div>L-N</div> <div>▶</div> <div>select</div> </div> | | | |

Fig. Selecting a measured value indication

10.7 Transients list

Transient voltages:

- are fast impulse transient effects in electrical networks.
- are unpredictable from a time perspective and have a limited duration.
- are caused by lightning strikes, switching operations or by tripped fuses.

A total of 16 detected transients are listed in the 2-page transients list for the device.

Proceed as follows to display a specific transient voltage:

1. Use buttons 2 and 5 to scroll to the "Transients" main value display
2. Select the desired page using button 4.
3. Use button 6 (selection) to access the transients list.
 - The background colour for the date/time switches from grey to blue.
4. Press button 3 or 4 to select a transient.
5. Use button 6 (select) to display a transient graphically.
6. Press button 6 (key) again to show or hide the key.
7. You can exit the transient graph display using button 1 (ESC).

| Transients (1..8) | | |
|-------------------|---------|-------------------------|
| Phase | Reason | Date/Time |
| L1 | delta | 2017 May 9 09:33:44,404 |
| L1 | delta | 2017 May 4 06:16:49,553 |
| L1 | absolut | 2017 May 3 12:21:44,971 |
| L1 | absolut | 2017 May 3 12:21:44,901 |
| L1 | absolut | 2017 May 3 12:21:44,830 |
| L1 | absolut | 2017 May 3 12:21:44,760 |
| L1 | absolut | 2017 May 3 12:21:44,691 |
| L1 | absolut | 2017 May 3 12:21:44,622 |

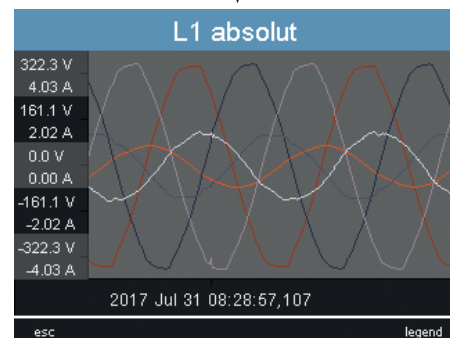


Fig. Displaying a transient

10.8 Event list

Events are threshold value violations of effective current and voltage values.

A total of 16 detected events are listed in the two-page event list for the device.

Proceed as follows to display a specific event:

1. Use buttons 2 and 5 to scroll to the "Events" main value display.
2. Select the desired page using button 4.
3. Use button 6 (selection) to access event list.
 - The background colour for the date/time switches from grey to blue.
4. Press button 3 or 4 to select an event.
5. Use button 6 (select) to display an event graphically.
6. Press button 6 (key) again to show or hide the key.
7. You can exit the event's graphical display using button 1 (ESC).

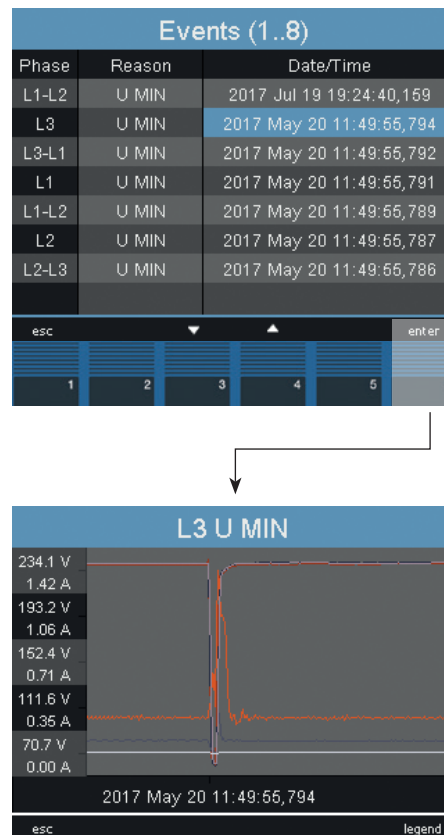


Fig. Displaying an event

11. Configuration

The supply voltage must be connected to configure the device. Proceed as described in "12. 1 Supply voltage".

To call the configuration menu, press button 1 on the "Home" measured value indication.

11.1 Languages

You can set the language for the measured value indications and menus directly in the "Configuration" menu.

There are different languages available for selection. The factory default setting for the language is "English".

Proceed as follows to change the system language:

1. Open the configuration menu.
2. Press button 3 or 4 until the language field has a coloured background.
3. Press button 6 (enter) to open the language selection.
4. Press button 3 or 4 to select the desired language.
5. Press button 6 (enter) again to confirm your selection.

11.2 Communication

You can configure the Ethernet and RS485 interface for your device in the communication menu.

Proceed as follows to access the communication menu:

1. Open the configuration menu. Press button 1 in the "Home menu".
2. Press button 3 or 4 until the communication field has a coloured background.
3. Press button 6 to open the "Communication" menu.

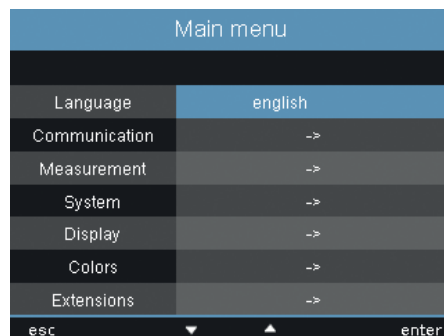


Fig. "Configuration" menu

11. 2. 1 Ethernet (TCP/IP)

Select the mode for address allocation and, if necessary, the IP address, subnet mask and the gateway in this section. The latter is allocated automatically in the BOOTP and DHCP allocation modes.

The device has three types of address allocation:

- **Off** - You define the IP address, subnet mask and gateway, and set them directly on the device. Select this mode for straightforward networks without DHCP servers.
- **BOOTP** - BootP enables a device to be integrated into an existing network fully automatically. However, BootP is an older protocol and does not provide the scope of functions provided by DHCP.
- **DHCP** - When started, the device automatically obtains the IP address, the subnet mask and the gateway from a DHCP server. DHCP is factory-set.

Proceed as follows to adjust the IP address, subnet mask and gateway:

1. Press button 3 or 4 until the relevant field has a coloured background.
2. Press button 6 to activate the input.
 - The font changes to red and a cursor is displayed.
3. Now press button 3 or 4 to select the required digit.
4. Use button 5 to move to the next digit.
5. Repeat steps 3 and 4 until you have completed the required input.
6. Press button 6 to confirm your input.

11. 2. 2 Field bus

If you connect the device via the RS-485 interface, configure the following settings in this section:

- **Modbus protocol** - Here, you can select whether the device works as a Modbus slave, Modbus master/gateway or Profibus DP V0 (optional) within the bus structure.
- **Device address** - Here, you can select a device address that is used to address the device in the bus. This address must be between 0 and 255, and be unique in the tree structure.
- **Baud rate** - Select the same baud rate for all devices in a bus structure. Possible settings are 9600, 19200, 38400, 57600, 115200, 921600 kbps. The factory default setting is 115200 kbps.

Proceed as follows to make the adjustments:

1. Press button 3 or 4 until the relevant field has a coloured background.
2. Press button 6 (enter) to call the selection options.
3. Press button 3 or 4 to select the required value.
4. Press button 6 to confirm your selection.



CAUTION!

Damage to property due to incorrect network settings

Incorrect network settings can cause faults in the IT network.

Obtain information from your network administrator about the correct settings for your device.

11.3 Measurement

You can configure the following in the measurement menu:

- The measuring transducer for current and voltage measurement
- Recording transients
- Recording events
- The relevant voltage
- The mains frequency
- The flicker settings
- The temperature sensor

| Measurement | |
|--------------|-------------------------|
| Transformer | ~> |
| Transients | ~> |
| Events | ~> |
| Voltage mode | L-N |
| Rated Freq. | 50 Hz (fixed frequency) |
| Flicker | 230V/50Hz |
| Temperatur | PT100 |
| esc | enter |

Fig. "Measurements" menu

The device has:

- 4 measurement channels for current measurement (I1 - I4)
- 4 measurement channels for voltage measurement (V1 - V4 against Vref).

Measured voltage and measured current for measurement channels 1-4 must derive from the same network.

Baseline measurement

The baseline measurement uses the measurement channels 1-3. Use measurement channels 1-3 in three-phase systems.

Supporting measurement

The supporting measurement only uses measurement channel 4. Use measurement channel 4 when measuring in single-phase systems or in three-phase systems with symmetrical loads.

The frequency setting and the setting for the relevant voltage are pulled automatically from the baseline measurement settings.

11.3.1 Measuring transducer

You can make the following adjustments for baseline and supporting measurements here:

- Current transformer
- Voltage transformer
- Rated current
- Transfer AUX / Main
- Connection

As well as settings for transformation ratios and monitoring for the residual current transformer

Current transformer

You can assign current transformer ratios to the baseline measurement and the supporting measurement.

Select the 5/5 A setting when measuring currents directly.

Setting range:

| | |
|-----------|--------------|
| Primary | 1 to 1000000 |
| Secondary | 1 to 5 |

Factory default setting:

| | |
|-----------|---|
| Primary | 5 |
| Secondary | 5 |

Rated current

The rated current defines the reference value for the following measurements:

- Overcurrent
- Current transients
- K factor
- Automatic scaling of graphics

Setting range: 0 to 1000000 A

| Transformer MAIN | | |
|--|---------|-----------|
| | primary | secondary |
| Current Transf. | 5A | 5A |
| Voltage Transf. | 400V | 400V |
| Rated Current | | 150A |
| Rated Voltage | | 230V |
| Apply to AUX | | no |
| Connection | | 4w2l |
| <div> <div>esc</div> <div>▼</div> <div>▲</div> <div>enter</div> </div> | | |

Fig. Configuring current transformer ratios

Voltage transformer

You can assign voltage transformer ratios to the baseline measurement and the supporting measurement.

Select the 400/400 V setting when measuring without a voltage transformer.

Setting range:

| | |
|-----------|--------------|
| Primary | 1 to 1000000 |
| Secondary | 1 to 999 |

Factory default setting:

| | |
|-----------|-----|
| Primary | 400 |
| Secondary | 400 |

| Transformer MAIN | | |
|------------------|---------|-----------|
| | primary | secondary |
| Current Transf. | 5A | 5A |
| Voltage Transf. | 400V | 400V |
| Rated Current | | 150A |
| Rated Voltage | | 230V |
| Apply to AUX | | no |
| Connection | | 4w2l |
| esc | ▼ | ▲ |
| | | enter |

Fig. Measuring transducer for baseline measurement

Rated voltage

The rated voltage corresponds to the "arranged input voltage U_{din}" according to EN 61000-4-30.

The rated voltage defines the reference point for:

- upward deviation (EN 61000-4-30)
- downward deviation (EN 61000-4-30)
- transients
- events
- automatic scaling of graphics

Setting range: 0 to 1000000 V

Factory default setting: 230 V

Transfer AUX / MAIN

These settings can be adjusted separately for the baseline measurement and supporting measurement.

You can use the "Transfer AUX / Main" menu item to transfer the settings from the supporting measurement or the baseline measurement, in order to prevent having to enter everything again.

- **No** - The settings from the supporting and baseline measurement are not transferred.
- **Yes** - The settings from the supporting measurement and baseline measurement are transferred.

Connection

You can select between different connection schemes (see "7. 7 Connection variants") for voltage and current measurement using the "Connection" selection.

Factory default setting: 4w3m

| Transformer MAIN | | |
|------------------|---------------|-----------|
| Current | L1 | secondary |
| Voltage | L2 | |
| Rated | L3 | |
| Rated | N | |
| Apply | V1 V2 V3 Vref | I1 I2 I3 |
| Connection | 4w3m | 4w3m |
| esc | ▼ | ▲ |
| | | enter |

Fig. Example for measurement in a three-phase 4-conductor network with asymmetric loading

Residual current transformer

When using residual current inputs I5 and I6, the corresponding transformer ratios of the used residual current transformer must be set.

Setting range:

| | |
|-----------|--------------|
| Primary | 1 to 1000000 |
| Secondary | 1 |

Factory default setting:

| | |
|-----------|-----|
| Primary | 127 |
| Secondary | 1 |

| Transformer AUX | | |
|-----------------|---------|-----------|
| | primary | secondary |
| Current Transf. | 127A | 1.000A |
| break detection | | yes |
| Current Transf. | 127A | 1.000A |
| break detection | | yes |
| | | |
| | | |
| | | |
| esc | ▼ | ▲ enter |

Fig. Residual current transformer menu

You can also use this menu to adjust failure monitoring for the corresponding residual current inputs:

- **Activated** - Switches on failure monitoring for residual current monitoring.
- **Deactivated** - Switches off failure monitoring for residual current monitoring.

| Transformer AUX | | |
|-----------------|---------|-----------|
| | primary | secondary |
| Current Transf. | 127A | 1.000A |
| break detection | | yes |
| Current Transf. | 127A | 1.000A |
| break detection | | yes |
| | | |
| | | |
| | | |
| esc | ▼ | ▲ enter |

Fig. Failure monitoring

11.3.2 Transients

| Allocations MAIN | | |
|------------------|---------------|---------|
| Transients | | |
| Mode (abs) | automatically | |
| Peak U | 0% | (0.0V) |
| Mode (delta) | automatically | |
| Trms U | 0% | (0.0V) |
| Modus (abs I) | off | |
| Peak I | 0% | (0.0A) |
| Modus (envelop) | automatically | |
| Envelop U | 0% | (0.0V) |
| Apply to AUX | no | |
| esc | ▼ | ▲ enter |

The device:

- monitors the measurement inputs for transients.
- detects transients that are longer than 39 μ s.
- can detect transients according to two different criteria.

If a transient has been detected:

- the wave form is saved to a transient record.
- the threshold value increases by 20 V for the next 10 minutes, both in automatic and in manual mode.
- it will be recorded with 512 points for a period of 60 seconds per additional transient.

You can use the GridVis® event browser to display recorded transients.

The following modes are available for recording the transients:

- **absolute**
- **delta**
- **envelop**

Mode (absolute)

If a sample value exceeds the set threshold value, a transient is detected:

- **Off** - Transient monitoring has been switched off
- **Automatic** - Factory default setting. The threshold value is calculated automatically and is 110% of the current 200 ms effective value.
- **Manual** - Transient monitoring uses the configurable threshold values under "Peak".

Mode (delta)

If the difference between two neighbouring sample points exceeds the set threshold value, a transient is detected:

- **Off** - Transient monitoring has been switched off.
- **Automatic** - Factory default setting. The threshold value is calculated automatically and is 0.2175 times the current 200 ms effective value.
- **Manual** - Transient monitoring uses the configurable threshold values under "Trns U".

Mode (envelop)

If a sample value exceeds the envelop range, a transient is detected:

- **Off** - Transient monitoring has been switched off
- **Automatic** - Factory default setting. The envelop is automatically calculated and is $\pm 5\%$ of the rated voltage.
- **Manual** - Transient monitoring uses the configurable envelop.

Transfer AUX / MAIN

These settings can be adjusted separately for the baseline measurement and supporting measurement.

You can use the "Transfer AUX / Main" menu item to transfer the settings from the supporting measurement or the baseline measurement, in order to prevent having to enter everything again.

11.3.3 Events

Events are threshold value violations of set threshold values for current and voltage.

Here, threshold values are compared with the half wave effective values for current and voltage from the measurement channels. The event record contains the following:

- a mean value
- a min. and max. value
- a start and end time.

An event describes faults due to:


- overvoltage/undervoltage
- rapid voltage changes
- voltage loss
- overcurrent
- overfrequency/underfrequency
- rapid frequency changes

Monitoring of the threshold values can be switched off (Off/Manual).

On the device you can set threshold values and hysteresis as a percentage of the rated value for:

- overvoltage and undervoltage,
- voltage interruption
- overcurrent.

If an event has occurred, the corresponding measured value is recorded with the set pre-run and after-run periods (respectively 0 to 1000 half waves).

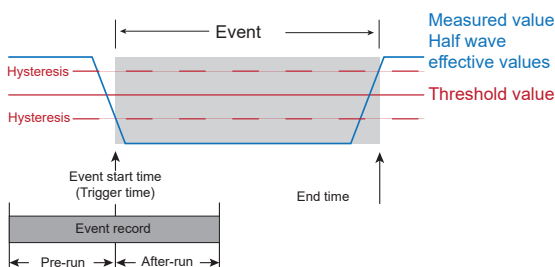

NOTE!

You can use the GridVis® software to set an event record.
(see www.janitza.de)



NOTE!

You can only set the pre-run and after-run using the GridVis® software.

Factory default setting: 0

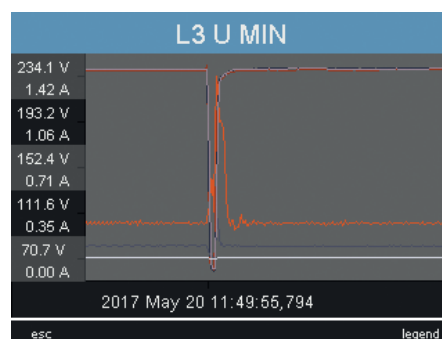


Fig. Illustration of the half wave effective values for an event

Voltage dip

A voltage dip is set in % of the rated voltage.

Overvoltage

The overvoltage is set in % of the rated voltage.

Overcurrent

The rapid increase of current is set in % of the nominal current.

Transfer AUX / Main

These settings can be adjusted separately for the baseline measurement and supporting measurement.

You can use the "Transfer AUX / Main" menu item to transfer the settings from the supporting measurement or the baseline measurement, in order to prevent having to enter everything again.

11.3.4 Relevant voltage

Depending on the application situation, the power quality

- the voltage between the phase conductors (L), i.e. **L-L**
- or the voltage between the phase conductor (L) and the neutral conductor (N), i.e. **L-N** is relevant for the analysis.

You can choose between these two settings in the relevant voltage menu item.

We recommend the "L-N" setting for measuring the power quality in low voltage networks. You should select the "L-L" setting in medium voltage power grids.

11.3.5 Nominal frequency

The device determines the mains frequency from the voltage applied to L1 and uses this for the additional calculations.

Set the nominal frequency for the network manually on the device before starting measurement. The nominal frequency is required as a reference for measurement of the power quality.

Setting range of the nominal frequency:

- 50 Hz (factory default setting)
- 60 Hz
- 15 Hz to 440 Hz (automatic)
- Select a nominal frequency of 50 Hz or 60 Hz to measure the power quality in accordance with EN61000 4 30 and EN50160.
- Set the nominal frequency to "Auto" for measurements in networks with other nominal frequencies e.g. 16 2/3 Hz or 400 Hz.

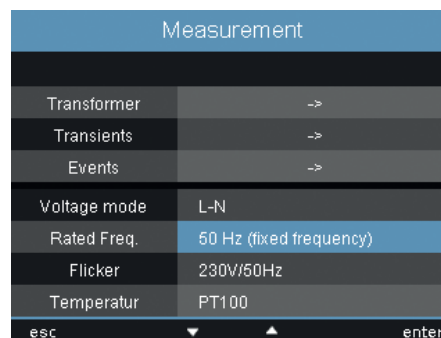


Fig. Setting the nominal frequency



NOTE!

In order to determine the mains frequency automatically, a voltage L1-N of greater than 10 Veff must be applied to voltage measurement input V1.



NOTE!

Flicker values can only be determined if the relevant voltage L-N is given.

11. 3. 6 Flicker

The device requires the mains base values in order to provide voltage and frequency-independent measurement and calculation of the flicker values (flicker measurement as per DIN EN61000-4-15:2011). These values are to be specified by the user and can be selected from a predefined list:

- 230 V/50 Hz (factory default setting)
- 120 V/50 Hz
- 230 V/60 Hz
- 120 V/60 Hz

| Measurement | |
|--------------|-------------------------|
| Transformer | -> |
| Transients | -> |
| Events | -> |
| Voltage mode | L-N |
| Rated Freq. | 50 Hz (fixed frequency) |
| Flicker | 230V/50Hz |
| Temperatur | PT100 |
| esc | enter |

Fig. Setting the flicker values



NOTE!

Flicker values can only be determined if the relevant voltage L-N is given.

11. 3. 7 Temperature

When using a temperature measurement, select the corresponding sensor type from a predefined list:

- PT100
- PT1000
- KTY83
- KTY84

| Measurement | |
|--------------|-------------------------|
| Transformer | -> |
| Transients | -> |
| Events | -> |
| Voltage mode | L-N |
| Rated Freq. | 50 Hz (fixed frequency) |
| Flicker | 230V/50Hz |
| Temperatur | PT100 |
| esc | enter |

Fig. Setting the sensor type for temperature measurement.

11.4 System

You can call system settings and change them as far as possible here.

| System | | |
|------------------------|-------------------|---------------------|
| 1 | Version | 5.000 |
| 2 | Serial | 42000678 |
| 3 | MAC | 00:0E:6B:09:02:A6 |
| 4 | Address | 195.145.150.168 |
| 5 | Gateway | 195.145.150.161 |
| 6 | Date/Time | 31.07.2017 09:34:19 |
| 7 | Password | 0 |
| 8 | Re-initialization | -> |
| esc ▼ ▲ enter | | |

Fig. System settings

- 1 Firmware version
- 2 Device serial number
- 3 Fixed MAC address of the device
- 4 Set IP address
- 5 Set gateway address
- 6 Date and time
- 7 Set password
- 8 Reset settings



NOTE!

You can use the GridVis® software to make the settings for time synchronisation, date and time. (see www.janitza.de)

11.4.1 Password

You can use a password to block access to the configuration. The configuration can then only be changed directly on the device by entering the password.

The password consists of a 6-digit code.

Setting range:

1-999999 = With password
0 = no password

A password (0) is not factory-set.

To change a password that has already been set, you must know the current password. Note down the changed password.

Proceed as follows to set a password:

1. Open the system menu
2. Use button 3 or 4 to navigate to the password setting.
3. Press button 6 to open the output.
4. Now press button 2 or 5 to enter the password.
5. Press button 6 again to confirm your input.
 - If you no longer want a password prompt, enter the password "0".



NOTE!

If you no longer remember your password, you can only change it using the GridVis® software. (see www.janitza.de)

11. 4. 2 Reset

You can reset the settings to the factory settings in this area.

Resetting the energy

You can clear all energy meters in the device at the same time. Specific energy meters cannot be selected.

1. Open the reset menu.
2. Use button 3 or 4 to select the "Reset energy" item (highlighted in colour)
3. Press button 6 to activate the input.
 - The font colour changes to red and a cursor is displayed.
4. Change the value by pressing button 4 on "Yes".
5. Press button 6 to confirm your input.
 - The "Carried out" message appears in the line, all energy meters have been cleared.

Deleting min. / max. values

You can clear all min. and max. values in the device at the same time.

For information on how to clear individual min. and max. values, see "10. 6 Deleting values".

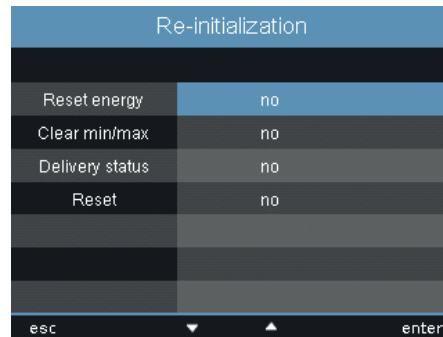


Fig. Deleting min. / max. values

1. Open the reset menu.
2. Use button 3 or 4 to select the "Min./max. values" item (highlighted in colour).
3. Press button 6 to activate the input.
 - The font colour changes to red and a cursor is displayed.
4. Change the value by pressing button 4 on "Yes".
5. Press button 6 to confirm your input.
 - The "Carried out" message appears in the line, all min. and max. values have been cleared.



NOTE!

Before commissioning, clear any content that may be present on the power meters, min./max. values or recordings due to the production process.

Delivery status

You can reset all settings such as the configuration and the recorded data to the factory default setting here. Entered activation codes are not deleted.

1. Open the reset menu.
2. Use button 3 or 4 to select the "Delivery status" item (highlighted in green)
3. Press button 6 to activate the input.
 - The font colour changes to red and a cursor is displayed.
4. Change the value by pressing button 4 on "Yes".
5. Press button 6 to confirm your input.
 - The "Carried out" message appears in the line, the delivery status is restored.

Re-initialisation

Proceed as follows to re-initialise the device manually:

1. Open the reset menu.
2. Use button 3 or 4 to select the "Re-initialise" item (highlighted in green)
3. Press button 6 to activate the input.
 - The font colour changes to red and a cursor is displayed.
4. Change the value by pressing button 4 on "Yes".
5. Press button 6 to confirm your input.
 - The device re-initialises within approx. 10 seconds.

11.5 Display

You can adjust your device's display settings here.

Brightness

You can adjust your device's display brightness here. Proceed as described in the template in the previous chapter.

Setting range: 0 to 100%

Factory default setting: 70%

- 0% = dark
- 100% = very bright

**NOTE!**

The service life of the backlight is extended if the brightness of the backlight is lower.

Standby

Here, you can set the time after which the display brightness switches to the set standby brightness.

Setting range: 60 to 9999 sec.

Factory default setting: 900 sec.

Brightness (standby)

Here, you can set the display brightness that the system switches to after the standby time has elapsed. The standby time is restarted using buttons 1-6.

Setting range: 0 to 60%

Factory default setting: 40%

Screen Saver

You can activate or deactivate the screen saver here.



NOTE!

If the same screen is shown on the display for an extended period, this can cause damage to the display. Using the screen saver prevents this and therefore extends the display's service life.

Setting range: Yes, no
Factory default setting: Yes

Display

Here, you can define the speed at which the new measured values appear in the measured value indications. The following speeds are available:

- fast
- slow (200ms)
- slow (1 sec.)

Factory default setting: Fast

Rotate

You can activate or deactivate the automatic changeover between the different measured value indications here.

Setting range: Yes, no
Factory default setting: No

Rotation interval

Here, you can set the time after which the screen automatically switches to the next measured value indication.

Setting range: 0 to 255 seconds
Factory default setting: 0 seconds

11.6 Colours

You can select the colours for displaying the current and voltage in the graphic representations here.

1. Press button 3 or 4 until the colour field has a coloured background
2. Press button 6 to open the colours menu
3. Press button 3 or 4 to select the required colour field.
4. Press button 6 to confirm your selection
5. Press button 3 or 4 to select the required colour.
6. Press button 6 to confirm your selection.

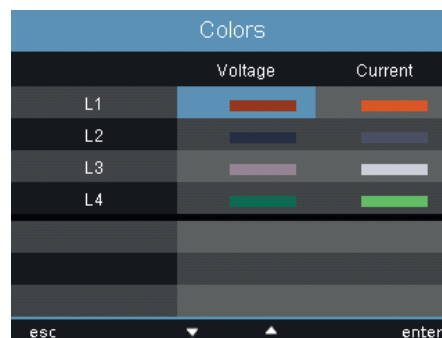


Fig. Menu setting for colours

11.7 Extensions

Here, you can:

- activate functions that are subject to charge.
- call the status of the Jasic programs.

Activation

The device contains the following functions that are subject to charge, which you can activate subsequently:

- BACnet

You receive the activation codes from the manufacturer. The manufacturer requires the serial number of the device and the name of the function to be activated.

To activate the function, enter the 6-digit activation code in the corresponding line.

Make sure that the activation code is only valid for one device.

Jasic status

Up to 7 customer-specific Jasic programs (1-7) and a recording can run in the device.

The Jasic programs can have the following statuses:

- stopped
- running

| Extensions | |
|---------------|-------------|
| | Jasic-state |
| Jasic-state 1 | running |
| Jasic-state 2 | running |
| Jasic-state 3 | running |
| Jasic-state 4 | running |
| Jasic-state 5 | running |
| Jasic-state 6 | running |
| Jasic-state 7 | stopped |
| Records | running |
| esc | |

Fig. Menu setting for Jasic status

| Extensions | |
|-------------|-------|
| Activation | -> |
| Jasic-state | -> |
| Customkey | 0 |
| | |
| | |
| | |
| | |
| esc | enter |

Fig. Menu setting for extensions



NOTE!

You can only change the status of the Jasic programs using the software.

11.8 PTP configuration

The device supports the **Precision Time Protocol (PTP)** in accordance with the Standard Annex J IEEE 1588-2008 **PTP Default Profile**.

The PTP protocol is executed in a logical area known as the domain. The time specified by the protocol in one domain is independent of the times in other domains.

The PTP protocol enables precise time synchronization in the network from the time server (master) to the clients (slaves). The prerequisite for this is the PTP capability of the client. The reference time for the system is determined by what is known as the Grandmaster Clock (see section "Example: PTP timing according to IEEE 1588-2008 and clock types")

Time synchronization in a network is achieved by the exchange of PTP time control messages. Clients use the time control information in the PTP messages to set their time to that of the time server (master) in their part of the hierarchy.

While NTP uses the client-server model – each client must be configured with a name or the IP address – the system configures itself according to the default PTP profile.

For the **Device** (as of firmware version 5.017), activate PTP (or NTP):

- In the GridVis software (device configuration).
- Via the parameter **_MODE_NTP** (the Modbus address can be found in the Modbus address list of your device at www.janitza.de).

11.8.1 Important Modbus parameters for the PTP configuration of the device

Modbus parameters have the following meaning:

| Parameter name | Data type | Permission | Entry (range) |
|---|-----------|------------|-----------------------|
| _MODE_NTP (cf. section 1.1.2 "PTP parameters" _MODE_NTP) | int | RD/WR | NTP/PTP activation |
| _PTP_DOMAIN ¹⁾ | byte | RD/WR | Default = 0 (0 - 127) |
| _PTP_ANNOUNCE_RECEIPT_TIMEOUT ²⁾ | byte | RD/WR | Default = 3 (2 - 10) |
| _PTP_MANAGEMENT_INTERFACE ³⁾ | short | RD/WR | Default = 0 (0 - 1) |

1. Domain number (default domain = 0). A PTP domain is a range of PTP clocks (devices) which synchronize themselves with each other using the PTP protocol.
2. Selects the PTP Announce Receipt Timeout. This parameter specifies the number of intervals that are allowed to elapse without receipt of an announce message (default = 3).
3. 0 (default) – Device supports PTP configuration via the Modbus.
1 - Alternative method of configuration (enables a comprehensive configuration via the interface).

11.8.2 PTP parameter _MODE_NTP


In this context, the entries have the following functions:

| Parameter _MODE_NTP | Entry | Description |
|-----------------------------|-------|--|
| TIME_PROTOCOL_NONE | = 0 | No time protocol is active. Manual time configuration. |
| TIME_PROTOCOL_NTP_BROADCAST | = 1 | NTP mode "Listen", PTP deactivated. |
| TIME_PROTOCOL_NTP_ACTIVE | = 2 | NTP mode "Active", PTP deactivated. |
| TIME_PROTOCOL_PTP | = 3 | PTP mode is activated, NTP deactivated. |

i INFORMATION

- A Modbus address list including all the PTP parameters of your device can be found in the download area at www.janitza.de.
- Specifications for PTP (Precision Time Protocol) can be found in IEEE Standard for a Precision Clock Synchronization Protocol for Networked Measurement and Control Systems (IEEE Std. 1588-2008).
- The device supports PTP according to the default PTP profile Annex J IEEE 1588-2008 with the profile ID 00-1B-19-00-01-00.

11. 8. 3 Example: PTP timing according to IEEE 1588-2008 and clock types

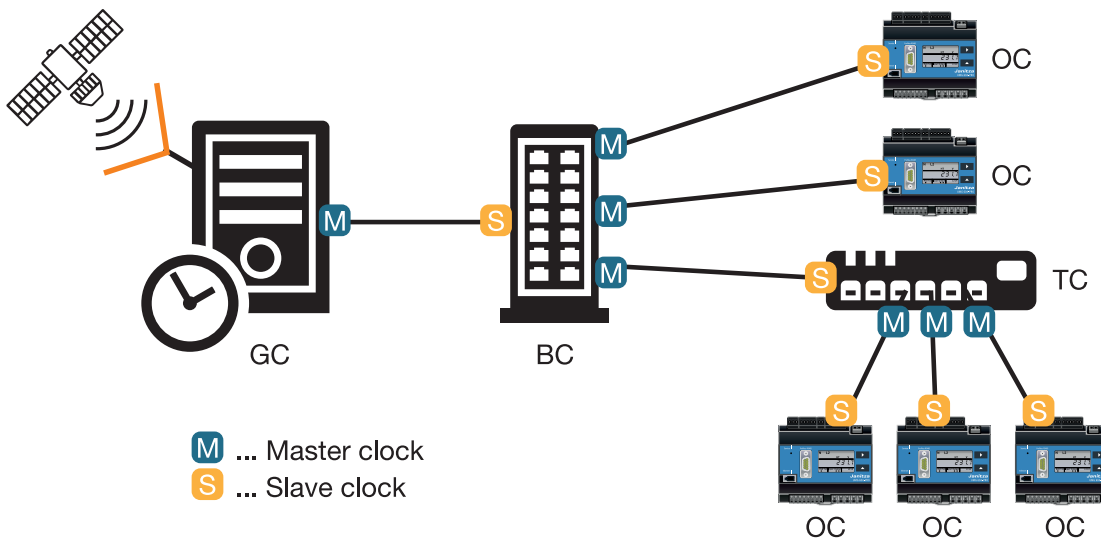

| | |
|-------------------------------|--|
| Ordinary clock (OC) | Simple clock (one port, measures one client) that is connected with a master as the slave and synchronizes its time with the master. |
| Boundary clock (BC) | Clock that contains several "ordinary clocks" (several ports) and, as the master, synchronizes several slaves with its time and transports this beyond a network boundary. The "boundary clock" can also be connected to a master as a slave and synchronize its time with the master. |
| Transparent clock (TC) | Clock that does not actively intervene in the time synchronization; it is more a hardware item that transmits time synchronization data packets (e.g. a network switch). "Transparent clocks" can also correct the time stamp within the data packet by the dwell time within the hardware, if needed. |
| Grandmaster clock (GC) | The grandmaster clock is an "ordinary clock" that has access to GPS or another very accurate time and provides this time for all subordinate nodes. |

12. Commissioning

This section provides you with all the information you require to commission your device for the first time

12.1 Supply voltage

Proceed as follows when setting up the supply voltage:

1. Connect the supply voltage to the rear of the device using a terminal.
2. After connecting the supply voltage, the first measured value indication "Home" appears on the display after around 15 seconds.
3. If no display appears, check whether the supply voltage is within the rated voltage range.



CAUTION!

Damage to property due to not observing the connection conditions

Failure to observe the connection conditions can damage or destroy your device.

Therefore, note the following:

- **Adhere to the specifications for voltage and frequency on the rating plate.**
- **Do not use the device to measure DC voltage.**



NOTE!

Before commissioning, clear any content that may be present on the power meters, min./max. values or recordings due to the production process.

12.2 Measured voltage

Voltage measurements in networks with rated voltages of over 500 VAC to earth must be connected via voltage transformers.

Proceed as follows when connecting measured voltage:

1. Connect the measured voltage to the rear of the device using a terminal.
2. After connecting the measured voltage, the measured values displayed by the device for the L-N and L-L voltages must correspond to those on the measurement input.
3. Pay attention to any voltage transformer factors that are set.



WARNING!

Risk of injury due to electric voltage!

If the device is subjected to surge voltages higher than the permissible overvoltage category, safety-relevant insulations in the device can be damaged, which means that the product's safety can no longer be guaranteed.

Only use the device in environments in which the permissible overvoltage category is not exceeded.

12.3 Frequency measurement

To measure, the device requires mains frequency that can either be specified by the user or determined automatically by the device.

- In order to determine the frequency automatically, at least a voltage (V_{Vref}) of greater than 10 Veff must be applied to at least one of the voltage measurement inputs.
- The mains frequency must be in the range from 15 Hz to 440 Hz.
- If there is no sufficiently high measured voltage available, the device cannot determine the mains frequency and therefore cannot perform any measurements.

12.4 Phase sequence

Check the direction of the rotating field voltage in the measured value indication of the device.

A “right-hand” rotation field usually exists.

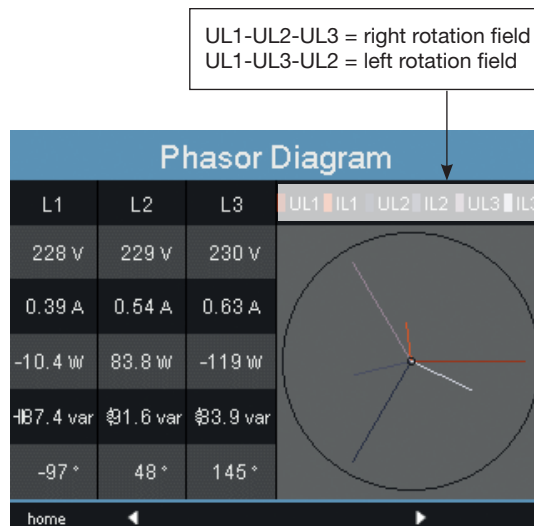


Fig. Indication of the phase sequence according to the direction of the rotating field.

12.5 Measured current

The device:

- is intended for connecting current transformers with secondary currents of ± 1 A and ± 5 A.
- does not measure DC.
- has current measurement inputs that can be loaded with 120 A for 1 second.

The factory default for the current transformer ratio is 5/5 A and must be adapted to the current transformer employed if necessary.

Proceed as follows when connecting the measured voltage:

1. short circuit all current transformer outputs except for one.
2. connect the measured voltage via the terminals on the back of the device and affix it sufficiently with two screws.
3. compare the current displayed on the device with the current input.
 - the currents must match based on the current transformer conversion ratio.
 - the device must display approx. zero amperes in the short circuited current measurement inputs.

Phase shift angle sign prefix (U/I):

- positive (+) for capacitive load
- negative (-) for inductive load


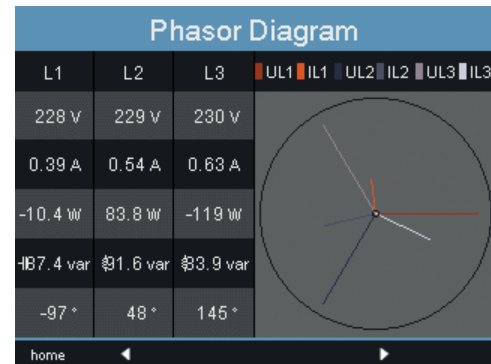


Fig. Phasor diagram

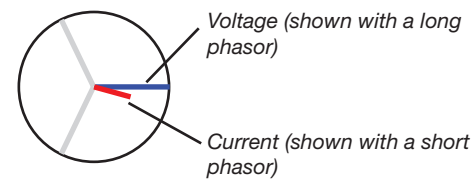

NOTE!


Voltages and currents that are outside the permissible metering range can damage the device.

12. 5. 1 Phasor diagram examples

The following are two examples for an indication of measured current and measured voltage in the phasor diagram:

Example 1

Predominantly ohmic load.

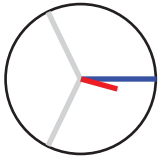


Voltage and current only have a minor deviation in the phase length.

- The current measurement input is assigned to the correct voltage measurement input

Example 2

Predominantly ohmic load.

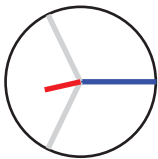

Voltage and current have a deviation of about 180° in the phase position.

- The measurement input is assigned to the correct voltage measurement input.
- In the current measurement considered here, the k and l connections are reversed or there is a return feed in the mains power supply.

12. 6 Residual current

Only connect residual current transformers with a rated current of 30 mA to inputs I5 and I6!

Both residual current inputs can measure AC currents and pulsing direct currents.

Bearing in mind the current transformer ratio, the residual current displayed by the device must correspond to the current input.

The current transformer ratio is factory-set to 127/1 A and must be adapted to the residual current transformer used if necessary.

NOTE!

It is not necessary to configure a connection schematic for measurement inputs I5 and I6!

NOTE!

The device requires the mains frequency to measure the residual currents. Establish a measured voltage for this or set a fixed frequency.

12.7 Failure monitoring (RCM)

The device enables continuous monitoring of the connection to the residual current transformer on inputs I5 and I6.

You can activate failure monitoring via:

- the relevant menu item as described in section “11. 3. 1 Measuring transducer”.
- or by setting address 13793 for residual current measurement input I5 and 13795 for I6.

If there is an interruption in the connection to the current transformer, this state is recorded in certain registers or indicated in the GridVis® software.

| Modbus addr. | Value / Function |
|--------------------------|--|
| 13793 (I5) 13795 (I6) | Failure monitoring for I5 / I6 0 = Deactivate monitoring 1 = Activate monitoring |

| Modbus addr. | Value / Function |
|--------------------------|--|
| 13805 (I5) 13806 (I6) | 0 = Connection of the residual current transformer to I5 and I6 error-free 1 = Error in the current transformer connection to I5 and I6 |

12.7.1 Alarm status

Using bit-by-bit coding inside the alarm register (addr. 13921 for I5, 13922 for I6), it is possible to read out different alarm statuses:

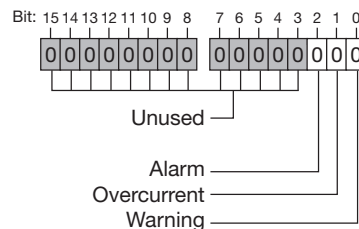


Fig. Alarm register

Example:

Overcurrent was measured. The alarm bit is also set and must be acknowledged!

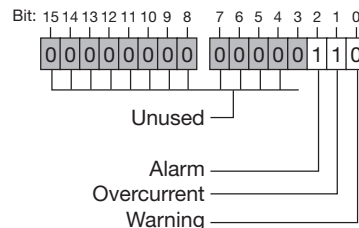


Fig. Example of alarm register if overcurrent is measured.

| | |
|--------------|--|
| Warning: | The residual current has exceeded the set warning limit value |
| Overcurrent: | The measurement range has been exceeded |
| Alarm: | The alarm bit is set if there is a warning or overcurrent. The alarm bit must be reset or acknowledged manually. |

12.8 Measurement range exceeded

If the measurement range is exceeded, it is displayed as long as this persists and cannot be acknowledged. The measurement range is exceeded if at least one of the four voltage or current measurement inputs lies outside their specified measuring range.

Threshold values for exceeding the measurement range (200 ms effective values):

| | | |
|------|---|----------|
| I | = | 8.5 Amps |
| UL-N | = | 600 Vrms |

| Error - Overload | | |
|------------------|---------|---------|
| | Voltage | Current |
| L1 | 225.5 V | 0.0 A |
| L2 | EEEE | 0.0 A |
| L3 | 225.4 V | 0.0 A |
| L4 | 0.5 V | EEEE |

Fig. Indication of values exceeding the measurement range in voltage circuit L2 and in current path I4

12.9 Checking the power measurement

- Short circuit all current transformer outputs except for one.
- Check the powers displayed.
 - The device may only display one power output in the phase with a non-short-circuited current transformer input.
 - If this is not the case, check the connection of the measured voltage and the measuring-circuit current.

If the active power amount is correct but the sign of the power output is negative, this could have two possible causes:

- S1(k) and S2(l) are reversed at the current transformer.
- Active energy is being supplied back into the network.

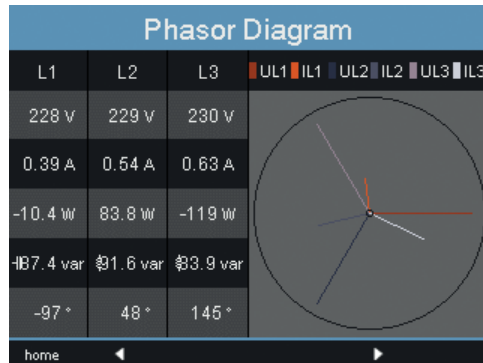


Fig. In the Phasor diagram, the voltages are displayed with long phasors and the currents with short phasors.

12.10 Checking the communication

The device counts all received (RX), all transmitted (TX) and all faulty data packages.

Ideally, the number of errors displayed in the error column is zero.

You can reset the counter for the data packages to 0 by pressing button 6. The start time for the new counting process is reset automatically.

| Communication State | | | |
|---------------------|---------------------|----------|--------|
| | RX | TX | Error |
| Ethernet | 7121.0 k | 8416.4 k | 461834 |
| RS485 | 0 | 1 | 1 |
| NTP | 37 | 0 | 0 |
| DHCP | 35 | 35 | 0 |
| DNS | 336 | 335 | 1 |
| EMail | - | 0 | 0 |
| Start Time | 13-07-2017 19:22:49 | | |
| home | | | reset |

Fig. Communication status

12. 11 Communication in the bus system

12. 11. 1 RS485

The MODBUS RTU protocol with CRC check on the RS485 interface can be used to access the data from the parameter and the measured value lists (see “11. 2. 2 Field bus”).

Modbus functions (master)

01 Read coil status
 02 Read input status
 03 Read holding registers
 04 Read input registers
 05 Force single coil
 06 Preset single register
 15 (0F Hex) Force multiple coils
 16 (10Hex) Preset multiple registers
 23 (17Hex) Read/write 4X registers

Modbus functions (slave)

03 Read holding registers
 04 Read input registers
 06 Preset single register
 16 (10Hex) Preset multiple registers
 23 (17Hex) Read/write 4X registers

The sequence of bytes is high before low byte (Motorola format).

Transmission parameters

Data bits: 8
 Parity: None
 Stop bits (UMG 512-PRO): 2
 External stop bits: 1 or 2

Number formats

short 16 bit (-2^{15} to $2^{15} - 1$)
 float 32 bit (IEEE 754)

Example: Reading the L1-N voltage

The L1-N voltage is saved in the measured value list at address 19000. The L1-N voltage is available in FLOAT format.

The device address is 01 in this example.

The Query Message appears as follows:

| Designation | Hex | Comment |
|-------------------|-----|--------------------|
| Device address | 01 | Address=1 |
| Function | 03 | “Read Holding Reg” |
| Start address Hi | 4A | 19000dez = 4A38hex |
| Start address Lo | 38 | |
| Ind. Hi values | 00 | 2dez = 0002hex |
| Ind. Lo values | 02 | |
| Error check (CRC) | - | |

The "Response" of the device can appear as follows:

| Designation | Hex | Comment |
|-------------------|-----|--------------|
| Device address | 01 | Address=1 |
| Function | 03 | |
| Byte meter | 06 | |
| Data | 00 | 00hex=00dez |
| Data | E6 | E6hex=230dez |
| Error check (CRC) | - | |

The L1-N voltage read by address 19000 is 230 V.



NOTE!

Broadcast (address 0) is not supported by the device.



NOTE!

The message length must not exceed 256 bytes.

12. 11. 2 Profibus

Profibus profiles

A Profibus profile contains the data to be exchanged between a UMG and a PLC. Four Profibus profiles are preconfigured at the factory.

You can use the Profibus profile to:

- retrieve measured values from the UMG
- set the digital outputs in the UMG
- query the status of the digital inputs in the UMG.

Each Profibus profile can hold a maximum of 127 bytes of data. If more data has to be transferred, simply create additional Profibus profiles.

Each Profibus profile has a profile number that is sent by the PLC to the UMG.

You can use GridVis® to edit 16 Profibus profiles (profile numbers 0 to 15) directly. Additional Profibus profiles (profile numbers 16 to 255) can be created using Jasic programs.

Factory pre-configured Profibus profiles cannot be subsequently changed.

Device master file

The device master file, abbreviated as the GSD file, describes the Profibus characteristics of the UMG. The GSD file is required by the configuration program of the PLC.

The device master file for your device has the file name "JAN0EDC.GSD" and is available on the Janitza homepage.

Variable definition

All system variables and global variables¹⁾ can be individually scaled and converted into one of the following formats:

- 8, 16, 32 bit integer with and without sign.
- 32 or 64 bit float format.
- Big endian = High byte before low byte.
- Little endian = Low byte before high byte.

¹⁾ Global variables are defined by the user in Jasic and are available to each interface in the device.

Example: Using Profibus to retrieve measured values

You must use the GridVis® software to define at least one Profibus profile and transfer this to the device.

A Jasic program is not required.

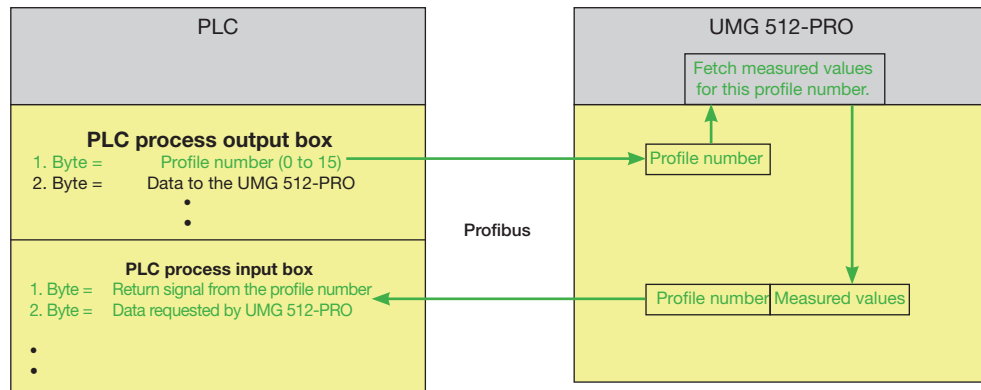


Fig. Block diagram for data exchange between PLC and UMG 512-PRO.

Factory pre-configured profiles

This section provides you with a tabular overview of the pre-configured Profibus profiles

Profibus profile number 0

| | Byte index | Value type | Value format | Scaling |
|----|------------|----------------------------------|--------------|---------|
| 1 | 1 | Voltage L1-N | Float | 1 |
| 2 | 5 | Voltage L2-N | Float | 1 |
| 3 | 9 | Voltage L3-N | Float | 1 |
| 4 | 13 | Voltage L4-N | Float | 1 |
| 5 | 17 | Voltage L2-L1 | Float | 1 |
| 6 | 21 | Voltage L3-L2 | Float | 1 |
| 7 | 25 | Voltage L1-L3 | Float | 1 |
| 8 | 29 | Current L1 | Float | 1 |
| 9 | 33 | Current L2 | Float | 1 |
| 10 | 37 | Current L3 | Float | 1 |
| 11 | 41 | Current L4 | Float | 1 |
| 12 | 45 | Active power L1 | Float | 1 |
| 13 | 49 | Active power L2 | Float | 1 |
| 14 | 53 | Active power L3 | Float | 1 |
| 15 | 57 | Active power L4 | Float | 1 |
| 16 | 61 | Cos phi (math.) L1 | Float | 1 |
| 17 | 65 | Cos phi (math.) L2 | Float | 1 |
| 18 | 69 | Cos phi (math.) L3 | Float | 1 |
| 19 | 73 | Cos phi (math.) L4 | Float | 1 |
| 20 | 77 | Frequency | Float | 1 |
| 21 | 81 | Total active power L1-L4 | Float | 1 |
| 22 | 85 | Total reactive power L1-L4 | Float | 1 |
| 23 | 89 | Total apparent power L1-L4 | Float | 1 |
| 24 | 93 | Total cos phi (math.) L1-L4 | Float | 1 |
| 25 | 97 | Total effective current L1-L4 | Float | 1 |
| 26 | 101 | Total active energy L1-L4 | Float | 1 |
| 27 | 105 | Ind. Total reactive energy L1-L4 | Float | 1 |
| 28 | 109 | THD voltage L1 | Float | 1 |
| 29 | 113 | THD voltage L2 | Float | 1 |
| 30 | 117 | THD voltage L3 | Float | 1 |

Profibus profile number 1

| | Byte index | Value type | Value format | Scaling |
|----|------------|----------------------------------|--------------|---------|
| 1 | 1 | Voltage L1-N | Float | 1 |
| 2 | 5 | Voltage L2-N | Float | 1 |
| 3 | 9 | Voltage L3-N | Float | 1 |
| 4 | 13 | Voltage L2-L1 | Float | 1 |
| 5 | 17 | Voltage L3-L2 | Float | 1 |
| 6 | 21 | Voltage L1-L3 | Float | 1 |
| 7 | 25 | Current L1 | Float | 1 |
| 8 | 29 | Current L2 | Float | 1 |
| 9 | 33 | Current L3 | Float | 1 |
| 10 | 37 | Active power L1 | Float | 1 |
| 11 | 41 | Active power L2 | Float | 1 |
| 12 | 45 | Active power L3 | Float | 1 |
| 13 | 49 | Cos phi (math.) L1 | Float | 1 |
| 14 | 53 | Cos phi (math.) L2 | Float | 1 |
| 15 | 57 | Cos phi (math.) L3 | Float | 1 |
| 16 | 61 | Frequency | Float | 1 |
| 17 | 65 | Total active power L1-L3 | Float | 1 |
| 18 | 69 | Total reactive power L1-L3 | Float | 1 |
| 19 | 73 | Total apparent power L1-L3 | Float | 1 |
| 20 | 77 | Total cos phi (math.) L1-L3 | Float | 1 |
| 21 | 81 | Total effective current L1-L3 | Float | 1 |
| 22 | 85 | Total active energy L1-L3 | Float | 1 |
| 23 | 89 | Ind. Total reactive energy L1-L3 | Float | 1 |
| 24 | 93 | THD voltage L1 | Float | 1 |
| 25 | 97 | THD voltage L2 | Float | 1 |
| 26 | 101 | THD voltage L3 | Float | 1 |
| 27 | 105 | THD current L1 | Float | 1 |
| 28 | 109 | THD current L2 | Float | 1 |
| 29 | 113 | THD current L3 | Float | 1 |

Profibus profile number 2

| | Byte index | Value type | Value format | Scaling |
|----|------------|----------------------------------|--------------|---------|
| 1 | 1 | Total active energy L1-L3 | Float | 1 |
| 2 | 5 | Rel. Total active energy L1-L3 | Float | 1 |
| 3 | 9 | Deliv. Total active energy L1-L3 | Float | 1 |
| 4 | 13 | Total reactive energy L1-L3 | Float | 1 |
| 5 | 17 | Ind. Total reactive energy L1-L3 | Float | 1 |
| 6 | 21 | Total cap. reactive energy L1-L3 | Float | 1 |
| 7 | 25 | Total apparent energy L1-L3 | Float | 1 |
| 8 | 29 | Active energy L1 | Float | 1 |
| 9 | 33 | Active energy L2 | Float | 1 |
| 10 | 37 | Active energy L3 | Float | 1 |
| 11 | 41 | Inductive reactive energy L1 | Float | 1 |
| 12 | 45 | Inductive reactive energy L2 | Float | 1 |
| 13 | 49 | Inductive reactive energy L3 | Float | 1 |

Profibus profile number 3

| | Byte index | Value type | Value format | Scaling |
|----|------------|-----------------------------|--------------|---------|
| 1 | 1 | Active power L1 | Float | 1 |
| 2 | 5 | Active power L2 | Float | 1 |
| 3 | 9 | Active power L3 | Float | 1 |
| 4 | 13 | Total active power L1-L3 | Float | 1 |
| 5 | 17 | Current L1 | Float | 1 |
| 6 | 21 | Current L2 | Float | 1 |
| 7 | 25 | Current L3 | Float | 1 |
| 8 | 29 | Total current L1-L3 | Float | 1 |
| 9 | 33 | Total active energy L1-L3 | Float | 1 |
| 10 | 37 | Cos phi (math.) L1 | Float | 1 |
| 11 | 41 | Cos phi (math.) L2 | Float | 1 |
| 12 | 45 | Cos phi (math.) L3 | Float | 1 |
| 13 | 49 | Total cos phi (math.) L1-L3 | Float | 1 |
| 14 | 53 | Reactive power L1 | Float | 1 |
| 15 | 57 | Reactive power L2 | Float | 1 |
| 16 | 61 | Reactive power L3 | Float | 1 |
| 17 | 65 | Total reactive power L1-L3 | Float | 1 |
| 18 | 69 | Apparent power L1 | Float | 1 |
| 19 | 73 | Apparent power L2 | Float | 1 |
| 20 | 77 | Apparent power L3 | Float | 1 |
| 21 | 81 | Total apparent power L1-L3 | Float | 1 |

12. 12 Digital inputs/outputs

Your device has two digital outputs and two digital inputs.

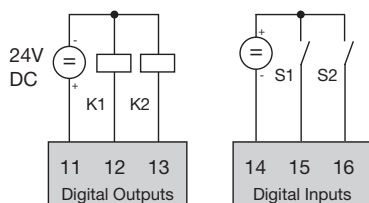


Fig.: Digital outputs and inputs

The inputs and outputs can be configured using the GridVis® software supplied as standard.

12. 12. 1 Digital inputs

You can use the digital inputs to send information from other devices that have a digital output to your device directly.

You can use the configuration window in GridVis® to define the input range for both digital inputs:

- The value type that the incoming signal has.
- The scaling factor that is to be used for the value.

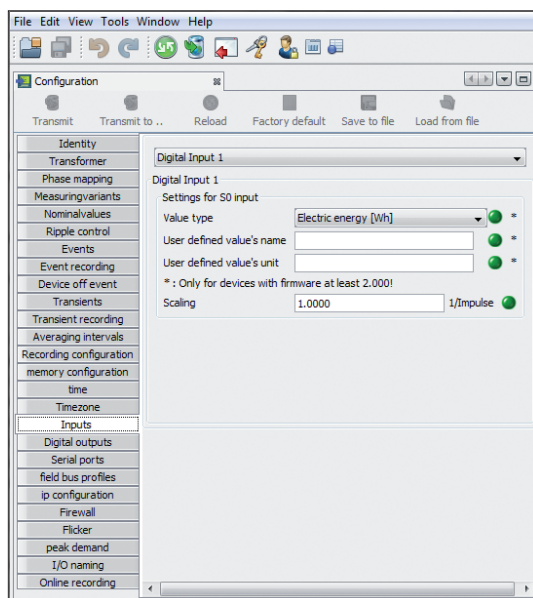


Fig. Configuring the UMG 512-PRO inputs via GridVis®.

12. 12. 2 Pulse output

The digital outputs can be used for the output of pulses for the computation of power consumption. For this purpose, a pulse of defined length is applied on the output after reaching a certain, adjustable amount of power.

You must make various adjustments in the configuration menu using the GridVis® software to use a digital output as a pulse output:

- pulse width
- digital output that is to be configured,
- output type (event notification or S0 output)
- the measured value to be transferred
- pulse value

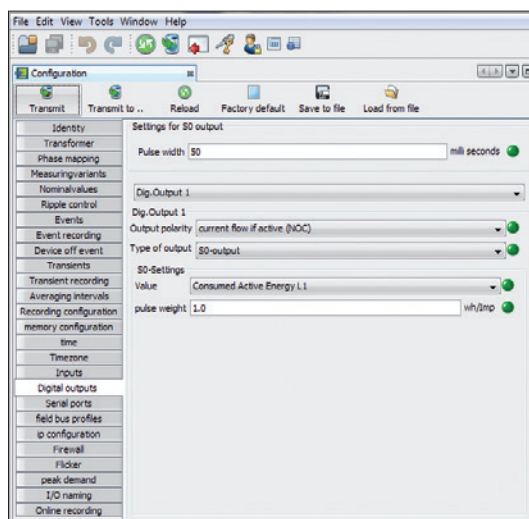


Fig. Configuring the UMG 512-PRO digital outputs via GridVis®.

Pulse length

The pulse length applies to both pulse outputs and is set using the GridVis® software.

The typical pulse length for S0 pulses is 30 ms.

Pulse interval

The pulse interval is at least as large as the selected pulse length.

The pulse interval depends on the measured power, for example, and can take hours or days.

 


Fig. Schematic illustration of a digital pulse

The values in the table are based on the minimum pulse length and the minimum pulse interval for the maximum number of pulses per hour.

| Pulse length | Pulse interval | Max. pulse/h |
|--------------|----------------|------------------|
| 10 ms | 10 ms | 180 000 pulses/h |
| 30 ms | 30 ms | 60 000 pulses/h |
| 50 ms | 50 ms | 36 000 pulses/h |
| 100 ms | 100 ms | 18 000 pulses/h |
| 500 ms | 500 ms | 3600 pulses/h |
| 1 s | 1 s | 1800 pulses/h |
| 10 s | 10 s | 180 pulses/h |

Table Examples of the maximum possible number of pulses per hour



NOTE!

The pulse interval is proportional to the power output within the selected settings.



NOTE!

When programming with GridVis®, you receive a selection of work values which are derived from the power output values.
(see www.janitza.de)

Pulse value

The pulse value is used to indicate how much power (Wh or varh) should correspond to a pulse.

The pulse value is determined by the maximum connected load and the maximum number of pulses per hour.

If you specify a pulse value with a:

- positive sign, the pulses will only be emitted when the measured value has a positive sign.
- negative sign, the pulses will only be emitted when the measured value has a negative sign.



NOTE!

Since the active energy meter operates with a backstop, pulses will only be generated when drawing electricity.



NOTE!

Since the reactive energy meter operates with a backstop, pulses will only be generated with inductive load applied.

Determine the pulse value

1. Set the pulse length in accordance with the requirements of the connected pulse receiver. For example, if the pulse length is 30 ms, the device generates a maximum number of 60000 pulses (see "maximum number of pulses" per hour table).
2. Determine the maximum connected load.

Example:

Current transformer = 150/5 A
Voltage L-N = max. 300 V

Power per phase = 150 A x 300 V
= 45 kW

Power at 3 phases = 45 kW x 3
Max. connected load = 135 kW

3. Calculate the pulse value:

$$\text{Pulse value} = \frac{\text{max. connected load}}{\text{max. number of pulses/h}} \quad [\text{Pulse/Wh}]$$

Pulse value = 135 kW / 60000 Imp/h

Pulse value = 0.00225 pulses/kWh

Pulse value = 2.25 pulses/Wh



CAUTION!

Measurement errors when using as a pulse output

When using the digital outputs as pulse outputs, measurement errors may arise due to the residual ripple.

Therefore, use a mains adapter for the supply voltage for the digital inputs and outputs, which has a residual ripple of less than 5% of the supply voltage.

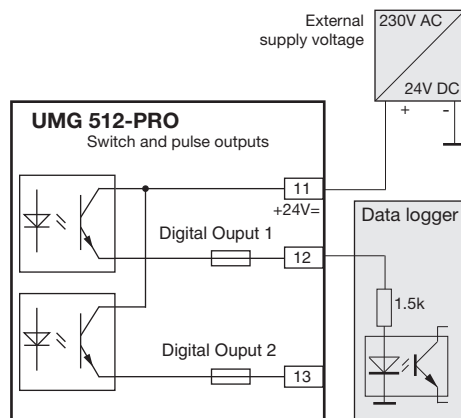


Fig.: Connection example for the circuit as pulse output.

13. Device homepage

Your measurement device has an integrated web server, which has a separate homepage. You can use this device home page to access your measurement device from any end device via a standard web browser. You can access the homepage for your device by entering the device's IP address in a web browser on your end device. Section "11. 2. 1 Ethernet (TCP/IP)" explains how to connect the device to the internet.

You can do the following here without first installing any software:

- call historical and current measured values.
- call the power quality status in an easy to understand illustration.
- control your device remotely.
- access installed apps.

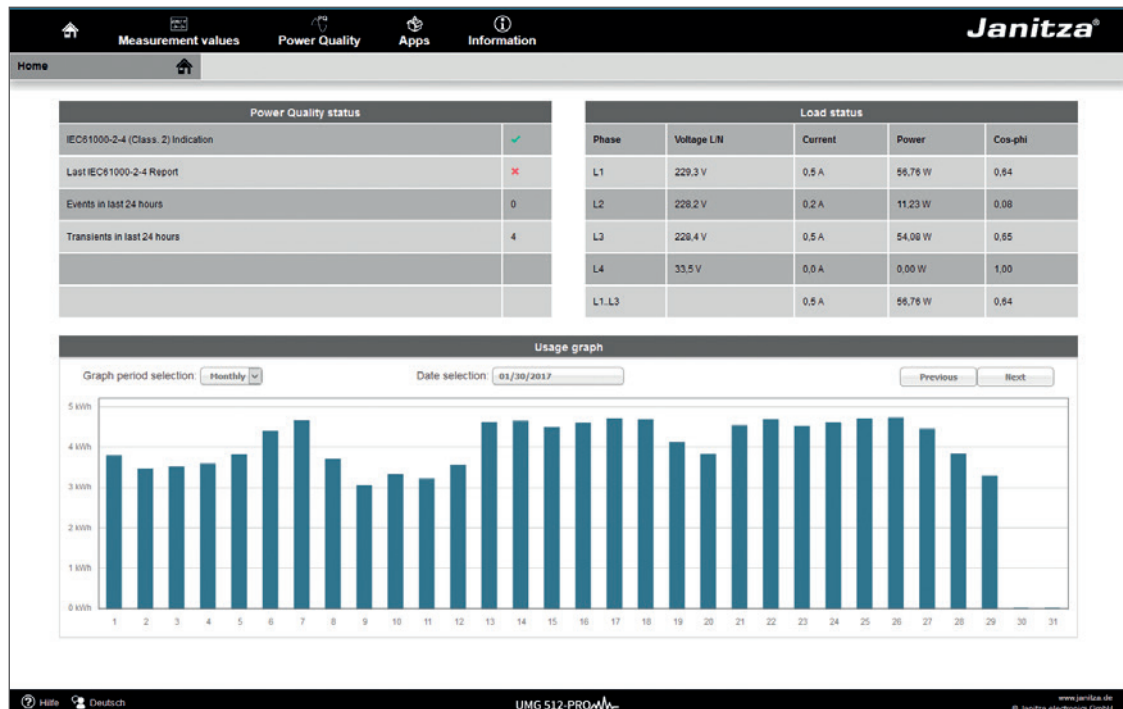


Fig. Device homepage overview

13.1 Measured values

You can use the “Measured values” menu item to call simple and detailed views of the measured values, and to display individual measured values. The following menu items are available:

- short overview
- detailed measured values
- diagrams
- RCM - residual current monitoring
- events

13.1.1 Short overview

The short overview provides you with the most important measured values for each phase, such as the current voltage values, power values and current strength.

Home

Measurement values

Power Quality

Apps

Information

Janitza®

Quickview

Quickview

| Phase | U in V (L/L) | U in V (L/N) | Phase | kW | kWh | kvar | kvarh | Phase | I in A | cos-phi | THD-U | THD-I |
|-------|--------------|--------------|--------|------|-----|-------|-------|--------|--------|---------|-------|-------|
| L1/L2 | 399,45 | 229,87 | L1 | 0,02 | 35 | 0,00 | -18 | L1 | 0,11 | 0,97 | 2,25 | 63,55 |
| L2/L3 | 401,01 | 231,56 | L2 | 0,01 | 29 | 0,00 | -12 | L2 | 0,04 | 0,89 | 1,76 | 27,04 |
| L3/L1 | 400,31 | 231,89 | L3 | 0,01 | 14 | -0,01 | -14 | L3 | 0,04 | 0,77 | 1,82 | 54,63 |
| L3/N | | | | | | | | | | | | |
| L4/N | | 39,57 | L4 | 0,00 | 0 | 0,00 | 0 | L4 | 0,00 | 1,00 | 36,43 | --- |
| | | | L1..L3 | 0,04 | 80 | -0,01 | -45 | L1..L3 | 0,09 | 0,93 | | |
| | | | L1..L4 | 0,04 | 80 | -0,01 | -45 | L1..L4 | 0,09 | 0,93 | | |

Hilfe

Deutsch

UMG 512-PRO

www.janitza.de

© Janitza electronics GmbH

Fig. Short overview of measured values

13. 1. 2 Detailed measured values

In the overview, you can call extensive information on the following points:

- Voltage
- Current
- Power
- Harmonic oscillations
- Energy
- Peripheral devices (digital inputs/outputs, temperature measurements)

| Janitza® | | | | |
|--------------------|----------------|----------------------------|-----------------|---------------|
| Overview | Device Name | Time/Date | Frequency (L/N) | |
| | UM5012 Janitza | 10.05 / 31.07.2017 (UTC+2) | 45.59 Hz | |
| Voltage | | | | |
| Voltage Effective | | | | |
| | Actual value | Average value | Minimum value | Maximum value |
| L1 | 227.3 V | 226.1 V | 0.0 V | 235.9 V |
| L2 | 227.8 V | 226.6 V | 0.0 V | 236.5 V |
| L3 | 229.3 V | 230.0 V | 0.0 V | 236.5 V |
| L4 | 1.2 V | 1.2 V | 0.0 V | 1.7 V |
| L1-L2 | 394.1 V | 395.6 V | 0.0 V | 409.0 V |
| L2-L3 | 395.5 V | 397.0 V | 0.0 V | 409.7 V |
| L3-L1 | 395.6 V | 396.8 V | 0.0 V | 408.7 V |
| Three-phase values | | | | |
| | Actual value | Average value | Minimum value | Maximum value |
| Unbalance Voltage | 0.3 % | 0.2 % | 0.0 % | 1.5 % |
| Frequency | | | | |
| | Actual value | Average value | Minimum value | Maximum value |
| Frequency | 50.9 Hz | 50.8 Hz | 49.9 Hz | 50.1 Hz |
| Current | | | | |
| Power | | | | |
| Harmonics | | | | |
| Flicker | | | | |
| Help English | | | | |
| UMG 512-PRO | | | | |

Fig. Detailed overview of measured values

13. 1. 3 Diagrams

You can use the “Diagrams” item to access the measured values monitor. The measured values monitor is a configurable display of current and historical measured values with automatic scaling. In order to display a graphic of the measured values, drag the required values from the list on the left edge of the screen into the field in the middle of the screen.

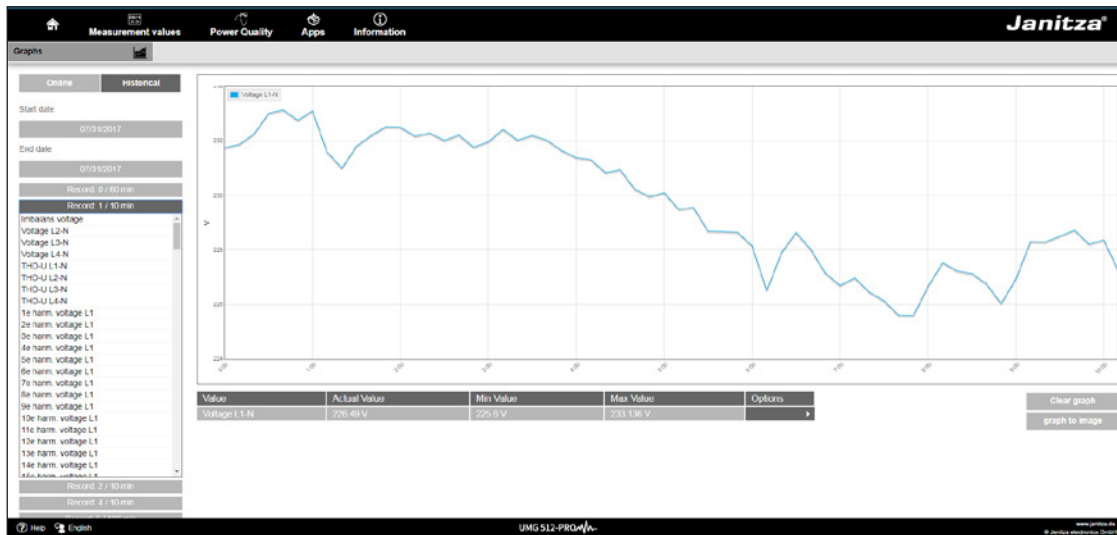


Fig. Device homepage event records

13. 1. 4 RCM - residual current monitoring

The “RCM” item shows you the current values and absolute threshold values for the RCM channels. For more information on residual current monitoring, see chapter 7. 8 on page 82.

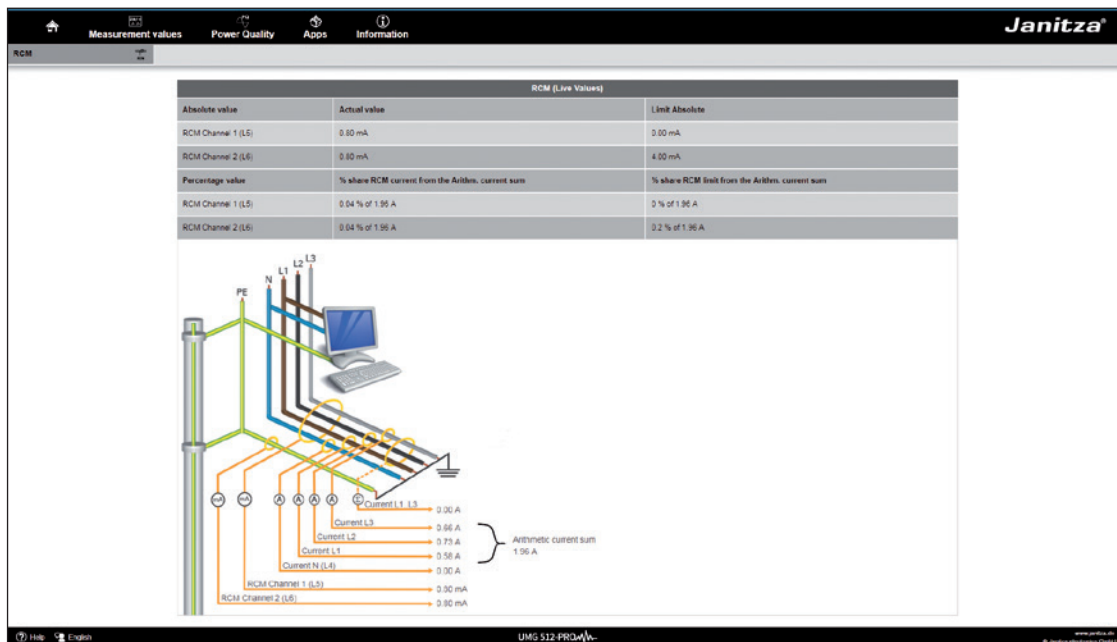


Fig. Device homepage RCM

13.1.5 Events

You can use the “Events” item to display a graphical illustration of the recorded events such as overcurrent or undervoltage. For more information on event recording, see chapter “11. 3. 3 Events”.

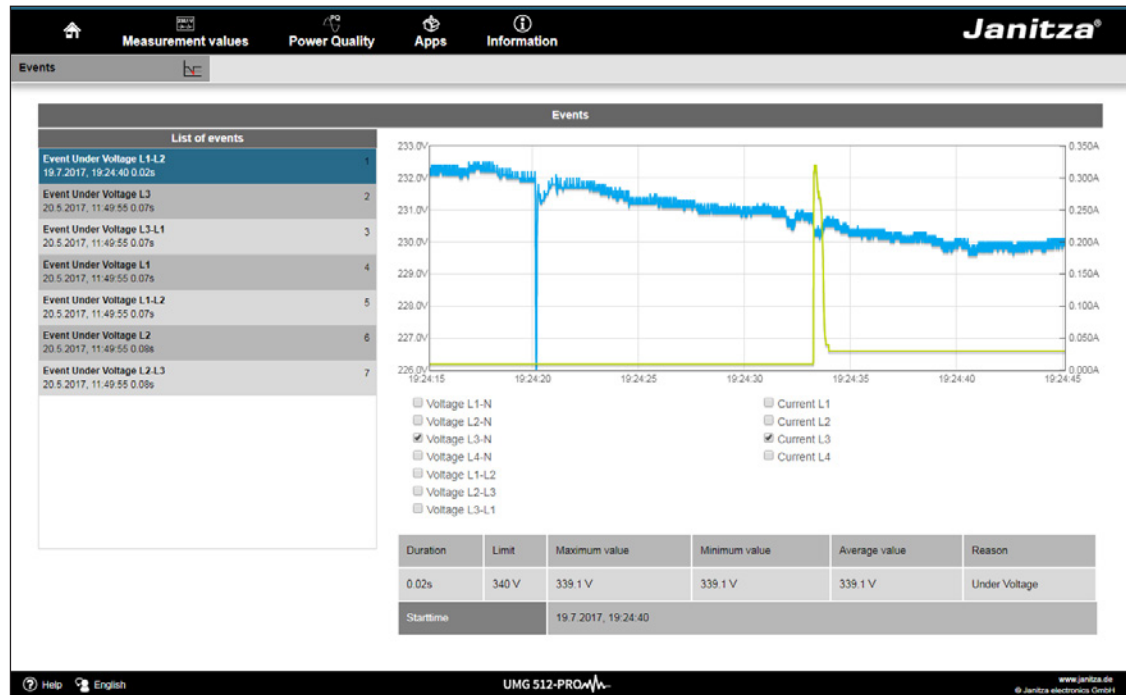


Fig. Event records

13.2 Power quality

The “Power quality” section (PQ) provides you with the option of calling the PQ status in a clear way according to common standards. Here, you have access to permanent power quality monitoring in accordance with:

- EN 50160 in energy supply networks.
- IEC 61000-2-4 in customer supply networks.

The display is based on the traffic light principle, which makes it easy to detect events that do not meet the relevant quality requirements without in-depth knowledge.

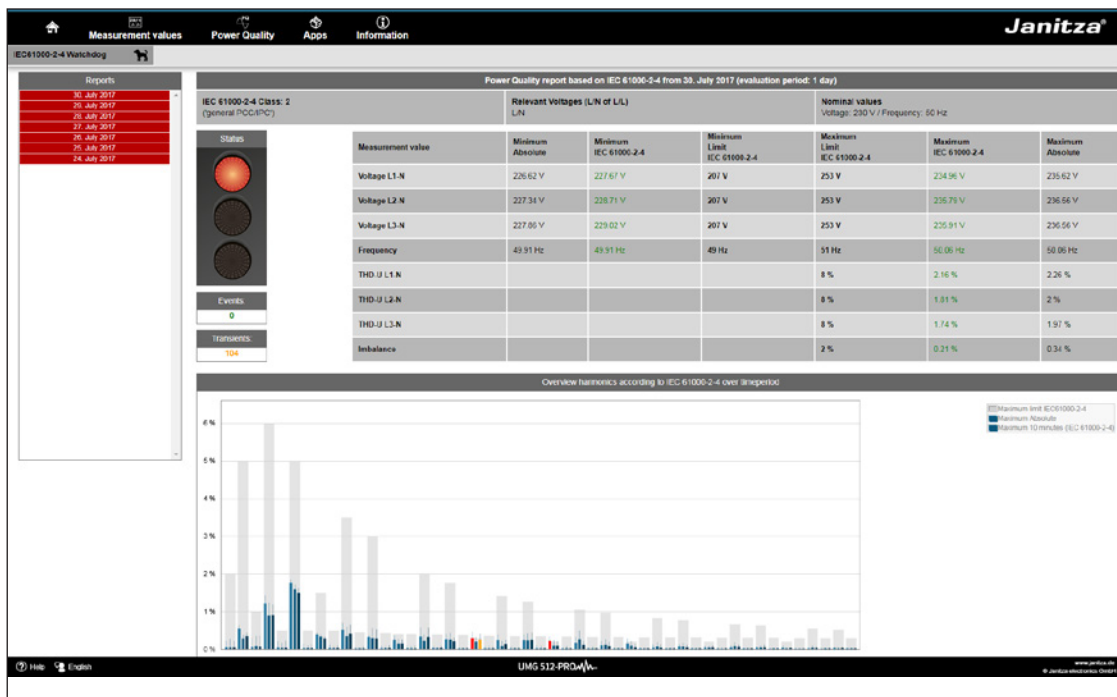


Fig. IEC 61000-2-4 parameters with traffic-light principle

13.3 Apps

You have the option of extending the functions on your device retrospectively by installing additional apps.

13.3.1 Push Service

The push service is an example of an installable app. The push service sends measured values directly from the device to a cloud or portal solution chosen by you, such as the Janitza Energy Portal.

| Status | Konfiguration übernehmen | Slave Geräte Status |
|--|--------------------------|---|
| Servereinstellungen | | Slave 1 Status: ProData 2 14001192 Connection ok |
| Slave Einstellungen | | Slave 2 Status: ECS Three Phase Counter Connection ok |
| Zeitbasis: 600 Anzahl aufgezeichneter Werte: 20 | | Slave 3 Status: ECS Three Phase Counter Connection ok |
| Zeitbasis: 3600 Anzahl aufgezeichneter Werte: 24 | | Slave 4 Status: ECS Three Phase Counter Connection ok |
| Zeitbasis: 600 Anzahl aufgezeichneter Werte: 6 | | Slave 5 Status: ECS Three Phase Counter No Connection |
| Zeitbasis: 600 Anzahl aufgezeichneter Werte: 1 | | Slave 6 Status: UMG 104 77015039 Connection ok |
| Slave Device 1 ProData 2 14001192 | | Slave 7 Status: UMG 103 75019459 No Connection |
| Slave Device 2 ECS Three Phase Counter | | Slave 8 Status: UMG 103 75019459 Connection ok |
| Slave Device 3 ECS Three Phase Counter | | Slave 9 Status: UMG96RM 17114013 Connection ok |
| Slave Device 4 ECS Three Phase Counter | | Slave 10 Status: UMG96RM_E 17026357 Connection ok |
| Slave Device 6 UMG 104 77015039 | | |
| Slave Device 8 UMG 103 75019459 | | |
| Slave Device 9 UMG96RM 17114013 | | |
| Slave Device 10 UMG96RM_E 17026357 | | |

| Daten die übermittelt werden |
|------------------------------|
| Slave 2 Daten |
| Sum_Real_Power_L1_L3(600) |
| Sum_IL1_IL2_IL3_IL4(600) |
| Sum_IL1_IL2_IL3_IL4(600) |
| Real_Power_L1(600) |
| Real_Power_L2(600) |
| Real_Power_L3(600) |
| Current_L1(600) |
| Current_L3(600) |
| Voltage_L1_N(600) |
| Voltage_L2_N(600) |
| Voltage_L3_N(600) |
| Sum_IL1_IL2_IL3_IL4(600) |
| Sum_IL1_IL2_IL3_IL4(600) |
| Current_L1(600) |

Fig. Push Service

13.4 Information

13.4.1 Device information

You can use the “Device information” menu item to obtain all information and settings that you can change on the device.

13.4.2 Display

The display item provides you with the display of your device, which corresponds to the real display.

You can control the device remotely here by clicking the control buttons using the mouse.

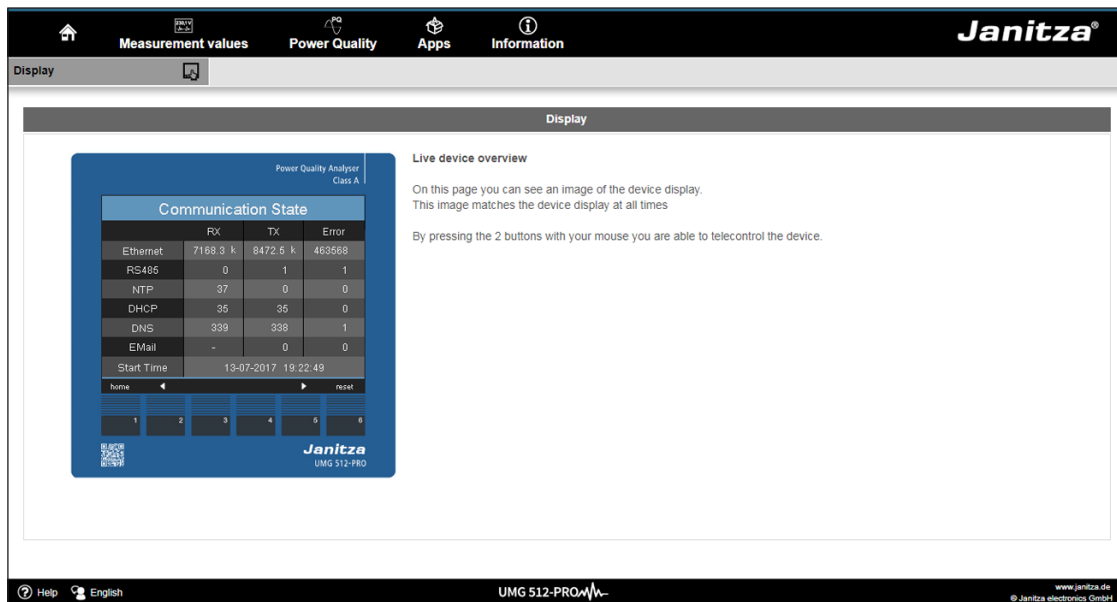


Fig. Operating the UMG 512-PRO via the device homepage

13.4.3 Downloads

You can use the “Downloads” item to access the download area on the Janitza homepage. You can download catalogues and operation manuals from here.

14. Service and maintenance

The device underwent various safety checks before delivery and is marked with a seal. If a device is open, the safety checks must be repeated. Warranty claims will only be accepted if the device is unopened.

14.1 Repair and calibration

Repair work and calibration can be carried out by the manufacturer only.

14.2 Front film

The front film can be cleaned with a soft cloth and standard household cleaning agent. Do not use acids and products containing acid for cleaning.

14.3 Disposal

Observe the national regulations! If necessary, dispose of individual parts according to their properties and existing country-specific regulations, e.g. as:

- Electronic waste
- Plastics
- Metals

or commission a certified disposal company with scrapping.

14.4 Service

Should questions arise, which are not described in this manual, please contact the manufacturer directly.

We will need the following information from you to answer any questions:

- device name (see rating plate)
- serial number (see rating plate)
- software release (see measured value indication)
- measured voltage and supply voltage
- precise description of the error.

14.5 Device calibration

The devices are adjusted by the manufacturer prior to delivery. Recalibrating the device is not necessary providing that the environmental conditions are complied with.

14.6 Calibration intervals

We recommend having the device re-calibrated by the manufacturer or an accredited laboratory every 5 years approximately.

14.7 Firmware update

In order to carry out a firmware update, connect the device to a computer via Ethernet and access it using the GridVis® software.

Open the firmware update wizard by clicking "Update device" in the "Extras" menu.

Select the relevant update file and carry out the update.

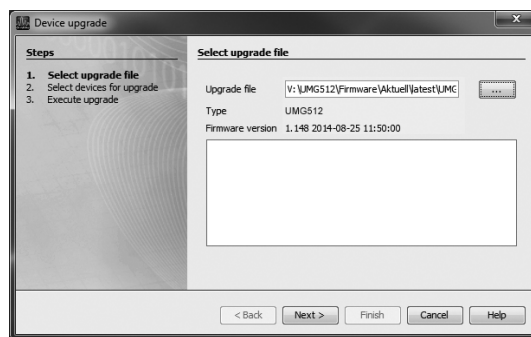


Fig. GridVis® software firmware update wizard



NOTE!

Firmware may **not** be updated via the RS485 interface.

14.8 Battery

The internal clock is fed from the supply voltage. If the supply voltage fails then the clock is powered by the battery. The clock provides date and time information, for the records, min. and max. values and events, for example.

The life expectancy of the battery is at least 5 years with a storage temperature of +45 °C. The typical life expectancy of the battery is 8 to 10 years.

The battery (type CR2450 / 3 V) can be replaced by the user.

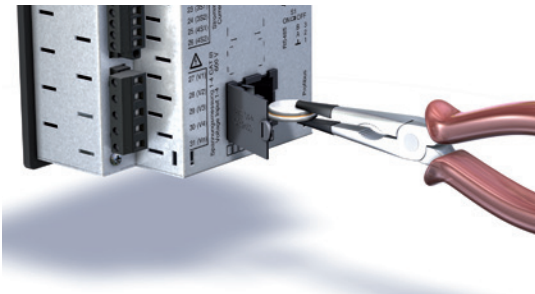


Fig. Replacing the battery using long-nose pliers

15. Procedure in the event of faults

| Possible fault | Cause | Remedy |
|--|--|--|
| No display | External fuse for the power supply voltage has tripped. | Replace fuse. |
| No current display | Measured voltage is not connected. | Connect the measured voltage. |
| | Measurement current is not connected. | Connect measuring-circuit current. |
| Current displayed is too high or too low. | Current measurement in the wrong phase. | Check connection and correct if necessary. |
| | Current transformer factor is incorrectly programmed. | Read out and program the CT ratio on the current transformer. |
| | The current peak value at the measurement input was exceeded by harmonic components. | Install current transformer with a larger CT ratio. |
| | The current at the measurement input fell short of. | Install current transformer with a smaller CT ratio. |
| Voltage displayed is too high or too low. | Measurement in the wrong phase. | Check connection and correct if necessary. |
| | Voltage transformer incorrectly programmed. | Read out and program the voltage transformer ratio at the voltage transformer. |
| Voltage displayed is too low. | Measurement range exceeded. | Use voltage transformers. |
| | The peak voltage value at the measurement input has been exceeded by the harmonics. | Attention! Ensure the measurement inputs are not overloaded. |
| Phase shift ind/cap. | A current circuit is assigned to the wrong voltage circuit. | Check connection and correct if necessary. |
| Active power, consumption/supply reversed. | At least one current transformer connection is mixed up/ reversed. | Check connection and correct if necessary. |
| | A current circuit is assigned to the wrong voltage circuit. | Check connection and correct if necessary. |

| Possible fault | Cause | Remedy |
|--|---|--|
| Active power too high or too low. | The programmed CT ratio is incorrect. | Read out and program the CT ratio on the current transformer |
| | The current circuit is assigned to the wrong voltage circuit. | Check connection and correct if necessary. |
| | The programmed voltage transformer ratio is incorrect. | Read out and program the voltage transformer ratio at the voltage transformer. |
| An output is not responding. | The output was incorrectly programmed. | Check the settings and correct if necessary. |
| | The output was incorrectly connected. | Check connection and correct if necessary. |
| Measurement range exceeded display (overload) | Voltage and current measurement input outside the measurement range (Also see section "12. 8 Measurement range exceeded") | Check connection and correct if necessary. |
| | | Use suitable voltage and current transformers. |
| | | Read out and program the voltage or CT ratio on the transformer. |
| No connection with the device. | RS485 | |
| | Device address is incorrect. | Correct the device address. |
| | Different bus speeds (baud rate). | Correct the speed (baud rate). |
| | Incorrect protocol. | Correct the protocol. |
| | Termination missing. | Terminate the bus with a termination resistor. |
| | Ethernet | |
| | IP device address is incorrect. | Correct the IP device address. |
| | Incorrect addressing mode | Correct the IP address assignment mode |
| Device still does not work despite the above measures. | Device defective. | Send the device to the manufacturer for inspection and testing along with an accurate fault description. |

16. Technical data

| General | |
|--|---|
| Net weight (with connectors) | approx. 1080 g (2.38 lb) |
| Device dimensions | Approx. w = 144 mm (5.64 in), h = 144 mm (5.64 in), d = 75 mm (2.95 in) |
| Battery | Type Li-Mn CR2450, 3 V (approval i.a.w. UL 1642) |
| Clock - temperature range -40 °C (-40 °F) to +85 °C (185 °F) | +5 ppm (corresponding to approx. 3 minutes per year) |
| Impact resistance | IK07 according to IEC 62262 |

| Transport and storage | |
|---|---------------------------------------|
| The following information applies to devices which are transported or stored in the original packaging. | |
| Free fall | 1 m (39.37 in) |
| Temperature | -25 °C (-13 °F) up to +70 °C (158 °F) |

| Ambient conditions during operation | |
|--|--|
| The device is intended for weatherproof, fixed installation and must be connected to the ground wire connection! Protection class I in acc. with IEC 60536 (VDE 0106, Part 1). | |
| Working temperature range | -10 °C (14 °F) to +55 °C (131 °F) |
| Relative humidity | 5 to 95% RH at 25°C (77 °F) without condensation |
| Operating altitude | 0 to 2000 m (1.24 mi) above sea level |
| Pollution degree | 2 |
| Mounting position | Upright |
| Ventilation | Forced ventilation is not required. |
| Protection against ingress of solid foreign bodies and water - Front - Rear | IP40 in acc. with EN60529 IP20 in acc. with EN60529 |

16.1 Supply voltage

| Supply voltage | |
|--|---|
| Installations of overvoltage category | 300 V CAT III |
| Protection of the supply voltage (fuse) | 6 A, type C (approved i.a.w. UL/IEC) |
| 230 V option: - Nominal range - Operating range - Power consumption | 95 V to 240 V (50/60 Hz) / DC 80 V to 300 V +-10% of nominal range max. 7 W / 14 VA |
| 24V option: - Nominal range - Operating range - Power consumption | 48 V to 110 V (50/60 Hz) / DC 24 to 150 V +-10% of nominal range max. 9 W / 13 VA |

| Terminal connection capacity (supply voltage) | |
|---|---------------------------------------|
| Connectable conductors. Only one conductor can be connected per terminal! | |
| Single core, multi-core, fine-stranded | 0.2 - 4.0 mm ² , AWG 28-12 |
| Cable end sleeve (not insulated) | 0.2 - 2.5 mm ² , AWG 26-14 |
| Cable end sleeve (insulated) | 0.2 - 2.5 mm ² , AWG 26-14 |
| Tightening torque | 0.4 - 0.5 Nm (3.54 - 4.43 lbf in) |
| Stripping length | 7 mm (0.2756 in) |

16.2 Voltage and current measurement

| Current measurement | |
|---------------------------------------|--|
| Rated current | 5 A |
| Resolution | 0.1 mA |
| Metering range | 0.005 to 7 Arms |
| Measurement range exceeded (overload) | as of 8.5 Amps |
| Crest factor | 1.41 |
| Overvoltage category | 230 V option: 300 V CAT III 24 V option: 300 V CAT II |
| Measurement surge voltage | 4 kV |
| Power consumption | approx. 0.2 VA (Ri = 5 mOhm) |
| Overload for 1 sec. | 120 A (sinusoidal) |
| Sampling rate | 25.6 kHz / phase |

| Voltage measurement | |
|---|---|
| The voltage measurement inputs are suitable for measurements in the following power supply systems: | |
| Three-phase 4-conductor systems with rated voltages up to | 417 V / 720 V (+10%) 347 V / 600 V (UL listed) |
| Three-phase 3-conductor systems with rated voltages up to | 600 V (+10%) |
| From a safety and reliability perspective, the voltage measurement inputs are designed as follows: | |
| Overvoltage category | 600 V CAT III |
| Measurement surge voltage | 6 kV |
| Protection of voltage measurement | 1-10 A |
| Metering range L-N | 0 ¹⁾ to 600 Vrms |
| Metering range L-L | 0 ¹⁾ to 1000 Vrms |
| Resolution | 0.01 V |
| Crest factor | 1.6 (related to 600 Vrms) |
| Impedance | 4 MOhm / phase |
| Power consumption | approx. 0.1 VA |
| Sampling rate | 25.6 kHz / phase |
| Transients | 39 µs |
| U _{din} ²⁾ i.a.w. EN61000-4-30 | 100 to 250 V |
| Flicker range (dU/U) | 27.5% |
| Frequency range of the fundamental oscillation - Resolution | 15 Hz to 440 Hz 0.001 Hz |

1) The device can only determine measured values, if an L-N voltage of greater than 10 Veff or an L-L voltage of greater than 18 Veff is applied to at least one voltage measurement input.


2) U_{din} = arranged input voltage according to DIN EN 61000-4-30

| | |
|-----------------------------------|---------|
| Measurement precision phase angle | 0,075 ° |
|-----------------------------------|---------|

| Terminal connection capacity (voltage measurement) | |
|---|---------------------------------------|
| Connectable conductors. Only one conductor can be connected per terminal! | |
| Single core, multi-core, fine-stranded | 0.2 - 4 mm ² , AWG 28-12 |
| Cable end sleeve (not insulated) | 0.2 - 2.5 mm ² , AWG 26-14 |
| Cable end sleeve (insulated) | 0.2 - 2.5 mm ² , AWG 26-14 |
| Tightening torque | 0.4 - 0.5 Nm (3.54 - 4.43 lbf in) |
| Stripping length | 7 mm (0.2756 in) |

| Terminal connection capacity (current measurement) | |
|---|---------------------------------------|
| Connectable conductors. Only one conductor can be connected per terminal! | |
| Single core, multi-core, fine-stranded | 0.2 - 4 mm ² , AWG 28-12 |
| Cable end sleeve (not insulated) | 0.2 - 4 mm ² , AWG 26-12 |
| Cable end sleeve (insulated) | 0.2 - 2.5 mm ² , AWG 26-14 |
| Tightening torque | 0.4 - 0.5 Nm (3.54 - 4.43 lbf in) |
| Stripping length | 7 mm (0.2756 in) |

16.3 Residual current monitoring

| Residual current monitoring (RCM) | |
|--|---|
| Rated current | 30 mAmps |
| Metering range | 0 to 40 mAmps |
| Triggering current | 100 µA |
| Resolution | 1 µA |
| Crest factor | 1.414 (related to 40 mA) |
| Burden | 4 Ohm |
| Overload for 1 sec. | 5 A |
| Sustained overload | 1 A |
| Overload for 20 ms | 50 A |
| Residual current monitoring | i.a.w. IEC/TR 60755 (2008-01), type A  |
| Maximum external burden | 300 Ohm (for cable break detection) |

| Terminal connection capacity (residual current monitoring) | |
|---|---|
| Connectable conductors. Only one conductor can be connected per terminal! | |
| Single core, multi-core, fine-stranded | 0.2 - 1.5 mm ² , AWG 28-16 |
| Cable end sleeve (not insulated) | 0.2 - 1.5 mm ² , AWG 26-16 |
| Cable end sleeve (insulated) | 0.2 - 1.5 mm ² , AWG 26-16 |
| Tightening torque | 0.2 - 0.25 Nm (1.77 - 2.21 lbf in) |
| Stripping length | 7 mm (0.2756 in) |
| Cable length | up to 30 m (32.81 yd) unshielded, from 30 m (32.81 yd) shielded |

| Potential separation and electrical safety for the residual current monitoring inputs | |
|---|--|
| <ul style="list-style-type: none"> - The RCM measurement inputs are double-insulated from the current and voltage measurement inputs, as well as the supply voltage. - There is no insulation from the thermistor input. - There is only a functional insulation from the Ethernet, Profibus and RS485 interfaces and the digital I/Os. - The residual current transformer connected and the lines to be measured must each have at least one additional or basic insulation per IEC61010-1:2010 for the mains voltage present. | |

16.4 Thermistor input

| Thermistor input 3-wire measurement | |
|---|---|
| Update time | 1 second |
| Connectable sensors | PT100, PT1000, KTY83, KTY84 |
| Total burden (sensor + cable) | Max. 4 kOhm |
| Cable length | up to 30 m (32.81 yd) unshielded, from 30 m (32.81 yd) shielded |

| Sensor type | Temperature range | Resistor range | Measurement uncertainty |
|-------------|--------------------------------------|---------------------|-------------------------|
| KTY83 | -55 °C (-67 °F) to +175 °C (347 °F) | 500 Ohm to 2.6 kOhm | ± 1.5% rng |
| KTY84 | -40 °C (-40 °F) to +300 °C (572 °F) | 350 Ohm to 2.6 kOhm | ± 1.5% rng |
| PT100 | -99 °C (-146 °F) to +500 °C (932 °F) | 60 Ohm to 180 Ohm | ± 1.5% rng |
| PT1000 | -99 °C (-146 °F) to +500 °C (932 °F) | 600 Ohm to 1.8 kOhm | ± 1.5% rng |

| Terminal connection capacity (thermistor input) Connectable conductors. Only one conductor can be connected per terminal! | |
|---|---------------------------------------|
| Single core, multi-core, fine-stranded | 0,2 - 1,5 mm ² , AWG 28-16 |
| Cable end sleeve (not insulated) | 0,2 - 1,5 mm ² , AWG 26-16 |
| Cable end sleeve (insulated) | 0,2 - 1,5 mm ² , AWG 26-16 |
| Tightening torque | 0,2 - 0,25 Nm (1.77 - 2.21 lbf in) |
| Stripping length | 7 mm (0.2756 in) |

| Potential separation and electrical safety for the thermistor inputs |
|---|
| <ul style="list-style-type: none"> - The thermistor input is double-insulated from the current and voltage measurement inputs, as well as the supply voltage. - There is no insulation from the RCM measurement input. - There is only a functional insulation from the Ethernet, Profibus and RS485 interfaces and the digital I/Os. - The external temperature sensor must be double insulated from the system parts that carry voltages that are dangerous to touch (per IEC61010-1:2010). |

16.5 Digital inputs and outputs

| Digital inputs | |
|-------------------------------------|--|
| 2 Digital inputs with a joint earth | |
| Maximum counter frequency | 20 Hz |
| Response time (Jasic program) | 200 ms |
| Input signal present | 18 V to 28 V (typically 4 mA) (SELV or PELV supply) |
| Input signal not present | 0 to 5 V DC, current less than 0.5 mA |
| Cable length | up to 30 m (32.81 yd) unshielded, from 30 m (32.81 yd) shielded |

| Digital outputs | |
|---|--|
| 2 digital outputs with a joint earth; opto coupler, not short-circuit proof | |
| Supply voltage | 20 V - 30 V DC (SELV or PELV supply) |
| Switching voltage | max. 60 V DC |
| Switching current | max. 50 mAeff AC/DC |
| Response time (Jasic program) | 200 ms |
| Switching frequency | max. 20 Hz |
| Cable length | up to 30 m (32.81 yd) unshielded, from 30 m (32.81 yd) shielded |

| Terminal connection capacity (digital inputs and outputs) | |
|---|---------------------------------------|
| Connectable conductors. Only one conductor can be connected per terminal! | |
| Single core, multi-core, fine-stranded | 0.2 - 1.5 mm ² , AWG 28-16 |
| Cable end sleeve (not insulated) | 0.2 - 1.5 mm ² , AWG 26-16 |
| Cable end sleeve (insulated) | 0.2 - 1.5 mm ² , AWG 26-16 |
| Tightening torque | 0.2 - 0.25 Nm (1.77 - 2.21 lbf in) |
| Stripping length | 7 mm (0.2756 in) |

| Potential separation and electrical safety for the digital inputs and outputs | |
|--|--|
| <ul style="list-style-type: none"> - The digital inputs and outputs are double-insulated from the current and voltage measurement inputs, as well as the supply voltage. - There is only a functional insulation from the Ethernet, Profibus and RS485 interfaces and the digital I/Os, and from one another. - The external auxiliary voltage to be connected must be compliant with SELV or PELV. | |

16.6 Interfaces

RS485 interface

3-wire connection with GND, A, B

| | |
|----------------------|---|
| Protocol | Modbus RTU/slave, Modbus RTU/master, Modbus RTU /Gateway |
| Transmission rate | 9.6 kbps, 19.2 kbps, 38.4 kbps, 57.6 kbps, 115.2 kbps, 921.6 kbps |
| Termination resistor | Can be activated by micro switch |

Terminal connection capacity (serial interface - RS485)

Connectable conductors. Only one conductor can be connected per terminal!

| | |
|--|---------------------------------------|
| Single core, multi-core, fine-stranded | 0.2 - 1.5 mm ² , AWG 28-16 |
| Cable end sleeve (not insulated) | 0.2 - 1.5 mm ² , AWG 26-16 |
| Cable end sleeve (insulated) | 0.2 - 1.5 mm ² , AWG 26-16 |
| Tightening torque | 0.2 - 0.25 Nm (1.77 - 2.21 lbf in) |
| Stripping length | 7 mm (0.2756 in) |

Profibus interface

| | |
|-------------------|--------------------------------|
| Connection | SUB D 9-pole |
| Protocol | Profibus DP/V0 as per EN 50170 |
| Transmission rate | 9.6 kBaud to 12 MBaud |

Ethernet interface

| | |
|------------|---|
| Connection | RJ45 |
| Function | Modbus gateway, embedded web server (HTTP) |
| Protocols | CP/IP, EMAIL (SMTP), DHCP client (BootP), Modbus/TCP, Modbus RTU over Ethernet, FTP, ICMP (Ping), NTP, TFTP, BACnet (optional), SNMP, |

Potential separation and electrical safety for the interfaces

- The Ethernet, Profibus and RS485 interfaces are double-insulated from the current and voltage measurement inputs, as well as the supply voltage.
- There is only a functional insulation from the RSM measurement inputs and thermistor inputs, as well as from the digital I/Os and from one another.
- The interfaces for the devices connected here must have a double or reinforced insulation to mains voltages (in accordance with IEC 61010-1: 2010).

16.7 Function parameters

16.7.1 Measurements with 50/60 Hz

The measurements are carried out via current transformer ..5A.

| Function | Symbol | Precision class | Metering range | Display range |
|---|---------------------------------------|---|-------------------------------------|------------------------|
| Total active power | P | 0.2 ⁵⁾ (IEC61557-12) | 0 to 15.3 kW | 0 W to 9999 GW * |
| Total reactive power | QA ⁶⁾ , Qv ⁶⁾ | 1 (IEC61557-12) | 0 to 15.3 kvar | 0 varh .. 9999 Gvar * |
| Total apparent power | SA, Sv ⁶⁾ | 0.2 ⁵⁾ (IEC61557-12) | 0 to 15.3 kVA | 0 VA to 9999 GVA * |
| Total active energy | Ea | 0.2 ⁵⁾ (IEC61557-12) 0.2S ⁵⁾ (IEC62053-22) | 0 to 15.3 kWh | 0 Wh to 9999 GWh * |
| Total reactive energy | ErA ⁶⁾ , ErV ⁶⁾ | 1 (IEC61557-12) | 0 to 15.3 kvarh | 0 varh .. 9999 Gvarh * |
| Total apparent energy | EapA, EapV ⁶⁾ | 0.2 ⁵⁾ (IEC61557-12) | 0 to 15.3 kVAh | 0 VAh to 9999 GVAh * |
| Frequency | f | 0.05 (IEC61557-12) | 40 to 70 Hz | 40 Hz to 70 Hz |
| Phase current | I | 0.1 (IEC61557-12) | 0.005 to 7 Arms | 0 A to 9999 kA |
| Measured neutral conductor current | IN | 0.1 (IEC61557-12) | 0.005 to 7 Arms | 0 A to 9999 kA |
| Residual currents I5, I6 | IDIFF | 1 (IEC61557-12) | 0 to 40 mAmps | 0 A to 9999 kA |
| Computed neutral conductor current | INc | 0.5 (IEC61557-12) | 0.005 to 21 A | 0 A to 9999 kA |
| Voltage | U L-N | 0.1 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Voltage | U L-L | 0.1 (IEC61557-12) | 18 to 1000 Vrms | 0 V to 9999 kV |
| Power factor | PFA, PFV | 0.5 (IEC61557-12) | 0.00 to 1.00 | 0 to 1 |
| Short-term flicker, long-term flicker | Pst, PIt | Cl. A (IEC61000-4-15) | 0.4 Pst to 10.0 Pst | 0 to 10 |
| Voltage dips | Udip | 0.2 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Voltage increases | Uswl | 0.2 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Transient overvoltages | Utr | 0.2 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Voltage interruptions | Uint | Duration +- 1 cycle | - | - |
| Voltage unbalance ⁷⁾ | Unba | 0.2 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Voltage unbalance ⁸⁾ | Unb | 0.2 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Voltage harmonics ⁷⁾ | Uh | Cl. 1 (IEC61000-4-7) | Up to 3 kHz | 0 V to 9999 kV |
| THD of the voltage ³⁾⁷⁾ | THDu | 1.0 (IEC61557-12) | Up to 3 kHz | 0% to 999 % |
| THD of the voltage ⁴⁾⁷⁾ | THD-Ru | 1.0 (IEC61557-12) | Up to 3 kHz | 0% to 999 % |
| Current harmonics ⁷⁾ | Ih | Cl. 1 (IEC61000-4-7) | Up to 3 kHz | 0 A to 9999 kA |
| THD of the current ³⁾⁷⁾ | THDi | 1.0 (IEC61557-12) | Up to 3 kHz | 0% to 999 % |
| THD of the current ⁴⁾⁷⁾ | THD-Ri | 1.0 (IEC61557-12) | Up to 3 kHz | 0% to 999 % |
| Mains signal voltage (interharmonics voltage) | MSV | IEC 61000-4-7 class 1 | 10% – 200% of IEC 61000-2-4 class 3 | 0 V to 9999 kV |

16. 7. 2 Measurements in the range 15 to 45 / 65 to 440 Hz

| Function | Symbol | Precision class | Metering range | Display range |
|---------------------------------------|---------------------------------------|----------------------|-----------------|------------------------|
| Total active power | P | 2 (IEC61557-12) | 0 to 15.3kW | 0 W to 9999 GW * |
| Total reactive power | QA ¹⁾ , Qv ²⁾ | 2 (IEC61557-12) | 0 to 15.3 kvar | 0 varh .. 9999 Gvar * |
| Total apparent power | SA, Sv ³⁾ | 1 (IEC61557-12) | 0 to 15.3 kVA | 0 VA to 9999 GVA * |
| Total active energy | Ea | 2 (IEC61557-12) | 0 to 15.3 kWh | 0 Wh to 9999 GWh * |
| Total reactive energy | ErA ⁴⁾ , ErV ⁵⁾ | 2 (IEC61557-12) | 0 to 15.3 kvarh | 0 varh .. 9999 Gvarh * |
| Total apparent energy | EapA, EapV ⁶⁾ | 1 (IEC61557-12) | 0 to 15.3 kVAh | 0 VAh to 9999 GVAh * |
| Frequency | f | 0.05 (IEC61557-12) | 15 to 440 Hz | 15 Hz to 440 Hz |
| Phase current | I | 0.5 (IEC61557-12) | 0.005 to 7 Arms | 0 A to 9999 kA |
| Measured neutral conductor current | IN | 0.5 (IEC61557-12) | 0.005 to 7 Arms | 0 A to 9999 kA |
| Residual currents I5, I6 | IDIFF | 1 (IEC61557-12) | 0 to 40 mAmps | 0 A to 9999 kA |
| Computed neutral conductor current | INc | 1.5 (IEC61557-12) | 0.005 to 21 A | 0 A to 9999 kA |
| Voltage | U L-N | 0.5 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Voltage | U L-L | 0.5 (IEC61557-12) | 18 to 1000 Vrms | 0 V to 9999 kV |
| Power factor | PFA, PFV | 2 (IEC61557-12) | 0.00 to 1.00 | 0 to 1 |
| Short-term flicker, long-term flicker | Pst, Plt | - | - | - |
| Voltage dips | Udip | 0.5 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Voltage increases | Uswl | 0.5 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Transient overvoltages | Utr | 0.5 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Voltage interruptions | Uint | Duration +- 1 cycle | - | - |
| Voltage unbalance ¹⁾ | Unba | 0.5 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Voltage unbalance ²⁾ | Unb | 0.5 (IEC61557-12) | 10 to 600 Vrms | 0 V to 9999 kV |
| Voltage harmonics ⁷⁾ | Uh | Cl. 2 (IEC61000-4-7) | Up to 3 kHz | 0 V to 9999 kV |
| THD of the voltage ³⁾⁷⁾ | THDu | 2.0 (IEC61557-12) | Up to 3 kHz | 0% to 999 % |

1) In relation to the amplitude.

2) In relation to phase and amplitude.

3) In relation to fundamental oscillation.

4) In relation to effective value.

5) Precision class 0.2 with.../ 5A converter.

Precision class 0.5 with.../ 1A converter.

6) Calculation from fundamental oscillation.

7) measuring range: up to 50. harmonic, but maximum 3 KHz

* When the max. total working value s have been reached, the display returns to 0 W.

NOTE

Note on saving measured values and configuration data:

Since the following measured values are saved in a non-volatile memory every 5 minutes, the recording may **be interrupted for a** maximum of 5 minutes in case the operating voltage fails:

- Comparator timer
- S0 counter statuses
- Min. / Max. / mean values (without the date and time)
- Energy values

Configuration data is saved immediately.

A detailed Modbus address and parameter list can be found at www.janitza.de

16.8 Specifications as per IEC 61000-4-30

| Characteristic | Uncertainty | Metering range |
|----------------------------------|--|---|
| 5.1 Frequency | ± 10 mHz | 42.5 Hz – 57.5 Hz, 51 Hz – 69 Hz |
| 5.2 Supply voltage level | $\pm 0.1\%$ of U_{din} | 10% – 150% of U_{din} |
| 5.3 Flicker | $\pm 5\%$ of measured value | 0.2 – 10 Pst |
| 5.4 Dips and excessive increases | Amplitude: $\pm 0.2\%$ of U_{din} Duration: ± 1 period | N/A |
| 5.5 Voltage interruptions | Duration: ± 1 period | N/A |
| 5.7 Unbalance | $\pm 0.15\%$ | 0.5% – 5% u_2 0.5% – 5% u_0 |
| 5.8 Harmonics | IEC 61000-4-7 class 1 | 10% – 200% of Class 3 of IEC 61000-2-4 |
| 5.9 Interharmonics | IEC 61000-4-7 class 1 | 10% – 200% of Class 3 of IEC 61000-2-4 |
| 5.10 Mains signal voltage | In the range 3%-15% of U_{din} , $\pm 5\%$ of U_{din} . In the range 1%-3% of U_{din} , $\pm 0.15\%$ of U_{din} . There are no uncertainty requirements for values < 1% of U_{din} . | 0% – 15% of U_{din} |
| 5.12 Downward/upward deviation | $\pm 0.1\%$ of U_{din} | 10% – 150% of U_{din} |



NOTE!

To ensure that two measurement devices achieve the same measurement results in a 10 minute compensation interval, we recommend synchronising time measurement in the device using an external time signal.



NOTE!

The device meets the requirements according to IEC 61000-4-30 class A for:

- compensation
- time uncertainty
- marking concept
- transient influence quantities

16.9 Dimension diagrams

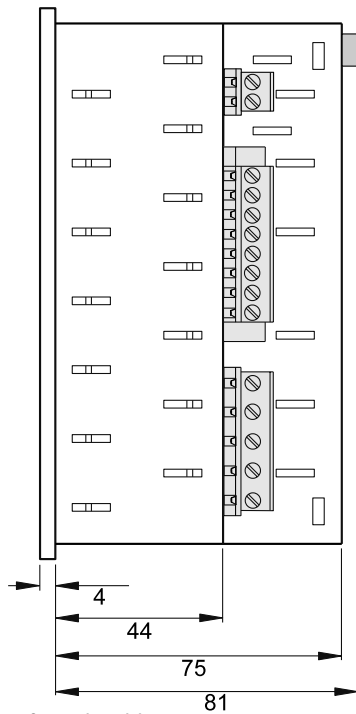


Fig. View from the side

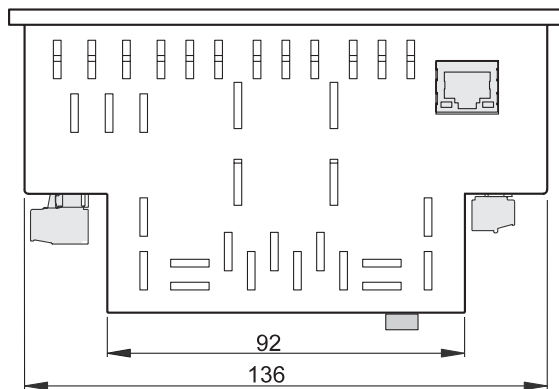


Fig. View from below

17. Menu guide overview

17.1 Configuration menu overview

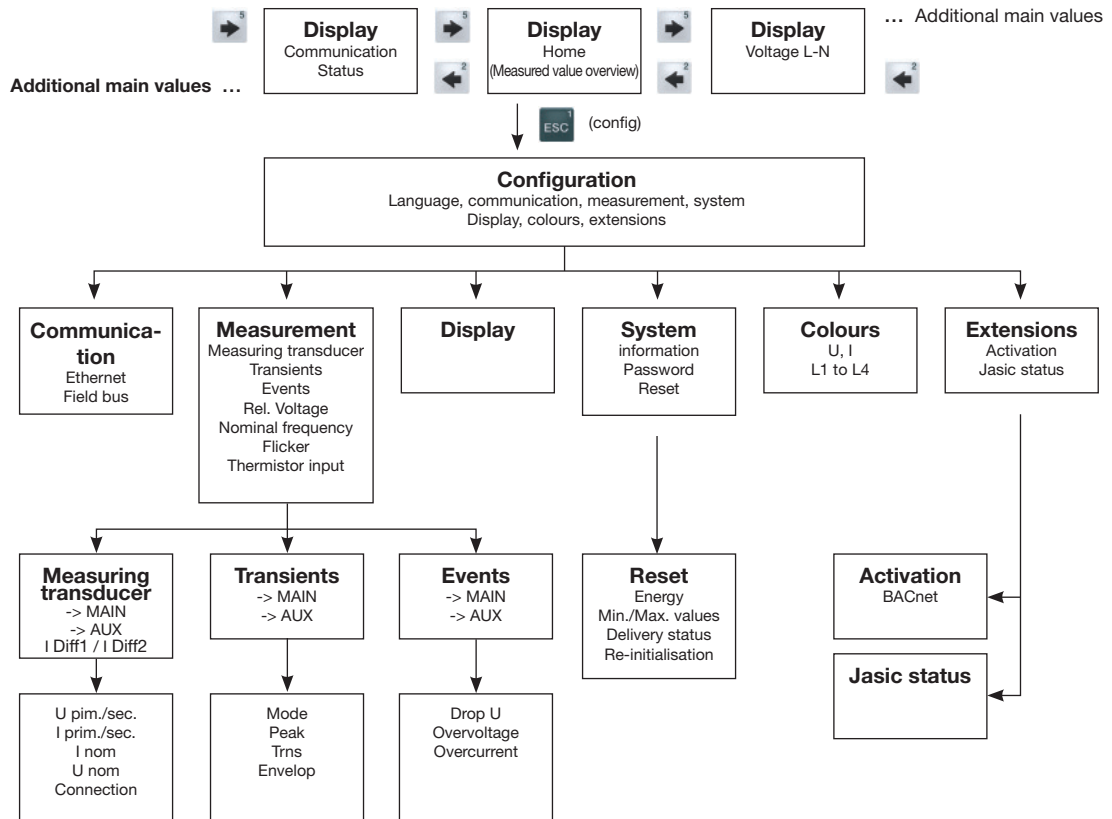


Fig. Schematic illustration of the menu guide for the configuration menu

17.2 Overview of measured value indications

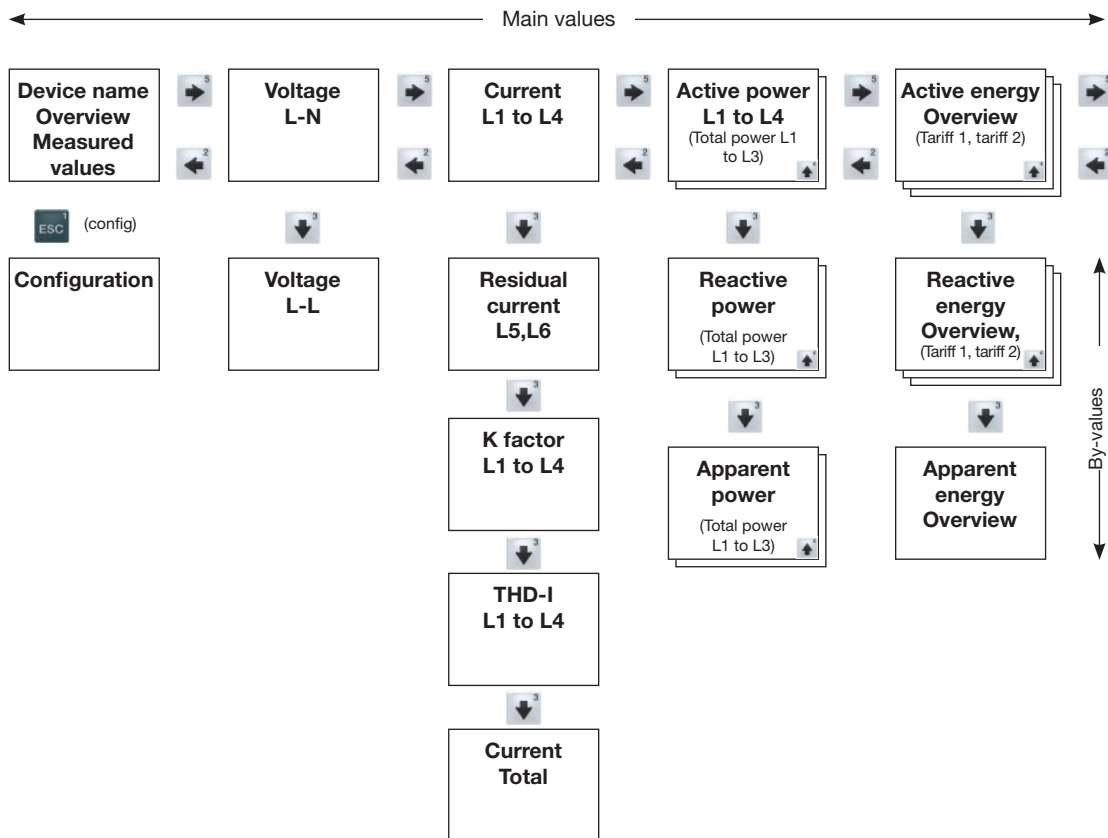


Fig. Schematic illustration of the menu guide for the measured value indications, part 1

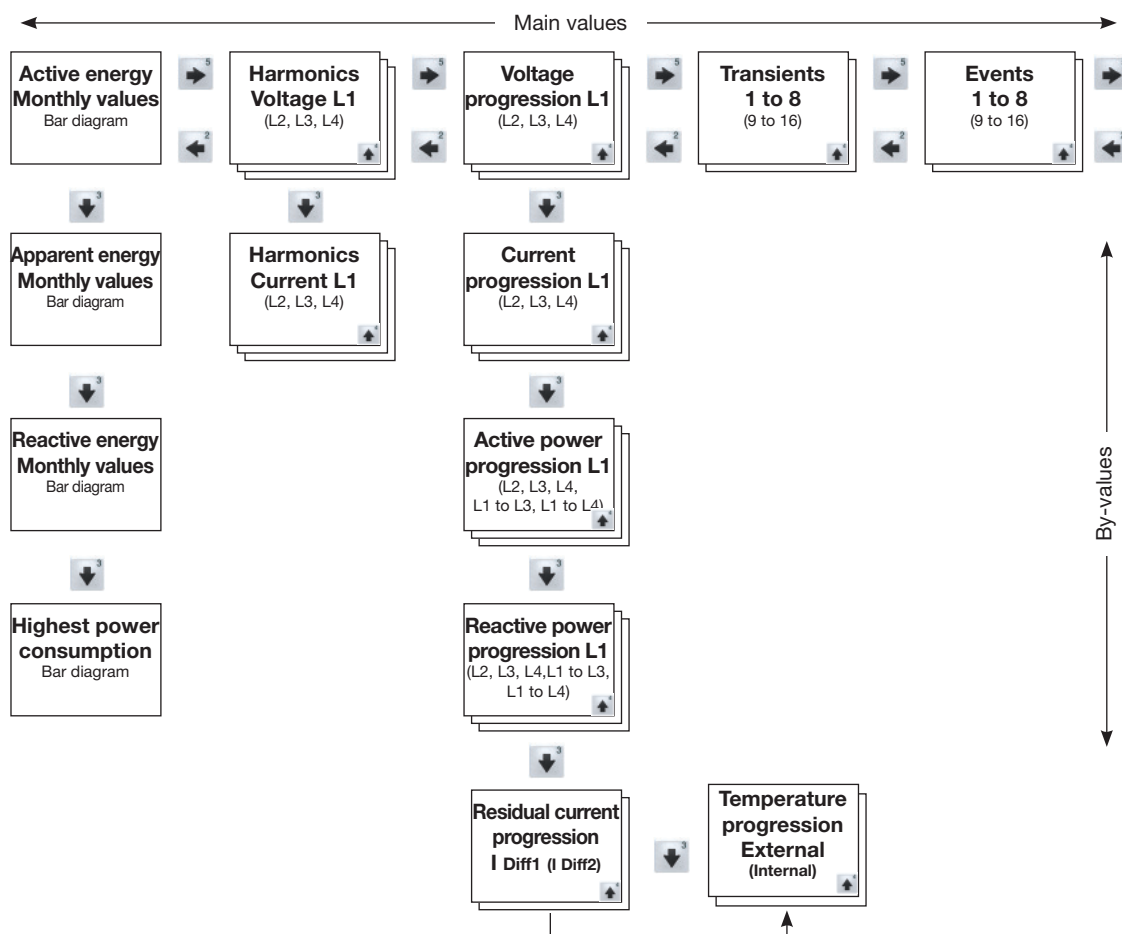


Fig. Schematic illustration of the menu guide for the measured value indications, part 2

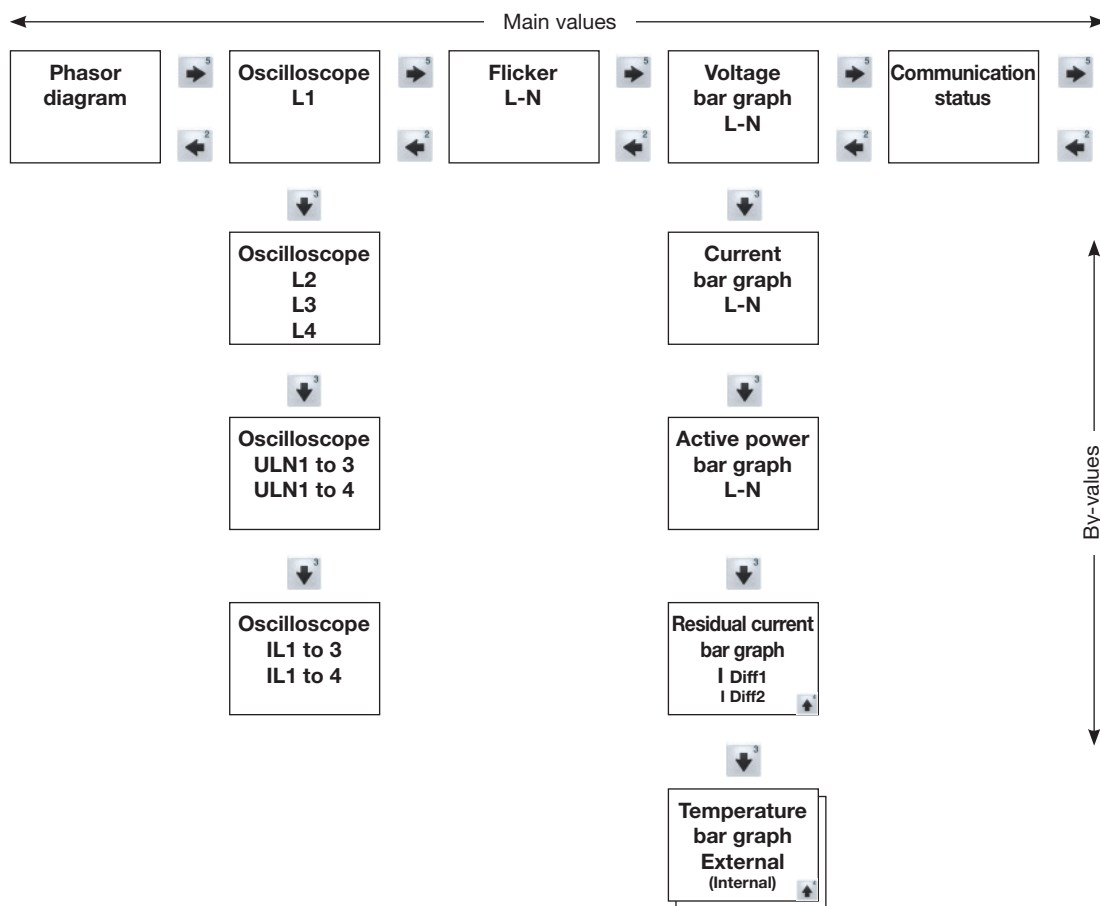


Fig. Schematic illustration of the menu guide for the measured value indications, part 3

18. Connection example

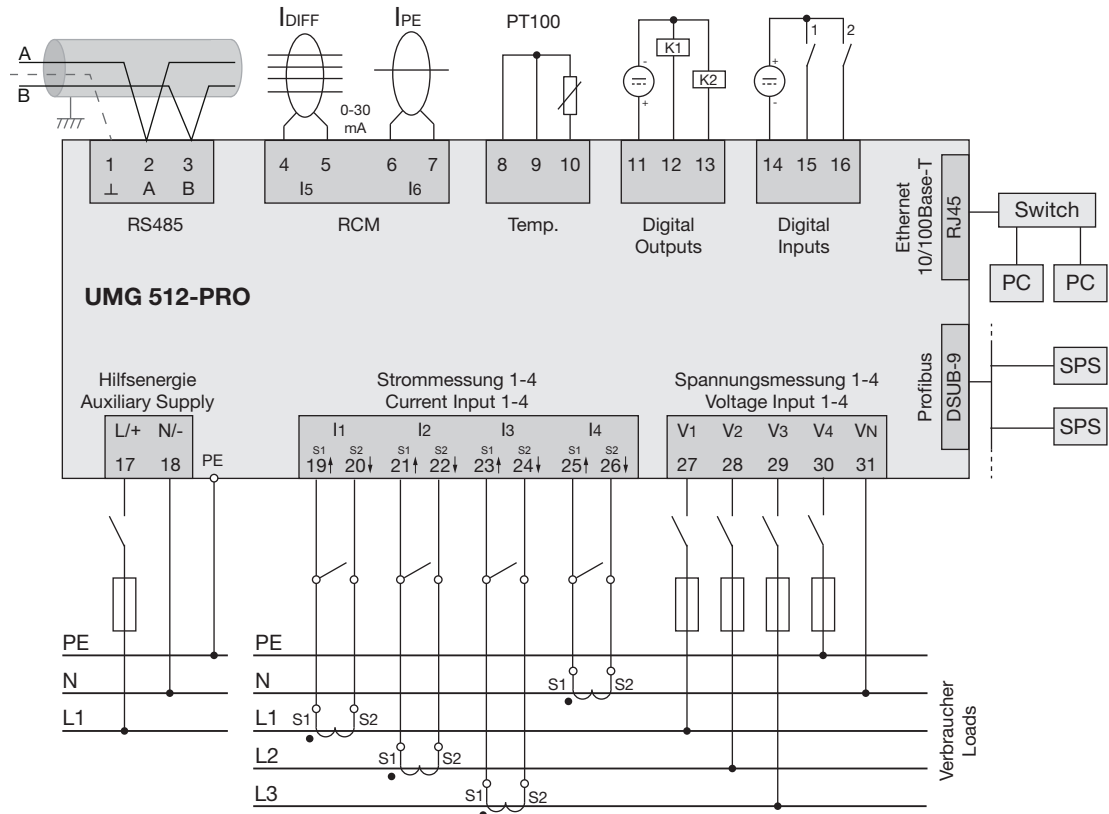


Fig. Schematic drawing of connection example for the UMG 512-PRO

**FCC Compliance Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Code of Federal Regulations, Title 47, Part 15, Subpart B - Unintentional Radiators