



HD201A Landing light

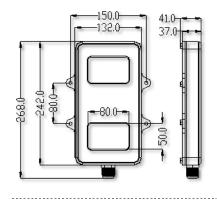

Dimension (mm)



Wiring diagram

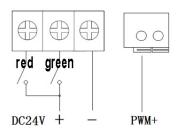

Application



Application

Applying to helipad lighting system on ship, offshore platform. Using to indicate helipad deck situation for staff or pilot. .

Main function and features

• When lighting direction of landing lights toward to the staff(flight deck officer), it indicates to staff(flight deck officer)about the status of the helicopter deck;

If the lighting direction toward to the pilot, it indicates to pilot that the status of the helicopter deck

Specification

DC24V	Power	10W
red、green	Work mode	Steady burning
10years	Dimming way	PWM (range : 18V ~ 30V)
		0 ~ 100% continuously
		adjustable
100000 hours	Intensity	200cd (red)
		500cd (green)
-40°C ~ +55°C	IP rate	IP66
		1000
		Body : aluminum alloy
95%	Material	(ADC6)
		Lens : tempered glass
1.5Kg	Installation	Wall mounting
	red、green 10years 100000 hours -40°C ~ +55°C	red、green Work mode 10years Dimming way 100000 hours Intensity -40°C ~ +55°C IP rate 95% Material

Mounting and usage

- Be sure to check the power supply, make sure the power supply is correspond to nameplate rated voltage
- Use four M8 bolts to fix on the mounting surface which should be smooth and have sufficient mechanical strength.
- · Power cord that comes with the lights and dimming control lines were identified by wiring access to power and control signals.
- After wiring access to power and control lines, check the wiring is correct. Then turn on the power, lights start working.
- The duty cycle of the PWM is adjustable. Lluminance is corresponding to be changed.

- Carefully read the instructions and properly use this product.
- Please do not closer look at the light when it works, avoiding damage eyesight.
- This temperature of product will rise when temperature is normal.
- This product is a sealed, non-professional maintenance personnel do not disassemble it.
- •If you have any questions please contact us.