

# Quantum using EcoStruxure™ Control Expert Hardware Reference Manual

Original instructions

10/2019

---

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

You agree not to reproduce, other than for your own personal, noncommercial use, all or part of this document on any medium whatsoever without permission of Schneider Electric, given in writing. You also agree not to establish any hypertext links to this document or its content. Schneider Electric does not grant any right or license for the personal and noncommercial use of the document or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2019 Schneider Electric. All rights reserved.

---

# Table of Contents

---



	<b>Safety Information</b> .....	11
	<b>About the Book</b> .....	15
<b>Part I</b>	<b>Introduction</b> .....	17
<b>Chapter 1</b>	<b>System</b> .....	19
	System Overview .....	20
	Typical Quantum System Configuration .....	21
<b>Chapter 2</b>	<b>System Components</b> .....	23
	Controller Modules (CPUs) .....	24
	Power Supply Modules (CPS) .....	25
	I/O Modules .....	26
	Network Interface Modules .....	27
	Intelligent/Special Purpose I/O Modules .....	28
	Simulator (XSM) and Battery (XCP) Module .....	29
	Racks (XBP) and Rack Expander (XBE) .....	30
	CableFast Cabling (CFx) for I/O Modules .....	31
	Hot Standby System .....	33
<b>Chapter 3</b>	<b>Network Support</b> .....	35
3.1	General Information .....	36
	Supported Networks Table .....	37
	Quantum Network Interface Techniques .....	39
3.2	Remote I/O (RIO) and Distributed I/O (DIO) .....	41
	Remote I/O (RIO) .....	42
	Execution of Quantum Sections with Remote Inputs/Outputs .....	43
	Distributed I/O (DIO) .....	45
3.3	Ethernet Networking Interfaces .....	46
	TCP/IP Ethernet .....	47
	SY/MAX Ethernet .....	48
3.4	Modbus/Modbus Plus Networking Interfaces .....	49
	General Information .....	50
	Features .....	51
	Modbus and Modbus Plus Services .....	52
	Modbus/ModBus Plus Requests Per MAST Task Scan .....	53

3.5	Fieldbus Networking Interfaces . . . . .	55
	INTERBUS (NOA) . . . . .	56
	Profibus (CRP) . . . . .	57
	AS-i (EIA) . . . . .	58
	Sercos (MMS) . . . . .	59
<b>Chapter 4</b>	<b>Quantum Configurations . . . . .</b>	<b>61</b>
4.1	Quantum Local I/O, Remote I/O and Distributed I/O . . . . .	62
	Features . . . . .	63
	Local, RIO and DIO Configuration . . . . .	64
4.2	Quantum Local I/O . . . . .	65
	Configuration . . . . .	66
	Example . . . . .	67
4.3	Quantum Remote I/O (RIO) . . . . .	68
	Single-cable Configuration . . . . .	69
	Dual-cable Configuration . . . . .	70
4.4	Quantum Distributed I/O (DIO) . . . . .	71
	Single-cable Configuration . . . . .	72
	Dual-cable Configuration . . . . .	73
<b>Chapter 5</b>	<b>Module Configuration . . . . .</b>	<b>75</b>
	Mapping a Local Quantum I/O Station . . . . .	76
	Open the Parameter Configuration . . . . .	78
<b>Chapter 6</b>	<b>Hardware Installation and Maintenance . . . . .</b>	<b>79</b>
	Space Requirements . . . . .	80
	Mounting Brackets . . . . .	82
	Mounting Quantum Modules . . . . .	85
	Mounting and Removing a Terminal Strip . . . . .	88
	Mounting Jumper Clips . . . . .	91
	Removing a Module Door . . . . .	92
<b>Part II</b>	<b>Controller Modules (CPUs) . . . . .</b>	<b>93</b>
<b>Chapter 7</b>	<b>General Information . . . . .</b>	<b>95</b>
	CPU Overview . . . . .	96
	Machine Stop Codes . . . . .	97
	Battery Lifetimes for the Quantum CPUs . . . . .	99
<b>Chapter 8</b>	<b>Low End CPU . . . . .</b>	<b>101</b>
	Presentation . . . . .	102
	Front Panel Switches . . . . .	103
	Rear Panel Switches . . . . .	106
	Key Switches . . . . .	107

	Modbus Connectors .....	111
	Indicators .....	113
	Processor Configuration Screen .....	116
	140 CPU 311 10 Specifications .....	126
	140 CPU 434 12A/U Specifications .....	129
	140 CPU 534 14A/U Specifications .....	132
	140 CPU 534 14B/U Specifications .....	135
<b>Chapter 9</b>	<b>High End CPU .....</b>	<b>139</b>
	Physical Presentation and Mounting of Standard High End Modules .....	141
	Standalone Safety CPU .....	143
	Physical presentation and mounting of Hot StandBy High End modules .....	145
	Hot Standby Safety CPU Specifics .....	146
	CPU Controls and Displays .....	149
	Indicators .....	153
	Modbus port .....	155
	Using the CPU LCD Display Screens .....	157
	How to change the battery of a 140 CPU 6xx xx CPU .....	168
	Processor Configuration Screen .....	169
	140 CPU 651 50 Specifications .....	171
	140 CPU 651 60 Specifications .....	175
	140 CPU 651 60S Specifications .....	179
	140 CPU 652 60 Specifications .....	181
	140 CPU 658 60 Specifications .....	185
	140 CPU 670 60 Specifications .....	188
	140 CPU 671 60 Specifications .....	191
	140 CPU 671 60S Specifications .....	194
	140 CPU 672 60 Specifications .....	196
	140 CPU 672 61 Specifications .....	199
	140 CPU 678 61 Specifications .....	202
<b>Chapter 10</b>	<b>Memory Cards for High End CPU .....</b>	<b>205</b>
	Memory Cards for High End CPUs .....	206
	Installing/Extracting PCMCIA Extension Cards on Advanced Quantum Processors .....	209
	Changing the Batteries of a PCMCIA Memory Card .....	211
	Battery Lifetimes for the PCMCIA Memory Card .....	215

---

<b>Part III</b>	<b>Power Supply Modules (CPS)</b> . . . . .	<b>225</b>
<b>Chapter 11</b>	<b>General Information</b> . . . . .	<b>227</b>
	Table of Power Supplies . . . . .	228
	System Design Considerations for Quantum Power Supplies . . . . .	229
	Compatibility . . . . .	235
	Presentation and Wiring . . . . .	237
	Indicators . . . . .	239
	Displaying the Power Supply Budget . . . . .	240
<b>Chapter 12</b>	<b>140 CPS 111 00: 115/230 VAC Standalone 3 A Power Supply Module</b> . . . . .	<b>243</b>
	140 CPS 111 00 Wiring Diagram . . . . .	244
	140 CPS 111 00 Specifications . . . . .	245
<b>Chapter 13</b>	<b>140 CPS 111 00 (PV 01 or greater): 115/230 VAC Standalone Power Supply Module</b> . . . . .	<b>247</b>
	140 CPS 111 00 (PV 01 or greater) Wiring Diagram . . . . .	248
	140 CPS 111 00 (PV 01 or greater) Specifications . . . . .	249
<b>Chapter 14</b>	<b>140 CPS 114 00: 115/230 VAC Standalone 8 A Power Supply Module</b> . . . . .	<b>251</b>
	140 CPS 114 00 Wiring Diagram . . . . .	252
	140 CPS 114 00 Specifications . . . . .	253
<b>Chapter 15</b>	<b>140 CPS 114 10: 115/230 VAC Standalone/Summable 8 A Power Supply Module</b> . . . . .	<b>255</b>
	140 CPS 114 10 Wiring Diagram . . . . .	256
	140 CPS 114 10 Specifications . . . . .	257
<b>Chapter 16</b>	<b>140 CPS 114 20: 115/230 VAC Standalone/Summable 11 A Power Supply Module</b> . . . . .	<b>259</b>
	140 CPS 114 20 Wiring Diagram . . . . .	260
	140 CPS 114 20 Specifications . . . . .	262
<b>Chapter 17</b>	<b>140 CPS 124 00: 115/230 VAC Standalone/Redundant 8 A Power Supply Module</b> . . . . .	<b>265</b>
	140 CPS 124 00 Wiring Diagram . . . . .	266
	140 CPS 124 00 Specifications . . . . .	267
<b>Chapter 18</b>	<b>140 CPS 124 20: 115/230 VAC Standalone/Redundant 11 A Power Supply Module</b> . . . . .	<b>269</b>
	140 CPS 124 20 Wiring Diagram . . . . .	270
	140 CPS 124 20 Specifications . . . . .	272

<b>Chapter 19</b>	<b>140 CPS 211 00: 24 VDC Standalone 3 A Power Supply Module</b> . . . . .	<b>275</b>
	140 CPS 211 00 Wiring Diagram . . . . .	<b>276</b>
	140 CPS 211 00 Specifications . . . . .	<b>277</b>
<b>Chapter 20</b>	<b>140 CPS 214 00: 24 VDC Standalone/Summable 7–8 A Power Supply Module</b> . . . . .	<b>279</b>
	140 CPS 214 00 Wiring Diagram . . . . .	<b>280</b>
	140 CPS 214 00 Specifications . . . . .	<b>282</b>
<b>Chapter 21</b>	<b>140 CPS 224 00: 24 VDC Standalone/Redundant 6–8 A Power Supply Module</b> . . . . .	<b>285</b>
	140 CPS 224 00 Wiring Diagram . . . . .	<b>286</b>
	140 CPS 224 00 Specifications . . . . .	<b>288</b>
<b>Chapter 22</b>	<b>140 CPS 414 00: 48 VDC Standalone/Summable 7–8 A Power Supply Module</b> . . . . .	<b>291</b>
	140 CPS 414 00 Wiring Diagram . . . . .	<b>292</b>
	140 CPS 414 00 Specifications . . . . .	<b>294</b>
<b>Chapter 23</b>	<b>140 CPS 424 00: 48 VDC Standalone/Redundant 6–8 A Power Supply Module</b> . . . . .	<b>297</b>
	140 CPS 424 00 Wiring Diagram . . . . .	<b>298</b>
	140 CPS 424 00 Specifications . . . . .	<b>300</b>
<b>Chapter 24</b>	<b>140 CPS 511 00: 125 VDC Standalone 3 A Power Supply Module</b> . . . . .	<b>303</b>
	140 CPS 511 00 Wiring Diagram . . . . .	<b>304</b>
	140 CPS 511 00 Specifications . . . . .	<b>305</b>
<b>Chapter 25</b>	<b>140 CPS 524 00: 125 VDC Standalone/Redundant 8 A Power Supply Module</b> . . . . .	<b>307</b>
	140 CPS 524 00 Wiring Diagram . . . . .	<b>308</b>
	140 CPS 524 00 Specifications . . . . .	<b>309</b>
<b>Part IV</b>	<b>Racks(XBP) and Rack Expander (XBE)</b> . . . . .	<b>311</b>
<b>Chapter 26</b>	<b>Selecting Racks (XBP)</b> . . . . .	<b>313</b>
	General Information . . . . .	<b>314</b>
	140 XBP 002 00: Two Position Rack . . . . .	<b>315</b>
	140 XBP 003 00: Three Position Rack . . . . .	<b>316</b>
	140 XBP 004 00: Four Position Rack . . . . .	<b>317</b>
	140 XBP 006 00: Six Position Rack . . . . .	<b>318</b>
	140 XBP 010 00: Ten Position Rack . . . . .	<b>319</b>
	140 XBP 016 00: Sixteen Position Rack . . . . .	<b>320</b>

<b>Chapter 27</b>	<b>140 XBE 100 00: Rack Expander</b> . . . . .	<b>321</b>
	General Information . . . . .	<b>322</b>
	Presentation . . . . .	<b>324</b>
	Operation Guidelines . . . . .	<b>325</b>
	140 XBE 100 00 Specifications . . . . .	<b>326</b>
<b>Part V</b>	<b>Simulator (XSM) and Battery (XCP) Module</b> . . . . .	<b>327</b>
<b>Chapter 28</b>	<b>Simulator Modules (XSM)</b> . . . . .	<b>329</b>
28.1	140 XSM 010 00: Two Channels In / One Channel Out Analog Simulator . . . . .	<b>330</b>
	Presentation . . . . .	<b>331</b>
	140 XSM 010 00 Wiring Diagram . . . . .	<b>333</b>
	140 XSM 010 00 Specifications . . . . .	<b>335</b>
28.2	140 XSM 002 00: 16 Point Discrete Input Simulator . . . . .	<b>336</b>
	Presentation . . . . .	<b>336</b>
<b>Chapter 29</b>	<b>140 XCP 900 00: Battery Module</b> . . . . .	<b>339</b>
	Presentation . . . . .	<b>340</b>
	140 XCP 900 00 Indicators . . . . .	<b>342</b>
	Installation and Maintenance . . . . .	<b>343</b>
	140 XCP 900 00 Specifications . . . . .	<b>345</b>
<b>Appendices</b>	. . . . .	<b>347</b>
<b>Appendix A</b>	<b>Miscellaneous Components</b> . . . . .	<b>349</b>
	Racks and Brackets Tables . . . . .	<b>350</b>
	Cables . . . . .	<b>351</b>
	Spare Parts Table . . . . .	<b>352</b>
	Illustrated Miscellaneous Components . . . . .	<b>353</b>
<b>Appendix B</b>	<b>Power and Grounding Guidelines</b> . . . . .	<b>363</b>
	General Information . . . . .	<b>364</b>
	Batteries as DC power supplies . . . . .	<b>366</b>
	AC Power and Grounding Considerations . . . . .	<b>367</b>
	DC Power and Grounding Considerations . . . . .	<b>371</b>
	Closed System Installation . . . . .	<b>377</b>
	Modbus Plus Termination and Grounding . . . . .	<b>379</b>
	Fiber Repeaters . . . . .	<b>382</b>
	Grounding of RIO Networks . . . . .	<b>384</b>
	Analog Grounding Consideration . . . . .	<b>387</b>

<b>Appendix C</b>	<b>Field Wiring Terminal Strip / Module Keying Assignment</b>	<b>393</b>
	General Information . . . . .	394
	Illustration . . . . .	395
	Primary Keying . . . . .	397
	Secondary Keying . . . . .	399
<b>Appendix D</b>	<b>CableFast Cabling</b> . . . . .	<b>402</b>
	General Information . . . . .	403
	140 CFA 040 00 Quantum CableFast Cabling Block . . . . .	409
	140 CFB 032 00 Quantum CableFast Cabling Block . . . . .	412
	140 CFC 032 00 Quantum CableFast Cabling Block . . . . .	416
	140 CFD 032 00 Quantum CableFast Cabling Block . . . . .	424
	140 CFE 032 00 Quantum CableFast Cabling Block . . . . .	427
	140 CFG 016 00 Quantum CableFast Cabling Block . . . . .	429
	140 CFH 008 00 Quantum CableFast Cabling Block . . . . .	435
	140CFI00800 Quantum CableFast Cabling Block. . . . .	440
	140CFJ00400 Quantum CableFast Cabling Block . . . . .	447
	140CFK00400 Quantum CableFast Cabling Block . . . . .	455
	CableFast Cables . . . . .	463
	CableFast Accessories . . . . .	468
<b>Appendix E</b>	<b>ConneXium Ethernet Cabling System</b> . . . . .	<b>469</b>
	Introduction . . . . .	470
	Configuration . . . . .	472
<b>Appendix F</b>	<b>Agency Approvals and Conformal Coating</b> . . . . .	<b>475</b>
	Agency Approvals: Power Supply . . . . .	476
	Agency Approvals: CPU . . . . .	477
	Agency Approvals: I/O . . . . .	478
	Agency Approvals: DIO Drops. . . . .	480
	Agency Approvals: RIO Heads and Drops . . . . .	481
	Agency Approvals: Ethernet Modules . . . . .	482
	Agency Approvals: NOM . . . . .	483
	Agency Approvals: Motion Modules . . . . .	484
	Agency Approvals: Battery and Simulator Modules . . . . .	485
<b>Appendix G</b>	<b>System Specifications</b> . . . . .	<b>487</b>
	Mechanical and Electrical Specifications . . . . .	488
	Power Supply Specifications . . . . .	489
	I/O Module Specifications . . . . .	490
	Operating and Storage Conditions . . . . .	491
<b>Index</b>	. . . . .	<b>493</b>



# Safety Information



## Important Information

### NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

## **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, **will result in death** or serious injury.

## **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, **could result in death** or serious injury.

## **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, **could result** in minor or moderate injury.

## **NOTICE**

**NOTICE** is used to address practices not related to physical injury.

---

## PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

## BEFORE YOU BEGIN

Do not use this product on machinery lacking effective point-of-operation guarding. Lack of effective point-of-operation guarding on a machine can result in serious injury to the operator of that machine.

### **WARNING**

#### **UNGUARDED EQUIPMENT**

- Do not use this software and related automation equipment on equipment which does not have point-of-operation protection.
- Do not reach into machinery during operation.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

This automation equipment and related software is used to control a variety of industrial processes. The type or model of automation equipment suitable for each application will vary depending on factors such as the control function required, degree of protection required, production methods, unusual conditions, government regulations, etc. In some applications, more than one processor may be required, as when backup redundancy is needed.

Only you, the user, machine builder or system integrator can be aware of all the conditions and factors present during setup, operation, and maintenance of the machine and, therefore, can determine the automation equipment and the related safeties and interlocks which can be properly used. When selecting automation and control equipment and related software for a particular application, you should refer to the applicable local and national standards and regulations. The National Safety Council's Accident Prevention Manual (nationally recognized in the United States of America) also provides much useful information.

In some applications, such as packaging machinery, additional operator protection such as point-of-operation guarding must be provided. This is necessary if the operator's hands and other parts of the body are free to enter the pinch points or other hazardous areas and serious injury can occur. Software products alone cannot protect an operator from injury. For this reason the software cannot be substituted for or take the place of point-of-operation protection.

Ensure that appropriate safeties and mechanical/electrical interlocks related to point-of-operation protection have been installed and are operational before placing the equipment into service. All interlocks and safeties related to point-of-operation protection must be coordinated with the related automation equipment and software programming.

---

**NOTE:** Coordination of safeties and mechanical/electrical interlocks for point-of-operation protection is outside the scope of the Function Block Library, System User Guide, or other implementation referenced in this documentation.

## START-UP AND TEST

Before using electrical control and automation equipment for regular operation after installation, the system should be given a start-up test by qualified personnel to verify correct operation of the equipment. It is important that arrangements for such a check be made and that enough time is allowed to perform complete and satisfactory testing.

### **WARNING**

#### **EQUIPMENT OPERATION HAZARD**

- Verify that all installation and set up procedures have been completed.
- Before operational tests are performed, remove all blocks or other temporary holding means used for shipment from all component devices.
- Remove tools, meters, and debris from equipment.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

Follow all start-up tests recommended in the equipment documentation. Store all equipment documentation for future references.

#### **Software testing must be done in both simulated and real environments.**

Verify that the completed system is free from all short circuits and temporary grounds that are not installed according to local regulations (according to the National Electrical Code in the U.S.A, for instance). If high-potential voltage testing is necessary, follow recommendations in equipment documentation to prevent accidental equipment damage.

Before energizing equipment:

- Remove tools, meters, and debris from equipment.
- Close the equipment enclosure door.
- Remove all temporary grounds from incoming power lines.
- Perform all start-up tests recommended by the manufacturer.

---

## OPERATION AND ADJUSTMENTS

The following precautions are from the NEMA Standards Publication ICS 7.1-1995 (English version prevails):

- Regardless of the care exercised in the design and manufacture of equipment or in the selection and ratings of components, there are hazards that can be encountered if such equipment is improperly operated.
- It is sometimes possible to misadjust the equipment and thus produce unsatisfactory or unsafe operation. Always use the manufacturer's instructions as a guide for functional adjustments. Personnel who have access to these adjustments should be familiar with the equipment manufacturer's instructions and the machinery used with the electrical equipment.
- Only those operational adjustments actually required by the operator should be accessible to the operator. Access to other controls should be restricted to prevent unauthorized changes in operating characteristics.

---

# About the Book

---



## At a Glance

### Document Scope

This documentation is a reference for the hardware of the Quantum automation system with EcoStruxure™ Control Expert.

### Validity Note

This document is valid for EcoStruxure™ Control Expert 14.1 or later.

### Related Documents

Title of documentation	Reference number
EcoStruxure™ Control Expert, Operating Modes	33003101 (English), 33003102 (French), 33003103 (German), 33003104 (Spanish), 33003696 (Italian), 33003697 (Chinese)
EcoStruxure™ Control Expert, System Bits and Words, Reference Manual	EIO0000002135 (English), EIO0000002136 (French), EIO0000002137 (German), EIO0000002138 (Italian), EIO0000002139 (Spanish), EIO0000002140 (Chinese)
Electrical installation guide	EIGED306001EN (English)
Quantum EIO, Remote I/O Modules, Installation and Configuration Guide	S1A48978 (English), S1A48981 (French), S1A48982 (German), S1A48983 (Italian), S1A48984 (Spanish), S1A48985 (Chinese)
Quantum EIO, System Planning Guide	S1A48959 (English), S1A48961 (French), S1A48962 (German), S1A48964 (Italian), S1A48965 (Spanish), S1A48966 (Chinese)
Quantum using EcoStruxure™ Control Expert, Hot Standby System, User Manual	35010533 (English), 35010534 (French), 35010535 (German), 35013993 (Italian), 35010536 (Spanish), 35012188 (Chinese)
Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual	35010516 (English), 35010517 (French), 35010518 (German), 35013970 (Italian), 35010519 (Spanish), 35012185 (Chinese)
Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual	35010574 (English), 35010575 (French), 35010576 (German), 35014012 (Italian), 35010577 (Spanish), 35012187 (Chinese)

Title of documentation	Reference number
Premium and Atrium using EcoStruxure™ Control Expert, Processors, racks and power supply modules, Implementation Manual	35010524 (English), 35010525 (French), 35006162 (German), 35012772 (Italian), 35006163 (Spanish), 35012773 (Chinese)
Modicon M580, Hardware, Reference Manual	EIO0000001578 (English), EIO0000001579 (French), EIO0000001580 (German), EIO0000001582 (Italian), EIO0000001581 (Spanish), EIO0000001583 (Chinese)
Modicon M580, RIO Modules, Installation and Configuration Guide	EIO0000001584 (English), EIO0000001585 (French), EIO0000001586 (German), EIO0000001587 (Italian), EIO0000001588 (Spanish), EIO0000001589 (Chinese),

You can download these technical publications and other technical information from our website at [www.schneider-electric.com/en/download](http://www.schneider-electric.com/en/download).

## Product Related Information

### WARNING

#### UNINTENDED EQUIPMENT OPERATION

The application of this product requires expertise in the design and programming of control systems. Only persons with such expertise should be allowed to program, install, alter, and apply this product.

Follow all local and national safety codes and standards.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

---

# Part I

## Introduction

---

### Introduction

The following part provides an overview of the Quantum Automation System

### What Is in This Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
1	System	19
2	System Components	23
3	Network Support	35
4	Quantum Configurations	61
5	Module Configuration	75
6	Hardware Installation and Maintenance	79



---

# Chapter 1

## System

---

### Purpose

This chapter provides an overview on the Quantum system.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
System Overview	20
Typical Quantum System Configuration	21

## System Overview

### Overview

The Quantum system is a special-purpose computing system with digital processing capabilities. Quantum is designed for real time control in industrial and manufacturing applications in a modular, expandable architecture employing the following modules:

- Controller Modules (CPU)
- Power Supply Modules (CPS)
- I/O Modules (Dxx, Axx)
- Network Interface Modules (including Field Bus Modules)
- Intelligent / Special Purpose Modules
- Simulator (XSM) and Battery (XCP) Modules
- Racks (XBP) and Rack Expander (XBE)
- CableFast Cabling (CFx)

### Expandable Architecture

Based on the local rack, the Quantum I/O system can be expanded by Network Interface modules with the following architecture:

Network	Network Interface Modules	Media
Remote I/O (RIO)	RIO Head, RIO Drop	RIO Coax cable
Distributed I/O (DIO)	NOM, DIO Drop	Twisted Pair


### Field Bus

By the means of field bus modules the Quantum I/O system supports the following field buses:

- AS-i

## Typical Quantum System Configuration

### Typical System Block Diagram

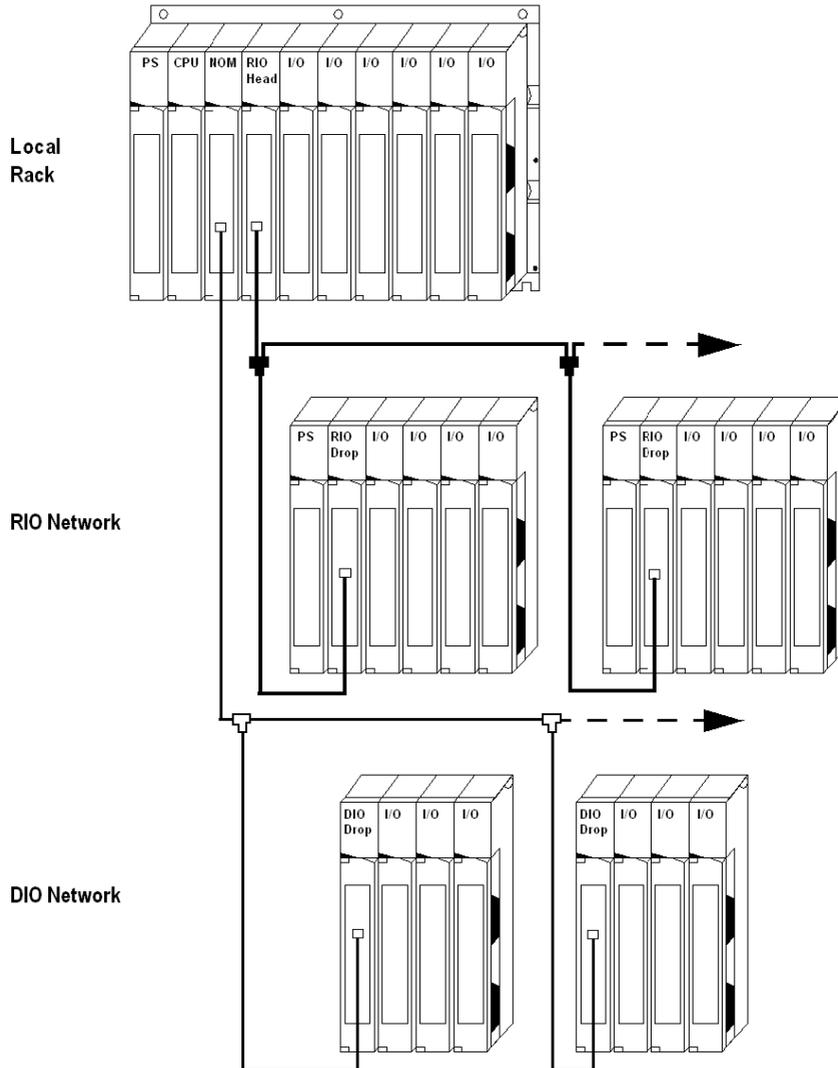



---

# Chapter 2

## System Components

---

### Purpose

This chapter provides an overview of the Quantum system components.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Controller Modules (CPUs)	24
Power Supply Modules (CPS)	25
I/O Modules	26
Network Interface Modules	27
Intelligent/Special Purpose I/O Modules	28
Simulator (XSM) and Battery (XCP) Module	29
Racks (XBP) and Rack Expander (XBE)	30
CableFast Cabling (CFx) for I/O Modules	31
Hot Standby System	33

## Controller Modules (CPUs)

### Overview

The Quantum CPU serves as a bus master controlling the local, remote, and distributed I/O of the Quantum system.

The module is on the Quantum local I/O rack. It is a digitally operating electronic system, which uses a programmable memory for the internal storage of user instructions. These instructions are used to implement specific functions such as:

- Logic
- Process sequencing
- Timing
- Coupling
- Arithmetic

These instructions allow control through digital and analog outputs, for various types of machines and processes.

**NOTE:** For detailed Information see *Controller Modules (CPUs)*, [page 93](#)

## Power Supply Modules (CPS)

### Overview

Quantum power supplies are used to supply system power to modules inserted into the rack, including:

- Quantum CPU modules
- Interface modules
- Quantum I/O modules

Depending upon the system configuration, the option exists of using the power supply in three different modes.

### Power Supply Modes Table

The following table shows the power supply modes.

Power Supply Type	Usage
Standalone	For 3 A or 8 A configurations that do not require fault tolerant or redundant capabilities.
Standalone Summable	For configurations consuming more than the rated current of one supply, two summing power supplies can be installed in the same rack.
Standalone Redundant	For configurations requiring power for uninterrupted system operation. Two redundant power supplies are required for power redundancy.

## WARNING

### UNEXPECTED BEHAVIOR OF APPLICATION

Use appropriate power supplies with the exceptions noted in the Power Supplies chapter.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## I/O Modules

### Overview

Quantum I/O modules are electrical signal converters that convert signals to and from field devices to a signal level and format that can be processed by the CPU.

I/O modules are optically isolated to the bus. I/O modules are also software configurable.

### Field Devices

Typical field devices include:

- limit switches
- proximity switches
- temperature sensors
- solenoids
- valve actuators

### Further Information

**NOTE:** For detailed information see in the Quantum I/O Hardware Guide:

- Quantum I/O Analog IN Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*)
- Quantum I/O Analog OUT Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*)
- Quantum I/O Analog IN / OUT Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*)
- Quantum I/O Discrete IN Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*)
- Quantum I/O Discrete OUT Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*)
- Quantum I/O Discrete IN / OUT Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*)
- Quantum Intrinsically Safe Analog/Digital Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*)
- Quantum Safety I/O Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*)

## Network Interface Modules

### Overview

Different types of network interface modules are available and presented in the table below with their descriptions.

### Network Interface Modules Table

The following table shows the network interface modules.

Type		Description
RIO Part <i>(see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual)</i>		Single and dual channel Remote I/O interface modules (RIO heads and drops) connected via a coaxial cable network.
DIO Part <i>(see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual)</i>		Single and dual channel Distributed I/O interface modules connected via a twisted pair Modbus Plus cable network.
Modbus Plus Part <i>(see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual)</i>		<ul style="list-style-type: none"> <li>• Single and dual channel Network Option Modules (NOM) connected via a twisted pair Modbus Plus cable network.</li> <li>• Modbus Plus on fiber module connected via a fiber optic Modbus Plus cable network.</li> </ul>
Ethernet Module <i>(see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual)</i>	TCP/IP	Single channel TCP/IP Ethernet interface module connected via a twisted pair or fiber optic cable network.
	SY/MAX	SY/MAX Ethernet module connected via a twisted pair or fiber optic cable network.
Field Bus Part <i>(see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual)</i>	Lonworks	Lonworks module connected via a twisted-pair network.
	Interbus	Interbus Interface module connected via a twisted pair network.
	Profibus	Profibus interface module connected via a Profibus port
	AS-i	The Quantum AS-i Master Module provides AS-i communications between the bus master module and the sensor/actuator slaves.
	Sercos	The SERCOS® Multi-Motion modules (MMS) are used to build a distributed automation solution, integrating motion applications with control applications

## Intelligent/Special Purpose I/O Modules

### Overview

Quantum Intelligent/Special Purpose I/O modules operate with minimum intervention from the Quantum controller after initial downloading of module parameters or programs. The Quantum intelligent/special purpose I/O modules include the following:

- High Speed Counter modules (EHC)
- ASCII Interface module (ESI)
- High Speed Interrupt module (HLI)
- Time Stamp modules (ERT)
- Clock module (DCF)

## Simulator (XSM) and Battery (XCP) Module

### Overview

There are two types of simulator modules, as described below.

### Discrete and Analog Simulators Table

The following table shows discrete and analog simulators.

Simulator	Points / Channels	Type	Description
Discrete Simulator	16 Points IN	140 XSM 002 00	is used to generate up to 16 binary input signals to the 140 DAI 540 00 and the 140 DAI 740 00 AC input modules.
Analog Simulator	2 channels IN 1 channel OUT	140 XSM 010 00	is used for simulating 4 ... 20 mA field current loops used with current input Quantum modules.

### Battery Module (XCP)

The Quantum battery module provides RAM backup power for Quantum expert modules.

### Further Information

For detailed information see *Simulator (XSM) and Battery (XCP) Module*, [page 327](#).

## Racks (XBP) and Rack Expander (XBE)

### Racks (XBP)

Quantum racks may be used in any locations of local, remote, or distributed I/O. There are six racks available in 2, 3, 4, 6, 10, and 16 slot versions.

### Rack Expander (XBE)

The 140 XBE 100 00 Rack Expander provides the Modicon Quantum with the capacity to expand Local and Remote I/O drops to a second rack. For improved I/O capacity and efficiency, the rack expander will save money by minimizing the number of Remote I/O drops. The Rack Expander also improves the overall performance of Remote I/O based systems by reducing the number of Remote I/O drops the Quantum CPU has to service. The Rack Expander effectively doubles the maximum number of Discrete I/O that can be serviced by a Quantum Remote I/O system.

### Further Information

**NOTE:** For detailed information see *Racks(XBP) and Rack Expander (XBE)*, [page 311](#)

## CableFast Cabling (CFx) for I/O Modules


### Overview

The CableFast wiring system consists of pre-wired Quantum field wiring terminal strips for I/O modules.

### Features

It is available in various cable lengths, that are terminated with D-type connectors. The D connectors plug into DIN rail-mounted terminal blocks offered in straight through or special application versions. Cables and terminal blocks are ordered separately and the terminal blocks may be used with any cable length. Pigtail cable versions are also available.

Quantum I/O Modules with CableFast Components

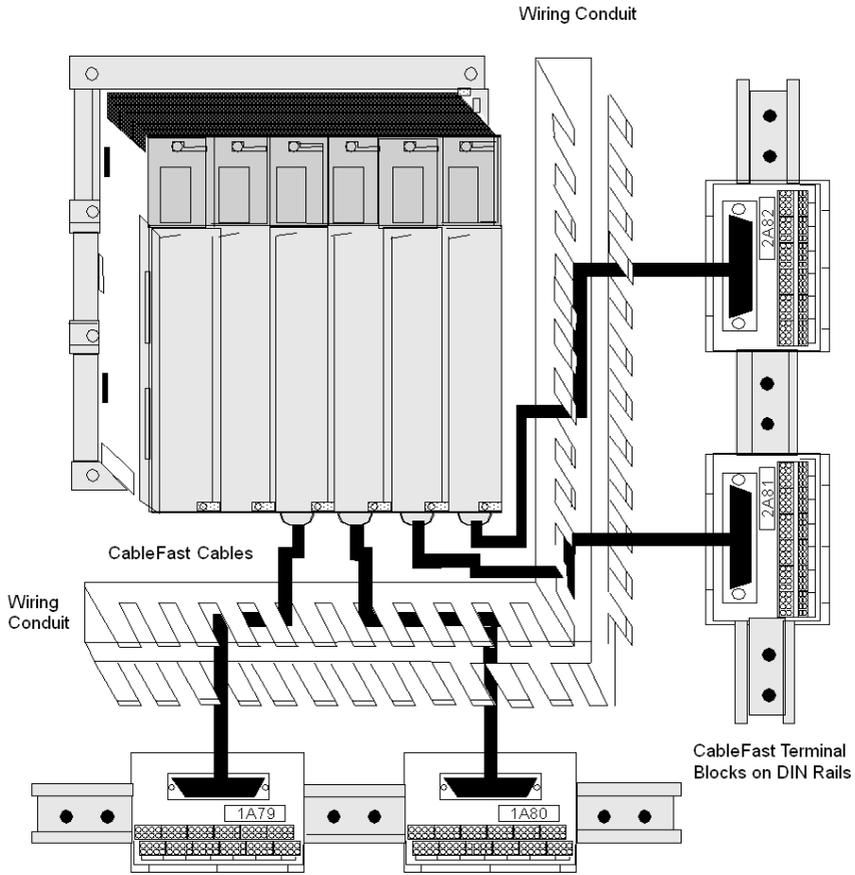

**NOTE:** For further details refer to *CableFast Cabling*, page 402.

## Hot Standby System

### Function

A Hot Standby (HSBY) system is based on two identically configured programmable logic controllers linked to each other and to the same remote I/O network. If one controller stops, the other assumes control of the I/O system.

### Primary and Standby Controller

The Quantum Hot Standby system is designed for use where downtime cannot be tolerated. The system delivers high availability through redundancy. Two racks are configured with identical hardware and software. One of the PLCs acts as the primary controller. It runs the application by scanning user logic and operating remote I/O. The other PLC acts as the standby controller. The primary controller updates the standby controller after each scan. The standby is ready to assume control within one scan if the primary stops. Primary and standby states are switchable. Either controller can be put into the primary state, but to do this, the other must be in the standby state. The remote I/O network is operated by the primary controller.

**NOTE:** A Quantum Hot Standby system supports only remote I/O. It does not support local I/O or distributed I/O (DIO).

For a detailed description of the Hot Standby (HSBY) system refer to the *Quantum HSBY User Manual*.



---

# Chapter 3

## Network Support

---

### Purpose

This chapter provides an overview of the Quantum Network Support.

### What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
3.1	General Information	36
3.2	Remote I/O (RIO) and Distributed I/O (DIO)	41
3.3	Ethernet Networking Interfaces	46
3.4	Modbus/Modbus Plus Networking Interfaces	49
3.5	Fieldbus Networking Interfaces	55

# Section 3.1

## General Information

---

### Purpose

This section provides general information on the Quantum Network Support.

### What Is in This Section?

This section contains the following topics:

Topic	Page
Supported Networks Table	37
Quantum Network Interface Techniques	39

## Supported Networks Table

### Supported Networks Table

The following table shows the Quantum supported networks.

Service Description	Modbus	Modbus Plus	Remote I/O	Ethernet		AS-i	Profibus	INTERBUS	SERCOS
				TCP/IP	SY/MAX				
Native to Quantum CPU	+	+	-	+(6)	-	-	-	-	-
Available on a Network Module	+	+	+	+	+	+	+	+	+
CPU Programming	+(1)	+	-	+	-	-	-	-	-
CPU Executive Firmware Loading Support	+(1)	+(1)	-	-	-	-	-	-	-
Module Firmware Loaded From CPU	+	+	+	+	+	-	+	_(5)	+
Report By Exception Communications	+(2)	+	-	+	+	-	-	-	-
Multi-node Broadcast Communications	-	+(1)	-	-	-	-	-	-	-
Synchronized I/O Scanning	-	-	+	-	-	-	-	-	+
NonSynchronized I/O Scanning	-	+(1)	-	-	-	-	-	+	-
Quantum I/O Drops	-	+(1)	+	-	-	-	-	-	-
Hot Standby Quantum I/O Drop Support	-	-	+	-	-	-	-	-	-
Hot Standby Data Communications Support	+	+	-	+	-	+	-	-	+(7)
<p>(1) Refer to the Modbus Plus portion of the Quantum Specifier's guide section for details of available services on 140 NOM 2•• 00 Modbus Plus Network modules</p> <p>(2) Service is only available on the native controller Modbus port when the XMIT block is used</p> <p>(3) Available from third parties</p> <p>(4) The SERCOS network standard is fiber optics.</p> <p>(5) Module firmware loaded through serial port on module.</p> <p>(6) Refers to HE-CPU's.</p>									

Service Description	Modbus	Modbus Plus	Remote I/O	Ethernet		AS-i	Profibus	INTERBUS	SERCOS
				TCP/IP	SY/MAX				
Optional Dual Cabling	-	+(1)	+	-	-	-	-	-	-
Optional Fiber Optics	+(3)	+(1)	+	+	+	-	-	+(3)	+(4)
Momentum I/O Drops	-	+(1)	-	+	-	-	+	+	-
Variable Speed Drives	+(3)	+(1)	-	-	-	-	-	+	-
Servo Motion Control	-	+(1)	-	-	-	-	-	+(3)	+
HMI: Displays & Panels	+	+(1)	+	-	-	-	-	+(3)	-
HMI: Work-stations	+	+(1)	-	+	+	-	-	-	-

(1) Refer to the Modbus Plus portion of the Quantum Specifier's guide section for details of available services on 140 NOM 2•• 00 Modbus Plus Network modules  
(2) Service is only available on the native controller Modbus port when the XMIT block is used  
(3) Available from third parties  
(4) The SERCOS network standard is fiber optics.  
(5) Module firmware loaded through serial port on module.  
(6) Refers to HE-CPU's.

## Quantum Network Interface Techniques

### Overview

Quantum communication and networking modules use a variety of different techniques to interface to the Quantum controller over the local rack.

### Direct CPU Driver

This technique allows the CPU to control high speed data transfers to and from the communication and networking modules, maximizing throughput and performance.

This technique is used extensively by the Remote I/O network and Hot Standby system to provide a highly deterministic synchronization of the CPU and I/O scans.

**NOTE:** Only one Remote I/O Head Interface is supported for each Quantum CPU.

### Option Module Interface

This technique allows the communication and networking modules to control data transfers to and from the CPU, maximizing the flexibility of the communications interface.

This technique is used extensively by the Modbus Plus and Ethernet peer-to-peer network modules. The number of option module interfaces supported by each CPU model is described in the following table.

### CPU Interface Support Table

The following table shows the summary of Quantum CPU option module interface support.

Quantum Controller Model Number	Available Option Module Interfaces Supported Per CPU
140 CPU 678 61	6
140 CPU 672 61	6
140 CPU 672 60	6
140 CPU 671 60S <sup>(1)</sup>	6
140 CPU 671 60	6
140 CPU 670 60	3
140 CPU 658 60	6
140 CPU 652 60	6
140 CPU 651 60S <sup>(1)</sup>	6
140 CPU 651 60	6
140 CPU 651 50	6
140 CPU 534 14A/B/U	6
<b>(1) NOTE:</b> Safety CPUs (140 CPU 651 60S and 140 CPU 671 60S) support only 140 NOE 771 11.	

Quantum Controller Model Number	Available Option Module Interfaces Supported Per CPU
140 CPU 434 12A/U	6
140 CPU 311 10	2
<b>(1) NOTE:</b> Safety CPUs (140 CPU 651 60S and 140 CPU 671 60S) support only 140 NOE 771 11.	

## Communications and Networking Table

The following table shows the Quantum communications and networking modules.

Model Number	Description	Module Interface Technique	Rack Support			Bus Power mA
			Local	RIO	DIO	
140 CRA 312 00	Remote I/O Adapter	Direct CPU Driver	N	Y	N	1,000
140 CRP 312 00	Remote I/O Head	Direct CPU Driver	Y	Y	N	1,000
140 CRP 931 00	Remote I/O Head Interface, single cable	Direct CPU Driver	Y	N	N	780
140 CRP 932 00	Remote I/O Head Interface, dual cable	Direct CPU Driver	Y	N	N	780
140 NOM 211 00	Modbus Plus Options, single cable	Option Module	Y	N	N	780
140 NOM 212 00	Modbus Plus Option, dual cable	Option Module	Y	N	N	780
140 NOM 252 00	Modbus Plus Option, single channel fiber	Option Module	Y	N	N	900
140 NOE 211 00	Ethernet TCP/IP Twisted Pair	Option Module	Y	N	N	1000
140 NOE 251 00	Ethernet TCP/IP Fiber Optic	Option Module	Y	N	N	1000
140 NOE 311 00	One 10BASE-T Ethernet/SY/MAX (RJ45) port.	Option Module	Y	N	N	1000
140 NOE 351 00	Two 10BASE-T Ethernet/SY/MAX (RJ45) port.	Option Module	Y	N	N	1000
140 NOE 771 **	Ethernet TCP/IP Twisted Pair/Fiber Optic	Option Module	Y	N	N	750
140 EIA 921 00	AS-i Master	I/O Map (13/9)	Y	Y	Y	250
140 MMS 425 00	Multi-Axis Motion Controller w/SERCOS	Option Module	Y	N	N	2500
PTQ PDP MV1	Profibus Option Module	Option Module	Y	N	N	800

---

## Section 3.2

### Remote I/O (RIO) and Distributed I/O (DIO)

---

#### Purpose

This section provides information on the Quantum (RIO) and (DIO).

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Remote I/O (RIO)	42
Execution of Quantum Sections with Remote Inputs/Outputs	43
Distributed I/O (DIO)	45

## Remote I/O (RIO)

### Overview

There are the following types of Quantum RIO Modules:

- RIO Heads:
  - 140 CRP 931 00 (*see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual*)
  - 140 CRP 932 00 (*see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual*)
- RIO Drops:
  - 140 CRA 931 00 (*see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual*)
  - 140 CRA 932 00 (*see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual*)

They use an S908-based networking I/O configuration. Communication is done via single or dual coaxial cabling up to 15,000 feet away. This configuration supports a mix of the following product lines:

- SY/MAX
- 800 Series
- Quantum I/O

When Quantum RIO is required, the Quantum controller may support up to 31 RIO drops. In an RIO configuration, an RIO head module is connected with coaxial cable to RIO drop modules at each remote drop.

**NOTE:** In a single-cable configuration, it is recommended to connect the cable in channel A on both Local I/O (CRP) and Remote I/O (CRA).

**NOTE:** In a dual-cable configuration, it is mandatory to connect channel A from Local I/O (CRP) with channel A from Remote I/O (CRA) and channel B from Local I/O (CRP) with channel B from Remote I/O (CRA).

## Execution of Quantum Sections with Remote Inputs/Outputs

### General

Quantum PLCs have a specific section management system. It applies to stations with remote inputs/outputs.


These stations are used with following RIO modules:

- 140 CRA 931 00
- 140 CRA 932 00

This system allows remote inputs/outputs to be updated on sections with optimum response times (without waiting for the entire task cycle before updating the inputs/outputs).

### Operation

The following diagram shows the IO phases when 5 drops are associated to client task sections.

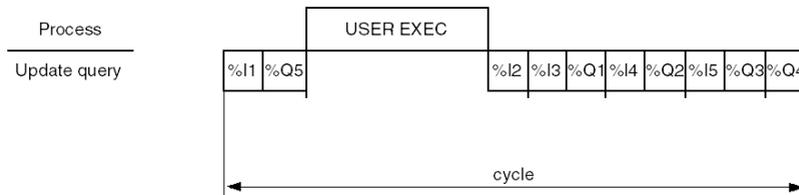

%Ii inputs of drop No. i  
 %Qi outputs of drop No. i  
 i drop number

#### Description

Phase	Description
1	Request to update: <ul style="list-style-type: none"> <li>the inputs of the first drop (i=1)</li> <li>the outputs of the last drop (i=5)</li> </ul>
2	Processing the program
3	<ul style="list-style-type: none"> <li>Updating the inputs of the first drop (i=1)</li> <li>Request to update the inputs of the second drop (i=2)</li> </ul>
4	Request to update: <ul style="list-style-type: none"> <li>the inputs of the third drop (i=3)</li> <li>the outputs of the first drop (i=1)</li> </ul>
5	Request to update: <ul style="list-style-type: none"> <li>the inputs of the fourth drop (i=4)</li> <li>the outputs of the second drop (i=2)</li> </ul>
6	Request to update: <ul style="list-style-type: none"> <li>the inputs of the last drop (i=5)</li> <li>the outputs of the third drop (i=3)</li> </ul>
7	Request to update the outputs of the fourth drop (i=4)

### Adjustment of the Drop Hold-Up Time Value

In order for the remote outputs to be correctly updated and avoid fallback values to be applied, the drop hold-up time must be set to at least twice the mast task cycle time. Therefore the default value, 300 ms, must be changed if the MAST period is set to the maximum value, 255 ms. The adjustment of the Drop Hold-Up time (*see Quantum using EcoStruxure™ Control Expert, Hot Standby System, User Manual*) must be done on all configured drops.

## Distributed I/O (DIO)

### Overview

Quantum DIO is implemented over a Modbus Plus network. The CPU or NOM modules may be the network head via their Modbus Plus ports.

Quantum DIO Modbus Plus drop adaptors are specifically designed to link Quantum I/O modules to the head via twisted pair shielded cable (Modbus Plus). The DIO drop modules also provide the I/O with power (maximum 3 A) from a 24 VDC or a 115/230 VAC source. Each DIO network supports up to 63 distributed drops using repeaters.

**NOTE:** For detailed information see Experts and Communication Reference Manual, Part Quantum Distributed I/O (DIO) Drop Modules (*see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual*).

## Section 3.3

### Ethernet Networking Interfaces

---

#### Purpose

This section provides information on the Quantum Ethernet Networking Interfaces.

**NOTE:** For details see Experts and Communication Reference Manual, Part Quantum Ethernet Modules (*see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual*).

#### What Is in This Section?

This section contains the following topics:

Topic	Page
TCP/IP Ethernet	47
SY/MAX Ethernet	48

## TCP/IP Ethernet

### Overview

Quantum TCP/IP Ethernet modules make it possible for a Quantum controller to communicate with devices on an Ethernet network using TCP/IP – the de facto standard protocol. An Ethernet module may be inserted into an existing Quantum system and connected to existing Ethernet networks via fiber optic or twisted pair cabling.

## SY/MAX Ethernet

### Overview

Quantum-SY/MAX Ethernet modules are Quantum modules that can be placed in a Quantum rack, to connect Quantum controllers to SY/MAX devices and applications.

---

## Section 3.4

### Modbus/Modbus Plus Networking Interfaces

---

#### Purpose

This section provides information on the Quantum Modbus/Modbus Plus Networking Interfaces.

**NOTE:** For detailed information see Experts and Communication Reference Manual, Part Modbus Plus Network Option Modules (NOM) (*see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual*).

#### What Is in This Section?

This section contains the following topics:

Topic	Page
General Information	50
Features	51
Modbus and Modbus Plus Services	52
Modbus/ModBus Plus Requests Per MAST Task Scan	53

## General Information

### Overview

Quantum NOM modules provide extended communication capabilities for the Quantum system within a Modbus and a Modbus Plus configuration.

### Modbus

Modbus, a master/slave protocol, is a de facto industry standard with support from over 500 industrial suppliers.

On-line programming or data acquisition applications are easily supported directly from the serial port of any computer.

Modbus can be used in either a simple point-to-point manner with a pair of devices, or in a network architecture with up to 247 slave devices.

### Modbus Plus

Modbus Plus combines high speed, peer-to-peer communication and easy installation to simplify applications and reduce installation costs.

It allows host computers, controllers and other data sources to communicate as peers throughout the network via low-cost twisted pair cable or optional fiber optic cable.

As a deterministic token-passing network, Modbus Plus communicates at one megabaud for fast access to process data. It's strength is its ability to control real-time control devices like I/O and drives, without degraded performance due to loading or traffic.

Bridging between Modbus and Modbus Plus is done automatically on CPUs and Modbus Plus network modules.

The bridge mode redirects Modbus messages onto the Modbus Plus network for easy connectivity between Modbus and Modbus Plus devices.

A summary of the available services on Quantum Modbus and Modbus Plus ports is given in the following table.

### Modbus Plus on Fiber Module

Quantum Modbus Plus on Fiber modules provides connectivity to Modbus Plus nodes by fiber cable without fiber optic repeaters.

The use of a 490 NRP 254 Fiber Optic Repeater allows the creation of a pure fiber optic network or a mixed fiber optic/twisted-pair network.

## Features

### Overview

Each Quantum CPU includes both a Modbus and Modbus Plus communications port. The features offered by both these communication protocols are listed in the following table.

### Modbus and Modbus Plus Features Table

The following table shows the Modbus and Modbus Plus features.

Features	Modbus	Modbus Plus
Technique	Slaves polled by a master	Peer-to-peer, token rotation
Speed	19.2 kbaud typical	1 Mbaud
Electrical	RS-232, various others	RS-485
Distance without repeater	RS-232, 50 ft. (15 m)	1,500 ft. (457 m)
Media	Various	Twisted pair, Fiber optics
Max nodes per network	247	64
Max network traffic	300 registers/sec @ 9.6 kbaud	20,000 registers/sec
Programming	Yes	Yes
Read/Write data	Yes	Yes
Global data	No	Yes
Peer Cop	No	Yes

## Modbus and Modbus Plus Services

### Modbus and Modbus Plus Services Table

The following table shows the Quantum Modbus and Modbus Plus services.

Type	Service Description	Native CPU Ports		NOM 1-2 Ports		NOM 3-6 Ports1	
		Modbus	Modbus Plus	Modbus	Modbus Plus	Modbus	Modbus Plus
Modbus Services	Default Modbus Port Parameters	Yes	-	Yes	-	Yes	-
	Configurable Modbus Port Parameters	Yes	-	Yes	-	Yes <sup>(5)</sup>	-
	Modbus to Modbus Plus Bridging	Yes <sup>(1)</sup>	-	Yes <sup>(2)</sup>	-	Yes <sup>(2)</sup>	-
	Local CPU Programming	Yes <sup>(3)</sup>	-	Yes <sup>(3)</sup>	-	No	-
	Remote CPU Programming over Modbus Plus	Yes <sup>(3)</sup>	-	Yes <sup>(3)</sup>	-	Yes <sup>(1)</sup>	-
	Modbus access to local CPU	Yes	-	Yes	-	No	-
	Modbus access to remote CPU over Modbus Plus	Yes	-	Yes	-	Yes	-
	Modbus Network Slave Support	Yes	-	No	-	No	-
	Modbus Master support with XMIT block	Yes	-	No	-	No	-
	Executive Firmware Loading Support	Yes	-	No	-	No	-
Modbus Plus services	MSTR read/write register messaging <sup>(4)</sup>	-	Yes	-	Yes	-	Yes
	MSTR read/write Global Data messaging	-	Yes	-	Yes	-	Yes
	MSTR get/clear local/remote statistics	-	Yes	-	Yes	-	Yes
	Config Extension Global Data Support	-	Yes	-	Yes	-	No
	Config Extension Peer Cop Support	-	Yes	-	Yes	-	No
	Distributed I/O Support	-	Yes	-	Yes	-	No
	CPU Programming	-	Yes <sup>(3)</sup>	-	Yes <sup>(3)</sup>	-	Yes <sup>(3)</sup>
	Executive Firmware Loading Support	-	Yes	-	No	-	No

(1) The native CPU Modbus port can be disabled from bridge mode operation with the native Modbus Plus Port.  
(2) Modbus ports on NOMs are in bridge mode with their associated Modbus Plus port.  
(3) Only one programmer connection can be logged in at a time to any CPU, and only one program monitor can be attached at a time to any CPU.  
(4) Up to 4 MSTR read/write register instructions can be serviced per CPU scan per Modbus Plus port.  
(5) Modbus port parameters on NOMs 3-6 are defined by Modbus Port 3 when the comm parameter selector switch is in mem.

## Modbus/ModBus Plus Requests Per MAST Task Scan

### Maximum Request Served

The maximum number of requests served depends on limitations at various levels:

- Module port limitation: The number of requests served depends on the module port capacity to serve those requests.
- CPU architecture limitation: The number of requests served depends on the CPU capacity to send and treat those requests through the PAC architecture.
- CPU com server limitation: Parameter set to define the maximum number of requests to be served.

The maximum number of requests is determined by the most restrictive limitation.

## Modbus/Modbus Plus Server Mode Communication

The following table provides the maximum number of served requests per MAST task scan for a Modicon Quantum Modbus or Modbus Plus communication in server mode:

Priority (Service Order)	Requests Entry Port	Maximum Number of Requests		
		Module Port Limitation	CPU Architecture Limitation	CPU Com Server Limitation
1	Requests via a CPU embedded Modbus or Modbus Plus port.	4	20	4...24 Set with %SW90 (see <i>EcoStruxure™ Control Expert, System Bits and Words, Reference Manual</i> )
2	Requests via NOM module.	4		
2	Requests via NOE or NOC module in 4 x 256 communication mode.	4 <sup>(1)</sup>		
3	Requests via NOE or NOC module that support $n \times 1024$ communication mode, with $n$ depending on module ( $n \times 1024$ bytes is selected (see <i>EcoStruxure™ Control Expert, Operating Modes</i> )). <b>NOTE:</b> Available for NOE with SV≥4.60.	$n = 4, 8, \text{ or } 12$ <sup>(1)</sup>	12 (high-end CPU) 8 (legacy CPU)	
4	Requests via USB port.	4	No limitation	
5	Requests via embedded Ethernet ports.	16	No limitation	

**(1)** Limitation applies to other requests than FC03, FC16, or FC23 which are directly served by the module. In addition to the maximum requests per module, up to 8 requests of type FC03, FC16, or FC23 can be served per scan per module.

Example for requests via embedded Ethernet port:

**Limitation 1:** Module port limitation to serve requests via embedded Ethernet port = 16

**Limitation 2:** CPU setting: %SW90 = 4

**Result:** Maximum number of served requests = 4.

In this case, the most restrictive limitation comes from the CPU setting.

---

## Section 3.5

### Fieldbus Networking Interfaces

---

#### Purpose

This section provides information on Quantum Fieldbus Networking Interfaces.

**NOTE:** For detailed information see Experts and Communication Reference Manual, Part Quantum Field Bus Modules (*see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual*).

#### What Is in This Section?

This section contains the following topics:

Topic	Page
INTERBUS (NOA)	56
Profibus (CRP)	57
AS-i (EIA)	58
Sercos (MMS)	59

## INTERBUS (NOA)

### Overview

Quantum INTERBUS (NOA) modules provide connectivity between a Quantum controller and the INTERBUS network.

The INTERBUS is a fieldbus network designed for I/O blocks and intelligent devices used in manufacturing. It offers a master/slave topology which permits deterministic I/O servicing over its network which can be up to 12.8 km (8 miles) in length..

## Profibus (CRP)

### Overview

The PTQ PDP MV1 Profibus DP Communication Module provides connectivity to the Profibus. Profibus DP is a fieldbus designed for I/O communication used in manufacturing. It supports baudrates up to 12 MBaud.

## AS-i (EIA)

### Overview

The Quantum AS-i Master Module provides AS-i communications between the bus master module and the sensor/actuator slaves. One master module can control 31 slaves. Multiple master modules can be used in a single control system. These sensor/actuators can be in the local CPU, an RIO, or a DIO drop adapter.

## Sercos (MMS)

### Overview

The SERCOS® MMS motion modules are used to build a distributed automation solution, integrating motion applications with control applications, based on Quantum PLCs. The axis modules and Quantum CPUs communicate either through the Quantum rack or by using the Modbus Plus network. The data transfer is transparent, and does not need any additional application program.

### Fiber optic interface

The physical interface between the SERCOS module and the servo drive is done by the SERCOS network, using fiber optic cable. This optic link is entirely digital, and provides communication parameters for the tuning, diagnostics, and operation of both motion control modules and servo drives.



---

# Chapter 4

## Quantum Configurations

---

### Purpose

This chapter provides information on the Quantum Configurations.

### What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
4.1	Quantum Local I/O, Remote I/O and Distributed I/O	62
4.2	Quantum Local I/O	65
4.3	Quantum Remote I/O (RIO)	68
4.4	Quantum Distributed I/O (DIO)	71

# Section 4.1

## Quantum Local I/O, Remote I/O and Distributed I/O

---

### Purpose

This section provides information on the features and configuration of Quantum Local I/O, Remote I/O and Distributed I/O.

### What Is in This Section?

This section contains the following topics:

Topic	Page
Features	63
Local, RIO and DIO Configuration	64

## Features

### Local, Remote and Distributed I/O Features

The following table shows features of the Local, Remote and Distributed I/O configurations.

Feature	Configuration		
	Local I/O	Remote I/O	Distributed I/O
Maximum I/O Words			
Per drop	unlimited I/O	64 IN / 64 OUT	30 IN / 32 OUT
Per network		1,984 IN / 1,984 OUT	500 IN / 500 OUT
Maximum drops per network		31	63 (with repeater)
Media		Coax	Twisted Pair
Speed		1.5 MHz	1 MHz
Maximum distance without repeaters		15,000 ft. (4,573 m)	1,500 ft. (457 m)
Scan synched I/O servicing		Yes	No
Momentum I/O support		No	Yes
Hot Standby support		Yes	No
Modbus Plus compatible		No	Yes

## Local, RIO and DIO Configuration

### Overview

Valid Quantum configurations can be equipped with a combination of:

- Quantum CPUs
- Power supplies
- I/O interfaces
- Expert modules
- I/O modules

### Local, RIO, and DIO Configuration Table

The following table provides valid Quantum configurations, including racks and modules.

If Configuration Type Is	Rack Types (Typical) Are	Required Modules Are	Optional Modules Are	Modules Not Permitted Are
Local	6, 10, 16 slots	Power Supply CPU	RIO Head, I/O, NO*	RIO Drop, DIO Drop
RIO**	6, 10, 16 slots	Power Supply RIO Drop	I/O	CPU, RIO Head, DIO Drop NO*
DIO	2, 3, 4, 6 slots	DIO Drop	Power Supply, I/O	CPU, RIO Head, NO*
<p>* NOM, NOA, and NOE</p> <p>** Remote I/O is typically used for large (number of modules) drops 6, 10, or 16 slot racks. Distributed I/O is typically used for small drops using 2, 3, 4, or 6 slot racks.</p>				

**NOTE:** Every Quantum module requires power from the rack (except power supply and DIO modules). For a valid configuration, add up the required rack current (in mA) for every module, and verify that this number is less than the available power in the selected power supply.

## Section 4.2

### Quantum Local I/O

---

#### Purpose

This chapter provides an Overview on the Quantum Local I/O.

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Configuration	66
Example	67

## Configuration

### Overview

A local I/O configuration is contained in one to two racks and includes Quantum modules mounted in a standard Quantum rack. Quantum Local I/O can be as few as one I/O module (in a three slot rack).


Or a maximum of 27 I/Os totalized as follows:

- 13 in the first rack along with CPU, power supply and expansion module (XBE)
- 14 in the expansion rack along with power supply and expansion module (XBE)

## Example

### I/O Configuration Figure

The following figure is an example of a typical local I/O configuration.

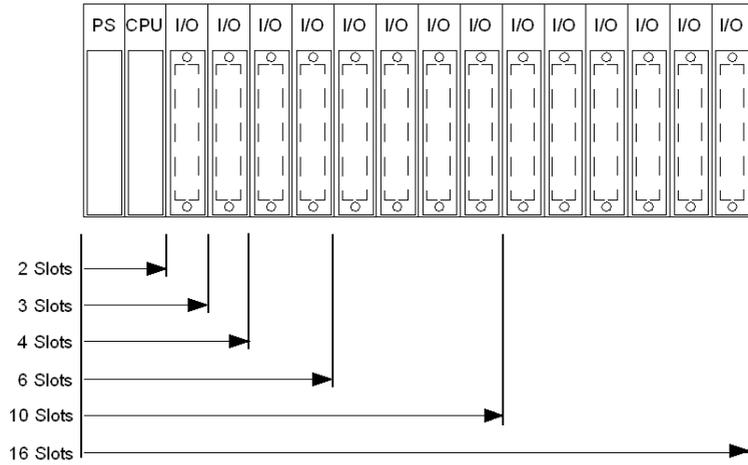

## Section 4.3

### Quantum Remote I/O (RIO)

---

#### Purpose

This section provides an overview on the configuration of the Quantum Remote I/O (RIO).

**NOTE:** For detailed information see Experts and Communication Reference Manual, Part Quantum Remote I/O (RIO) Modules (*see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual*).

#### What Is in This Section?


This section contains the following topics:

Topic	Page
Single-cable Configuration	69
Dual-cable Configuration	70

## Single-cable Configuration

### Single-cable RIO Configuration Figure

The following figure is an example of a single-cable Quantum RIO configuration.

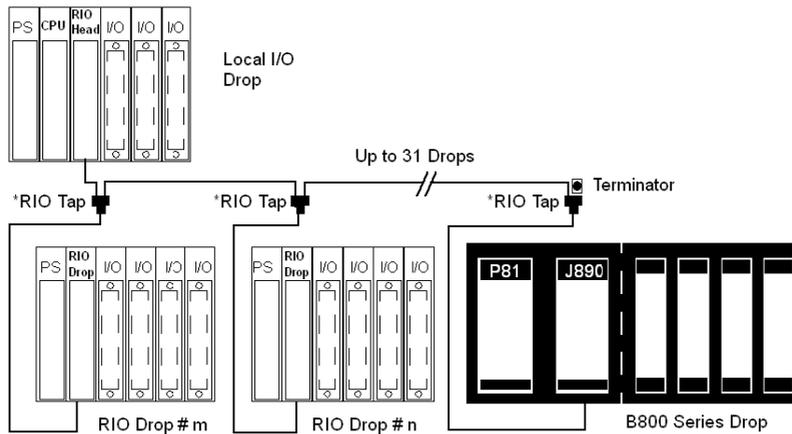


**NOTE:** In a single-cable configuration, it is recommended to connect the cable in channel A on both Local I/O (CRP) and Remote I/O (CRA).

## Dual-cable Configuration

### Dual-cable RIO Configuration Figure

The following figure is an example of a dual-cable Quantum RIO configuration.

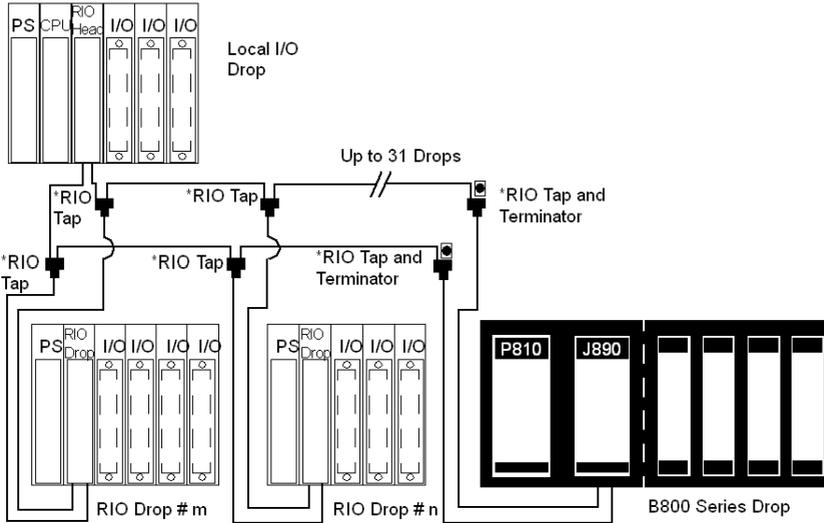

**NOTE:** Dual cables provide systems with added protection against cable breaks or damaged connectors. With two cables connected between the host and each node, no single cable break will disrupt communications.

**NOTE:** In a dual-cable configuration, it is mandatory to connect channel A from Local I/O (CRP) with channel A from Remote I/O (CRA) and channel B from Local I/O (CRP) with channel B from Remote I/O (CRA).

---

## Section 4.4

### Quantum Distributed I/O (DIO)

---

#### Purpose

This section provides an overview on the configuration of Quantum Distributed I/O (DIO).

**NOTE:** For detailed information see Experts and Communication Reference Manual, Part III Quantum Distributed I/O (DIO) Drop Modules (*see Quantum using EcoStruxure™ Control Expert, Experts and Communication, Reference Manual*).

#### What Is in This Section?


This section contains the following topics:

Topic	Page
Single-cable Configuration	72
Dual-cable Configuration	73

## Single-cable Configuration

### Single-cable DIO Configuration Figure


The following figure is an example of a single-cable Quantum DIO configuration.

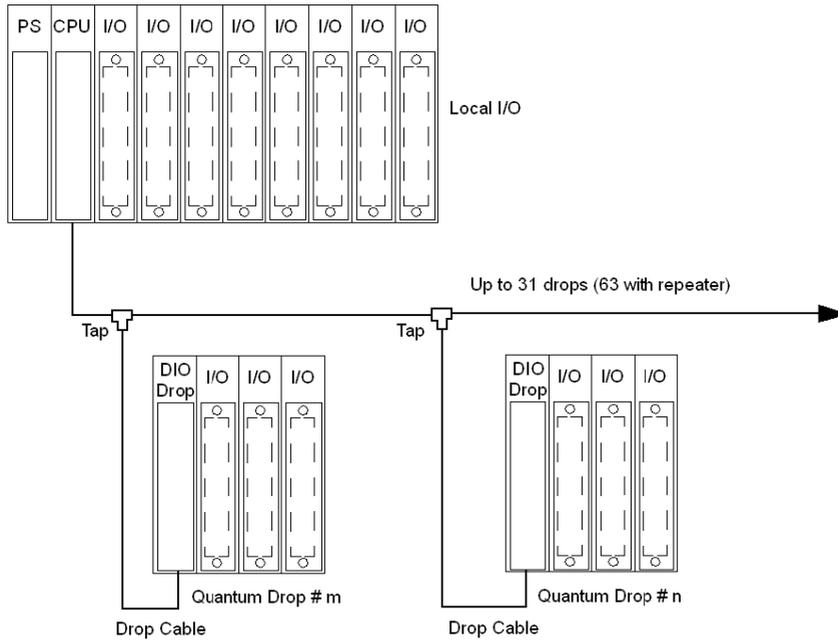

## Dual-cable Configuration

### Dual-cable DIO Configuration Figure

The following figure is an example of a dual-cable Quantum DIO configuration.

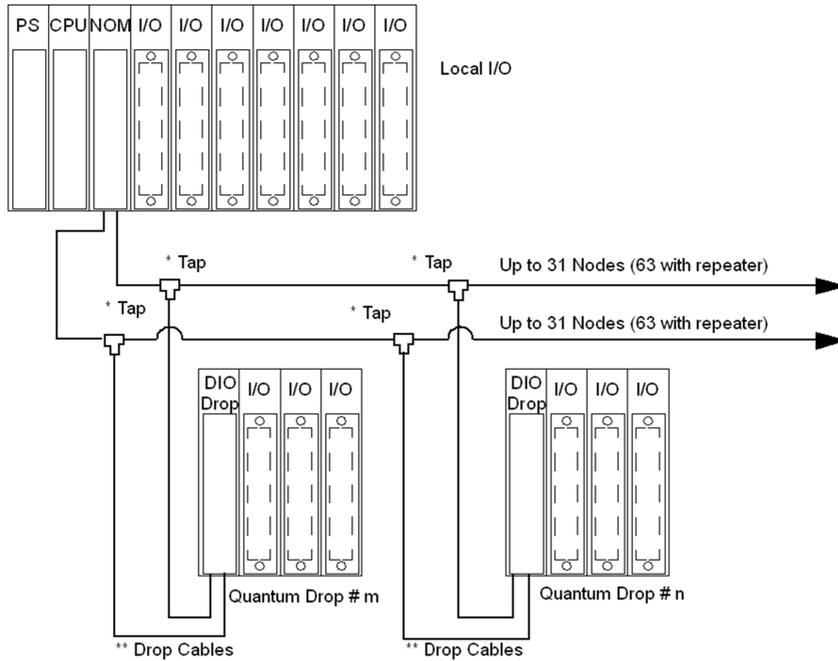

**NOTE:** Dual cables provide systems with added protection against cable breaks or damaged connectors. With two cables connected between the host and each node, no single cable break will disrupt communications.



---

# Chapter 5

## Module Configuration

---

### Purpose

This chapter provides information on software configuration of the module.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Mapping a Local Quantum I/O Station	76
Open the Parameter Configuration	78

## Mapping a Local Quantum I/O Station


### Overview


Use the following dialog to map an existing local Quantum I/O station with a new module.

### Inserting a module (local)

This table shows the steps required for inserting a module in a local station.

Step	Action
1	Call the Bus Editor
2	Mark a free slot in the local station (left mouse button)
3	Move the mouse pointer over the marked slot
4	Click on the right mouse button <b>Result:</b> A shortcut menu is opened
5	Select <b>New Device</b> <b>Result:</b> A dialog window opens that displays available modules

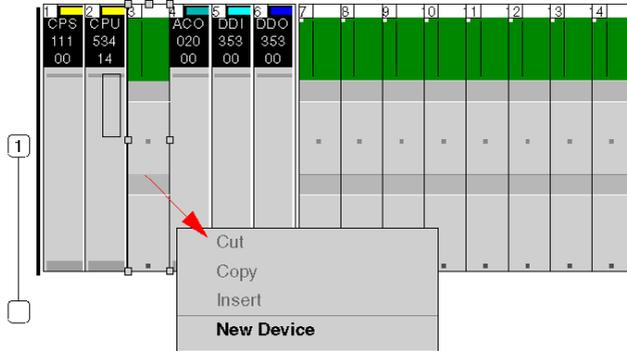

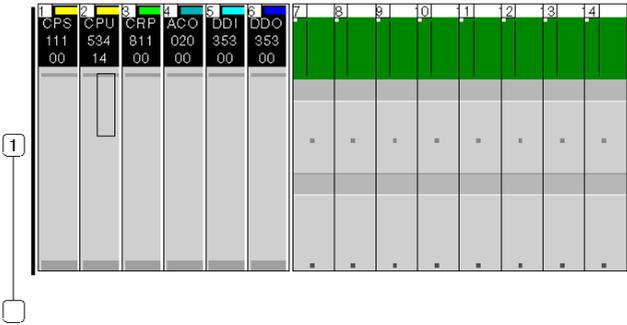Step	Action
6	<p>Select the desired module from the respective category in the Hardware catalog.  <b>Result:</b> The new module is inserted in the empty slot on the local station.</p>  <p>The diagram shows a rack with 14 slots. Slots 1 through 6 are populated with modules. Slot 1 contains a CPS 111 00 module. Slot 2 contains a CPU 534 14 module. Slot 3 contains a CRP 811 00 module. Slot 4 contains an ACO 020 00 module. Slot 5 contains a DD1 353 00 module. Slot 6 contains a DDO 353 00 module. Slots 7 through 14 are empty and highlighted in green. A callout box labeled '1' points to slot 1.</p>


## Open the Parameter Configuration

### Overview

The following dialog box enables you to call the parameter configuration for a module.  
 An explanation of the individual parameters can be found in the respective module chapters.

### Open the Parameter Configuration

This table shows the steps required to open the parameter configuration.

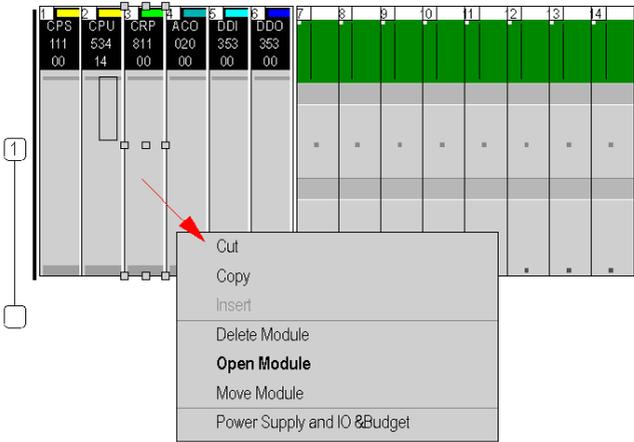Step	Action
1	Call the Bus Editor
2	Select the module
3	Click on the right mouse button <b>Result:</b> A shortcut menu is opened
	 <p>The screenshot shows a table with 14 columns representing different modules. The first six columns are labeled: CPS (111, 00), CPU (534, 14), CRP (811, 00), ACO (020, 00), DDI (353, 00), and DDO (353, 00). Columns 7 through 14 are currently empty. A context menu is open over the 'ACO' module, listing options: Cut, Copy, Insert, Delete Module, <b>Open Module</b>, Move Module, and Power Supply and IO &amp; Budget. A red arrow points to the 'Open Module' option. A box with the number '1' and a vertical line with a square at the bottom indicates the location of the right mouse button click.</p>
4	Select <b>Open Module</b> <b>Result:</b> The module opens with the parameter configuration window

---

# Chapter 6

## Hardware Installation and Maintenance

---

### Purpose

This chapter provides information on the Quantum hardware installation and maintenance.

### What Is in This Chapter?


This chapter contains the following topics:

Topic	Page
Space Requirements	80
Mounting Brackets	82
Mounting Quantum Modules	85
Mounting and Removing a Terminal Strip	88
Mounting Jumper Clips	91
Removing a Module Door	92

## Space Requirements

### Spacing Requirements Figure

The following figure shows the Quantum system spacing requirements.

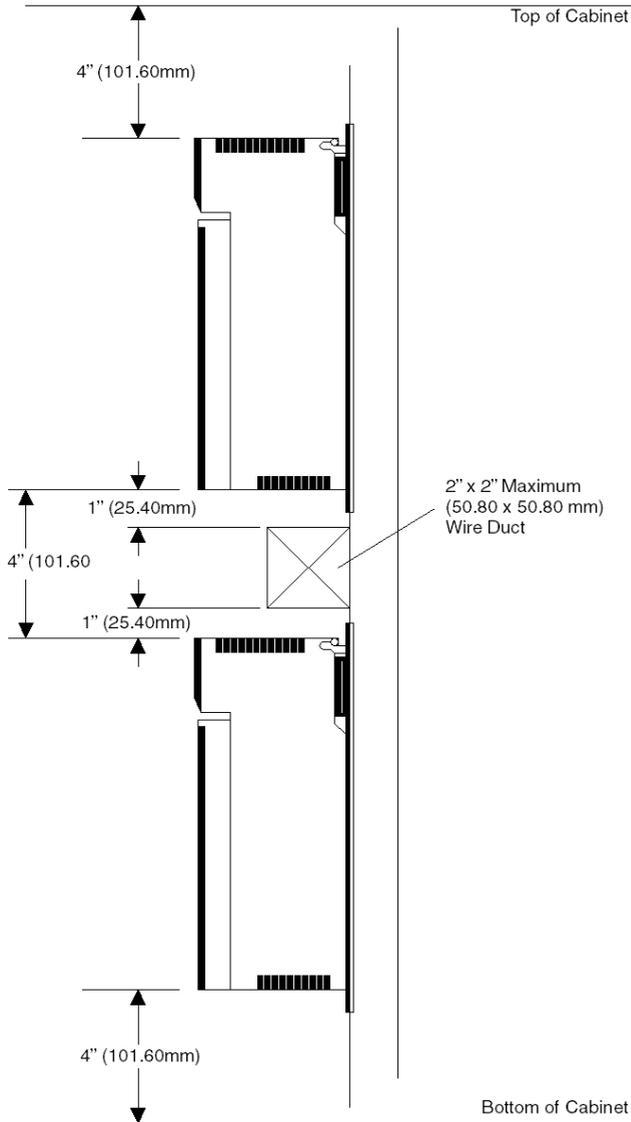

## Spacing Requirements Table

The following table gives a summary of the spacing requirements for a Quantum system.

Minimum Spacing	Location
4 in. (101.60 mm)	Between the top of the cabinet and the top of the modules in the upper rack.
4 in. (101.60 mm)	Between the bottom of the cabinet and the bottom of the lower modules in the lower rack.
4 in. (101.60 mm)	Between the upper and lower modules when the racks are mounted one above the other.
1 in. (25.40 mm)	On either side between the cabinet walls and end modules.
<p><b>Note:</b> Wiring ducts up to 2 in. x 2 in. (50.80 mm x 50.80 mm) may be centered between back planes. If the duct extends further than 2 in. (50.80 mm) out from the mounting panel, there must be a 4 in. (101.60 mm) space between the modules and duct on the top and bottom.</p>	

## WARNING

### UNEXPECTED EQUIPMENT OPERATION

Install the racks lengthways and horizontally to facilitate ventilation and take the spacing requirements table into account.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Mounting Brackets

### Overview


Mounting brackets are required when mounting racks in 19 inch NEMA cabinets. The mounting bracket supports the 2- through 10-position racks. The bracket mounts to rails using standard NEMA hardware.

Mounting brackets are offered in two sizes:

- 20 mm (0.79in) for back rail mounting
- 125 mm (4.92in) for front rail mounting

## 125 mm Mounting Bracket Figures


**NOTE:** Before installing a Quantum rack to a mounting bracket, ensure that the mounting holes of the bracket and rack are properly aligned.

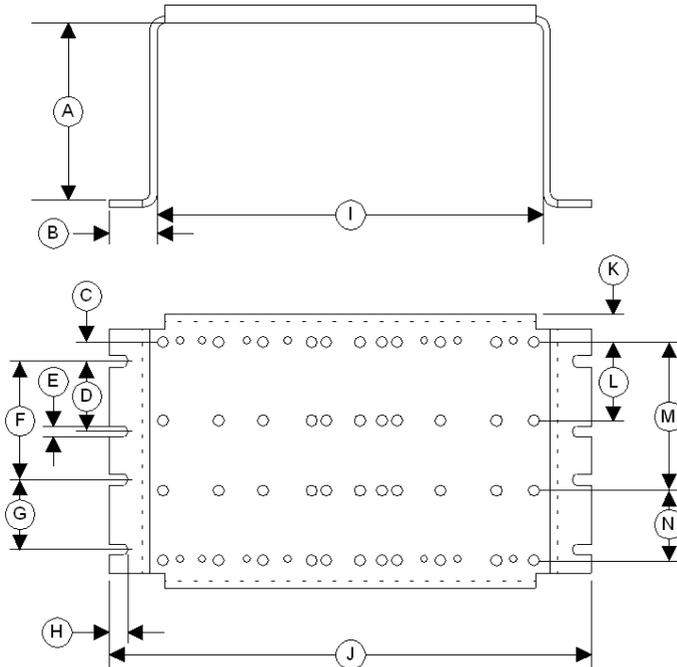

Diameter of the mounting holes: 6.6 mm / 0.26 inches

- A 125 mm (4.92 in)
- B 22.83 mm (0.90 in)
- C 17.5 mm (0.69 in)
- D 88.9 mm (3.50 in)
- E 7.1 mm (0.28 in)
- F 146.1 mm (5.75 in)
- G 88.9 mm (3.50 in)
- H 14.7 mm (0.58 in)
- I 436.6 mm (17.19 in)
- J 482.25 mm (18.99 in)
- K 20.2 mm (0.79 in)
- L 94.5 mm (3.72 in)
- M 175.5 mm (6.91 in)
- N 94.5 mm (3.72 in)

20 mm Mounting Bracket Figure

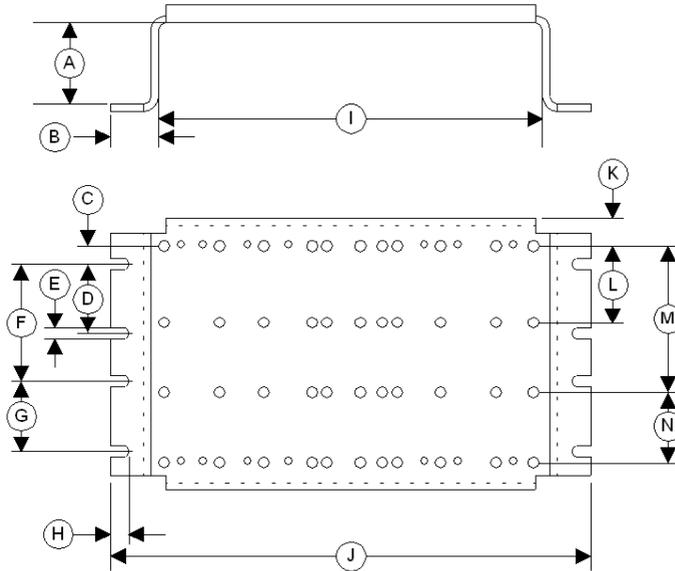

Diameter of the mounting holes: 6.6 mm / 0.26 inches

- A 20 mm (0.79 in)
- B 22.83 mm (0.90 in)
- C 17.5 mm (0.69 in)
- D 88.9 mm (3.50 in)
- E 7.1 mm (0.28 in)
- F 146.1 mm (5.75 in)
- G 88.9 mm (3.50 in)
- H 14.7 mm (0.58 in)
- I 436.6 mm (17.19 in)
- J 482.25 mm (18.99 in)
- K 20.2 mm (0.79 in)
- L 94.5 mm (3.72 in)
- M 175.5 mm (6.91 in)
- N 94.5 mm (3.72 in)

## Mounting Quantum Modules

### Overview

Quantum modules can be inserted into any slot of any rack. Although Power supply modules should be installed in the first or last slots, to have a cooling effect. The modules can be removed under power (hot swapped) without damaging modules or the rack.

Refer to the following figures and procedure when mounting modules.

**NOTE:** To provide EMC level, the mounting area of the CPU has to provide metallic contact. Therefore remove any labels in the affected area and clean the surface using solvent. The Quantum PLC enclosures and terminal strips are made of polycarbonates. This material can be damaged by strong alkalis and various hydrocarbons, esters, halogens and ketones in combination with heat. Common products containing these include detergents, PVC products, petroleum products, pesticides, disinfectants, paint removers, and spray paints. Use care in selecting and using cleaning solvents..

### CAUTION

#### POSSIBILITY OF MODULE DAMAGE

The inappropriate use of solvents, cutting oils, bug sprays and similar chemicals may cause the breakdown of module cases or terminal blocks.

**Failure to follow these instructions can result in injury or equipment damage.**

### Hot Swap Precautions

### WARNING

#### UNEXPECTED SYSTEM BEHAVIOR - CPU HOT SWAP CONSEQUENCES

Do not Hot Swap Quantum CPU.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

Unplugging and re-plugging the Quantum CPU when the rack is under power is not recommended. You are strongly advised to shut the power down before attempting to remove the CPU for any reason.

### CAUTION


#### UNINTENDED EQUIPMENT OPERATION

Hot swapping an I/O module can generate an error code causing the module to stop functioning.

**Failure to follow these instructions can result in injury or equipment damage.**




## Mounting Bracket and Rack

The following steps describe the mounting of bracket and rack

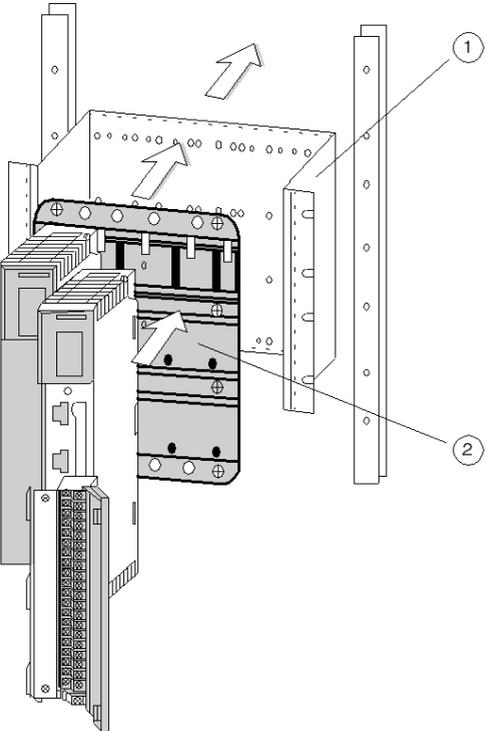Step	Action
<p>1</p>	<p>If required for the application, select and install a 20 mm or 125 mm mounting bracket to the rack using standard hardware.</p> <p>Front view:</p>  <p>1 Mounting bracket 2 Rack</p>
<p>2</p>	<p>Select and install the appropriate rack to the mounting bracket using standard hardware and remove the plastic rack connector dust covers.</p>

## Mounting a Module


The following steps describe the mounting of a module

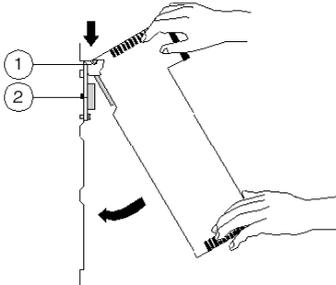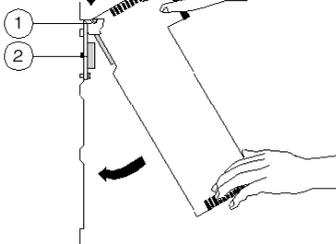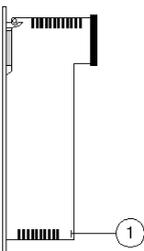Step	Illustration	Action
1	Side view: 	Mount the module at an angle on to the two hooks located near the top of the rack.
2	  1 Module Hooks 2 I/O Bus Connector	Swing the module down to make an electrical connection with the rack I/O bus connector.
3	Side view:   1 Mounting screw	Tighten the screw at the bottom of the module to fasten it to the rack. <b>Note:</b> The maximum tightening torque for this screw is 2-4 in-lbs (0.23 - 0.45 Nm).

## Mounting and Removing a Terminal Strip

### Mounting a Terminal Strip

The following steps describe the mounting of a Terminal Strip

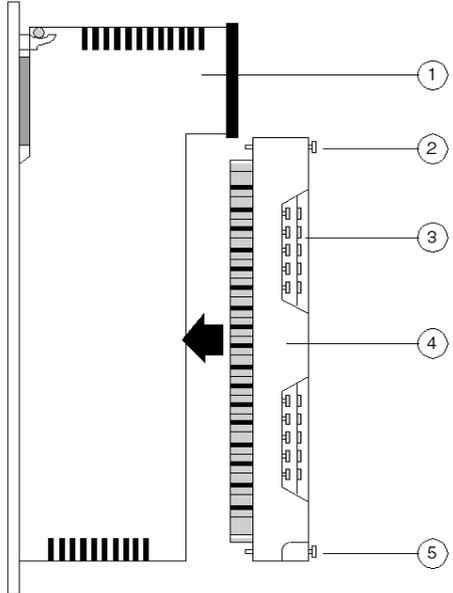Step	Action
1	<p>Install the appropriate Terminal Strip on the module. Side view:</p>  <p>1 Module 2 Mounting screw (top) 3 Terminal Strip I/O screws 4 Terminal Strip 5 Mounting screw (bottom)</p>
2	<p>Tighten with the mounting screws at the top and bottom of the terminal with a philips screwdriver. <b>Note:</b> The tightening torque must be between 0.5 Nm and 0.8 Nm.</p>
3	<p>Make I/O connections with a philips screwdriver as shown in the individual Quantum module wiring diagrams. <b>Note:</b> The tightening torque must be between 0.5 Nm and 0.8 Nm.</p>

## ***NOTICE***


### **DESTRUCTION OF ADAPTER**

- Before tightening the locknut to the torque 0.50...0.80 Nm, be sure to properly position the right-angle F adapter connector.
- During tightening, be sure to maintain the connector securely.
- Do not tighten the right-angle F adapter beyond the specified torque.

**Failure to follow these instructions can result in equipment damage.**

### Removing a Terminal Strip

The Quantum I/O terminal strips have been designed with a pry slot to assist in their removal. Follow the procedure below to remove the terminal strip.

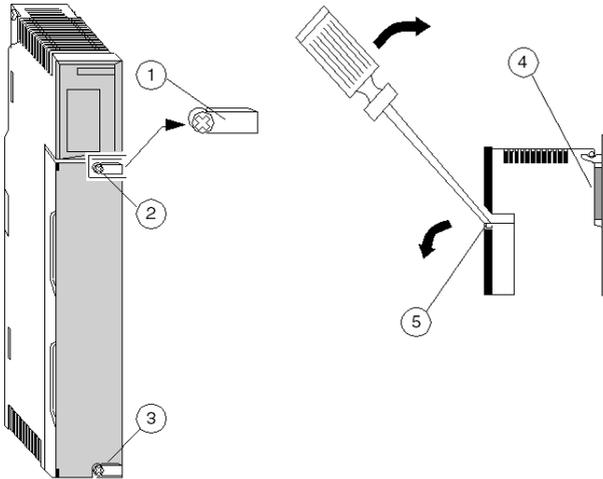Step	Action
1	Loosen the Terminal Strip mounting screws located at the top and bottom of the Terminal Strip.
2	<p>Locate the pry slot at the top of the Terminal Strip near the top mounting screw.</p>  <p>1 Pry Slot (exploded view)                  2 Mounting screw (top)                  3 Mounting screw (bottom)                  4 Rack                  5 Pry Slot (side view)</p>
3	Insert a flat edge screwdriver into the pry slot and lever the top of the Terminal Strip away from the module.
4	Once the top of the Terminal Strip has been loosened, the terminal strip may be removed by continuous outward pressure with the screwdriver.


## Mounting Jumper Clips

### Overview

Terminal strip jumper clips are installed when contiguous I/O points need to be jumpered (for example, on the 140 AVO 020 00 analog out put module).

### Mounting Jumper Clips

The following steps describe the mounting of jumper clips.

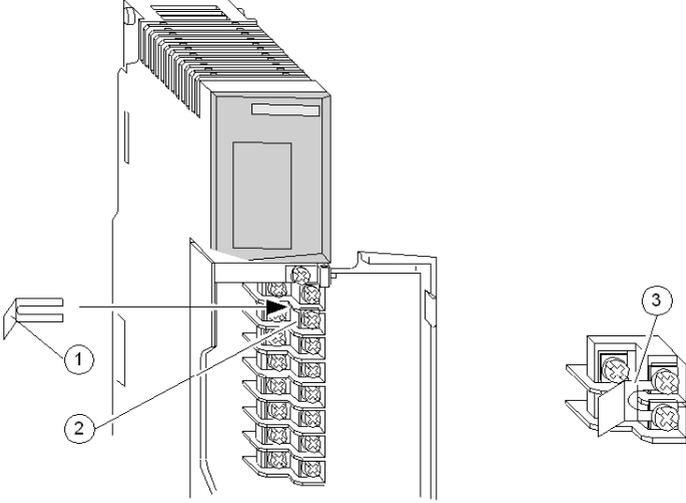
Step	Action
1	Remove the power.
2	Remove the Terminal Strip from the module. Front view:  <p>1 Jumper clip 2 Terminal Strip I/O screw 3 Inserted jumper clip (exploded view)</p>
3	Loosen the terminal strip I/O screws of the points that you want jumpered.
4	Insert the jumper clip under the loosened screws (see exploded view).
5	Tighten the screws and reinstall the module.

## Removing a Module Door

### Overview

The terminal strips have a removable door to facilitate access to the terminal strip. Remove the door before wiring a module.

### Removing a Module Door

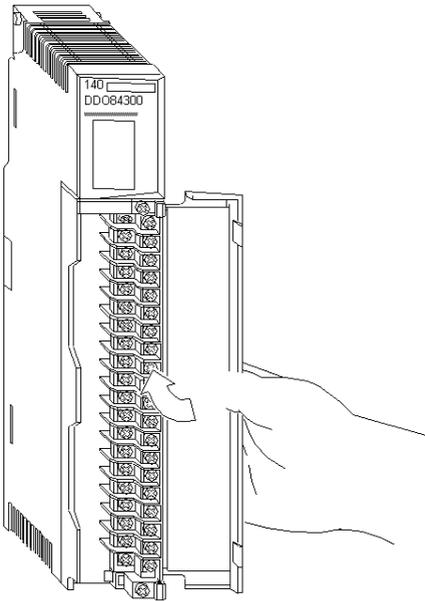Step	Action
1	Open the module door.
2	Place your thumb near the middle of the door. Front view: 
3	With your thumb, apply pressure until the door bends and the door hinge pins pop out of the retaining holes at the top and bottom of the terminal strip.
4	After wiring the module, reinstall the door using the reverse of the above.

---

# Part II

## Controller Modules (CPUs)

---

### Introduction

This part provides information on Quantum Controller Modules (CPU).

### What Is in This Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
7	General Information	95
8	Low End CPU	101
9	High End CPU	139
10	Memory Cards for High End CPU	205



---

# Chapter 7

## General Information

---

### Purpose

This chapter provides general information on Quantum Controller (CPU) modules.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
CPU Overview	96
Machine Stop Codes	97
Battery Lifetimes for the Quantum CPUs	99

## CPU Overview

### Characteristics

	CPU	Max Internal Memory	Max Additional Memory (with PCMCIA)	Key Switch
Low End	140 CPU 311 10	400 kBytes	NA	No
	140 CPU 434 12•	800 kBytes	NA	Yes
	140 CPU 534 14•	2.7 MBytes	NA	Yes
High End	140 CPU 651 50	768 kBytes	7168 kBytes	Yes
	140 CPU 651 60	1024 kBytes	7168 kBytes	Yes
	140 CPU 651 60S(Safety)	1024 kBytes	7168 kBytes	Yes
	140 CPU 652 60	3072 kBytes	7168 kBytes	Yes
	140 CPU 658 60	11264 kBytes	NA	Yes
	140 CPU 670 60 <sup>(1)</sup>	512 kBytes	7168 kBytes	Yes
	140 CPU 671 60	1024 kBytes	7168 kBytes	Yes
	140 CPU 671 60S(Safety)	1024 kBytes	7168 kBytes	Yes
	140 CPU 672 60	3072 kBytes	7168 kBytes	Yes
	140 CPU 672 61	3072 kBytes	7168 kBytes	Yes
	140 CPU 678 61	11264 kBytes	NA	Yes

**(1)** This CPU is not sold worldwide. Please contact your local sales agency and/or support for more information.

## Machine Stop Codes

### Machine Stop Code Descriptions

Stop Bit Code (hex)	Description
0x7FFF	PLC unhealthy
0x8000	PLC stopped
0x8400	CPU has stopped because the firmware of the CRP module is not compatible with the application program in which the "Online Modification in RUN" check box has been selected
0x4000	Bad I/O traffic cop
0x2000	PLC in Dim awareness
0x1000	Bad port intervention
0x0100	Software error, PLC in HALT
0x0400	CRP firmware not compatible with CCOTF function
0x0080	Watchdog timer has expired
0x0010	RIO option error
0x0001	Bad configuration

### Error Stopped Codes

- **PLC unhealthy:** This condition indicates that the CPU has not successfully completed one or more of its health diagnostics. Usually this means that the CPU needs to be replaced.
- **PLC stopped:** By itself, an 8000 hex is not an error but a CPU state. If, for example, a user issues a CPU stop command, the status register indicates 8000 hex. An error condition exists when 8000 is added with one or more of the previously defined errors (bits 0-14).
  - Example:**
    - 2 stop codes are added,
      - the 8100 stop code suggests that a PLC has stopped because of a software error detection. The controller is in halt and the application is stopped.
    - 3 stop codes are added,
      - the 8180 stop code suggests that a PLC has stopped because of a software error detection and that the watchdog timer has expired.
- **Bad I/O map:** This error occurs if the user declares more than one I/O drop in his configuration but does not have an RIO Head installed. This error may also occur if a drop configuration exceeds the maximum number of inputs/outputs allowable per drop.

- **PLC unconfigured:** Expect this condition if you are trying to log into the CPU for the first time. This error indicates that the CPU has not been configured. Write a configuration offline and transfer it to the CPU prior to logging into the CPU. If this error appears while you are seeking to communicate with a previously running CPU, this could indicate corrupted state memory in the CPU. You need to clear memory and attempt to reload the user logic program.
- **Bad modbus port intervention:** This error sometimes appears in conjunction with another error. The CPU is usually stopped when this error occurs. The error may also appear if you attempt to clear the system stop state. Try to clear user logic and reload.
- **Software error, PLC in HALT:** This error is usually caused by an incomplete or unsuccessful program load. Try to reload.
- **Watchdog timer has expired:** The error indicates that the CPU has taken too much time to complete its current scan. You may increase the Watchdog timer value. This error may indicate that the CPU is inoperable..
- **RIO option error:** The RIO option board (140 CRP 93• 00) is unhealthy. Replace the board. An error 8010 means that the CPU has stopped because RIO option board has to be replaced (unhealthy).
- **Bad configuration:** The most probable cause is that the memory has been modified through the MODBUS/MODBUS PLUS ports. If this error occurs during a program download, check your configuration data for values greater than the CPU's specified addressable range. This error can also appear if the CPU's memory is corrupt.

**NOTE:** The user can access the Stop codes and the sub Stop codes with the LCD keypad, available only with High-End processors, by selecting **System info -> Stop codes**.

If the sub Stop code is included between:

- 50 and 98, the machine stopped because of a Traffic Cop error..
- 101 and 137, the machine stopped because of an error of Peer cop.

You can see, in the words %SW124 and %SW125, information if it is a system error and the last default detected.

### HALT state causes

The causes of the HALT state are saved in the system words: %SW125, %SW126 and %SW127. When the PLC is in HALT mode, the application is no longer executed, the IO are no longer applied.

To quit the HALT state, the user must either initialize or reload the application into the PLC.

## Battery Lifetimes for the Quantum CPUs

### Purpose

The purpose of this document is to give detailed informations about the lifetime of batteries inside the Quantum CPUs. The estimation of these lifetimes are based on data from components manufacturers.

### Scope

The lifetime information is estimated for:

- Two ambient temperatures for the PLC location:
  - Typical lifetime value at 25°C,
  - Minimum lifetime value at 60°C.
- Three different usage cases of the CPU: 92%, 66% and 33% of PLC power-up time. These values are for the following customer configurations:
  - 92%: PLC powered up all year long except during one month of maintenance,
  - 66%: PLC powered up all year long except during all weekends plus one month of maintenance,
  - 33%: PLC powered up all year long 12 hours a day, except during all weekends plus one month of maintenance.

### CPU Battery Lifetime

The table below presents the lifetime of CPU battery:

Power-up time	92%		66%		33%	
	Typical	Minimum	Typical	Minimum	Typical	Minimum
Lifetime in Years	27.1	10.4	11.0	4.0	6.4	2.70

### Minimum Lifetimes of the CPU Battery, in a Powered Down PLC

In a powered down PLC, the minimum lifetimes of the main battery is **1.5 years** at 60 °C and **4.6 years** at 25 °C.



---

# Chapter 8

## Low End CPU

---

### Purpose

This chapter provides information on the Low End Controller modules.

### What Is in This Chapter?


This chapter contains the following topics:

Topic	Page
Presentation	102
Front Panel Switches	103
Rear Panel Switches	106
Key Switches	107
Modbus Connectors	111
Indicators	113
Processor Configuration Screen	116
140 CPU 311 10 Specifications	126
140 CPU 434 12A/U Specifications	129
140 CPU 534 14A/U Specifications	132
140 CPU 534 14B/U Specifications	135

## Presentation

### Illustration


The following figure shows the Low End CPU module and its components.

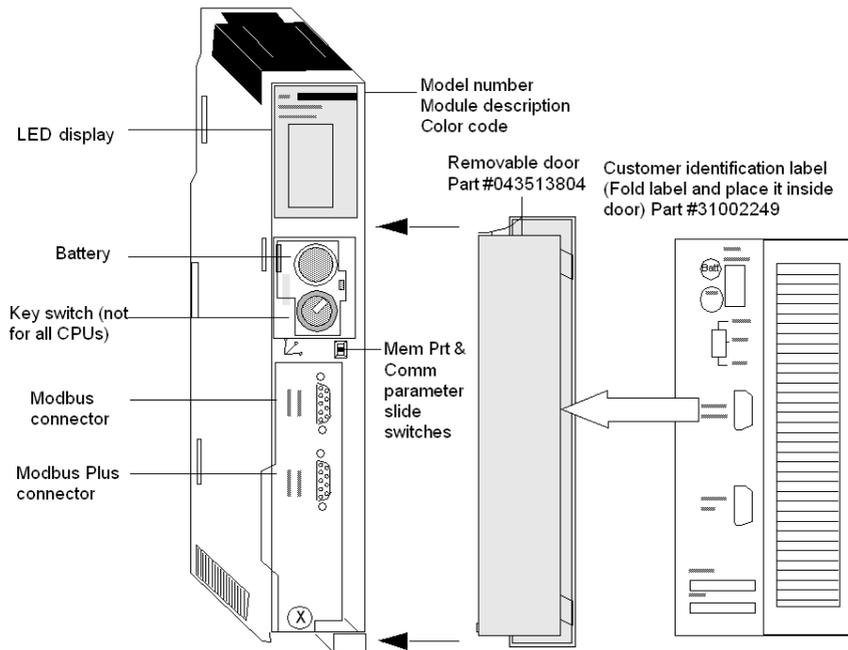

## Front Panel Switches

### Front Panel Switches

Two three-position slide switches are located on the front of the CPU. The left switch is used for memory protection when in the top position and no memory protection in the middle and bottom positions. The switch on the right is used to select the Comm parameter settings for the Modbus (RS-232) ports.

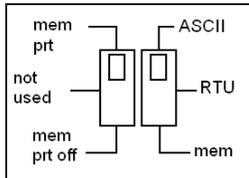

**NOTE:** The memory switch selection is taken into account immediately.

**NOTE:** The modbus switch selection is taken into account after a Power off/on of the Quantum PLC

## **WARNING**

### **UNINTENDED EQUIPMENT OPERATION**

Do not allow an automatic backup restore upon cycling power to the PLC. The backup restore function reloads in the PLC memory the version saved on the memory card, that can be different than the one that was running before the power off.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### ASCII Comm Port Parameters Table

Setting the right slide switch to the top position assigns ASCII functionality to the port. The following ASCII Comm parameters are preset and cannot be changed:

ASCII Comm Port Parameters	
Transmission Speed (Baud)	2,400
Parity	Even
Data Bits	7
Stop Bits	1
Device Address	Rear panel rotary switch setting

**NOTE:** The CPU hardware defaults to bridge mode when the right slide switch is set to RTU mode. When networking controllers, a panel device connected to the CPU Modbus port can communicate with the controller to which it is connected, as well as log into any nodes on the Modbus Plus network.

### RTU Comm Port Parameters

Setting the right slide switch to the middle position assigns remote terminal unit (RTU) functionality to the port; the following comm parameters are set and cannot be changed.

RTU Comm Port Parameters	
Transmission Speed (Baud)	9,600
Parity	Even
Data Bits	8
Stop Bits	1
Device Address	Rear panel rotary switch setting

### Valid Comm Port Parameters Table

Setting the right slide switch to the bottom position gives you the ability to assign comm parameters to the port in software. The following parameters are valid.

Item	Valid Comm Port Parameters
Mode	ASCII or RTU
Transmission Speed (Baud)	19,200
	9,600
	7,200
	4,800
	3,600
	2,400
	2,000
	1,800
	1,200
	600
	300
	150
	134.5
	110
	75
50	
Data Bits	ASCII: 7 Bit
	RTU: 8 Bit
Stop Bits	1 / 2
Parity	Enable/Disable Odd/Even
Device Address	1 ... 247

## Rear Panel Switches

### Rear Panel Switches


Two rotary switches (refer to the illustration and table below) are located on the rear panel of the CPU. They are used for setting the Modbus Plus node and Modbus port addresses.

**NOTE:** The highest address that may be set with these switches is 64.

SW1 (the top switch) sets the upper digit (tens) of the address; SW2 (the bottom switch) sets the lower digit (ones) of the address. The illustration below shows the correct setting for an example address of 13.

### SW1 and SW2 Switches Figure

The following figure shows the SW1 and SW2 settings.

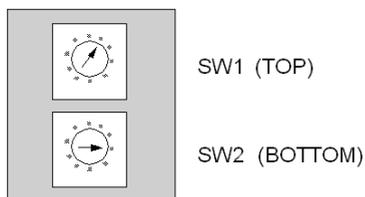

### SW1 and SW2 Address Settings Table

The following table shows the SW1 and SW2 address settings.

Node Address	SW1	SW2
1 ... 9	0	1 ... 9
10 ... 19	1	0 ... 9
20 ... 29	2	0 ... 9
30 ... 39	3	0 ... 9
40 ... 49	4	0 ... 9
50 ... 59	5	0 ... 9
60 ... 64	6	0 ... 4

**NOTE:** If "0" or an address greater than 64 is selected, the Modbus + LED will be "on" steady, to indicate the selection of an invalid address.

## Key Switches

### Overview

The low end CPUs have 1,435 kb of Flash EPROM memory, which can be used to save the program and the variables' initial values. On power-up, if there is a program in Flash memory, you can choose one of three operating modes, using the PLC MEM switch on the CPU's front panel. The 140 CPU 434 12A and 140 CPU 534 12A are equipped with a key switch with the Start, Mem Prt, and Stop positions. The 140 CPU 311 10 features a slide switch with the Mem Prt On, Not Used, and Mem Prt Off options.

### Behavior on Power Up

The CPU's behavior on power up is determined by the key switch position. The behavior could be:

- Cold Restart
- Warm Restart

## WARNING

### UNEXPECTED EQUIPMENT OPERATION

Always perform a **Back Up Clear** after an OS upgrade of the Quantum (140 CPU 534 \*, 140 CPU 434 14A, 140 CPU 311 10) CPUs.


**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

**NOTE:** To ensure a warm restart of an application following an OS upgrade on Quantum CPUs, click **PLC** → **Project Backup...** → **Backup Clear**.

This section describes the three positions of the rotary key switch, and their respective meanings.

### Key Switch Figure

The key switch isolates memory from programming changes while the controller is in operation. The following figure shows the key switch.

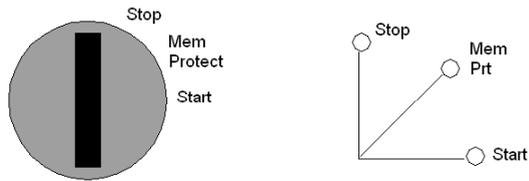

**NOTE:** The key switch positions shown next to the left switch (above) are provided for reference only, and are marked on the module as indicated on the right.

**NOTE:** The 140 CPU 434 12A and 140 CPU 534 12A processors feature the key switch illustrated above, while the 140 CPU 311 10 has a slide switch.

## Key Switch Description Tables

The following table provides key/slider switch information for these three low end CPUs.

CPU Type	Switch Position	Behaviour	Protected?	Accepts Stop or Start?	Key Switch Transition
<b>Quantum 140 CPU 311 10</b>	Mem Prt On	The application in Flash memory is not transferred to internal RAM; a warm restart of the application is triggered.	Y	N	From Mem Prt Off: does not modify last controller state and rejects programmer changes.
	Not used	Do not use this position, because it may lead to undefined operation	Y	N	n/a
	Mem Prt Off	The application in Flash memory is automatically transferred to internal RAM when the PLC is powered up. A cold restart of the application is triggered.	N	Y	From Mem Prt On : enables programmer changes and starts controller if stopped.
<b>Quantum 140 CPU 434 12A 140 CPU 534 14A</b>	Stop	The application in Flash memory is not transferred to internal RAM; a warm restart of the application is triggered.	Y	N	From Start or Mem Prt: stops controller, if running, and voids programmer changes.
	Mem Prt	The application in Flash memory is not transferred to internal RAM. A warm restart of the application is triggered.	Y	N	From Stop or Start: inhibits program changes, controller run status is unchanged.
	Start	The application in Flash memory is automatically transferred to internal RAM when the PLC is powered up. A cold restart of the application is triggered.	N	Y	From Stop: enables programmer changes, starts controller. From Mem Prt: accepts programmer changes, starts controller if stopped.

The following table provides information on switch position for low end Quantum 140 CPUs with firmware < 3.2:

Operation	Switch Position		
	Stop	Mem Protect	Start
Programming mode	Allowed	Allowed	Allowed
Monitoring mode	Allowed	Allowed	Allowed
Upload application	Allowed	Allowed	Allowed
Download, online modification	Allowed	Forbidden	Allowed
Stop command from Control Expert	–	Forbidden	Allowed
Run command from Control Expert	Forbidden	Forbidden	Allowed
Init command from Control Expert	Allowed	Allowed	Allowed

The following table provides information on switch position for low end Quantum 140 CPUs with firmware ≥ 3.2:

Operation	Switch Position		
	Stop	Mem Protect	Start
Programming mode	Allowed <sup>(1)</sup>	Forbidden	Allowed <sup>(1)</sup>
Monitoring mode	Allowed <sup>(1)</sup>	Allowed <sup>(1)</sup>	Allowed <sup>(1)</sup>
Upload application	Allowed <sup>(1)</sup>	Forbidden	Allowed <sup>(1)</sup>
Download, online modification	Allowed <sup>(1)</sup>	Forbidden	Allowed <sup>(1)</sup>
Stop command from Control Expert	–	Forbidden	Allowed <sup>(1)</sup>
Run command from Control Expert	Forbidden	Forbidden	Allowed <sup>(1)</sup>
Init command from Control Expert	Forbidden	Forbidden	Allowed <sup>(1)</sup>
(1): Password-protected if a password has been defined in Control Expert application			

## Modbus Connectors

### Modbus Connector Pinouts


Quantum CPUs are equipped with a nine-pin RS-232C connector that supports Schneider Electric's proprietary Modbus communication protocol. The following is the Modbus port pinout connections for nine-pin and 25-pin connections.

Modbus Port 1 has full modem interfacing capabilities Modbus Port 2 RTS/CTS connections function properly for normal non-modem communications but do not support modems.

**NOTE:** Although the Modbus ports electrically support existing Modbus cables, it is recommended that a Modbus programming cable (Part # 990 NAA 263 20 or 990 NAA 263 50) be used. This cable has been designed to fit under the door of a Quantum CPU or NOM module.

### Modbus Ports Pinout Connections Figure

The following figure shows the Modbus port pinout connections for nine-pin and 25-pin connections.

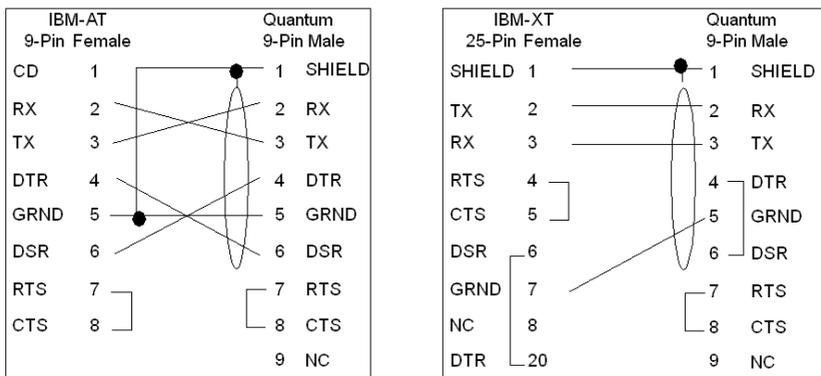


The following is the abbreviation key for the above figure.

TX: Transmitted Data	DTR: Data Terminal Ready
RX: Received Data	CTS: Clear to Send
RTS: Request to Send	NC: No Connection
DSR: Data Set Ready	CD: Carrier Detect

### Modbus Ports Pinout Connections for Portable Computers


The following figure shows the Modbus port pinout connections for 9-pin portable computers.

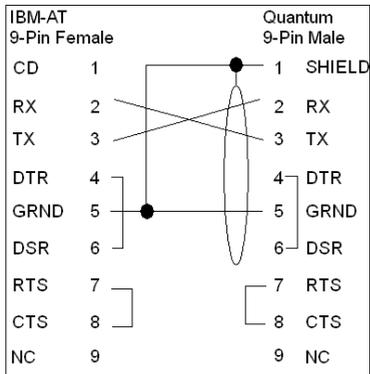

## Indicators

### Illustration

The following figure shows the LED indicators.

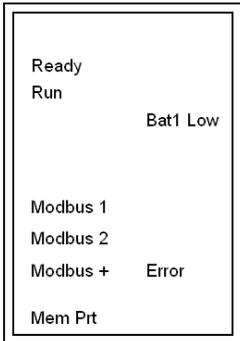

### Description

The following table shows the LED description for the LE-CPU modules.

LEDs	Color	Indication when On
Ready	Green	The CPU has passed powerup diagnostics.
Run	Green	The CPU has been started and is solving logic. (See the following table for <i>Run LED Error Codes</i> , <a href="#">page 114</a> ).
Modbus 1	Green	Communications are active on the Modbus port 1.
Modbus 2	Green	Communications are active on the Modbus port 2.
Modbus +	Green	Communications are active on the Modbus Plus port.
Mem Prt	Amber	Memory is write protected (the memory protect switch is on).
Bat 1 Low	Red	The battery needs replacing.
Error	Red	Indicates an communications error on the Modbus Plus port.

### Run LED Error Codes

The following table shows the Run LED error codes for the LE-CPU modules.

Number of Blinks	Code	Error
Continuous	0000	requested kernel mode
2	80B	ram error during sizing
	80C	run output active error
	82E	MB command handler stack error
3	769	bus grant received
	72A	not master asic on cpu
	72B	master config write bad
	72C	quantum bus DPM write error
	72F	plc asic loopback test
	730	plc asic BAD_DATA

Number of Blinks	Code	Error
4	604	UPI timeout error
	605	bad UPI response opcode
	606	UPI bus diagnostic error
	607	modbus cmd-buffer overflow
	608	modbus cmd-length is zero
	609	modbus abort command error
	614	mbp bus interface error
	615	bad mbp response opcode
	616	timeout waiting for mbp
	617	mbp out of synchronization
	618	mbp invalid path
	619	page 0 not paragraph aligned
	61E	bad external uart hardware
	61F	bad external uart interrupt
	620	bad receive comm state
	621	bad transmit comm state
	622	bad comm state trn_asc
	623	bad comm state trn_rtu
	624	bad comm state rcv_rtu
	625	bad comm state rcv_asc
	626	bad modbus state tmr0_evt
	627	bad modbus state trn-int
	628	bad modbus state rcv-int
631	bad interrupt	
5	503	ram address test error
	52D	P.O.S.T BAD MPU ERROR
6	402	ram data test error
7	300	EXEC not loaded
	301	EXEC Checksum
8	8001	Kernal prom checksum error
	8002	flash prog / erase error
	8003	unexpected executive return

**NOTE:** Information in the Code column is visible only with the Flash download utility.

## Processor Configuration Screen


### Overview

There are the following possibilities to configure the Quantum LE-CPU:

- Base configuration (*see page 116*), including Modbus Ports
- Configuration of the communication type (*see page 125*)

### Base configuration

Steps to base configuration, including Modbus Ports

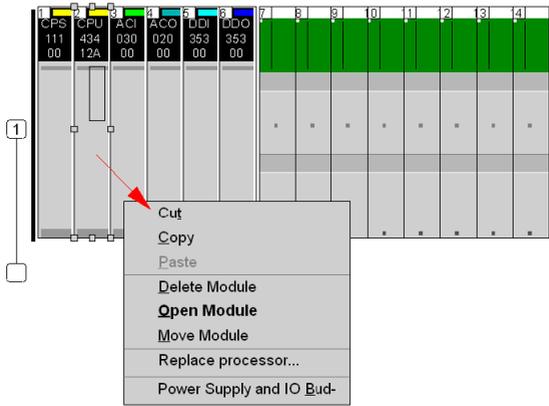
Step	Action
1	Open the Bus Editor of Control Expert
2	Select the CPU module
3	<p>Click the right mouse button  <b>Result:</b> The context menu appears</p> 
4	<p>Choose <b>Open Module</b>  <b>Result:</b> The module opens with the <b>Summary</b> tab</p>
5	<p>Choose one of the tabs:</p> <ul style="list-style-type: none"> <li>● Overview (<i>see page 117</i>)</li> <li>● Summary (<i>see page 117</i>)</li> <li>● <b>Configuration</b> (<i>see page 118</i>)</li> <li>● <b>Modbus Port</b> (<i>see page 121</i>)</li> <li>● Animation (<i>see page 122</i>)</li> <li>● I/O object (<i>see page 122</i>)</li> </ul> <p>The tabs with configuration features are in bold type.</p>

## Overview

This screen contains the specification of the module, extracted from the Quantum Hardware Reference Guide.

## Summary

Summary Screen:

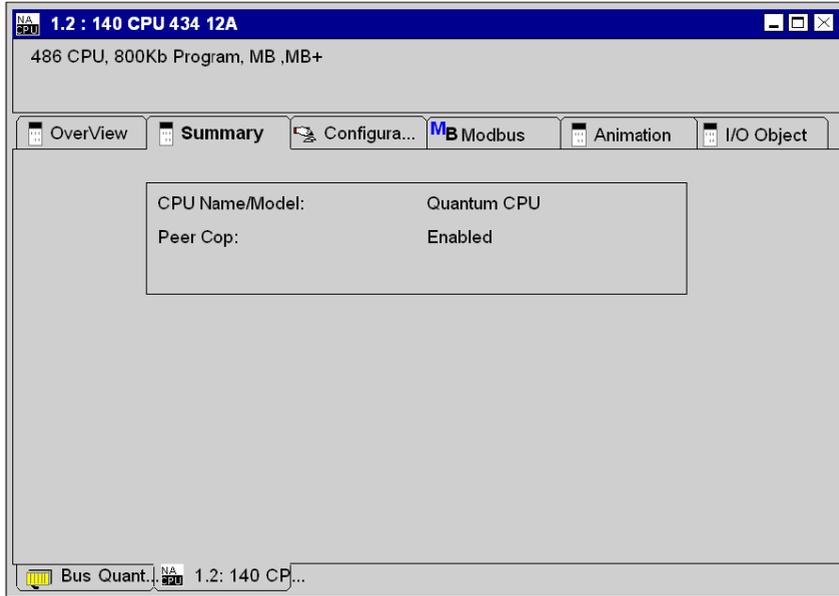


Description of the Summary Screen:

Item	Detail	Option/Value	Description
CPU Name/Model:	Quantum CPU		
Peer Cop:	Disabled	Enabled	Peer Cop=Enabled only possible in combination with NOM
	Time:	.....	

## Configuration

Configuration Screen:

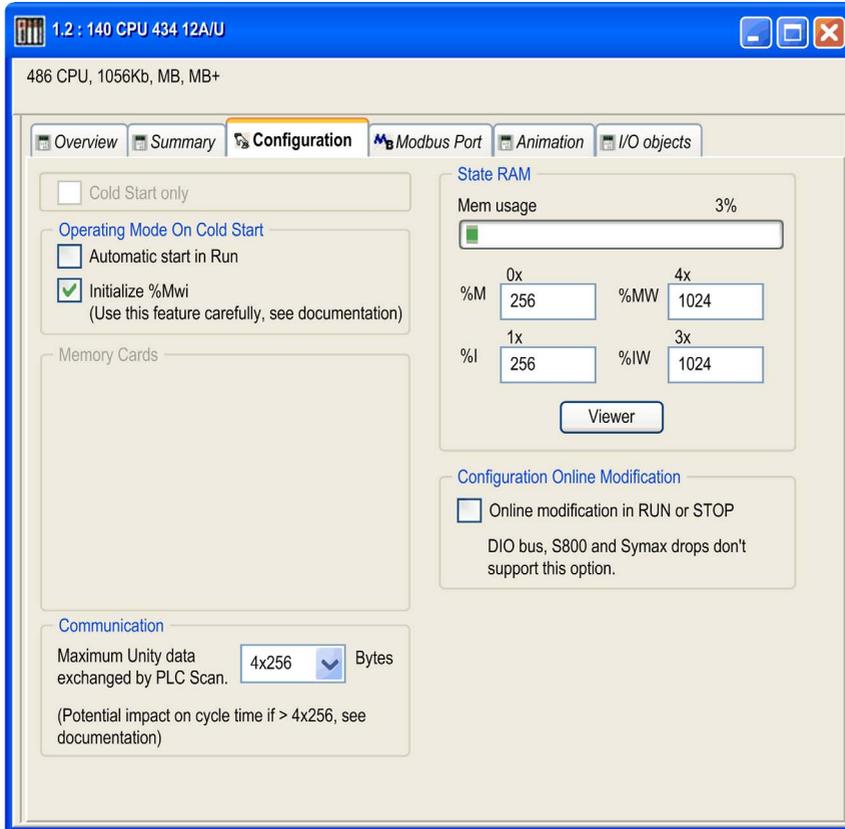

Description of the Configuration Screen:

Item	Option	Value	Description
Cold Start Only		x	If you wish, enable the Cold Start Only feature.
Operating Mode On Cold Start	Automatic start in Run	x	Determines the operating condition during Cold Start
	Initialize %Mwi	x	
<p>(1) The value is expressed as a percentage and displayed on the scale.                  (2) Enter the appropriate values.</p>			


Item	Option	Value	Description
Communication	By default, the bandwidth is 4x256 bytes, supported by the OS versions prior to V2.80 for the CPU and V4.60 for the NOE.		The maximum data volume exchanged each cycle between the NOE and CPU modules.
	For Quantum processors: <ul style="list-style-type: none"> <li>● 140 CPU 311 10</li> <li>● 140 CPU 534 14</li> <li>● 140 CPU 434 12</li> </ul>	4x256 4x1024	
State RAM	Mem usage	(1)	A bar displays percent of memory used.
	%M-0x	(2)	Size of the different memory areas <b>Note:</b> The values for %IW and %MW have to be divisible by 8.
	%MW-4x	(2)	
	%I-1x	(2)	
	%IW-3x	(2)	
Viewer	N/A	Opens the State RAM Viewer tab, which displays the allocation of used memory. (See the illustration following.)	
Configuration Online Modification	Online modification in RUN or STOP	x	This check box allows you to: <ul style="list-style-type: none"> <li>● Add or delete discrete or analog modules,</li> <li>● Modify Parameters</li> </ul> <b>NOTE:</b> These modifications can be done in RUN.
<p>(1) The value is expressed as a percentage and displayed on the scale.  (2) Enter the appropriate values.</p>			

For Quantum 140 CPU 3••, 140 CPU 4•• and 140 CPU 5•• the %MWi value is as follows:

		Power ON: without cold start	Power ON: with cold start
Initialize %MWi box	Unselected	%MWi keep their value	%MWi keep their value
	Selected		%MWi take their initial value

**NOTE:** %MWi resets with cold start %S0 or a programload. Cold start is typically after a program load, %S0 can be set with the user program to initiate a cold start.

Button to show the allocation of the used memory

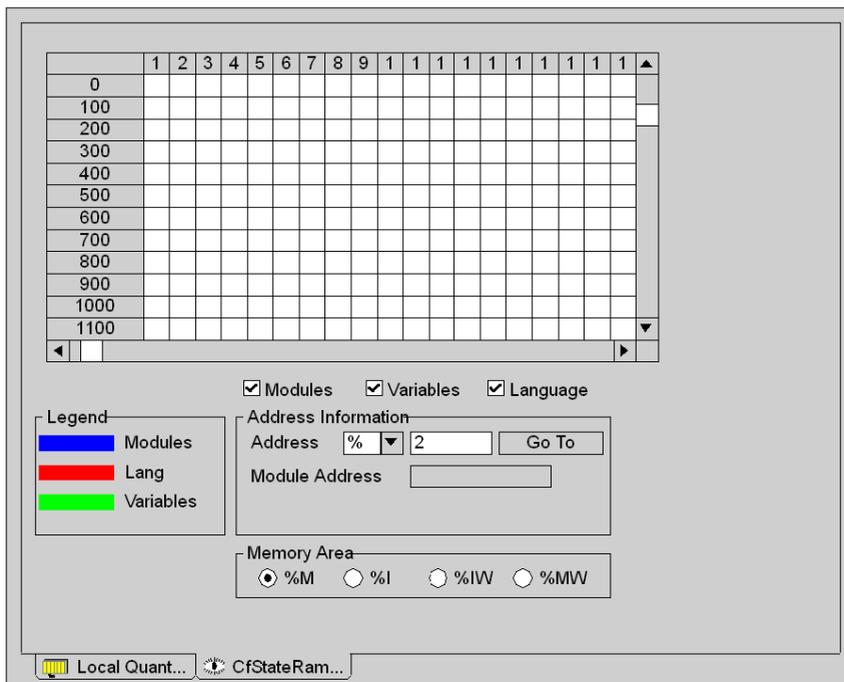

**NOTE:** The state ram viewer can be directly accessible via the menu:


- **PLC → State Ram Viewer**

The content of the grid may be changed by setting the following two filters:

1. Memory user
  - Modules
  - Language
  - Variables
2. Memory area
  - %M
  - %I
  - %IW
  - %MW

## Modbus Port

Modbus Port Screen:

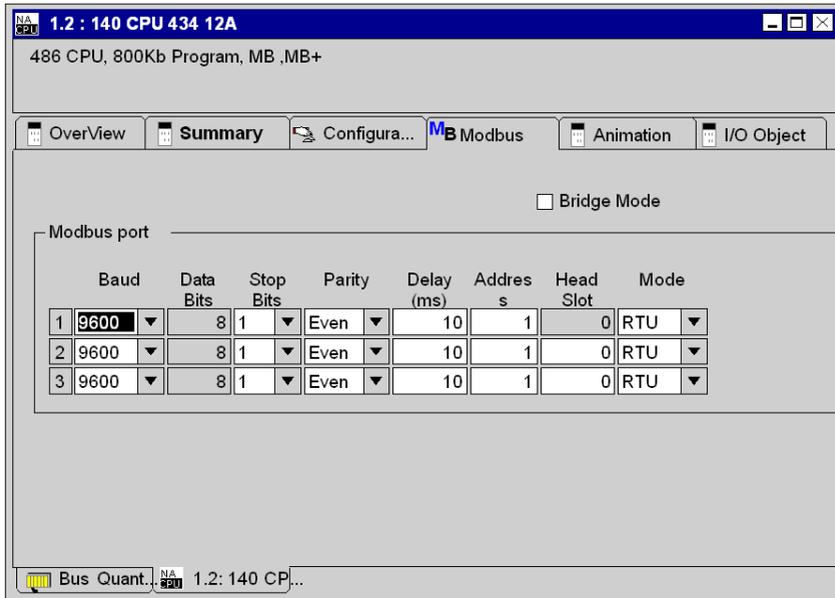

Description of the Modbus Port Screen:

Item	Detail	Option/Value	Description
Modbus port			
Baud	9600	50-19200 kBit/s	These data must be specified for every Link separately
Data Bits	8	7 when ASCII mode is selected	
Stop Bits	1	2	
Parity	EVEN	ODD, NONE	
Delay (ms)	10 ms	10..1000 in 10 ms increments	
Address	1	1..247	
Head Slot	0	1..16	
Mode	RTU	ASCII	

**Bridge Mode** must be checked if you are making a network link between Modbus and Modbus Plus.


## Animation

Based on the animation window, there are the following windows, accessible by tabs:

- Task
- Realtime clock
- Information

**NOTE:** The windows are depicted in offline mode. Connected with a PLC their appearances change.


Animation Screen (Task):

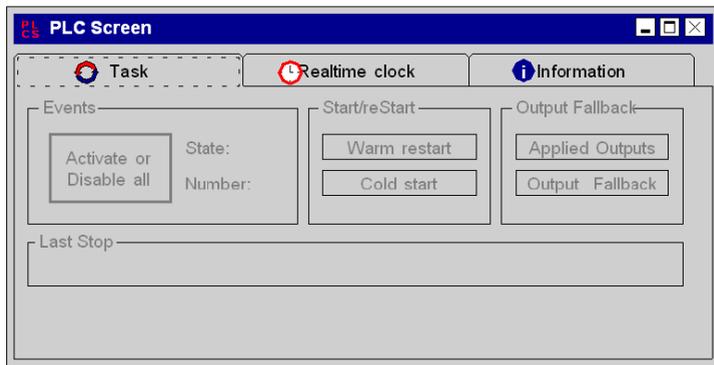

Description of the Animation Screen (Task):

Item	Detail	Option/Value	Description
Events	State:	...	Online available Status information of events
	Number:	...	
Start/reStart	Activate or Disable all		Button to control the events
	Warm Start		
Output fallback	Cold Start		
	Applied Outputs		Specifies the output behavior
Output Fallback			
Last Stop		.../.../...	


Animation Screen (Realtime clock):

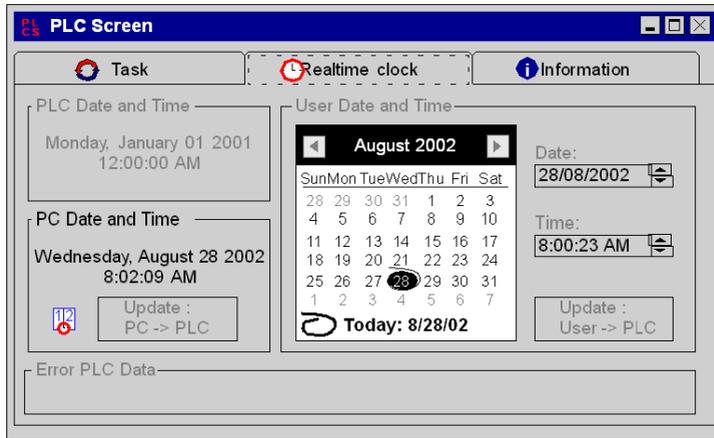

Description of the Animation Screen (Realtime clock):

Item	Detail	Description
PLC Date and Time		Indication of the current PLC date and time
PC Date and Time	Update PC->PLC	To update the PLC with the PC system time
User Date and Time	Update User->PLC	To update the PLC with the time set by the user

Animation Screen (Information):

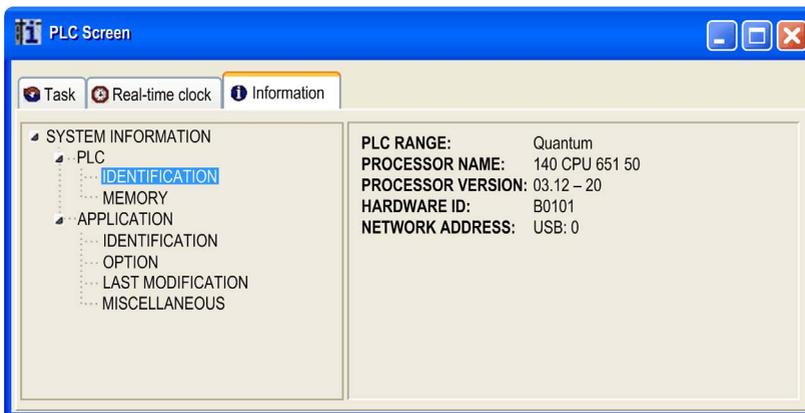

Description of the Animation Screen (Information):


Item	Detail	Option/Value	Description
System Information	PLC / Identification	PLC Range Processor Name Processor Version Hardware ID Network address	Only Online available
	PLC / Memory	RAM CPU	
	Application / Identification	Name Creation Product Date Modification Product Date Version Signature	
	Application / Option	Empty Terminal Support Upload Information Comments Animation Table Global Protection Section Protection Application Diagnostic Forced Bits	

**I/O Object**

The I/O objects tab is used to associate variables with the module I/Os and to manage these different variables. This tab is described in *I/O Management (see EcoStruxure™ Control Expert, Operating Modes)*.

### Configuration of the communication type

Steps to configuration of the communication type

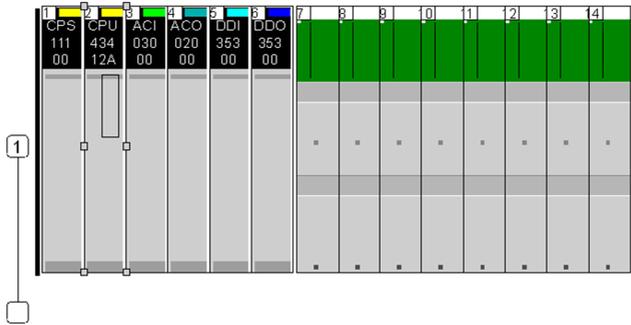Step	Action
1	Open the Bus Editor of Control Expert
2	<p>Move the mouse over the rectangle of the CPU module</p> <p><b>Result:</b> The mouse pointer changes to a hand</p>  <p>The screenshot shows a software interface with a grid of modules. The first six columns are labeled CPS, CPU, ACI, ACO, DDI, and DDO. The CPU module has values 111, 434, 030, 020, 353, and 353. The CPU module is highlighted with a hand cursor. To the right, there are columns numbered 7 through 14, each containing a small square icon. A box with the number '1' and a line points to the CPU module.</p>
3	<p>Double-click.</p> <p><b>Result:</b> A subdialog appears</p>
4	<p>Choose one of the following options:</p> <ul style="list-style-type: none"> <li>● None</li> <li>● DIO bus</li> <li>● Peer Cop</li> </ul>

## 140 CPU 311 10 Specifications

### General Specifications

Communication ports	2 Modbus (RS-232) 1 Modbus Plus (RS-485)
Bus current required	1250 mA
Max. number of NOM, NOC, NOE, PTQ PDP MV1 and MMS modules supported (any combination)	2
Key switch	No

### Processor

Model	Intel 486
Math processor	No
Watchdog timer	250 ms S/W adjustable

### Memory

Internal memory (max.)	548 k
------------------------	-------

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (*see EcoStruxure™ Control Expert, Operating Modes*).

### Reference Capacity

Discretes	51712
Registers	9672

### Local I/O

Max. I/O words	unlimited I/O
Max. I/O racks	2

## S908 Remote I/O

Max. I/O words per drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

## Ethernet Remote I/O

Not supported

## Distributed I/O

Number of networks per system	1 (3**)
Max. words per network	500 IN and 500 OUT For every DIO drop, there is a minimum of two words input of overhead
Max. words per node	30 in / 32 out
Max. number of DIO drops per network	64
** Requires the use of the 140 NOM 21• 00 option module.	

## Change Configuration On The Fly (CCOTF)

Not supported

## Battery and Clock

Type	3 V Lithium
Service life	1200 mAh
Shelf life	10 years with 0.5% loss of capacity per year
Battery load current @ power-off	typical: 5 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 110 $\mu$ A @ 60 °C
TOD clock	+/- 8.0 s/day @ 0...60 °C

**Diagnostics**

Power-up	RAM RAM address Executive checksum User logic check Processor
Run time	RAM RAM address Executive checksum User logic check

## 140 CPU 434 12A/U Specifications

### General Specifications

- **140 CPU 434 12U**  
This module is the version of the controller that is managed with Control Expert programming software.  
**NOTE:** You can use only Control Expert software to program the 140 CPU 434 12U controller.  
**NOTE:** The 140 CPU 434 12U controller is not compatible with Hot Standby topologies.
- **140 CPU 434 12A**  
This module is functionally identical to the non-A version. However, the following must be considered:
  - If you are using the module in a Hot Standby topology, then you must use either two non-"A" models or two A models.
  - The A version has a unique flash executive.  
**NOTE:** The "A" version and non-"A" flash executives are not interchangeable.
  - Schneider Electric software (Concept, ProWORX, and Modsoft) supports the "A" version. Any existing or new 140 CPU 434 12 program configuration will load into a 140 CPU 434 12A without any modifications.  
**NOTE:** You can flash the "A" version with the executive of the "U" version to become compatible with the Control Expert software.  
**NOTE:** A 140 CPU 434 12A flashed with the executive of the "U" version is not compatible with Hot Standby topologies.

Communication ports	2 Modbus (RS-232)
	1 Modbus Plus (RS-485)
Bus current required	1250 mA
Max. number of NOM, NOC, NOE, PTQ PDP MV1 and MMS modules supported (any combination)	6
Key switch ( <i>see page 107</i> )	Yes

**NOTE:** This CPU can support up to 3 MODBUS networks.

### Processor

Model	Intel 486
Clock speed	66 MHz
Math processor	Yes, on-board
Watchdog timer	250 ms S/W adjustable

## Memory

Internal memory (max.)	1056 k
------------------------	--------

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (see *EcoStruxure™ Control Expert, Operating Modes*).

## Reference Capacity

Discretes	65528
Registers	64974

## Local I/O

Max. I/O words	unlimited I/O
Max. I/O racks	2

## S908 Remote I/O

Max. I/O words per drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

## Ethernet Remote I/O

Not supported

## Distributed I/O

Number of networks per system	1 (3**)
Max. words per network	500 in / 500 out For every DIO drop, there is a minimum of two words input of overhead
Max. words per node	30 in / 32 out
Max. number of DIO drops/network	64
** Requires the use of the 140 NOM 21•00 option module.	

**Change Configuration On The Fly (CCOTF)**

Not supported

**Battery and Clock**

Type	3 V lithium
Service Life	1200 mAh
Shelf life	10 years with 0.5% loss of capacity per year
Battery load current @ power-off	typical: 7 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 210 $\mu$ A @ 60 °C
TOD clock	+/- 8.0 s/day @ 0...60 °C

**Diagnostics**

Power-up	RAM RAM address Executive Checksum User Logic Check Processor
Run time	RAM RAM address Executive Checksum User Logic Check

## 140 CPU 534 14A/U Specifications

### General Specifications

This module is functionally identical to the non-A version. However, the following should be considered:

- If you are using the module in a Hot Standby topology, then you must use either two non-A models or two A/U models.
- The A/U model requires a new flash executive.
- The A/U and the non-A flash executives are not interchangeable.
- Schneider Electric software supports the A/U model. Any existing or new 140 CPU 534 14 program configuration will load into a 140 CPU 534 14A/U without any modifications.

Communication ports	2 Modbus (RS-232)
	1 Modbus Plus (RS-485)
Bus current required	1250 mA
Max. number of NOM, NOC, NOE, PTQ PDP MV1 and MMS modules supported (any combination)	6
Key switch ( <i>see page 107</i> )	Yes

**NOTE:** This CPU can support up to 3 modbus network

### Processor

Model	Intel 586 DX
Clock speed	133 MHz
On-board math processor	Yes, on-board
Watchdog timer	250 ms S/W adjustable

### Memory

Internal memory (max.)	2972 k
Max. HSBY Unlocated Data	128 kbytes

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see the chapter Memory tab in the *Operating Modes Manual*.

## Reference Capacity

Discretes	65528
Registers	64974

## Local I/O

Max. I/O words	unlimited I/O
Max. I/O racks	2

## S908 Remote I/O

Max. I/O words per drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

## Ethernet Remote I/O

Not supported

## Distributed I/O

Number of networks per system	1 (3**)
Max. words per network	500 in / 500 out For every DIO drop, there is a minimum of two words input of overhead
Max. words per node	30 in / 32 out
Max. number of DIO drops per network	64
** Requires the use of the 140 NOM 21•00 option module.	

## Change Configuration On The Fly (CCOTF)

Not supported

### Battery and Clock

Type	3 V lithium
Service life	1200 mAh
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 210 $\mu$ A @ 60 °C
TOD clock	+/- 8.0 s/day @ 0..60 °C

### Diagnostics

Power-up	RAM RAM address Executive checksum User logic check Processor
Run time	RAM RAM address Executive checksum User logic check

## 140 CPU 534 14B/U Specifications

### General Specifications

This module is functionally identical to the non-B version. However, the following should be considered:

- If you are using the module in a Hot Standby topology, then you must use either two non-B models or two B/U models.
- The B/U model requires a new flash executive.
- The B/U and the non-B flash executives are not interchangeable.
- Schneider Electric software supports the B/U model. Any existing or new 140 CPU 534 14 program configuration will load into a 140 CPU 534 14B/U without any modifications.

Communication ports	2 Modbus (RS-232)
	1 Modbus Plus (RS-485)
Bus current required	1250 mA
Max. number of NOM, NOC, NOE, PTQ PDP MV1 and MMS modules supported (any combination)	6
Key switch ( <i>see page 107</i> )	Yes

**NOTE:** This CPU can support up to 3 modbus network

### Processor

Model	Intel 486 DX4
Clock speed	100 MHz
On-board math processor	Yes, on-board
Watchdog timer	250 ms S/W adjustable

### Memory

Internal memory (maximum)	2972 k
---------------------------	--------

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (*see EcoStruxure™ Control Expert, Operating Modes*).

### Reference Capacity

Disretes	65528
Registers	64974

### Local I/O

Max. I/O words	unlimited I/O
Max. I/O racks	2

### S908 Remote I/O

Max. I/O words per drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

### Ethernet Remote I/O

Not supported

### Distributed I/O

Number of networks per system	1 (3**)
Max. words per network	500 in / 500 out For every DIO drop, there is a minimum of two words input of overhead
Max. words per node	30 in / 32 out
Max. number of DIO drops per network	64
** Requires the use of the 140 NOM 21•00 option module.	

### Change Configuration On The Fly (CCOTF)

Not supported

## Battery and Clock

Type	3 V lithium
Service life	1200 mAh
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 210 $\mu$ A @ 60 °C
TOD clock	+/- 8.0 s/day @ 0..60 °C

## Diagnostics

Power-up	RAM RAM address Executive checksum User logic check Processor
Run time	RAM RAM address Executive checksum User logic check



---

# Chapter 9

## High End CPU

---

### Purpose

This chapter provides information on the High End Controller modules.

Quantum high-end CPUs (140 CPU 6•• •• (see page 139)) also support Ethernet backplanes (BME XBP ••••) in the following network configurations:

- with a 140 CRP 312 00 remote I/O head module (see *Quantum EIO, Remote I/O Modules, Installation and Configuration Guide*) configured on the local rack (see *Quantum EIO, System Planning Guide*)
- with a BME CRA 312 •0 eX80 EIO adapter module (see *Modicon M580, RIO Modules, Installation and Configuration Guide*) configured on an Ethernet remote I/O drop (see *Quantum EIO, System Planning Guide*)

These Ethernet backplanes function in the same manner as when they are used in an M580 system. The eX80 EIO adapter modules also function in the same manner (including configuration, diagnostics, and performance) as when they are used in an M580 system.

### Quantum SIL3 Hot StandBy Offer

Read thoroughly the *Quantum Safety PLC - Safety Reference Manual* (part number 33003879) to build a safety PLC according to the safety certifications. Schneider Electric provides a range of products that are certified to be used in a IEC 61508 and SIL3 safety system.

This range includes:

- safety CPU modules (140 CPU 651 60S and 140 CPU 671 60S)
- safety I/O modules (140 SAI 940 00S, 140 SDI 953 00S, 140 SDO 953 00S)
- non-interfering modules
- Unity Pro XLS V7.0.

Unity Pro is the former name of Control Expert for version 13.1 or earlier.

**NOTE:** If remote racks or hot standby functionality is required, you can use the safety modules with existing Quantum remote I/O modules (140 CRP 932 00 and 140 CRA 932 00 only). If other I/O modules are present in the rack, they must either be certified non-interfering modules or they must be removed or exchanged for certified non-interfering modules that will provide similar capability.

**What Is in This Chapter?**


This chapter contains the following topics:

<b>Topic</b>	<b>Page</b>
Physical Presentation and Mounting of Standard High End Modules	141
Standalone Safety CPU	143
Physical presentation and mounting of Hot StandBy High End modules	145
Hot Standby Safety CPU Specifics	146
CPU Controls and Displays	149
Indicators	153
Modbus port	155
Using the CPU LCD Display Screens	157
How to change the battery of a 140 CPU 6xx xx CPU	168
Processor Configuration Screen	169
140 CPU 651 50 Specifications	171
140 CPU 651 60 Specifications	175
140 CPU 651 60S Specifications	179
140 CPU 652 60 Specifications	181
140 CPU 658 60 Specifications	185
140 CPU 670 60 Specifications	188
140 CPU 671 60 Specifications	191
140 CPU 671 60S Specifications	194
140 CPU 672 60 Specifications	196
140 CPU 672 61 Specifications	199
140 CPU 678 61 Specifications	202

## Physical Presentation and Mounting of Standard High End Modules

### Illustration

The figure shows a standard High End module and its components.

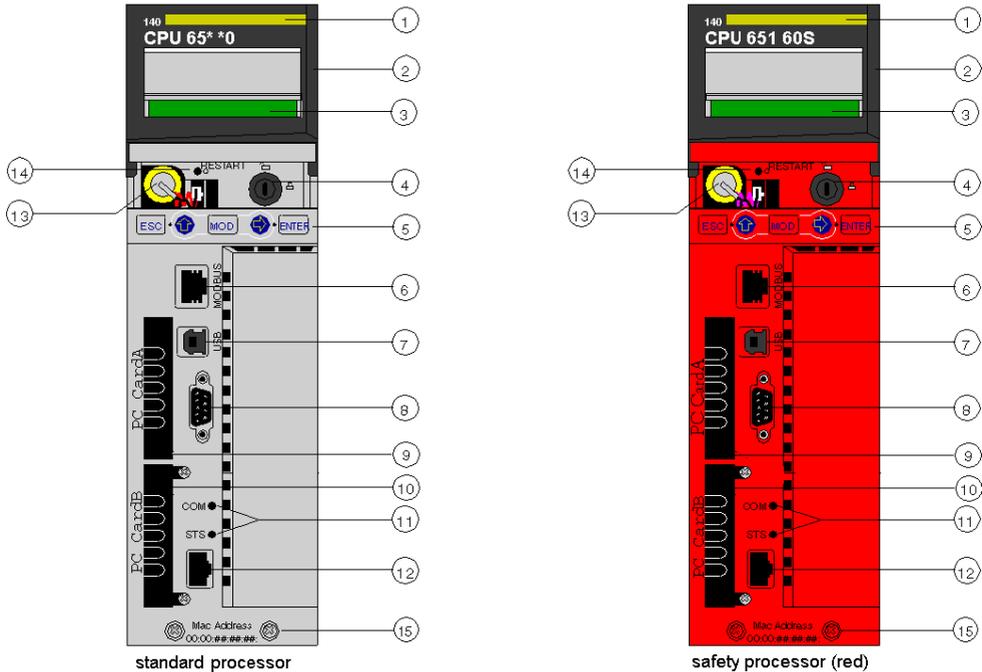


- 1 model number, module description, color code
- 2 lens cover (open)
- 3 LCD display (here covered by the lens cover)
- 4 key switch
- 5 keypad (with 2 red LED indicators)
- 6 modbus port (RS-232) (RS-485)
- 7 USB port
- 8 Modbus Plus port
- 9 PCMCIA slot A (depends on CPU reference)
- 10 PCMCIA slot B
- 11 LED indicators (yellow) for Ethernet communication
- 12 Ethernet port
- 13 battery (user installed)
- 14 reset button
- 15 2 screws

**NOTE:** Quantum High End processors are equipped with one PCMCIA slot (B) or two PCMCIA slots (A and B) in which to install Schneider PCMCIA cards (other cards are not accepted).

## Mounting

Mounting the module onto the central back plane:

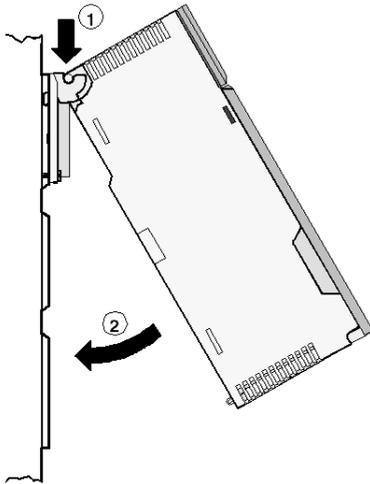

- 1 Hang the module.
- 2 Screw the module to the back plane.

## Standalone Safety CPU

### Introduction

For use in standalone SIL3 solutions, the **140 CPU 651 60S** Quantum Safety CPU is certified. The safety CPU includes a PCMCIA memory card, but its use and presence is not mandatory.


### Description of the Internal CPU Architecture

The Quantum Safety CPU contains 2 different processors, an Intel Pentium and an application processor. Each one executes the Safety logic in its own memory area and both compare the results of the execution at the end of each cycle.

Two CPUs are available:

- 140 CPU 651 60S (Standalone Safety CPU)
- 140 CPU 671 60S (Hot Standby Safety CPU)

The following figure shows the internal architecture of the Quantum Safety CPU:

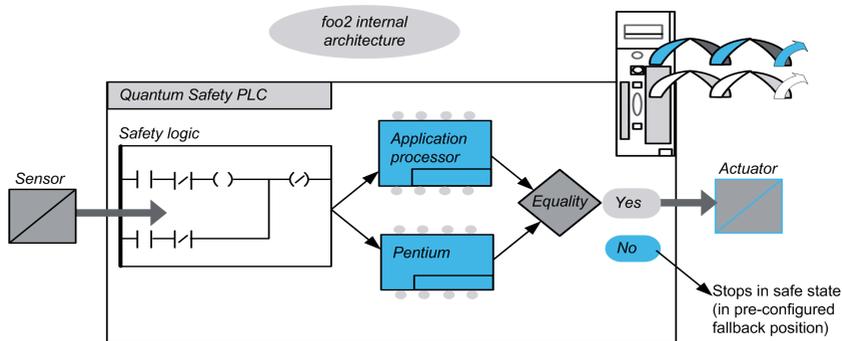

### Benefits of the Double Code Generation and Execution

The 2 processors inside the Quantum Safety PLC allow double code generation and execution.

This diversity provides the following advantages in error detection:

- 2 executable codes are generated independently. The diversity of compilers allows the detection of systematic error in the code generation.
- The 2 generated codes are executed by 2 different processors. Thus, the CPU is able to detect both systematic errors in the code execution and random errors in the PLC.
- 2 independent memory areas are used for the 2 processors. Thus, the CPUs are able to detect random errors in the RAM and a full RAM test is not necessary at every scan.

### Description of the Watchdog

A hardware and a firmware watchdog check the PLC activity and the time needed to execute the user logic.

**NOTE:** You must configure the software watchdog (maximum PLC cycle time) to be consistent with the application execution time, the filtering of the I/O communication error, and the process Safety time (PST) targeted.


### Description of the Memory Check

Static memory areas, including the Flash memory, PCMCIA memory card (if any) and the RAM, are checked using the cyclic redundancy check (CRC) and the double code execution. Dynamic areas are protected by the double code execution and a periodic memory test. At cold start, these tests are re-initialized and fully performed before the CPU goes into Stop or Run mode.

## Physical presentation and mounting of Hot StandBy High End modules

### Illustration

The figure shows an Hot StandBy High End module and its components.

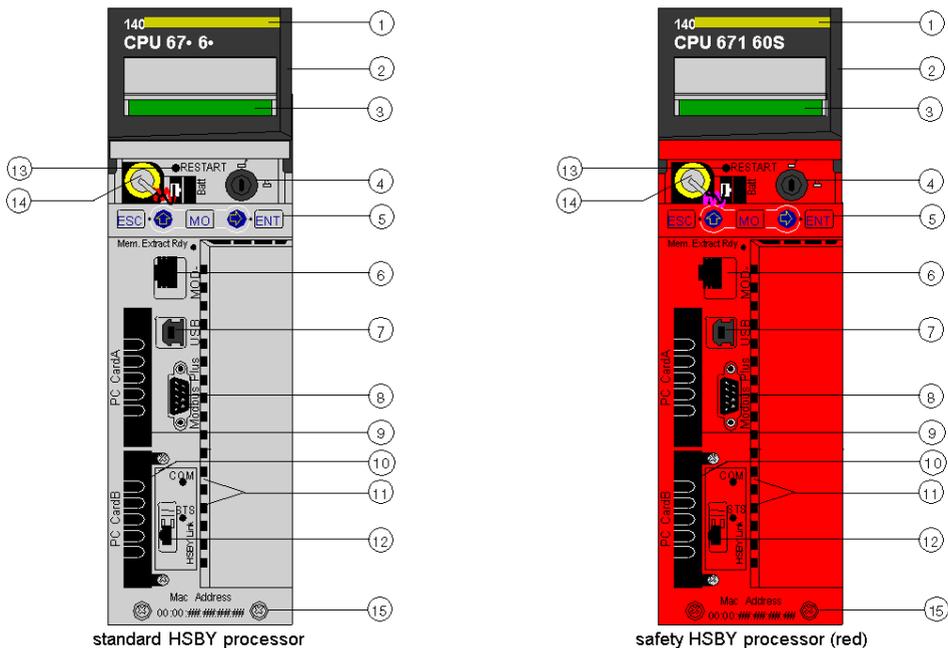

- 1 model number, module description, color code
- 2 lens cover (open)
- 3 LCD Display (here covered by lens cover)
- 4 key switch
- 5 keypad (with 2 red LED indicators)
- 6 Modbus port (RS-232) (RS-485)
- 7 USB port
- 8 Modbus Plus port
- 9 PCMCIA slots A (depends on CPU reference)
- 10 PCMCIA slots B
- 11 LED indicators (yellow) for Ethernet communication
- 12 HSBY fiber optic communication port
- 13 reset button
- 14 battery (user installed)
- 15 2 screws

**NOTE:** Quantum High End processors are equipped with one PCMCIA slot (B) or two PCMCIA slots (A and B) in which to install Schneider PCMCIA cards (other cards are not accepted).

## Hot Standby Safety CPU Specifics

### Introduction

The 140 CPU 671 60S Quantum Safety CPU module is certified for use in Hot Standby SIL3 solutions compliant with the 61508 IEC standard. For more details about the safety certifications, refer to the *Modicon Quantum Safety PLC Safety Reference Manual*.

In the Standalone Safety CPU, the Ethernet port is used to communicate with other devices using a normal Ethernet cable.

In the Hot Standby Safety CPU, the connection used to exchange data between the Primary CPU and the Standby CPU controller is a fiber optic link. Because the fiber optic link is not part of the Safety loop, the PFD and PFH values of the Hot Standby CPU are the same as those of the Standalone CPU.

Each Safety CPU can include a PCMCIA memory card, but its use and presence is not mandatory.

**NOTE:** This CPU cannot be used in a Quantum Ethernet I/O Hot Standby system.

### Description of a Safety Hot Standby Configuration

The Hot Standby configuration contains two identical local racks and at least one remote I/O drop because I/Os cannot be placed in the local rack of a Safety Hot Standby configuration.

Besides a power supply module (there must be at least one 140 CPS 124 20 or one 140 CPS 22 400), each local rack must contain:

- 140 CPU 671 60S module
- 140 CRP 932 00 module

Besides a power supply, I/O modules (including at least one 140 CPS 124 20 or one 140 CPS 22 400), the remote drop(s) must include a 140 CRA 932 00 module.

### CAUTION

#### UNINTENDED EQUIPMENT OPERATION

Use only high availability RIO modules with dual cabling in a Safety-Related System.

**Failure to follow these instructions can result in injury or equipment damage.**

### Description of the Operating Modes

- **Safety Mode:** This is the default mode. It is a restricted mode in which modifications and maintenance activities are prohibited.
- **Maintenance Mode:** This is a temporary mode for modifying the project, debugging and maintaining the application program.

### State Compatibility with Safe and Maintenance Modes

A Quantum Hot Standby system has two states:

- **Redundant (1 CPU is Primary, 1 is Standby)**

The Standby CPU controller mode follows the Primary CPU controller mode. For example, if you switch the Primary CPU controller from Safety to Maintenance mode, the Standby CPU controller switches from Safety to Maintenance mode at the start of the next cycle.

- **Non-redundant (at least 1 CPU Offline)**

The two controllers are independent, one can be in Safety mode and the other one in Maintenance mode. For example, the Run Primary controller can be in Safety mode while the Stop Offline controller is in the Maintenance mode.

### Impact of the PLC Switchover on the Process Safety Time

If the Primary CPU detects an internal or external problem, it stops exchanging data with the Standby CPU and stops processing the I/O. As soon as the Standby CPU detects that there are no longer exchanges with the Primary CPU, it takes over the role of the Primary CPU, executing the user logic and processing the I/O. Therefore, the output modules must filter the lack of exchange with the Primary CPU to avoid glitches when a Switchover occurs. This is achieved by configuring the output module time-out. As a result, the PLC reaction time is greater than the time-out configured in the output module, thereby influencing the process Safety time.

**NOTE:** The behavior of the Hot Standby Safety CPU is equivalent to a Standalone Safety CPU.

In case of a detected error, the Safety PLC enters:

- Halt state when running in the Maintenance Mode
- Error state when running in the Safety Mode

### Availability of the Hot Standby Functions

In addition to the standard Hot Standby functions, you can use an EFB to program an automatic Switchover between Primary CPU and Standby CPU to verify the ability of the Standby CPU to take over from the Primary CPU. That means that the Standby CPU periodically becomes the Primary CPU and the Primary CPU becomes the Standby CPU.

It is recommended to avoid using the USB link during a Switchover.

The following table lists the available Hot Standby functions in Maintenance and Safety modes:

Function	Maintenance Mode	Safety Mode
Hot Standby	yes	yes
Switchover	yes	yes
EFB Swap	no	yes
Keypad	yes	yes
Application mismatch	yes	no
OS Upgrade	yes, if Standby CPU is in Stop Offline	no
Application Transfer	yes	no

**NOTE:** Applying the power simultaneously to Primary CPU and Standby CPU is allowed, but we recommend to do it sequentially.

## CPU Controls and Displays

### Lens Cover

The protective lens cover (2 on the CPU front panel (*see Quantum using EcoStructure™ Control Expert, Hot Standby System, User Manual*)) can be opened by sliding it upwards.

With the lens cover open you have access to the following items:

- key switch
- battery
- reset button


### Key Switch

The key switch (4) is a security feature and a memory protection switch. The key switch has two positions: locked and unlocked. The key switch is only read and deciphered by the PLC OS portion of the firmware and not by the OS loader portion.

The Quantum processors have a set of system menus that enable the operator to:

- perform PLC operations (i.e., start PLC, stop PLC)
- display module parameters (i.e., communications parameters)
- switch to the maintenance mode (in Safety processors)

The key positions are shown in the table below:

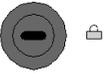Key Position	PLC Operation
unlocked: 	<ul style="list-style-type: none"> <li>● System menu operations can be invoked and module parameters can be modified by the operator with the LCD and keypad.</li> <li>● Memory protection is OFF.</li> <li>● You can switch to Maintenance mode (in Safety processors).</li> </ul>
locked: 	<ul style="list-style-type: none"> <li>● No system menu operations can be invoked and module parameters are read-only.</li> <li>● Memory protection is ON.</li> <li>● Safe mode forced (in Safety processors).</li> </ul>

Switching the key switch position from locked to unlocked or vice versa turns on the LCD's backlight.

**NOTE:** For more explanations about Maintenance and Safe modes, refer to the *Modicon Quantum, Quantum Safety PLC, Safety Reference Manual*.

## Key Switch Description Tables

The following table provides information on switch position for high end Quantum 140 CPU 6•• ••• with firmware < 3.12:

Operation	Switch Position	
	Unlocked	Locked
Programming mode	Allowed	Allowed
Monitoring mode	Allowed	Allowed
Upload application	Allowed	Allowed
Download, online modification	Allowed	Forbidden
Stop/Run/Init commands from Control Expert	Allowed	Allowed

Unity Pro is the former name of Control Expert for version 13.1 or earlier.

The following table provides information on switch position for high end Quantum 140 CPU 6•• ••• with firmware ≥ 3.12 and Unity Pro < V8:

Operation	Switch Position	
	Unlocked	Locked
Programming mode	Allowed	Forbidden
Monitoring mode	Allowed	Allowed
Upload application	Allowed	Forbidden
Download, online modification	Allowed	Forbidden
Stop/Run/Init commands from Unity Pro	Allowed	Forbidden

Unity Pro is the former name of Control Expert for version 13.1 or earlier.

The following table provides information on switch position for high end Quantum 140 CPU 6•• ••• with firmware ≥ 3.2 and Unity Pro ≥ V8:


Operation	Switch Position	
	Unlocked	Locked
Programming mode	Allowed <sup>(1)</sup>	Forbidden
Monitoring mode	Allowed <sup>(1)</sup>	Allowed <sup>(1)</sup>
Upload application	Allowed <sup>(1)</sup>	Forbidden
Download, online modification	Allowed <sup>(1)</sup>	Forbidden
Stop/Run/Init commands from Control Expert/UnityPro	Allowed <sup>(1)</sup>	Forbidden
<sup>(1)</sup> : Password-protected if a password has been defined in the Control Expert/Unity Pro application		

## Reset Button

Pressing the reset button (12) forces a cold start of the PLC.

## LCD Display

The liquid crystal display (LCD - 3) has 2 lines with 16 characters each with changeable backlight state and contrast:

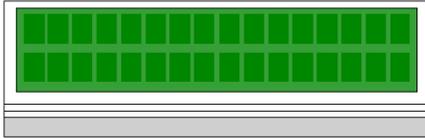

The backlight handling is entirely automated to save the life of the LCDs. The backlight turns on when one of the following occurs:

- a key is pressed
- the key switch state is changed
- an error message is displayed on the LCD

The backlight stays on for error messages as long as the error message is displayed otherwise, the backlight automatically turns off after five minutes.


## Adjusting the Contrast

The contrast is adjustable from the keypad when the default screen is displayed:

Step	Action	
1	Press the MOD key:	
2	To adjust the contrast darker press:	
3	To adjust the contrast lighter press:	
4	To confirm the setting press:	

### Keypad

The keypad (5) has five keys that are mapped to hardware addresses. Each of the two arrow keys includes an LED:

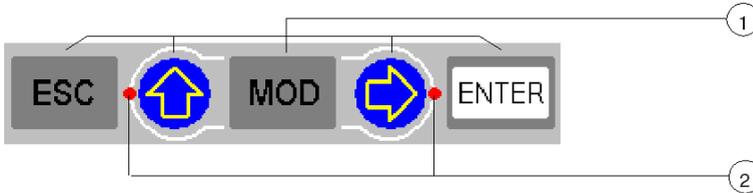

- 1 5 keys
- 2 2 LEDs

### Using the Keys

Keypad functions:

Key	Function	
	To cancel an entry, suspend or stop an action in progress To display the preceding screens successively (move up the menu tree)	
	To confirm a selection or an entry	
	To set a field on the display into the modify mode	
	LED: on	Key active: <ul style="list-style-type: none"> <li>● to scroll through menu options</li> <li>● to scroll through modify mode field options</li> </ul>
	LED: flashing	Key active: The modify mode field can be scrolled.
	LED: off	Key inactive: No menu options and no field options.
	LED on	Key active: <ul style="list-style-type: none"> <li>● to move around in a screen, field to field</li> <li>● to go to the sub-menu</li> </ul>
	LED flashing	Key active: Used to move digit to digit in a modify mode field.
	LED off	Key inactive, there is no: <ul style="list-style-type: none"> <li>● sub-menu for menu option</li> <li>● scrolling around a screen</li> <li>● scrolling around a field</li> </ul>


## Indicators

### Overview

The High End processors use two types of indicators:

1. LCD display: The Default Screen (*see page 159*) serves as a Controller status screen.
2. LED Indicators: The functionality of the LEDs is described in a table after the figure.

The following figure shows the two types of indicators.

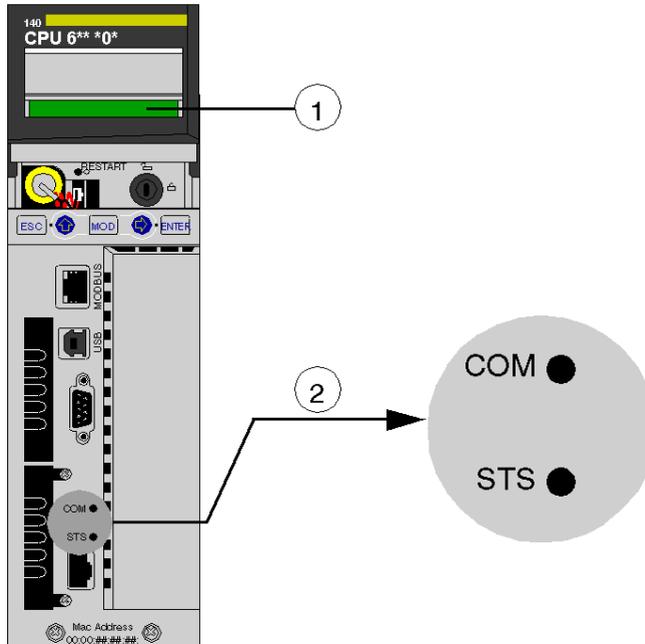

High End processors

- 1 LCD Display (lens cover closed)
- 2 LED Indicators

## LED Description

The following table shows the description for the LED indicators of the different High End CPU modules.

LEDs	Indication	
	Standard Processors 140 CPU 65• •0 / 140 CPU 651 60S	Hot StandBy Processors 140 CPU 67• 6• / 140 CPU 671 60S
COM (yellow)	Controlled by the Coprocessor hardware <ul style="list-style-type: none"> <li>Indicates Ethernet activity</li> </ul>	
STS (yellow)	Controlled by the Coprocessor software	
	ON	Normal
	OFF	Copro auto tests unsuccessful. Possible hardware problem.
	Flashing:	
	1 Flash	Configuration in progress. Temporary situation.
	2 Flashes	Invalid MAC address
	3 Flashes	Link not connected
	4 Flashes	Duplicate IP Address. Module is set to its default IP address.
	5 Flashes	Waiting for IP address from address server
	6 Flashes	Invalid IP address. Module is set to its default IP address.
7 Flashes	Firmware incompatibility between PLC OS and Copro firmware	
		Controlled by the Coprocessor firmware <ul style="list-style-type: none"> <li>Blinking: system is redundant and data are exchanged from the Primary to Standby controller</li> <li>ON: system not redundant / Copro booting from power-on to end of self-tests</li> <li>OFF: Copro auto tests were not successful</li> </ul>

## Modbus port

### Overview

In front of the CPU the Modbus port is of type RJ45.


The network topology is determined by a protocol:

- for RS-232, it's a point to point topology,
- for RS-485, it's a bus topology with processor as master.

Connections on RJ45 are different, according to selected protocol. In configuration window of a 140 CPU 6••• Quantum PLC, the protocol is selected in tab **Port Modbus**.

### Pinouts

Illustration:

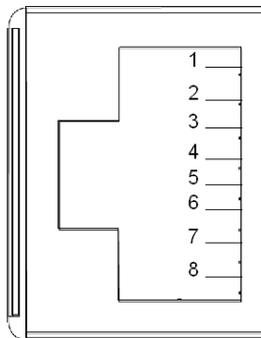

The table following presents the pinouts of RS-232 and RS485 protocols:


Pin	RS-232 Signal	RS-485 Signal
1	DTR	D-
2	DSR	D+
3	TxD	
4	RxD	Not used
5	GND	GND
6	RTS	
7	CTS	Not used
8	GND (optional)	GND (optional)

**NOTE:** For RS-485 protocol pins 1 and 6 must be short circuited as well as pins 2 and 3.

### RS232/RJ45 adapter


To connect PC-AT computers that have a 9-pin RS-232 port to the 8-pin RJ45 Modbus port on the 140 CPU 651 +0, 140 CPU 670 60, 140 CPU 671 60, 140 CPU 672 60 and 140 CPU 672 61, you must connect the 110 XCA 020 300 adapter (9-pin/RJ45) on the PC with the straight 110 XCA 28 202 cable (8-pin RJ45 to 8-pin RJ45).

The following figures show the 9-pin adapter front view (left) and side view (right).

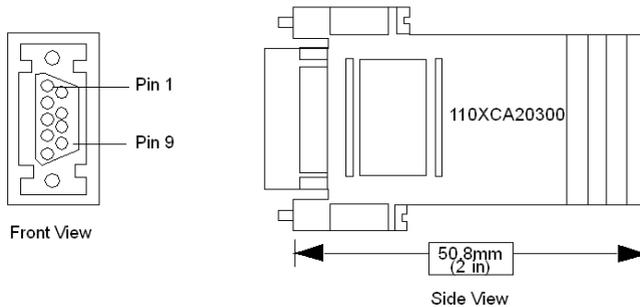

### Connector Pinouts Figure

The following figure shows the 9-pin RJ45 connector schematic.

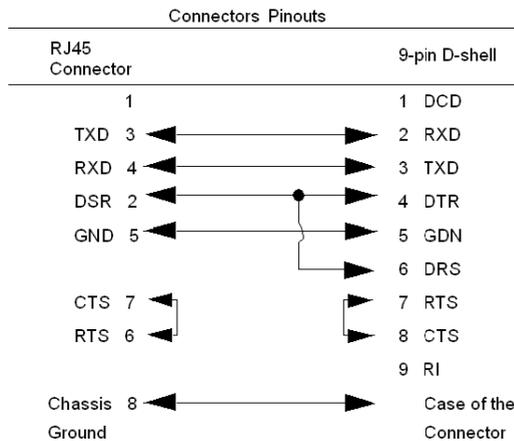

## Using the CPU LCD Display Screens


### Introduction

The controller LCD displays messages. These messages indicate the controller status. There are four levels of menus and submenus. Use the keypad (*see page 152*) on the front of the controller to access the menus.

For detailed information about the menu and submenu see:

- PLC Operations Menu and Submenus (*see page 160*)
- Using the Communications Menu and Submenus (*see page 163*)
- Using the LCD Settings Menu and Submenus (*see page 165*)
- Using the System Info Menu and Submenus (*see page 166*)

Structure: LCD display menu and submenus:

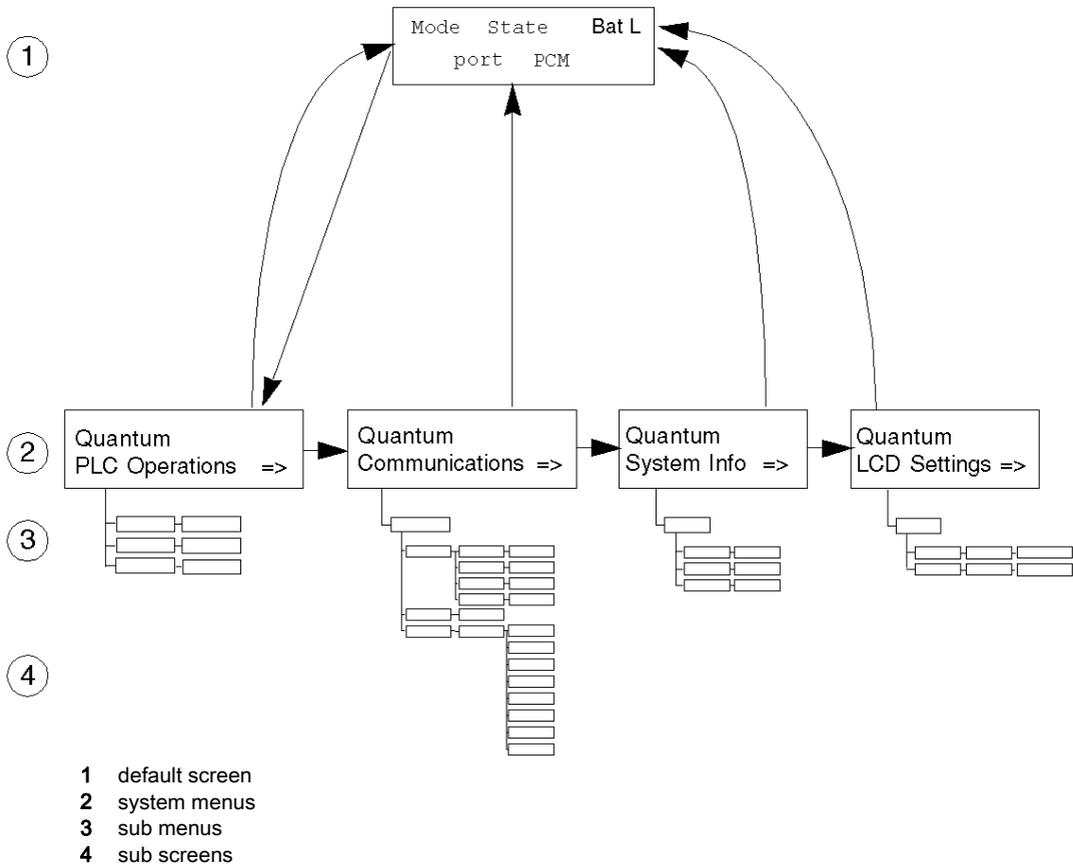


## Accessing the Screens

Use the keys on the keypad to access the system menus and submenus:

Step	Action
1	To access the screens, confirm that the key switch is in the unlocked position. 
2	To step down to a lower menu, operate one of the following keys:   
3	To return to the previous menu, press: 

## 140 CPU 65 • • Default Screen

The default screen is read-only and contains the following fields:

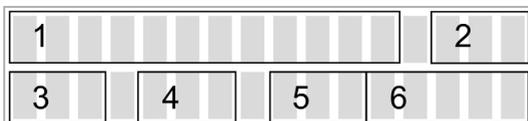


The default screen displays the following information:

Field	Display	Description	
0	CPU mode	M	maintenance mode (only on safety processors)
		S	safe mode (only on safety processors)
2	CPU state	RUN	Application program is running.
		STOP	Application program is <b>NOT</b> running. STOP offline
		No Conf	Processor has no application program.
		Halt	detected state error (in maintenance mode for safety modules)
BatL		Indicates battery health: <ul style="list-style-type: none"> <li>● steady = Battery is low.</li> <li>● no message = Battery is OK.</li> </ul>	
Port	USB	Indicates that the port has activity.	
	Modbus Plus	MB+	Indicates Modbus Plus activity.
		mb+	no activity
		Dup	duplicate MB+ address
		ERR	detected Modbus communications error
		INI	initial network search
	Modbus	232	serial port activity for RS-232
		485	serial port activity for RS-485
	PCM	1	Displayed status indicates battery health of the PCMCIA card in slot 1: <ul style="list-style-type: none"> <li>● steady = Battery is OK.</li> <li>● flashing = Battery is low (only for green PCMCIA (version &lt;04)) <sup>(1)</sup>.</li> </ul>
		2	Displayed status indicates battery health of the PCMCIA card in slot 2: <ul style="list-style-type: none"> <li>● steady = Battery is OK.</li> <li>● flashing = Battery is low (only for green PCMCIA (version &lt; 04)) <sup>(1)</sup>.</li> </ul>
		<b>(1)</b> With blue PCMCIA (version >= 04), when main battery is low, there is no flash.	

## PLC Operations Menu

The structure of the PLC Operations menu and submenus are:

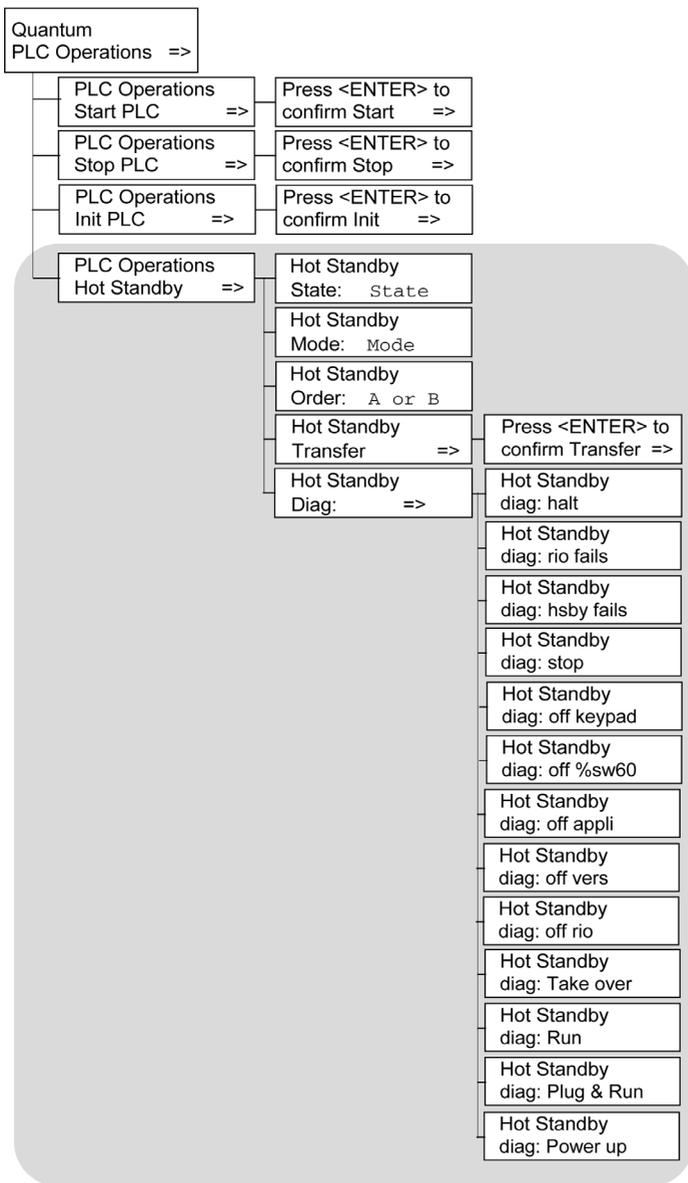

## Submenu for PLC Operations: Start, Stop and Init:

Start, Stop, Init Screens Display	Fields Available	Description
Start PLC	Press <ENTER> to confirm Start.	Pressing <ENTER> starts the controller.
Stop PLC	Press <ENTER> to confirm Stop.	Pressing <ENTER> stops the controller.
Init PLC	Press <ENTER> to confirm Init.	Pressing <ENTER> initializes the controller. On safety processors, this command is only available in the maintenance mode.


## Submenu for PLC Operations Hot Standby CPU:

Screen	Field	Option	Description	
Hot Standby State:	State read-only	PRIMARY CPU	Controller serves as primary unit.	
		STANDBY CPU	Controller serves as standby unit.	
		Offline	Controller is neither primary nor standby unit.	
Hot Standby Mode:	Mode (modifiable only if the key switch is in the unlocked position)	RUN	STS steady	Controller is active and is either serving as primary PLC or able to take over the primary PLC role if needed.
			STS flashing	Controller is transferring/updating. When the transfer is done, RUN stays on steady.
		OFFLINE	STS steady	Controller is taken out of service without stopping it or disconnecting it from power. If the controller is the primary PLC when the mode is changed to offline, control switches to the standby PLC. If the standby PLC changes to offline, the primary PLC continues to operate without a backup.
			STS flashing	Controller is transferring/updating. When the transfer is done, OFFLINE stays on steady.
Hot Standby Order:	A or B (modifiable only if the key switch is in the unlocked position)	FIRST	Hot Standby power order  <b>NOTE:</b> To change the A/B order, confirm that the PLC is in STOP mode.	
		SECOND		

Screen	Field	Option	Description
Hot Standby Transfer:	- (This menu option is enabled only when the key switch is in the unlocked position.)		Pressing the <ENTER> key confirms the transfer. The transfer initiates the request of a program update from the primary PLC. Pressing any other key cancels the transfer initiation and returns to the Hot Standby Transfer menu option screen.  <b>NOTE:</b> Transfer by keypad is based on %SW60.5 (see <i>EcoStruxure™ Control Expert, System Bits and Words, Reference Manual</i> ) use: modifying %SW60.5 by application and requiring simultaneously a transfer by Keypad, could lead to some issues (no transfer or transfer retry).
Hot Standby Diag:	The order of diagnostic screen varies with the operation.		
	Halt		user task in halt mode
	RIO fails		detected error reported by RIO head
	HSBY fails		detected error reported by optical link
	Stop		stop command sent
	Off keypad		offline command entered on keypad
	Off %SW60		offline command set in command register
	Off appli		offline due to application mismatch
	Off vers		offline due to PLC or co-processor OS mismatch
	Off RIO		offline due to detectedRIO error
	Take over		standby CPU switched to primary CPU mode
	Run		run command sent
	Plug & Run		sun-link operational and standby CPU started
	Power up		no message: PLC just started

## Communications Menu

Communications menu and submenus:

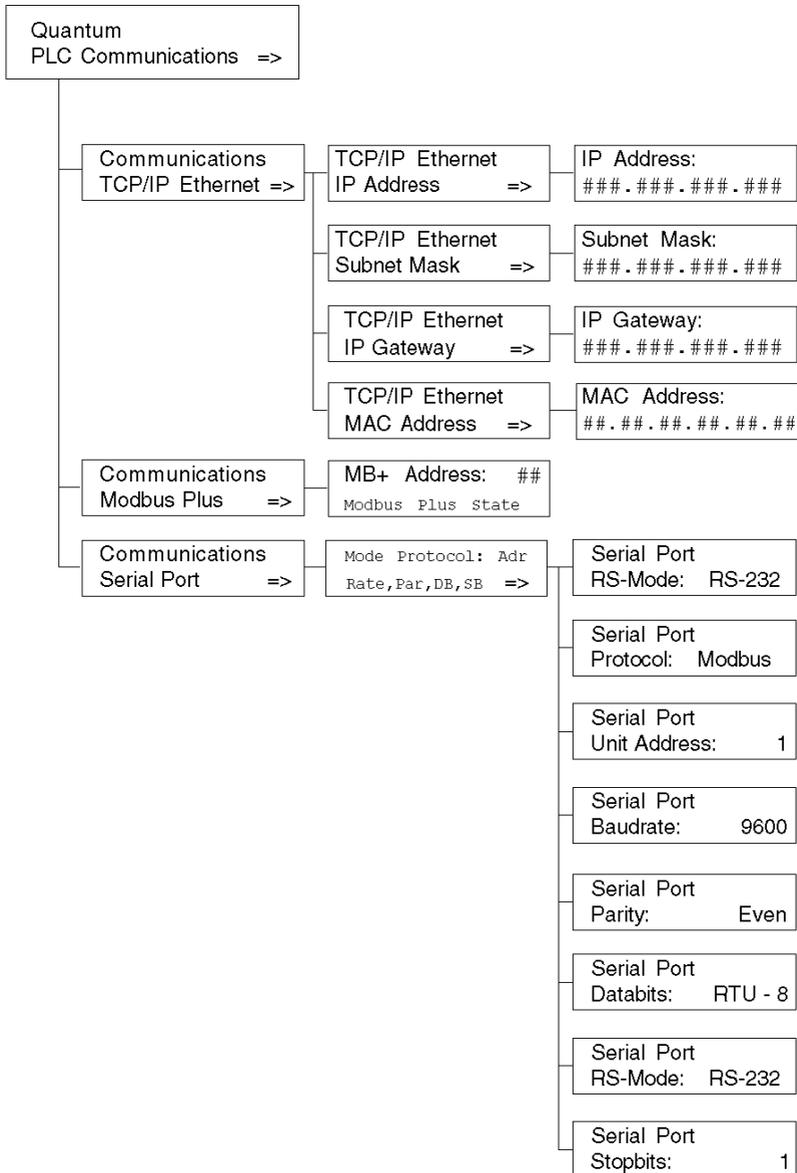

Submenu for TCP/IP Ethernet PLC Communications submenus:

TCP/IP Ethernet Screen Displays	Fields Available	Options Available	Description
TCP/IP Ethernet IP Address <sup>1,2</sup>	###.###.###.###	decimal numbers	Displays IP address.
TCP/IP Ethernet Subnet Mask <sup>1,2</sup>	###.###.###.###	decimal numbers	Displays subnetwork mask address.
TCP/IP Ethernet IP Gateway <sup>1,2</sup>	###.###.###.###	decimal numbers	Displays Ethernet IP gateway address.
TCP/IP Ethernet MAC Address	##.##.##.##.##.## (read-only)	hexadecimal numbers	Displays MAC address.

<sup>1</sup>)Parameters can be modified only if no applications have been downloaded (in NO CONF state).

<sup>2</sup>)When a new PLC application has been downloaded, the Ethernet address on the screen is updated only after accessing the highest level of the menu structure.

Modbus Plus PLC Communications submenus:

Fields Available	Options Available	Description
## (modifiable only if the key switch is in the unlocked position)	1-64	Enter a valid Modbus Plus address.
Modbus Plus State	Monitor Link	Modbus Plus state
	Normal Link	
	Sole Station	
	Duplicate Address	
	No Token	


Serial PLC Communications submenus:

Fields Available*	Options Available	Description
Mode	232	RS mode
	485	
Protocol	ASCII	protocols available
	RTU	
Adr	1 - 247	unit address
	for Modbus Switchover Primary CPU 1-119 Standby CPU 129 - 247	
Rate	50, 75, 110, 134.5, 150, 300, 600, 1200, 1800, 2400, 3600. 4800, 7200, 9600, 19200 bits/s	baud rate
Par	NONE	parity
	ODD	
	EVEN	
DB	7,8	data bits: If protocol is Modbus, then RTU-8 or ASCII-7.
SB	1,2	stop bits

\*If the key switch is in the unlocked position, fields are modifiable.

## System Info Menu

Structure of System Info menus and submenus:

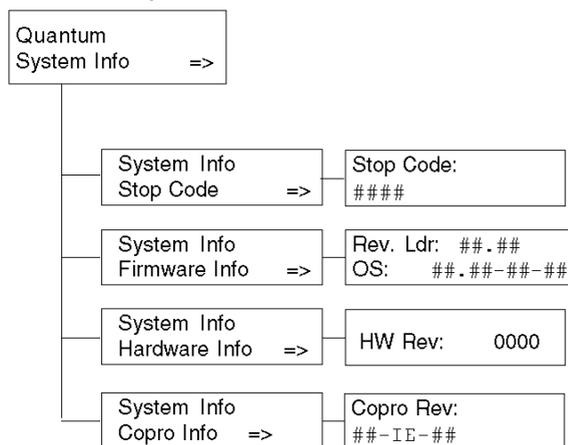


System Info, PLC Communications submenus:

System Info Screen Displays	Fields Available*	Option Available	Description
Stop Code	####		machine stop code
	Description		description of the machine stop code
Firmware Info	Rev.Ldr: ##.##		OS revision
	OS: ##.##-##.##		OSLoader revision
Hardware Info	HW Rev: ####		hardware revision
Copro Info	##-IE-##		co-processor revision
*Fields are read-only.			

### LCD Settings Menu

LCD Settings menus and submenus:

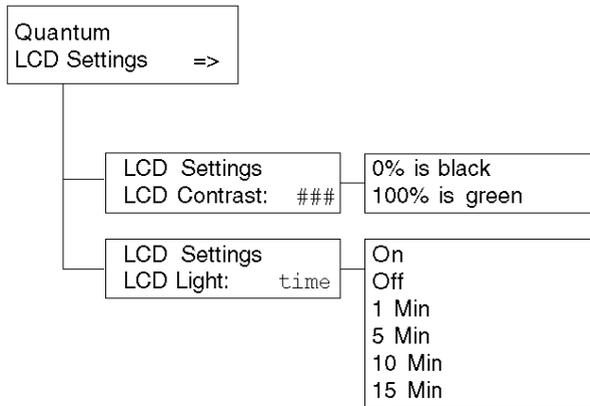

LCD Contrast settings submenu:

LCD Screen Contrast Screen Displays	Fields Available	Description
LCD Contrast:	####	Use the arrow keys to adjust the setting: <ul style="list-style-type: none"> <li>● Up arrow increases percent (brighter).</li> <li>● Right arrow decreases percent (darker).</li> </ul>

LCD Light setting submenus:

Screen Displays	Fields Available	Description
LCD Light:	On	LCD remains on permanently or until changed.
	Off	LCD remains off permanently or until changed.
	1 Min	LCD remains on for 1 minute.
	5 Min	LCD remains on for 5 minutes.
	10 Min	LCD remains on for 10 minutes.
	15 Min	LCD remains on for 15 minutes.

## How to change the battery of a 140 CPU 6xx xx CPU

### Procedure


The table below summarizes the procedure for changing the battery of a 140 CPU 6xx xx CPU.

Step	Action
1	While CPU is running, slide the front plastic cover of the LCD screen to open it.
2	Find the battery connector and pull the cable to remove it from its slot.
3	Remove the battery.
4	Insert a new battery.
5	Connect the battery connector in the same slot as the previous one.
6	Check that the <b>Batt Low</b> message on the LCD screen has disappear.

## Processor Configuration Screen

### Accessing with Control Expert

After starting Control Expert, go to the Local Bus in the Structural View of the Project Browser.

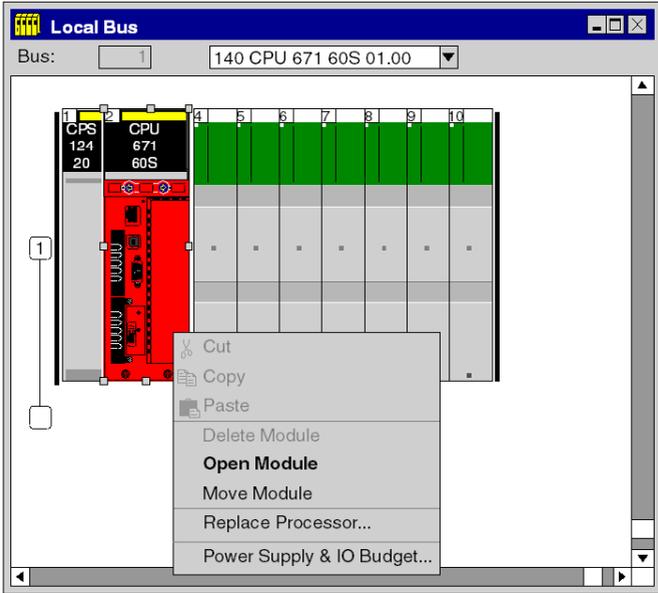Step	Action
1	Double-click on Local Bus to open the Local Bus configuration editor.
2	<p>Select the CPU module and right-click. The context menu appears.</p> 
3	<p>Select Open Module. The editor appears.</p>

Step	Action
4	<p>Choose one of these tabs:</p> <ul style="list-style-type: none"><li>● Overview</li><li>● Summary</li><li>● Configuration (<i>see EcoStruxure™ Control Expert, Operating Modes</i>) Quantum / Configuration (<i>see Quantum using EcoStruxure™ Control Expert, Hot Standby System, User Manual</i>) Quantum Hot Standby PLCs</li><li>● Modbus Port (<i>see EcoStruxure™ Control Expert, Operating Modes</i>) Quantum / Modbus Port (<i>see Quantum using EcoStruxure™ Control Expert, Hot Standby System, User Manual</i>) Quantum Hot Standby PLCs / Modbus (<i>see EcoStruxure™ Control Expert, Operating Modes</i>) Quantum Safety PLCs</li><li>● Animation Port (<i>see EcoStruxure™ Control Expert, Operating Modes</i>) Quantum / Animation Port (<i>see Quantum using EcoStruxure™ Control Expert, Hot Standby System, User Manual</i>) Quantum Hot Standby PLCs</li><li>● Hot Standby</li><li>● Faults</li><li>● I/O Objects</li></ul>

**NOTE:** %MWi will reset with the cold start %S0 or a loading program. Cold start is typically after a program load, %S0 can be set with the user program to initiate a cold start

## 140 CPU 651 50 Specifications

### General Specifications

Element	Description
Communication ports	1 Modbus (RS-232/RS-485) 1 Modbus Plus (RS-485) 1 USB 1 Ethernet
Bus current required	2160 mA
Max. number of communication modules supported at a time: <b>NOTE:</b> This includes any module combination of: NOM, NOC, NOE, PTQ PDP MV1 and MMS	6 including: <ul style="list-style-type: none"> <li>● up to 6 Quantum EIO distributed I/O modules 140 NOC 780 00</li> <li>● up to 2 Quantum EIO control head modules in the following configurations only: <ul style="list-style-type: none"> <li>○ two 140 NOC 781 00 modules – or –</li> <li>○ two 140 NOC 781 00.2 modules – or –</li> <li>○ one 140 NOC 781 00 module and one 140 NOC 781 00.2 module</li> </ul> </li> </ul> <p><b>NOTE:</b> You can enable IP forwarding in only <b>one</b> of the control head modules.</p>
Key switch	Yes
Key pad	Yes

### Processor

Function	Description
Model	Pentium
Clock speed	166 MHz
Coprocessor	Yes, built-in Ethernet
Watchdog timer	250 ms software adjustable

## Memory

Internal user memory (available)	768 kByte without PCMCIA card 512 kByte with PCMCIA card
Additional memory (with PCMCIA card)	7168 kByte

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (see *EcoStruxure™ Control Expert, Operating Modes*).

## Program Execution Time

Kilo Instruction executed per millisecond (Kins/ms)		Execution time per instruction (ms/Kins)	
100% Boolean	65% Boolean + 35% digital	100% Boolean	65% Boolean + 35% digital
10.28	9.91	0.097	0.101

**NOTE:** When considering the execution time with the RAM or the PCMCIA card, the values are identical as the program execution takes place within the CACHE memory.

## Reference Capacity

Discretes	65528 kByte max.
Registers	64976 kByte max.

## Local I/O

Max. I/O words	1024 bits/module with no limit on total Local I/O words
----------------	---

## S908 Remote I/O

Max. I/O words/drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

**NOTE:** The 140 CPU 651 50 is **not able** to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

## Ethernet Remote I/O

Max. I/O words/drop	400 in + 400 out
Max. number of remote drops	31 including: <ul style="list-style-type: none"> <li>● up to 31 Quantum drops (140 CRA 312 00)</li> <li>● up to 16 X80 drops (BMX CRA 312 •0)</li> </ul>
Max. number of I/O per Quantum drop	No limit
Max. number of I/O per X80 drop (BMX CRA 312 00)	up to 16 analog I/O
	up to 128 discrete I/O
Max. number of I/O per X80 drop (BMX CRA 312 10)	up to 184 analog I/O
	up to 1024 discrete I/O

**NOTE:** The 140 CPU 651 50 is **not able** to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

**NOTE:** Adding a complete Ethernet remote I/O drop online while PLC is in RUN is **not supported** by the 140 CPU 651 50.

## Distributed I/O

Number of networks per system	1 (3**)
Max. words per network	500 in / 500 out For every DIO drop, there is a minimum of two words input of overhead
Max. words per Node	30 in / 32 out
Max. number of DIO Drops per Network	64
** Requires the use of the 140 NOM 21• 00 option module.	

## Change Configuration On The Fly (CCOTF)

Supported

## Battery and Clock

Type	3 V lithium
Service Life	1200 mAh
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 420 $\mu$ A @ 60 °C
TOD clock	+/-8.0 seconds/day @ 0...60 °C

**Diagnostics**

Power-up	RAM RAM address Executive Checksum User Logic Check Processor
Run Time	RAM RAM address Executive Checksum User Logic Check

## 140 CPU 651 60 Specifications

### General Specifications

Element	Description
Communication ports	1 Modbus (RS-232/RS-485) 1 Modbus Plus (RS-485) 1 USB 1 Ethernet
Bus current required	2760 mA
Max. number of communication modules supported at a time: <b>NOTE:</b> This includes any module combination of: NOM, NOC, NOE, PTQ PDP MV1 and MMS	6 including: <ul style="list-style-type: none"> <li>● up to 6 Quantum EIO distributed I/O modules 140 NOC 780 00</li> <li>● up to 2 Quantum EIO control head modules in the following configurations only: <ul style="list-style-type: none"> <li>○ two 140 NOC 781 00 modules – or –</li> <li>○ two 140 NOC 781 00.2 modules – or –</li> <li>○ one 140 NOC 781 00 module and one 140 NOC 781 00.2 module</li> </ul> </li> </ul> <p><b>NOTE:</b> You can enable IP forwarding in only <b>one</b> of the control head modules.</p>
Key switch	Yes
Key pad	Yes

### Processor

Function	Description
Model	Pentium
Clock speed	266 MHz
Coprocessor	Yes, built-in Ethernet
Watchdog timer	250 ms software adjustable

### Memory

Internal user memory	1024 kByte
Additional memory (with PCMCIA card)	7168 kByte

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (see *EcoStruxure™ Control Expert, Operating Modes*).

## Program Execution Time

Kilo Instruction executed per millisecond (Kins/ms)		Execution time per instruction (ms/Kins)	
100% Boolean	65% Boolean + 35% digital	100% Boolean	65% Boolean + 35% digital
10.28	10.07	0.097	0.099

**NOTE:** When considering the execution time with the RAM or the PCMCIA card, the values are identical as the program execution takes place within the CACHE memory.

## Reference Capacity

Discretes	65528 kByte max.
Registers	64976 kByte max.

## Local I/O

Max. I/O words	1024 bits/module with no limit on total LIO words
----------------	---

## S908 Remote I/O

Max. I/O words/drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

**NOTE:** The 140 CPU 651 60 is **not able** to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

## Ethernet Remote I/O

Max. I/O words/drop	400 in + 400 out
Max. number of remote drops	31 including: <ul style="list-style-type: none"> <li>● up to 31 Quantum drops (140 CRA 312 00)</li> <li>● up to 16 X80 drops (BMX CRA 312 •0)</li> </ul>
Max. number of I/O per Quantum drop	No limit
Max. number of I/O per X80 drop (BMX CRA 312 00)	up to 16 analog I/O
	up to 128 discrete I/O
Max. number of I/O per X80 drop (BMX CRA 312 10)	up to 184 analog I/O
	up to 1024 discrete I/O

**NOTE:** The 140 CPU 651 60 is **not able** to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

**NOTE:** Adding a complete Ethernet remote I/O drop online while PLC is in RUN is **not supported** by the 140 CPU 651 60.

## Distributed I/O

Number of networks per system	1 (3**)
Max. words per network	500 in / 500 out For every DIO drop, there is a minimum of two words input of overhead
Max. words/node	30 in / 32 out
Max. number of DIO drops/network	64
** Requires the use of the 140 NOM 21• 00 option module.	

## Change Configuration On The Fly (CCOTF)

Supported

## Battery and Clock

Type	3 V lithium
Service life	1200 mAh
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 µA @ 25 °C (ambient temperature)
	maximum: 420 µA @ 60 °C
TOD clock	+/-8.0 seconds/day @ 0...60 °C

**Diagnostics**

Power-up	RAM RAM address Executive Checksum User Logic Check Processor
Run Time	RAM RAM address Executive Checksum User Logic Check

## 140 CPU 651 60S Specifications

### General Specifications

Communication ports	1 Modbus (RS-232/RS-485) 1 Modbus Plus (RS-485) 1 USB 1 Ethernet
Bus current required	2760 mA
Max. number of NOE 771 11 modules supported	6
Key switch	Yes
Key pad	Yes

### Processor

Model	Pentium
Clock speed	266 MHz
Coprocessor	Yes, built-in Ethernet
Watchdog timer	250 ms software adjustable

### Memory

Internal user memory	1024 kByte
Additional memory (with PCMCIA card)	7168 kByte

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (*see EcoStruxure™ Control Expert, Operating Modes*).

### Reference Capacity

Discretes	65528 kByte max.
Registers	64976 kByte max.

### Local I/O

Max. I/O words	1024 bits/module with no limit on total LIO words
----------------	---

### S908 Remote I/O

Max. I/O words/drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

### Ethernet Remote I/O

Not supported

### Battery and Clock

Type	3 V lithium
Service life	1200 mAh
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 420 $\mu$ A @ 60 °C
TOD clock	+/-8.0 seconds/day @ 0...60 °C

### Diagnostics

Power-up & Run Time	RAM RAM address Executive CRC User Logic Check Processors Clock
---------------------	--

## 140 CPU 652 60 Specifications

### General Specifications

Element	Description
Communication ports	1 Modbus (RS-232/RS-485) 1 Modbus Plus (RS-485) 1 USB 1 Ethernet
Bus current required	2760 mA
Max. number of communication modules supported at a time: <b>NOTE:</b> This includes any module combination of: NOM, NOC, NOE, PTQ PDP MV1 and MMS	6 including: <ul style="list-style-type: none"> <li>● up to 6 Quantum EIO distributed I/O modules 140 NOC 780 00</li> <li>● up to 2 Quantum EIO control head modules in the following configurations only: <ul style="list-style-type: none"> <li>○ two 140 NOC 781 00 modules – or –</li> <li>○ two 140 NOC 781 00.2 modules – or –</li> <li>○ one 140 NOC 781 00 module and one 140 NOC 781 00.2 module</li> </ul> </li> </ul> <b>NOTE:</b> You can enable IP forwarding in only <b>one</b> of the control head modules.
Key switch	Yes
Key pad	Yes

### Processor

Function	Description
Model	Pentium
Clock speed	266 MHz
Coprocessor	Yes, built-in Ethernet
Watchdog timer	250 ms software adjustable

## Memory

Internal user memory	3072 kByte
Additional memory (with PCMCIA card)	7168 kByte

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (see *EcoStruxure™ Control Expert, Operating Modes*).

## Reference Capacity

Discretes	65528 kByte max.
Registers	64976 kByte max.

## Local I/O

Max. I/O words	1024 bits/module with no limit on total LIO words
----------------	---

## S908 Remote I/O

Max. I/O words/drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

**NOTE:** The 140 CPU 652 60 is able to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

## Ethernet Remote I/O

Max. I/O words/drop	400 in + 400 out
Max. number of remote drops	31 including: <ul style="list-style-type: none"> <li>● up to 31 Quantum drops (140 CRA 312 00)</li> <li>● up to 31 X80 drops (BMX CRA 312 •0)</li> </ul>
Max. number of I/O per Quantum drop	No limit
Max. number of I/O per X80 drop (BMX CRA 312 00)	up to 16 analog I/O
	up to 128 discrete I/O
Max. number of I/O per X80 drop (BMX CRA 312 10)	up to 184 analog I/O
	up to 1024 discrete I/O

**NOTE:** The 140 CPU 652 60 is able to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

**NOTE:** Adding a complete Ethernet remote I/O drop online while PLC is in RUN **is possible** with the 140 CPU 652 60.

## Distributed I/O

Number of networks per system	1 (3**)
Max. words per network	500 in / 500 out For every DIO drop, there is a minimum of two words input of overhead
Max. words/node	30 in / 32 out
Max. number of DIO drops/network	64
<b>**</b> Requires the use of the 140 NOM 21• 00 option module.	

## Change Configuration On The Fly (CCOTF)

Supported

## Battery and Clock

Type	3 V lithium
Service life	1200 mAh
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 420 $\mu$ A @ 60 °C
TOD clock	+/-8.0 seconds/day @ 0...60 °C

**Diagnostics**

Power-up	RAM RAM address Executive Checksum User Logic Check Processor
Run Time	RAM RAM address Executive Checksum User Logic Check

## 140 CPU 658 60 Specifications

### General Specifications

Element	Description
Communication ports	1 Modbus (RS-232/RS-485) 1 Modbus Plus (RS-485) 1 USB 1 Ethernet
Bus current required	2760 mA
Max. number of communication modules supported at a time: <b>NOTE:</b> This includes any module combination of: NOM, NOC, NOE, PTQ PDP MV1 and MMS	6 including: <ul style="list-style-type: none"> <li>● up to 6 Quantum EIO distributed I/O modules 140 NOC 780 00</li> <li>● up to 2 Quantum EIO control head modules in the following configurations only: <ul style="list-style-type: none"> <li>○ two 140 NOC 781 00 modules – or –</li> <li>○ two 140 NOC 781 00.2 modules – or –</li> <li>○ one 140 NOC 781 00 module and one 140 NOC 781 00.2 module</li> </ul> </li> </ul> <p><b>NOTE:</b> You can enable IP forwarding in only <b>one</b> of the control head modules.</p>
Key switch	Yes
Key pad	Yes

### Processor

Function	Description
Model	Pentium
Clock speed	266 MHz
Coprocessor	Yes, built-in Ethernet
Watchdog timer	250 ms software adjustable

### Memory

Internal memory	11264 kByte
-----------------	-------------

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (see *EcoStruxure™ Control Expert, Operating Modes*).

## Reference Capacity

Discretes	65528 kByte max.
Registers	64976 kByte max.

## Local I/O

Max. I/O words	1024 bits/module with no limit on total LIO words
----------------	---

## S908 Remote I/O

Max. I/O words/drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

**NOTE:** The 140 CPU 658 60 is able to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

## Ethernet Remote I/O

Max. I/O words/drop	400 in + 400 out
Max. number of remote drops	31 including: <ul style="list-style-type: none"> <li>● up to 31 Quantum drops (140 CRA 312 00)</li> <li>● up to 31 X80 drops (BMX CRA 312 *0)</li> </ul>
Max. number of I/O per Quantum drop	No limit
Max. number of I/O per X80 drop (BMX CRA 312 00)	up to 16 analog I/O up to 128 discrete I/O
Max. number of I/O per X80 drop (BMX CRA 312 10)	up to 184 analog I/O up to 1024 discrete I/O

**NOTE:** The 140 CPU 658 60 is able to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

**NOTE:** Adding a complete Ethernet remote I/O drop online while PLC is in RUN is possible with the 140 CPU 658 60.

## Distributed I/O

Number of networks per system	1 (3**)
Max. words per network	500 in / 500 out For every DIO drop, there is a minimum of two words input of overhead
Max. words/node	30 in / 32 out
Max. number of DIO drops/network	64
** Requires the use of the 140 NOM 21• 00 option module.	

## Change Configuration On The Fly (CCOTF)

Supported

## Battery and Clock

Type	3 V lithium
Service life	1200 mAh
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 420 $\mu$ A @ 60 °C
TOD clock	+/-8.0 seconds/day @ 0...60 °C

## Diagnostics

Power-up	RAM RAM address Executive Checksum User Logic Check Processor
Run Time	RAM RAM address Executive Checksum User Logic Check

## 140 CPU 670 60 Specifications

### Module Specifications

Component	Description
Communication ports	1 Modbus (RS-232/RS-485) 1 Modbus Plus (RS-485) 1 USB 1 Ethernet (used as a Hot Standby port)
Transmission Mode	Multi mode
Bus current required	2.5 A
Max. number of communication modules supported at a time: <b>NOTE:</b> This includes any module combination of: NOM, NOC, NOE, PTQ PDP MV1 and MMS	3 including: <ul style="list-style-type: none"> <li>● up to 3 Quantum EIO distributed I/O modules 140 NOC 780 00</li> <li>● up to 2 Quantum EIO control head modules in the following configurations only: <ul style="list-style-type: none"> <li>○ two 140 NOC 781 00 modules – or –</li> <li>○ two 140 NOC 781 00.2 modules – or –</li> <li>○ one 140 NOC 781 00 module and one 140 NOC 781 00.2 module</li> </ul> </li> </ul> <p><b>NOTE:</b> You can enable IP forwarding in only <b>one</b> of the control head modules.</p>
Key switch	Yes
Key pad	Yes

### Processor

Feature	Description
Model	Pentium
Clock speed	266 MHz
Coprocessor	Yes, Built-in Ethernet
Watchdog timer	250 ms software adjustable

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (see *EcoStruxure™ Control Expert, Operating Modes*).

## Memory

Internal user memory	512 kByte
Additional memory (with PCMCIA card)	7168 kByte
Max. HSBY Unlocated Data	254 kByte
Max. HSBY Located Data	128 kByte

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (see *EcoStruxure™ Control Expert, Operating Modes*).

## Program Execution Time

Kilo Instruction executed per millisecond (Kins/ms)		Execution time per instruction (ms/Kins)	
100% Boolean	65% Boolean + 35% digital	100% Boolean	65% Boolean + 35% digital
10.28	10.07	0.097	0.099

**NOTE:** When considering the execution time with the RAM or the PCMCIA card, the values are identical as the program execution takes place within the CACHE memory.

## Reference Capacity

Discretes	64 kByte max.
Registers	64 kByte max.

## S908 Remote I/O

Not supported

## Ethernet Remote I/O

Max. I/O words/drop	400 in + 400 out
Max. number of remote drops	up to 6 X80 drops (BMX CRA 312 *0)
Max. number of I/O per X80 drop (BMX CRA 312 00)	up to 16 analog I/O
	up to 128 discrete I/O
Max. number of I/O per X80 drop (BMX CRA 312 10)	up to 184 analog I/O
	up to 1024 discrete I/O

**NOTE:** The 140 CPU 670 60 is **not able** to handle the S908 remote I/O and Ethernet remote I/O architectures.

**NOTE:** Adding a complete Ethernet remote I/O drop online while PLC is in RUN is **not supported** by the 140 CPU 670 60.

## Change Configuration On The Fly (CCOTF)

Not supported

## Battery and Clock

Battery type	3 V Lithium
Service life	1.2 Ah
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 420 $\mu$ A @ 60 °C
TOD clock	+/-8.0 s/day @ 0...60 °C

## Diagnostic

Power-up	RAM RAM address Executive Checksum User Logic Check Processor
Run Time	RAM RAM address Executive Checksum User Logic Check

## 140 CPU 671 60 Specifications

### Module Specifications

Element	Description
Communication ports	1 Modbus (RS-232/RS-485) 1 Modbus Plus (RS-485) 1 USB 1 Ethernet (used as a Hot Standby port)
Transmission Mode	Multi mode
Bus current required	2.5 A
Max. number of communication modules supported at a time: <b>NOTE:</b> This includes any module combination of: NOM, NOC, NOE, PTQ PDP MV1 and MMS	6 including: <ul style="list-style-type: none"> <li>● up to 6 Quantum EIO distributed I/O modules 140 NOC 780 00</li> <li>● up to 2 Quantum EIO control head modules in the following configurations only: <ul style="list-style-type: none"> <li>○ two 140 NOC 781 00 modules – or –</li> <li>○ two 140 NOC 781 00.2 modules – or –</li> <li>○ one 140 NOC 781 00 module and one 140 NOC 781 00.2 module</li> </ul> </li> </ul> <b>NOTE:</b> You can enable IP forwarding in only <b>one</b> of the control head modules.
Key switch	Yes
Key pad	Yes

### Processor

Function	Description
Model	Pentium
Clock speed	266 MHz
Coprocessor	Yes, Built-in Ethernet
Watchdog timer	250 ms software adjustable

**NOTE:** For this processor with OS (Executive) version 2.8 or higher, the Hot Standby Primary/Standby system synchronization (the sum of the MAST task duration and the watchdog value) must not exceed 2000 ms (2 seconds).

## Memory

Internal user memory	1024 kByte
Additional memory (with PCMCIA card)	7168 kByte
Max. HSBY Unlocated Data	512 kByte
Max. HSBY Located Data	128 kByte

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (see *EcoStruxure™ Control Expert, Operating Modes*).

## Program Execution Time

Kilo Instruction executed per millisecond (Kins/ms)		Execution time per instruction (ms/Kins)	
100% Boolean	65% Boolean + 35% digital	100% Boolean	65% Boolean + 35% digital
10.28	10.07	0.097	0.099

**NOTE:** When considering the execution time with the RAM or the PCMCIA card, the values are identical as when the program execution takes place within the CACHE memory.

## Reference Capacity

Discretes	65528 kByte max.
Registers	64976 kByte max.

## S908 Remote I/O

Max. I/O words/drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

**NOTE:** The 140 CPU 671 60 is **not able** to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

## Ethernet Remote I/O

Max. I/O words/drop	400 in + 400 out
Max. number of remote drops	31 including: <ul style="list-style-type: none"> <li>● up to 31 Quantum drops (140 CRA 312 00)</li> <li>● up to 16 X80 drops (BMX CRA 312 •0)</li> </ul>
Max. number of I/O per Quantum drop	No limit
Max. number of I/O per X80 drop (BMX CRA 312 00)	up to 16 analog I/O
	up to 128 discrete I/O
Max. number of I/O per X80 drop (BMX CRA 312 10)	up to 184 analog I/O
	up to 1024 discrete I/O

**NOTE:** The 140 CPU 671 60 is **not able** to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

**NOTE:** Adding a complete Ethernet remote I/O drop online while PLC is in RUN is **not supported** by the 140 CPU 671 60.

## Change Configuration On The Fly (CCOTF)

Supported

## Battery and Clock

Battery type	3 V lithium
Service life	1.2 Ah
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 420 $\mu$ A @ 60 °C
TOD clock	+/-8.0 s/day @ 0...60 °C

## Diagnostic

Power-up	RAM RAM address Executive Checksum User Logic Check Processor
Run Time	RAM RAM address Executive Checksum User Logic Check

## 140 CPU 671 60S Specifications

### Module Specifications

Component	Description
Communication ports	1 Modbus (RS-232/RS-485) 1 Modbus Plus (RS-485) 1 USB 1 Ethernet (used as a Hot Standby port)
Transmission Mode	Multi mode
Bus current required	2.5 A
Maximum number of NOE 771 11 modules supported	6
Key switch	Yes
Key pad	Yes

### Processor

Feature	Description
Model	Pentium
Clock speed	266 MHz
Coprocessor	Yes, Built-in Ethernet
Watchdog timer	250 ms software adjustable

### Memory

Internal user memory	1024 kByte
Additional memory (with PCMCIA card)	7168 kByte
Max. HSBY Unlocated Data	385 kByte
Max. HSBY Located Data	128 kByte

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (*see EcoStruxure™ Control Expert, Operating Modes*).

### Reference Capacity

Discretes	65528 kByte max.
Registers	64976 kByte max.

**S908 Remote I/O**

Max. I/O words/drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

**Ethernet Remote I/O**

Not supported

**Battery and Clock**

Battery type	3 V Lithium
Service life	1.2 Ah
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 420 $\mu$ A @ 60 °C
TOD clock	+/-8.0 s/day @ 0...60 °C

**Diagnostic**

Power-up	RAM RAM address Executive Checksum User Logic Check Processor
Run Time	RAM RAM address Executive Checksum User Logic Check

## 140 CPU 672 60 Specifications

### Module Specifications

Component	Description
Communication ports	1 Modbus (RS-232/RS-485) 1 Modbus Plus (RS-485) 1 USB 1 Ethernet (used as a Hot Standby port)
Transmission Mode	Multi mode
Bus current required	2.5 A
Max. number of communication modules supported at a time: <b>NOTE:</b> This includes any module combination of: NOM, NOC, NOE, PTQ PDP MV1 and MMS	6 including: <ul style="list-style-type: none"> <li>● up to 6 Quantum EIO distributed I/O modules 140 NOC 780 00</li> <li>● up to 2 Quantum EIO control head modules in the following configurations only: <ul style="list-style-type: none"> <li>○ two 140 NOC 781 00 modules – or –</li> <li>○ two 140 NOC 781 00.2 modules – or –</li> <li>○ one 140 NOC 781 00 module and one 140 NOC 781 00.2 module</li> </ul> </li> </ul> <p><b>NOTE:</b> You can enable IP forwarding in only <b>one</b> of the control head modules.</p>
Key switch	Yes
Key pad	Yes

### Processor

Feature	Description
Model	Pentium
Clock speed	266 MHz
Coprocessor	Yes, Built-in Ethernet
Watchdog timer	250 ms software adjustable

## Memory

Internal user memory	3072 kByte
Additional memory (with PCMCIA card)	7168 kByte
Max. HSBY Unlocated Data	1536 kByte
Max. HSBY Located Data	128 kByte

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (see *EcoStruxure™ Control Expert, Operating Modes*).

## Reference Capacity

Discretes	65528 kByte max.
Registers	64976 kByte max.

## S908 Remote I/O

Max. I/O words/drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

**NOTE:** The 140 CPU 672 60 is able to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

## Ethernet Remote I/O

Max. I/O words/drop	400 in + 400 out
Max. number of remote drops	31 including: <ul style="list-style-type: none"> <li>● up to 31 Quantum drops (140 CRA 312 00)</li> <li>● up to 31 X80 drops (BMX CRA 312 •0)</li> </ul>
Max. number of I/O per Quantum drop	No limit
Max. number of I/O per X80 drop (BMX CRA 312 00)	up to 16 analog I/O
	up to 128 discrete I/O
Max. number of I/O per X80 drop (BMX CRA 312 10)	up to 184 analog I/O
	up to 1024 discrete I/O

**NOTE:** The 140 CPU 672 60 is able to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

## Change Configuration On The Fly (CCOTF)

Supported

## Battery and Clock

Battery type	3 V Lithium
Service life	1.2 Ah
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 420 $\mu$ A @ 60 °C
TOD clock	+/-8.0 s/day @ 0...60 °C

## Diagnostic

Power-up	RAM address Executive Checksum User Logic Check Processor
Run Time	RAM address Executive Checksum User Logic Check

## 140 CPU 672 61 Specifications

### Module Specifications

Component	Description
Communication ports	1 Modbus (RS-232/RS-485) 1 Modbus Plus (RS-485) 1 USB 1 Ethernet (used as a Hot Standby port)
Transmission Mode	Single mode
Bus current required	2.5 A
Max. number of communication modules supported at a time: <b>NOTE:</b> This includes any module combination of: NOM, NOC, NOE, PTQ PDP MV1 and MMS	6 including: <ul style="list-style-type: none"> <li>● up to 6 Quantum EIO distributed I/O modules 140 NOC 780 00</li> <li>● up to 2 Quantum EIO control head modules in the following configurations only: <ul style="list-style-type: none"> <li>○ one 140 NOC 781 00 module – or –</li> <li>○ one 140 NOC 781 00.2 module – or –</li> <li>○ one 140 NOC 781 00 module and one 140 NOC 781 00.2 module</li> </ul> </li> </ul> <p><b>NOTE:</b> You can enable IP forwarding in only <b>one</b> of the control head modules.</p>
Key switch	Yes
Key pad	Yes

### Processor

Feature	Description
Model	Pentium
Clock speed	266 MHz
Coprocessor	Yes, Built-in Ethernet
Watchdog timer	250 ms software adjustable

## Memory

Internal user memory	3072 kByte
Additional memory (with PCMCIA card)	7168 kByte
Max. HSBY Unlocated Data	1536 kByte
Max. HSBY Located Data	128 kByte

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see Memory usage (see *EcoStruxure™ Control Expert, Operating Modes*).

## Reference Capacity

Discrettes	65528 kByte max.
Registers	64976 kByte max.

## S908 Remote I/O

Max. I/O words/drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

**NOTE:** The 140 CPU 672 61 is able to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

## Ethernet Remote I/O

Max. I/O words/drop	400 in + 400 out
Max. number of remote drops	31 including: <ul style="list-style-type: none"> <li>● up to 31 Quantum drops (140 CRA 312 00)</li> <li>● up to 31 X80 drops (BMX CRA 312 •0)</li> </ul>
Max. number of I/O per Quantum drop	No limit
Max. number of I/O per X80 drop (BMX CRA 312 00)	up to 16 analog I/O
	up to 128 discrete I/O
Max. number of I/O per X80 drop (BMX CRA 312 10)	up to 184 analog I/O
	up to 1024 discrete I/O

**NOTE:** The 140 CPU 672 61 is able to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

**NOTE:** Adding a complete Ethernet remote I/O drop online while PLC is in RUN is **possible** with the 140 CPU 672 61.

## Change Configuration On The Fly (CCOTF)

Supported

## Battery and Clock

Battery type	3 V Lithium
Service life	1.2 Ah
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 420 $\mu$ A @ 60 °C
TOD clock	+/-8.0 s/day @ 0...60 °C

## Diagnostic

Power-up	RAM address Executive Checksum User Logic Check Processor
Run Time	RAM address Executive Checksum User Logic Check

## 140 CPU 678 61 Specifications

### Module Specifications

Component	Description
Communication ports	1 Modbus (RS-232/RS-485) 1 Modbus Plus (RS-485) 1 USB 1 Ethernet (used as a Hot Standby port)
Transmission Mode	Single mode
Bus current required	2.5 A
Max. number of communication modules supported at a time: <b>NOTE:</b> This includes any module combination of: NOM, NOC, NOE, PTQ PDP MV1 and MMS	6 including: <ul style="list-style-type: none"> <li>● up to 6 Quantum EIO distributed I/O modules 140 NOC 780 00</li> <li>● up to 2 Quantum EIO control head modules in the following configurations only: <ul style="list-style-type: none"> <li>○ two 140 NOC 781 00 modules – or –</li> <li>○ two 140 NOC 781 00.2 modules – or –</li> <li>○ one 140 NOC 781 00 module and one 140 NOC 781 00.2 module</li> </ul> </li> </ul> <p><b>NOTE:</b> You can enable IP forwarding in only <b>one</b> of the control head modules.</p>
Key switch	Yes
Key pad	Yes

### Processor

Feature	Description
Model	Pentium
Clock speed	266 MHz
Coprocessor	Yes, Built-in Ethernet
Watchdog timer	250 ms software adjustable

## Memory

Internal memory	11264 kByte
Max HSBY Unlocated Data	1536 kByte
Max HSBY Located Data	128 kByte

**NOTE:** Not all of the Internal memory is available for the user program due to memory overhead, such as user, system, configuration, diagnostic data, etc. For more information see the chapter Memory tab in the *Operating Modes Manual*.

## Reference Capacity

Discretes	65528 kByte max.
Registers	64976 kByte max.

## S908 Remote I/O

Max. I/O words/drop	64 in / 64 out*
Max. number of remote drops	31
* This information can be a mix of discrete or register I/O. For each word of configured I/O, one of the I/O words must be subtracted from the total available.	

**NOTE:** The 140 CPU 678 61 is able to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

## Ethernet Remote I/O

Max. I/O words/drop	400 in + 400 out
Max. number of remote drops	31 including: <ul style="list-style-type: none"> <li>● up to 31 Quantum drops (140 CRA 312 00)</li> <li>● up to 31 X80 drops (BMX CRA 312 •0)</li> </ul>
Max. number of I/O per Quantum drop	No limit
Max. number of I/O per X80 drop (BMX CRA 312 00)	up to 16 analog I/O
	up to 128 discrete I/O
Max. number of I/O per X80 drop (BMX CRA 312 10)	up to 184 analog I/O
	up to 1024 discrete I/O

**NOTE:** The 140 CPU 678 61 is able to handle the mix of S908 remote I/O and Ethernet remote I/O architectures.

**NOTE:** Adding a complete Ethernet remote I/O drop online while PLC is in RUN **is possible** with the 140 CPU 678 61.

## Change Configuration On The Fly (CCOTF)

Supported

## Battery and Clock

Battery type	3 V lithium
Service life	1.2 Ah
Shelf life	10 years with 0.5% loss of capacity/year
Battery load current @ power-off	typical: 14 $\mu$ A @ 25 °C (ambient temperature)
	maximum: 420 $\mu$ A @ 60 °C
TOD clock	+/-8.0 s/day @ 0...60 °C

## Diagnostic

Power-up	RAM address Executive Checksum User Logic Check Processor
Run Time	RAM address Executive Checksum User Logic Check

---

# Chapter 10

## Memory Cards for High End CPU

---

### Purpose

This chapter provides information on the memory cards for High End Controller modules.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Memory Cards for High End CPUs	206
Installing/Extracting PCMCIA Extension Cards on Advanced Quantum Processors	209
Changing the Batteries of a PCMCIA Memory Card	211
Battery Lifetimes for the PCMCIA Memory Card	215

## Memory Cards for High End CPUs

### Standard Memory Cards for PLCs

Standard memory cards for PLCs are classified in two groups:

- saved RAM memory extension cards
- Flash Eprom memory extension cards

### Saved RAM Memory Extension Cards

Saved RAM memory extension cards are typically used when generating and debugging an application program. The memory is saved by a removable battery integrated in the memory card.

### Flash Eprom Memory Extension Cards

Flash Eprom memory extension cards are typically used after the process of debugging the application program is completed. Such cards allow only the global transfer of the application; their main purpose is to avoid risks often associated with battery back-ups.

### References for Standard Memory Extension Cards

The following table indicates the compatibility of the cards with the various processors:

Product Reference	Type/Capacity	
	Application	File
TSX MFP P 512K	Flash Eprom 512 kb	0
TSX MFP P 001M	Flash Eprom 1024 kb	0
TSX MFP P 002M	Flash Eprom 2048 kb	0
TSX MFP P 004M	Flash Eprom 4096 kb	0

### Application + Files Type Memory Extension Cards

In addition to the conventional application storage area (program + constants), these memory cards also maintain a file area used by the program to archive and/or restore data.

Here are two sample applications:

- automatic storage of application data and remote consultation via modem
- storage of manufacturing formulas.

There are two types of memory cards:

- Saved RAM memory extension cards: application + files. The memory is saved by a removable battery built into the memory card.
- Flash Eprom memory extension cards: application + files. In this instance, the data storage area is maintained in saved RAM, which implies that this type of card must be equipped with a back-up battery.

### Card Reference Numbers

The following table provides the card reference numbers for the applications + file-type memory extension card, and the compatibility of these cards with the processors:

Product reference	Technology	Capacity	
		Application area	File area (RAM type)
TSX MRP C 768K (1)	RAM	768 kb	
		192 to 768 kb	0 to 576 kb
TSX MRP C 001M (1)	RAM	1024 kb	
		192 to 1024 kb	0 to 832 kb
TSX MRP C 001M7 (1)	RAM	1792 kb	
		192 to 1792 kb	0 to 1600 kb
TSX MRP C 002M (1)	RAM	2048 kb	
		192 to 2048 kb	0 to 1856 kb
TSX MRP C 003M (1)	RAM	3072 kb	
		192 to 3072 kb	0 to 2880 kb
TSX MRP C 007M (1)	RAM	7168 kb	
		192 to 7168kb	0 to 6976 kb
TSX MCP C 512K	Flash Eprom	512 kb	512 kb
TSX MCP C 001M	Flash Eprom	1024 kb	512 kb
TSX MCP C 002M	Flash Eprom	2048 kb	1024 kb
TSX MCP C 004M	Flash Eprom	4096 kb	2048 kb
(1) PCMCIA having their applications memory areas and floating capacity and unfrozen files			

### File-type Memory Extension Cards without Application

These memory cards contain data. There is no application field (program + constants). These memory extension file storage cards are of the *saved RAM* type. The memory is saved by a removable battery built into the memory card.

**Card Reference Numbers**

The following table provides reference numbers for memory extension file-type storage cards (without application), and indicates the compatibility of these cards with the various processors:

Product reference	Technology	Capacity	
		Application area	File area (RAM type)
TSX MRP F 004M	RAM	4096 kb	
		0	4096 kb
TSX MRP F 008M	RAM	8192 kb	
		0	8192 kb

## Installing/Extracting PCMCIA Extension Cards on Advanced Quantum Processors

### Overview

#### WARNING

##### UNINTENDED EQUIPMENT OPERATION

Ensure that the protective cover is closed when the processor is running to maintain enclosure environmental ratings.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Memory Cards Located in Slot A (Top)

The extraction (or absence) of the cover, or of a data- or file-type memory card and case has no effect on PLC operations. In this case, the read/write functions of the memory card indicate an error if the application is in RUN mode.

The extraction of the application-type memory card and the card case causes the PLC to stop without saving the application context. In this case, the module outputs change to fallback mode. Inserting the case and the memory card containing the application causes a cold start.

#### WARNING

##### UNINTENDED EQUIPMENT OPERATION

Ensure that the right user application is contained in the memory card before inserting it into the PLC. If the application contained in the memory card includes the RUN AUTO option, then the PLC will automatically restart in RUN mode with this application as soon as the inserted memory card content is restored to the PLC.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Memory Cards Located in Slot B (Bottom)

The PCMCIA memory card and its case can be inserted in slot B of the processor when the PLC is turned on.

Slot B for data and file-type memory cards is not allowed to be used in a Quantum safety CPU, because this data storage is not available for safety projects.

#### WARNING

##### LOSS OF ABILITY TO PERFORM SAFETY FUNCTIONS

Do not use slot B for memory cards with Safety projects in Quantum Safety PLC.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Installing/Extracting PCMCIA Cards

The following tables provide step-by-step instructions for installing and extracting PCMCIA cards. Installing the memory card on the Quantum advanced CPU module requires a case.



### Position of the PCMCIA Card in the Processor

The following table describes the possible slots for the different types of PCMCIA cards in the various PLC processors:

PCMCIA card	Slot A	Slot B
Standard: TSX MRPP and MFPP	Yes	No
Application and files: TSX MRPC and MCPC	Yes	No
Data or Files: TSX MRPF	Yes	Yes

### Installing the Card in the Case

The following steps are to be performed regardless of the PCMCIA card type:

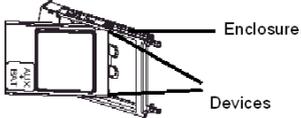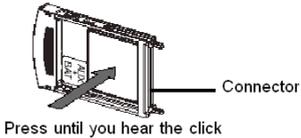Step	Action	Illustration
1	Position the memory card in the case at an oblique angle using the two attachment tabs.	
2	Fully insert the memory card in the case. Now the card is solidly attached to the case.	

### Installing the Card in the PLC

Before installing the card, note that if the program contained in the PCMCIA memory card includes the RUN AUTO option, the processor will automatically restart in RUN mode immediately after the card is inserted. Carry out the following steps to install the memory card into the processor:

Step	Action
1	To remove the protective cover, unlock it and then remove it from the PLC.
2	Place the PCMCIA card/case assembly in the open slot. Fully insert the card/case assembly, then press lightly on the case to connect the card.

## Changing the Batteries of a PCMCIA Memory Card

### General Points

Memory cards:

- TSX MRP P• standard RAM
- TSX MRP C• RAM for files and application and TSX MCP C• Flash EPROM
- TSX MRP F• data and file-type

have 2 backup batteries, TSX BAT M02 (main) and TSX BAT M03 (auxiliary), which need to be changed periodically.

Two methods are possible:

- one is preventive, based on a periodic change of batteries, without first checking their status,
- the other is predictive, based on the signal sent by a system but, but is only possible for certain memory cards.

### Preventive Method

This method is valid for memory cards versions and the PLCs that use those cards. Change both batteries according to the PV of the PCMCIA card, the PLC use, and the lifetime of batteries (*see page 215*). It does not matter which battery you change first: the application is preserved by the memory card. For the operate mode for changing the batteries: see the service instructions provided with the memory cards.

#### NOTE:

- Batteries must not be removed from their positions simultaneously. One battery backs up the data and applications while the other is being replaced.
- Install the batteries as shown in the following diagrams, noting the correct polarity (+ and -)
- the memory card must not exceed 24 hours without its main battery in working order,
- to save the auxiliary batteries, you can replace them every 1.5 years. In this case, the maintenance procedure is a bit more complex, because for some memory cards you must remember to change the auxiliary battery only one time out of 3.
- the service lives shown above were calculated for the most unfavorable case: ambient temperature around the PLC at 60 °C, and the PLC switched on for 21% of the time in the year (which corresponds to an 8 hour rotation per day with 30 maintenance stoppage days per year).

### Predictive Method

This is maintenance based on using bits %S67 and %S75 and using the PCMCIA indicator on the Quantum interface. This method assumes that the auxiliary battery is changed preventively every 1.5 years. It is only possible:

- with Unity Pro  $\geq$  2.02,

**NOTE:** Unity Pro is the former name of Control Expert for version 13.1 or earlier.

- if the memory card is installed in the upper or lower PCMCIA slot on Quantum processors 140 CPU 6•••.

When system bit %S67 (card in the top slot) or %S75 (card in the bottom slot) changes to 1 or the PCMCIA indicator on the processor interface flashes, it means that the main battery is weak. You have 8 days to replace the battery, as shown in the following tables.

**NOTE:** Before turning on the PLC or removing the memory card, save the project in Control Expert. If the PLC must be left off or if the memory card must be outside the PLC for more than 8 days, and you have exceeded the service life of the main battery, then back up the application in Control Expert.





## Changing the Batteries

Carry out the following steps:

Step	Action
1	Take the card out of its slot ( <i>see Premium and Atrium using EcoStruxure™ Control Expert, Processors, racks and power supply modules, Implementation Manual</i> ).
2	Separate the PCMCIA card ( <i>see Premium and Atrium using EcoStruxure™ Control Expert, Processors, racks and power supply modules, Implementation Manual</i> ) from its clip (or caddy).
3	Hold the PCMCIA card so you can access the battery slot. This is at the end of the card without the connector.
4	Replacement of the TSX BAT M02 battery: see table 1. Replacement of the TSX BAT M03 battery: see table 2.
5	Attach the PCMCIA card ( <i>see Premium and Atrium using EcoStruxure™ Control Expert, Processors, racks and power supply modules, Implementation Manual</i> ) to its clip (or caddy).
6	Place the card back in the PLC. ( <i>see Premium and Atrium using EcoStruxure™ Control Expert, Processors, racks and power supply modules, Implementation Manual</i> )



**Procedure for the TSX BAT M02 Battery:**

Table 1

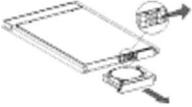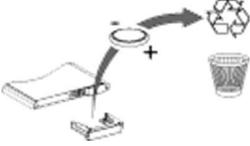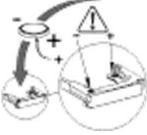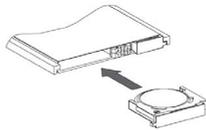Step	Action	Illustration
1	Toggle the changeover lever toward the <b>TSX BAT M02 (MAIN)</b> battery in order to remove drawer from the main battery.	
2	Remove the used battery from its holder:	
3	Place the new battery in the holder, taking care to respect the polarity.	
4	Insert the holder containing the battery in the card.	

**Procedure for the TSX BAT M03 Battery:**

Table 2

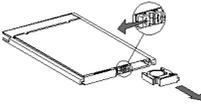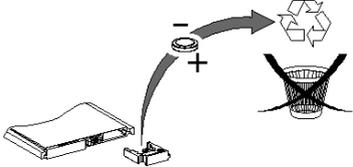Step	Action	Illustration
1	Toggle the changeover lever toward the <b>TSX BAT M03 (AUX)</b> battery in order to remove drawer from the battery.	
2	Remove the used battery from its holder:	
3	Place the new battery in the holder, taking care to respect the polarity.	
4	Insert the holder containing the battery in the card.	

## Battery Lifetimes for the PCMCIA Memory Card

### Purpose

The purpose of this document is to give detailed information about the lifetime of batteries inside PCMCIA memory cards. The estimation of these lifetimes are based on data from component manufacturers.

### Scope

The lifetime information is estimated for:

- RAM PCMCIA memory cards,
- The three different cases of Product Version (PV): PV1/2/3, PV4/5 and PV6,
- Four ambient temperatures for the PLC location: 25°C / 40°C / 50°C / 60°C,
- Four different usage cases of the PCMCIA: 100%, 92%, 66% and 33% of PLC power-up time. These values are for the following customer configurations:
  - 100%: PLC powered up all year long or during 51 weeks,
  - 92%: PLC powered up all year long except during one month of maintenance,
  - 66%: PLC powered up all year long except during all weekends plus one month of maintenance,
  - 33%: PLC powered up all year long 12 hours a day, except during all weekends plus one month of maintenance.
- A Min (minimum) and a Typical lifetime value:
  - The Min value comes from the most unfavorable characteristics given by the component manufacturers. The actual observed lifetime will be greater than this value.
  - The typical value comes from the typical characteristics of the component.

### Main Battery Lifetime of PV1/2/3 PCMCIA (in Years)

The table below presents the lifetime of main battery TSX BAT M01(PV1/2/3) for PCMCIA memory cards:

PV1/2/3	For a 25°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	7.10	7.10	6.71	5.58	5.77	3.36	4.82	2.20
TSX MCP C 512K	7.10	7.10	6.71	5.65	5.77	3.46	4.82	2.28
TSX MCP C 002M	7.10	7.10	6.29	3.82	4.66	1.57	3.45	0.88
TSX MRP P128K	7.10	7.10	6.71	5.58	5.77	3.36	4.82	2.20
TSX MRP P224K	7.10	7.10	6.71	5.65	5.77	3.46	4.82	2.28
TSX MRP P384K	7.10	7.10	6.71	4.99	5.77	2.60	4.82	1.59
TSX MRP C448K	7.10	7.10	6.29	4.65	4.66	2.24	3.45	1.33

PV1/2/3	For a 25°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MRP C768K	7.10	7.10	6.29	4.65	4.66	2.24	3.45	1.33
TSX MRP C001M	7.10	7.10	5.91	3.95	3.91	1.66	2.68	0.94
TSX MRP C01M7	7.10	7.10	5.58	3.43	3.36	1.32	2.20	0.72
TSX MRP C002M	7.10	7.10	5.91	3.34	3.91	1.26	2.68	0.69
TSX MRP C003M	7.10	7.10	5.58	2.60	3.36	0.87	2.20	0.47
TSX MRP C007M	7.10	7.10	4.56	1.59	2.16	0.46	1.27	0.24
TSX MRP F004M	7.10	7.10	5.58	2.60	3.36	0.87	2.20	0.47
TSX MRP F008M	7.10	7.10	4.56	1.59	2.16	0.46	1.27	0.24

PV1/2/3	For a 40°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	3.55	3.55	3.54	3.20	3.54	2.46	3.48	1.87
TSX MCP C 512K	3.55	3.55	3.54	3.22	3.54	2.51	3.48	1.93
TSX MCP C 002M	3.55	3.55	3.42	2.53	3.08	1.34	2.71	0.82
TSX MRP P128K	3.55	3.55	3.54	3.20	3.54	2.46	3.48	1.87
TSX MRP P224K	3.55	3.55	3.54	3.22	3.54	2.51	3.48	1.93
TSX MRP P384K	3.55	3.55	3.54	3.00	3.54	2.02	3.48	1.41
TSX MRP C448K	3.55	3.55	3.42	2.87	3.08	1.80	2.71	1.20
TSX MRP C768K	3.55	3.55	3.42	2.87	3.08	1.80	2.71	1.20
TSX MRP C001M	3.55	3.55	3.30	2.59	2.74	1.40	2.21	0.87
TSX MRP C01M7	3.55	3.55	3.20	2.35	2.46	1.15	1.87	0.69
TSX MRP C002M	3.55	3.55	3.30	2.31	2.74	1.11	2.21	0.65
TSX MRP C003M	3.55	3.55	3.20	1.93	2.46	0.80	1.87	0.45
TSX MRP C007M	3.55	3.55	2.84	1.31	1.75	0.44	1.16	0.24
TSX MRP F004M	3.55	3.55	3.20	1.93	2.46	0.80	1.87	0.45
TSX MRP F008M	3.55	3.55	2.84	1.31	1.75	0.44	1.16	0.24

PV1/2/3	For a 50°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	2.35	2.35	2.42	2.25	2.69	2.02	3.10	1.75
TSX MCP C 512K	2.35	2.35	2.42	2.26	2.69	2.05	3.10	1.81
TSX MCP C 002M	2.35	2.35	2.36	1.90	2.42	1.20	2.47	0.80
TSX MRP P128K	2.35	2.35	2.42	2.25	2.69	2.02	3.10	1.75
TSX MRP P224K	2.35	2.35	2.42	2.26	2.69	2.05	3.10	1.81
TSX MRP P384K	2.35	2.35	2.42	2.15	2.69	1.71	3.10	1.34
TSX MRP C448K	2.35	2.35	2.36	2.09	2.42	1.55	2.47	1.15
TSX MRP C768K	2.35	2.35	2.36	2.09	2.42	1.55	2.47	1.15
TSX MRP C001M	2.35	2.35	2.31	1.93	2.20	1.25	2.05	0.85
TSX MRP C01M7	2.35	2.35	2.25	1.80	2.02	1.04	1.75	0.67
TSX MRP C002M	2.35	2.35	2.31	1.77	2.20	1.01	2.05	0.64
TSX MRP C003M	2.35	2.35	2.25	1.54	2.02	0.75	1.75	0.44
TSX MRP C007M	2.35	2.35	2.07	1.12	1.51	0.42	1.11	0.23
TSX MRP F004M	2.35	2.35	2.25	1.54	2.02	0.75	1.75	0.44
TSX MRP F008M	2.35	2.35	2.07	1.12	1.51	0.42	1.11	0.23

PV1/2/3	For a 60°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	1.57	1.57	1.63	1.56	1.91	1.54	2.40	1.50
TSX MCP C 512K	1.57	1.57	1.63	1.56	1.91	1.56	2.40	1.54
TSX MCP C 002M	1.57	1.57	1.61	1.38	1.77	1.01	2.00	0.74
TSX MRP P128K	1.57	1.57	1.63	1.56	1.91	1.54	2.40	1.50
TSX MRP P224K	1.57	1.57	1.63	1.56	1.91	1.56	2.40	1.54
TSX MRP P384K	1.57	1.57	1.63	1.51	1.91	1.36	2.40	1.19
TSX MRP C448K	1.57	1.57	1.61	1.47	1.77	1.25	2.00	1.04
TSX MRP C768K	1.57	1.57	1.61	1.47	1.77	1.25	2.00	1.04
TSX MRP C001M	1.57	1.57	1.58	1.40	1.65	1.05	1.72	0.78
TSX MRP C01M7	1.57	1.57	1.56	1.33	1.54	0.90	1.50	0.63
TSX MRP C002M	1.57	1.57	1.58	1.31	1.65	0.87	1.72	0.60

PV1/2/3	For a 60°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MRP C003M	1.57	1.57	1.56	1.18	1.54	0.67	1.50	0.42
TSX MRP C007M	1.57	1.57	1.47	0.92	1.23	0.40	1.00	0.23
TSX MRP F004M	1.57	1.57	1.56	1.18	1.54	0.67	1.50	0.42
TSX MRP F008M	1.57	1.57	1.47	0.92	1.23	0.40	1.00	0.23

### Main Battery Lifetime of PV4/5 PCMCIA (in Years)

The table below presents the lifetime of main battery TSX BAT M02 (PV4/5) for PCMCIA memory cards:

PV4/5	For a 25°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	7.22	7.22	7.15	6.27	7.02	4.48	6.76	3.23
TSX MCP C 512K	7.22	7.22	7.15	6.33	7.02	4.59	6.76	3.35
TSX MCP C 002M	7.22	7.22	6.83	4.69	5.90	2.25	4.96	1.33
TSX MRP P128K	7.22	7.22	7.15	6.27	7.02	4.48	6.76	3.23
TSX MRP P224K	7.22	7.22	7.15	6.33	7.02	4.59	6.76	3.35
TSX MRP P384K	7.22	7.22	7.15	5.77	7.02	3.57	6.76	2.36
TSX MRP C448K	7.22	7.22	6.83	5.47	5.90	3.12	4.96	1.99
TSX MRP C768K	7.22	7.22	6.83	5.47	5.90	3.12	4.96	1.99
TSX MRP C001M	7.22	7.22	6.54	4.82	5.09	2.37	3.91	1.41
TSX MRP C01M7	7.22	7.22	6.27	4.30	4.48	1.91	3.23	1.10
TSX MRP C002M	7.22	7.22	6.54	4.20	5.09	1.83	3.91	1.04
TSX MRP C003M	7.22	7.22	6.27	3.41	4.48	1.29	3.23	0.71
TSX MRP C007M	7.22	7.22	5.39	2.21	3.02	0.70	1.91	0.37
TSX MRP F004M	7.22	7.22	6.27	3.41	4.48	1.29	3.23	0.71
TSX MRP F008M	7.22	7.22	5.39	2.21	3.02	0.70	1.91	0.37

PV4/5	For a 40°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	4.63	4.63	4.72	4.32	5.09	3.61	5.59	2.94
TSX MCP C 512K	4.63	4.63	4.72	4.35	5.09	3.68	5.59	3.04
TSX MCP C 002M	4.63	4.63	4.58	3.51	4.48	2.00	4.30	1.28
TSX MRP P128K	4.63	4.63	4.72	4.32	5.09	3.61	5.59	2.94
TSX MRP P224K	4.63	4.63	4.72	4.35	5.09	3.68	5.59	3.04
TSX MRP P384K	4.63	4.63	4.72	4.08	5.09	2.99	5.59	2.20
TSX MRP C448K	4.63	4.63	4.58	3.93	4.48	2.68	4.30	1.87
TSX MRP C768K	4.63	4.63	4.58	3.93	4.48	2.68	4.30	1.87
TSX MRP C001M	4.63	4.63	4.45	3.58	4.00	2.10	3.49	1.35
TSX MRP C01M7	4.63	4.63	4.32	3.29	3.61	1.73	2.94	1.06
TSX MRP C002M	4.63	4.63	4.45	3.23	4.00	1.66	3.49	1.01
TSX MRP C003M	4.63	4.63	4.32	2.74	3.61	1.21	2.94	0.69
TSX MRP C007M	4.63	4.63	3.89	1.91	2.60	0.67	1.80	0.36
TSX MRP F004M	4.63	4.63	4.32	2.74	3.61	1.21	2.94	0.69
TSX MRP F008M	4.63	4.63	3.89	1.91	2.60	0.67	1.80	0.36

PV4/5	For a 50°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	2.58	2.58	2.69	2.56	3.12	2.50	3.89	2.39
TSX MCP C 512K	2.58	2.58	2.69	2.56	3.12	2.53	3.89	2.45
TSX MCP C 002M	2.58	2.58	2.64	2.25	2.88	1.61	3.22	1.16
TSX MRP P128K	2.58	2.58	2.69	2.56	3.12	2.50	3.89	2.39
TSX MRP P224K	2.58	2.58	2.69	2.56	3.12	2.53	3.89	2.45
TSX MRP P384K	2.58	2.58	2.69	2.47	3.12	2.18	3.89	1.88
TSX MRP C448K	2.58	2.58	2.64	2.41	2.88	2.01	3.22	1.63
TSX MRP C768K	2.58	2.58	2.64	2.41	2.88	2.01	3.22	1.63
TSX MRP C001M	2.58	2.58	2.60	2.28	2.68	1.67	2.74	1.23
TSX MRP C01M7	2.58	2.58	2.56	2.15	2.50	1.42	2.39	0.98
TSX MRP C002M	2.58	2.58	2.60	2.13	2.68	1.38	2.74	0.94

PV4/5	For a 50°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MRP C003M	2.58	2.58	2.56	1.90	2.50	1.05	2.39	0.66
TSX MRP C007M	2.58	2.58	2.40	1.46	1.97	0.62	1.58	0.35
TSX MRP F004M	2.58	2.58	2.56	1.90	2.50	1.05	2.39	0.66
TSX MRP F008M	2.58	2.58	2.40	1.46	1.97	0.62	1.58	0.35

PV4/5	For a 60°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	1.75	1.75	1.84	1.78	2.21	1.88	2.95	2.00
TSX MCP C 512K	1.75	1.75	1.84	1.78	2.21	1.90	2.95	2.04
TSX MCP C 002M	1.75	1.75	1.82	1.62	2.09	1.33	2.55	1.06
TSX MRP P128K	1.75	1.75	1.84	1.78	2.21	1.88	2.95	2.00
TSX MRP P224K	1.75	1.75	1.84	1.78	2.21	1.90	2.95	2.04
TSX MRP P384K	1.75	1.75	1.84	1.73	2.21	1.70	2.95	1.63
TSX MRP C448K	1.75	1.75	1.82	1.71	2.09	1.59	2.55	1.44
TSX MRP C768K	1.75	1.75	1.82	1.71	2.09	1.59	2.55	1.44
TSX MRP C001M	1.75	1.75	1.80	1.64	1.98	1.37	2.24	1.11
TSX MRP C01M7	1.75	1.75	1.78	1.57	1.88	1.20	2.00	0.91
TSX MRP C002M	1.75	1.75	1.80	1.56	1.98	1.17	2.24	0.87
TSX MRP C003M	1.75	1.75	1.78	1.44	1.88	0.92	2.00	0.62
TSX MRP C007M	1.75	1.75	1.70	1.17	1.56	0.57	1.40	0.34
TSX MRP F004M	1.75	1.75	1.78	1.44	1.88	0.92	2.00	0.62
TSX MRP F008M	1.75	1.75	1.70	1.17	1.56	0.57	1.40	0.34

### Main Battery Lifetime of PV6 PCMCIA (in Years)

The table below presents the lifetime of main battery TSX BAT M02 (PV6) for PCMCIA memory cards:

PV6	For a 25°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	7.2	7.2	7.2	6.3	7.0	4.5	6.8	3.2
TSX MCP C 512K	7.2	7.2	7.2	6.5	7.0	5.1	6.8	3.9
TSX MCP C 002M	7.2	7.2	6.8	5.8	5.9	3.6	5.0	2.4
TSX MRP P128K	7.2	7.2	7.2	6.3	7.0	4.5	6.8	3.2
TSX MRP P224K	7.2	7.2	7.2	6.5	7.0	5.1	6.8	3.9
TSX MRP P384K	7.2	7.2	7.2	6.5	7.0	5.1	6.8	3.9
TSX MRP C448K	7.2	7.2	6.8	5.8	5.9	3.6	5.0	2.4
TSX MRP C768K	7.2	7.2	6.8	5.8	5.9	3.6	5.0	2.4
TSX MRP C001M	7.2	7.2	6.5	5.2	5.1	2.8	3.9	1.7
TSX MRP C01M7	7.2	7.2	6.3	4.7	4.5	2.3	3.2	1.4
TSX MRP C002M	7.2	7.2	6.5	5.2	5.1	2.8	3.9	1.7
TSX MRP C003M	7.2	7.2	6.3	4.7	4.5	2.3	3.2	1.4
TSX MRP C007M	7.2	7.2	5.4	3.5	3.0	1.3	1.9	0.7
TSX MRP F004M	7.2	7.2	6.3	4.7	4.5	2.3	3.2	1.4
TSX MRP F008M	7.2	7.2	5.4	3.5	3.0	1.3	1.9	0.7

PV6	For a 40°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	4.6	4.6	4.7	4.3	5.1	3.6	5.6	2.9
TSX MCP C 512K	4.6	4.6	4.7	4.4	5.1	4.0	5.6	3.5
TSX MCP C 002M	4.6	4.6	4.6	4.1	4.5	3.0	4.3	2.2
TSX MRP P128K	4.6	4.6	4.7	4.3	5.1	3.6	5.6	2.9
TSX MRP P224K	4.6	4.6	4.7	4.4	5.1	4.0	5.6	3.5
TSX MRP P384K	4.6	4.6	4.7	4.4	5.1	4.0	5.6	3.5
TSX MRP C448K	4.6	4.6	4.6	4.1	4.5	3.0	4.3	2.2
TSX MRP C768K	4.6	4.6	4.6	4.1	4.5	3.0	4.3	2.2

PV6	For a 40°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MRP C001M	4.6	4.6	4.4	3.8	4.0	2.4	3.5	1.6
TSX MRP C01M7	4.6	4.6	4.3	3.5	3.6	2.0	2.9	1.3
TSX MRP C002M	4.6	4.6	4.4	3.8	4.0	2.4	3.5	1.6
TSX MRP C003M	4.6	4.6	4.3	3.5	3.6	2.0	2.9	1.3
TSX MRP C007M	4.6	4.6	3.9	2.8	2.6	1.2	1.8	0.7
TSX MRP F004M	4.6	4.6	4.3	3.5	3.6	2.0	2.9	1.3
TSX MRP F008M	4.6	4.6	3.9	2.8	2.6	1.2	1.8	0.7

PV6	For a 50°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	2.6	2.6	2.7	2.6	3.1	2.5	3.9	2.4
TSX MCP C 512K	2.6	2.6	2.7	2.6	3.1	2.7	3.9	2.7
TSX MCP C 002M	2.6	2.6	2.6	2.5	2.9	2.2	3.2	1.9
TSX MRP P128K	2.6	2.6	2.7	2.6	3.1	2.5	3.9	2.4
TSX MRP P224K	2.6	2.6	2.7	2.6	3.1	2.7	3.9	2.7
TSX MRP P384K	2.6	2.6	2.7	2.6	3.1	2.7	3.9	2.7
TSX MRP C448K	2.6	2.6	2.6	2.5	2.9	2.2	3.2	1.9
TSX MRP C768K	2.6	2.6	2.6	2.5	2.9	2.2	3.2	1.9
TSX MRP C001M	2.6	2.6	2.6	2.4	2.7	1.9	2.7	1.5
TSX MRP C01M7	2.6	2.6	2.6	2.3	2.5	1.6	2.4	1.2
TSX MRP C002M	2.6	2.6	2.6	2.4	2.7	1.9	2.7	1.5
TSX MRP C003M	2.6	2.6	2.6	2.3	2.5	1.6	2.4	1.2
TSX MRP C007M	2.6	2.6	2.4	1.9	2.0	1.1	1.6	0.7
TSX MRP F004M	2.6	2.6	2.6	2.3	2.5	1.6	2.4	1.2
TSX MRP F008M	2.6	2.6	2.4	1.9	2.0	1.1	1.6	0.7

PV6	For a 60°C PLC ambient temperature							
	100% powered up		92% PU (30d maint.		66% PU (WE. 30d maint.		33% PU (12h.WE. 30d maint.	
	Typical	Min	Typical	Min	Typical	Min	Typical	Min
TSX MCP C 224K	1.8	1.8	1.8	1.8	2.2	1.9	3.0	2.0
TSX MCP C 512K	1.8	1.8	1.8	1.8	2.2	2.0	3.0	2.2
TSX MCP C 002M	1.8	1.8	1.8	1.7	2.1	1.7	2.5	1.6
TSX MRP P128K	1.8	1.8	1.8	1.8	2.2	1.9	3.0	2.0
TSX MRP P224K	1.8	1.8	1.8	1.8	2.2	2.0	3.0	2.2
TSX MRP P384K	1.8	1.8	1.8	1.8	2.2	2.0	3.0	2.2
TSX MRP C448K	1.8	1.8	1.8	1.7	2.1	1.7	2.5	1.6
TSX MRP C768K	1.8	1.8	1.8	1.7	2.1	1.7	2.5	1.6
TSX MRP C001M	1.8	1.8	1.8	1.7	2.0	1.5	2.2	1.3
TSX MRP C01M7	1.8	1.8	1.8	1.6	1.9	1.3	2.0	1.1
TSX MRP C002M	1.8	1.8	1.8	1.7	2.0	1.5	2.2	1.3
TSX MRP C003M	1.8	1.8	1.8	1.6	1.9	1.3	2.0	1.1
TSX MRP C007M	1.8	1.8	1.7	1.4	1.6	0.9	1.4	0.6
TSX MRP F004M	1.8	1.8	1.8	1.6	1.9	1.3	2.0	1.1
TSX MRP F008M	1.8	1.8	1.7	1.4	1.6	0.9	1.4	0.6

### Minimum Lifetime of the Main Battery, in a Powered Down PLC

In a powered down PLC, the minimum lifetime of the main battery is 6 months in PV6 PCMCIA's.

### Auxiliary Battery Lifetime

The auxiliary battery TSX BATM 03 is included in the PCMCIA product. Whatever the usage cases and ambient temperature, the lifetime of the auxiliary battery is:

- 5 years in PV1/2/3
- 1.7 years in PV4/5
- 5 years in PV6



---

# Part III

## Power Supply Modules (CPS)

---

### Introduction

This part provides information on the Quantum Power Supply modules.

### What Is in This Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
11	General Information	227
12	140 CPS 111 00: 115/230 VAC Standalone 3 A Power Supply Module	243
13	140 CPS 111 00 (PV 01 or greater): 115/230 VAC Standalone Power Supply Module	247
14	140 CPS 114 00: 115/230 VAC Standalone 8 A Power Supply Module	251
15	140 CPS 114 10: 115/230 VAC Standalone/Summable 8 A Power Supply Module	255
16	140 CPS 114 20: 115/230 VAC Standalone/Summable 11 A Power Supply Module	259
17	140 CPS 124 00: 115/230 VAC Standalone/Redundant 8 A Power Supply Module	265
18	140 CPS 124 20: 115/230 VAC Standalone/Redundant 11 A Power Supply Module	269
19	140 CPS 211 00: 24 VDC Standalone 3 A Power Supply Module	275
20	140 CPS 214 00: 24 VDC Standalone/Summable 7–8 A Power Supply Module	279
21	140 CPS 224 00: 24 VDC Standalone/Redundant 6–8 A Power Supply Module	285
22	140 CPS 414 00: 48 VDC Standalone/Summable 7–8 A Power Supply Module	291
23	140 CPS 424 00: 48 VDC Standalone/Redundant 6–8 A Power Supply Module	297
24	140 CPS 511 00: 125 VDC Standalone 3 A Power Supply Module	303
25	140 CPS 524 00: 125 VDC Standalone/Redundant 8 A Power Supply Module	307



---

# Chapter 11

## General Information

---

### Purpose

This chapter provides general information of the Quantum Power Supplies.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Table of Power Supplies	228
System Design Considerations for Quantum Power Supplies	229
Compatibility	235
Presentation and Wiring	237
Indicators	239
Displaying the Power Supply Budget	240

## Table of Power Supplies

### Overview

Type	Part Numbers	Source Voltage	Bus Current
Standalone	140 CPS 111 00	115/230 Vac	3 A
	140 CPS 114 00	115/230 Vac	8 A
	140 CPS 211 00	24 Vdc	3 A
	140 CPS 511 00	125 Vdc	3 A
Standalone/Summable	140 CPS 114 10	115/230 Vac	8 A
	140 CPS 114 20	115/230 Vac	11 A
	140 CPS 214 00	24 Vdc	7–8 A
	140 CPS 414 00	48/72 Vdc	7–8 A
Standalone/Redundant	140 CPS 124 00	115/230 Vac	8 A
	140 CPS 124 20	115/230 Vac	11 A
	140 CPS 224 00	24 Vdc	6–8 A
	140 CPS 424 00	48/72 Vdc	6–8 A
	140 CPS 524 00	125 Vdc	8 A

### **WARNING**

#### **UNINTENDED EQUIPMENT OPERATION**

Use appropriate power supplies with the exceptions noted in this chapter.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## System Design Considerations for Quantum Power Supplies

### Overview

There exists some important design differences between various models of Quantum power supplies that require careful consideration by the system designer in order to achieve maximum system performance. The principal difference lies in the generation within the power supply of important rack signals related to the health of the power supply and the status of the input power.


Quantum power supplies include on-board early power detection logic which is used to signal other modules on the rack that input power is lost. This signal is called POK (power OK) and is active high (i.e., when the signal is high, power is OK).

There is both an internal (to the power supply) and an external (as seen by the rack and other modules) version of the POK signal. The internal POK signal is represented by the Pwr ok LED (light emitting diode) on the front panel of the power supplies.

The system POK signal is generated so that there is sufficient time between the negative going edge of system POK (power outage) and the actual interruption of power to the rack. This first notification of power lost is necessary for the Quantum executive to perform an orderly system shutdown.

**Standalone Power Supplies**

Four models of standalone power supplies are offered:

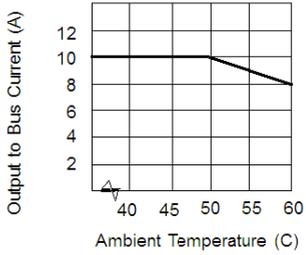Power Supply	Range	Bus Current
140 CPS 111 00	115/230 Vac	3 A(60°C)
140 CPS 114 00	115/230 Vac	Operating curve: 
140 CPS 211 00	24 Vdc	3 A(60°C)
140 CPS 511 00	125 Vdc	3 A(60°C)


**⚠ CAUTION**

**UNINTENDED EQUIPMENT OPERATION**

When a rack is equipped with a standalone power supply do not install any other power supply. When the power supply must be redundant, install redundant power supply units.



**Failure to follow these instructions can result in injury or equipment damage.**

The following figure shows the direction of the internal POK to the Quantum system POK.

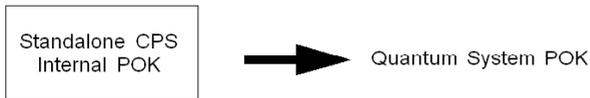

**Summable Power Supplies**

Four summable power supply models are offered:

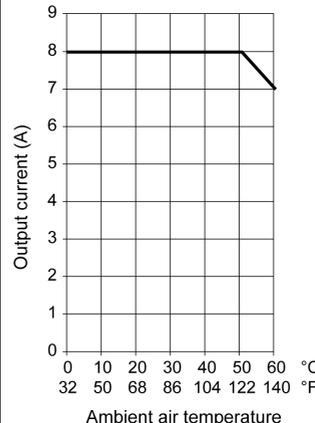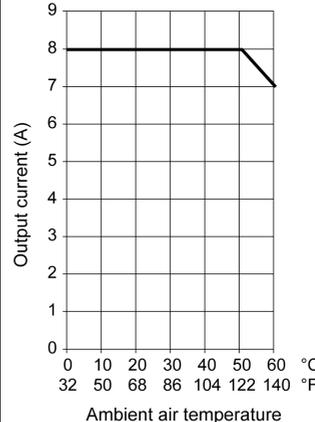
Power Supply	Range	Bus Current
140 CPS 114 10	115/230 Vac	8 A (60°C)
140 CPS 114 20	115/230 Vac	11 A (60°C)
140 CPS 214 00	24 Vdc	Operating curve: 
140 CPS 414 00	48/72 Vdc	Operating curve: 

A summable power supply may be used as a standalone power supply without reservation in any Quantum system.

For systems configured with a mix of CPS, NOM, expert, and I/O modules, whose total current consumption from the rack exceeds the current provided by one summable supply, two summable supplies may be used in a single rack. In such a system, the total current available on the rack is the sum of the capability of both supplies (i.e.,  $2 \times 8 \text{ A} = 16 \text{ A}$ ). The summable supplies are designed so that they split the current supplied to the load almost equally, which also has the added benefit of increasing total system MTBF, and to distribute the thermal load across the rack. Summable supplies should be installed in the end module positions in the Quantum rack to maximize the system thermal performance.

The Quantum system POK signal in systems powered by two summable power supplies is only true (power is OK) when both internal POK signals (in the 140 CPS •14 •0) are true. Quantum summable power supplies are not hot-swappable.

The following figure shows the direction of the Quantum POK summable power supplies.


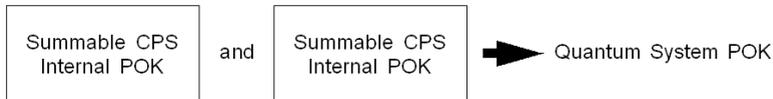


The proper method for starting systems powered by summable power supplies is to insert both supplies in the rack in an unpowered state, and then apply power to each supply. There is no requirement to turn on each supply simultaneously. The system designer must realize that the operation of the summable supply described above is independent of total rack load, i.e., even if the total load on the rack is less than 8 A, if there are two summable supplies installed in the rack, the system POK is generated as shown in this section.

For the special case of a single summable supply used as a standalone, the system POK generation reverts to the standalone case as shown previously in this section.

**Redundant Power Supplies**


Five redundant power supply models are offered:

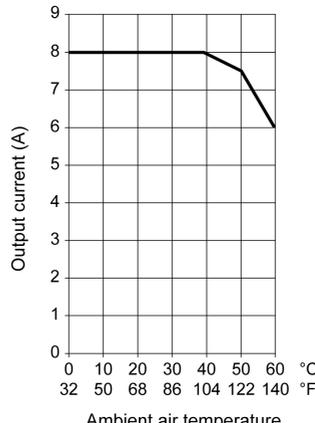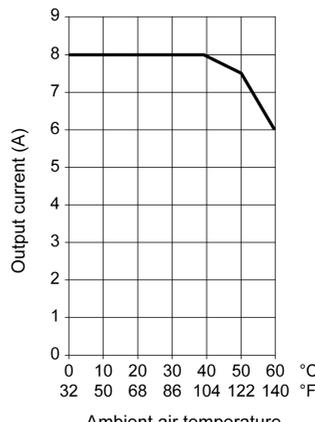Power Supply	Range	Bus Current
140 CPS 124 00	115/230 Vac	8 A (60°C)
140 CPS 124 20	115/230 Vac	11 A (60°C)
140 CPS 224 00	24 Vdc	Operating curve: 
140 CPS 424 00	48/72 Vdc	Operating curve: 
140 CPS 524 00	125 Vdc	8 A (60°C)

Similar to the summable supplies, the Quantum redundant power supplies also contain circuitry which forces the installed power supplies to share output current almost equally. An important difference between the summable and the redundant supply lies in the system POK generation circuitry.

The Quantum system POK signal in systems powered by redundant power supplies is true (power is OK) if either or both internal POK is true.

The following figure shows the Quantum system POK redundant power supply direction:

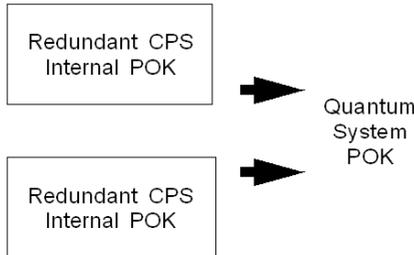

**NOTE:** Redundant power supply module health may be monitored in an I/O module health status word.

Another important difference from the summable system is the total available system rack loading. If there are N redundant power supplies installed in a rack, the total rack load must not exceed the capability of N-1 supplies. ( $N_{max}=3$ )

For example, if two 8 A power supplies are installed in the rack ( $N=2$ ), the maximum rack load available for redundant operation is the current sourced by N-1 ( $= 1$ ) supplies, which is 8 A. If three 8 A redundant power supplies are installed ( $N = 3$ ), the maximum rack load available for redundant operation is the current sourced by N-1 ( $= 2$ ) supplies, which is 16 A.

If these constraints are observed, then in a system of two or three redundant supplies, one supply (it doesn't matter which one) is hot-swappable. This is possible because there is excess capacity in the N-1 remaining supplies to source the rack current while the Nth supply is being swapped.

An obvious extension to this argument is that a single redundant power supply may be used as a standalone supply (but the cheapest solution is obtained by using a summable or standalone supply for this application).

## Compatibility

### Table of Combination

## WARNING

### UNINTENDED EQUIPMENT OPERATION

Use appropriate power supplies with the exceptions noted in the following tables.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

Quantum standalone power supplies cannot be combined together. List of Quantum standalone power supplies:

- 140CPS11100
- 140CPS21100
- 140CPS51100

Quantum summable power supplies combination:

Combination with 1 power supply:	140CPS11420	140CPS11410	140CPS21400	140CPS41400
140CPS11420	Yes	Yes	No	No
140CPS11410	Yes	Yes	No	No
140CPS21400	No	No	Yes	Yes
140CPS41400	No	No	Yes	Yes

Quantum redundant power supplies combination:

Combination with 1 or 2 power supplies:	140CPS12420	140CPS12400	140CPS22400	140CPS42400	140CPS52400
140CPS12420	Yes	No	Yes	Yes	No
140CPS12400	No	Yes	No	No	Yes
140CPS22400	Yes	No	Yes	Yes	No
140CPS42400	Yes	No	Yes	Yes	No
140CPS52400	No	Yes	No	No	Yes

## Compatibility Issues

Power supplies:

- Do not use a standalone power supply in combination with any other supply in the same backplane.
- With the exception of standalone models, power supplies with the same model number are compatible when installed in the same backplane.


DIO:

- While it is possible to use a standalone or a summable power supply with a DIO drop (as long as the DIO input is left unpowered), it is not possible to use a redundant supply with the DIO drop.
- The added power supply does not need to be of the same type as the DIO adapter. AC powered supplies may be used with DC type adapters and vice-versa.
- DIO module current load with an added power supply is typically 200 mA.

## Presentation and Wiring

### Illustration

The following figure shows the power supply module.

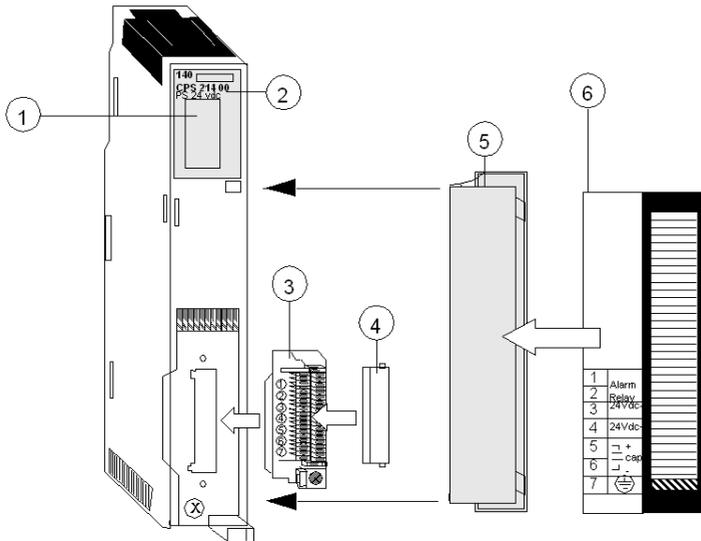

- 1 LED Area
- 2 Model Number, Module Description, Color Code
- 3 Field Wiring Connector
- 4 Field Wiring Connector Cover
- 5 Removable door
- 6 Customer Identification Label, (Fold label and place it inside door)

**NOTE:** When field wiring the power supply module, the maximum wire size that should be used is 1 - 14 AWG or 2 - 16 AWG; the minimum is 20 AWG.

**NOTE:** The tightening torque must be between 0.5 Nm and 0.8 Nm.

## ***NOTICE***

### **DESTRUCTION OF ADAPTER**

- Before tightening the locknut to the torque 0.50...0.80 Nm, be sure to properly position the right-angle F adapter connector.
- During tightening, be sure to maintain the connector securely.
- Do not tighten the right-angle F adapter beyond the specified torque.

**Failure to follow these instructions can result in equipment damage.**

					
mm <sup>2</sup>	0.14...1.5	0.16...0.75	0.14...2.5	0.14...4	0.16...1.5
AWG	20...16	20...18	20...14	20...12	20...16

 Ø 3,5	 C		Nm	0.6
			pound-inch	5.4

## Indicators

### Illustration

The following figure shows the Power Supply LED indicator.



### Description

The following table shows the Power Supply LED description.

LEDs	Color	Indication when On
Pwr ok	Green	Power is supplied to the bus.

## Displaying the Power Supply Budget

### Overview


If one or more power supply modules is configured, the Control Expert software displays the available load and the consumption of all configured modules. Power supply availability is displayed as a bar graph. Each time you add a module, the green bar increases. An overload condition turns the display red. The first time you overshoot the mark, a message is displayed. Nevertheless, you can analyze and generate.

If there is no power supply, the software displays the power consumption requirement in red.

In the case of redundant power supplies, where the full load is applied to each power supply module, the software displays the power supply budget as if there is only one power supply. For summable power supplies, the load is distributed between the power supplies.


### Procedure

To access the Power Supply and I/O Budget screen:

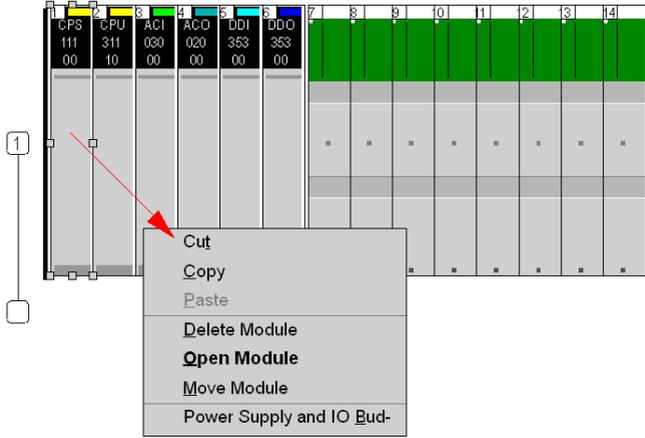Step	Action
1	Open the Bus Editor of Control Expert.
2	Select the power supply module.
3	<p>Open the context menu with a click on the right mouse button.</p> <p><b>Result:</b></p> 
4	Choose <b>Power Supply and IO Budget</b> .

## Presentation

Here is a sample screen:

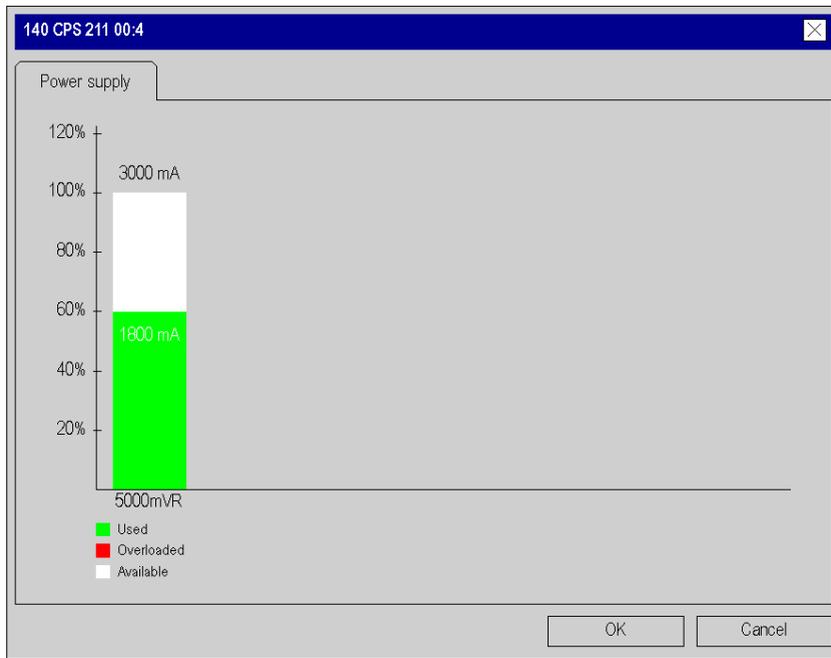



---

# Chapter 12

## 140 CPS 111 00: 115/230 VAC Standalone 3 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 111 00 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 111 00 Wiring Diagram	244
140 CPS 111 00 Specifications	245

## 140 CPS 111 00 Wiring Diagram

### Wiring Diagram

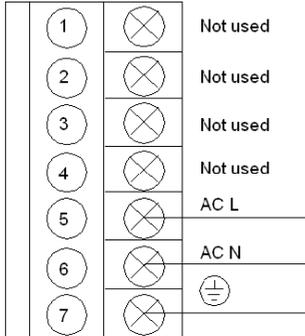

**NOTE:** For closed system installations, you must use connector 140 XTS 005 00.

## DANGER

### ELECTRIC SHOCK

Ensure that the installation complies with wiring, grounding and electromagnetic standards defined in:

- national and local electrical code requirements,
- [Electrical installation guide](#)

**Failure to follow these instructions will result in death or serious injury.**

## 140 CPS 111 00 Specifications

### General Specifications

Operating mode	Standalone
Internal power dissipation (electric losses)	6.5 W
Network power consumption	Electric losses + (5.1 x I <sub>out</sub> ) <sup>1</sup>
Power factor	0.5
<sup>1</sup> : I <sub>out</sub> : sum of currents consumption by all modules in rack (in A)	

### Input

Input voltage	100 ... 276 VAC
Input frequency	47 ... 63 Hz
Input voltage total harmonic distortion	Less than 10% of the fundamental rms value
Input current	0.4 A @ 115 V AC 0.2 A @ 230 V AC
Inrush current	10 A @ 115 V AC 20 A @ 230 V AC
VA rating	50 VA
Fusing (external)	1.5 A slow-blow fuse
Input power interruption	1/2 cycle @ full load and minimum rated line voltage / frequency. No less than 1 s between interruptions.

### Output to Bus

Voltage	5.1 VDC
Current	3 A max.
	0.3 A min.
Protection	Overcurrent, overvoltage



---

# Chapter 13

## 140 CPS 111 00 (PV 01 or greater): 115/230 VAC Standalone Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 111 00 (PV 01 or greater) Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 111 00 (PV 01 or greater) Wiring Diagram	248
140 CPS 111 00 (PV 01 or greater) Specifications	249

## 140 CPS 111 00 (PV 01 or greater) Wiring Diagram

### Wiring Diagram

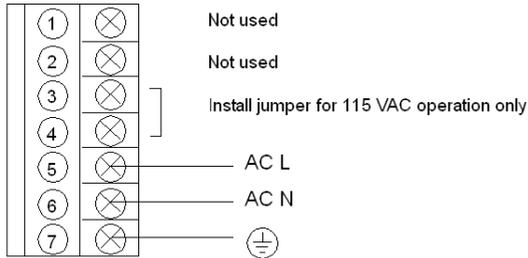

**NOTE:** For closed system installations, you must use 140 XTS 005 00 connector.

## DANGER

### ELECTRIC SHOCK

Ensure that the installation complies with wiring, grounding and electromagnetic standards defined in:

- national and local electrical code requirements,
- [\*Electrical installation guide\*](#)

**Failure to follow these instructions will result in death or serious injury.**

## 140 CPS 111 00 (PV 01 or greater) Specifications

### General Specifications

Operating mode	Standalone
Internal power dissipation (electric losses)	6.5 W
Network power consumption	Electric losses + $(5.1 \times I_{out})^1$
Power factor	0.5
1: $I_{out}$ : sum of currents consumption by all modules in rack (in A)	

### Input

Input voltage	100 ... 276 VAC
Input frequency	47 ... 63 Hz
Input voltage total harmonic distortion	Less than 10% of the fundamental ms value
Input current	0.4 A @ 115 VAC; 0.2 A @ 230 VAC
Inrush current	10 A @ 115 VAC; 20 A @ 230 VAC
VA rating	50 VA
Fusing (external)	1.5 A slow-blow fuse
Input power interruption	1/2 cycle @ full load and minimum rated line voltage / frequency. No less than 1 s between interruptions.

### Output to Bus

Voltage	5.1 V dc
Current	3 A max.
	0.3 A min.
Protection	Overcurrent, overvoltage



---

# Chapter 14

## 140 CPS 114 00: 115/230 VAC Standalone 8 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 114 00 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 114 00 Wiring Diagram	252
140 CPS 114 00 Specifications	253

## 140 CPS 114 00 Wiring Diagram

### Wiring Diagram

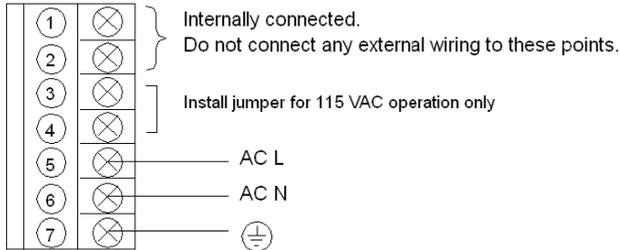

## DANGER

### ELECTRIC SHOCK

Ensure that the installation complies with wiring, grounding and electromagnetic standards defined in:

- national and local electrical code requirements,
- [Electrical installation guide](#)

**Failure to follow these instructions will result in death or serious injury.**

## 140 CPS 114 00 Specifications


### General Specifications

Operating Mode	Standalone
Internal power dissipation (in Watts)	$6.0 + 1.5 \times I_{OUT}$ (where $I_{OUT}$ is in A)

### Input

Input voltage	93 ... 138 VAC
	170 ... 276 VAC
Input frequency	47 ... 63 Hz
Input voltage total harmonic distortion	Less than 10% of the fundamental rms value
Input current	1.1 A @ 115 VAC
	0.6 A @ 230 VAC
Inrush current	38 A @ 115 VAC
	19 A @ 230 VAC
VA rating	130 VA
Fusing (external)	2.0 A slow-blow
Input power interruption	1/2 cycle @ full load and minimum rated line voltage / frequency. No less than 1 s between interruptions.

**Output to Bus**

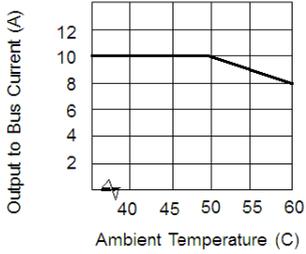Voltage	5.1 VDC												
Current	8 A @ 60 °C (see the operating curve) min. current not required Operating Curve:  <table border="1"><caption>Operating Curve Data</caption><thead><tr><th>Ambient Temperature (C)</th><th>Output to Bus Current (A)</th></tr></thead><tbody><tr><td>40</td><td>10</td></tr><tr><td>45</td><td>10</td></tr><tr><td>50</td><td>10</td></tr><tr><td>55</td><td>9</td></tr><tr><td>60</td><td>8</td></tr></tbody></table>	Ambient Temperature (C)	Output to Bus Current (A)	40	10	45	10	50	10	55	9	60	8
Ambient Temperature (C)	Output to Bus Current (A)												
40	10												
45	10												
50	10												
55	9												
60	8												
Protection	Over-current, over-voltage												

---

# Chapter 15

## 140 CPS 114 10: 115/230 VAC Standalone/Summable 8 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 114 10 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 114 10 Wiring Diagram	256
140 CPS 114 10 Specifications	257

## 140 CPS 114 10 Wiring Diagram

### Wiring Diagram

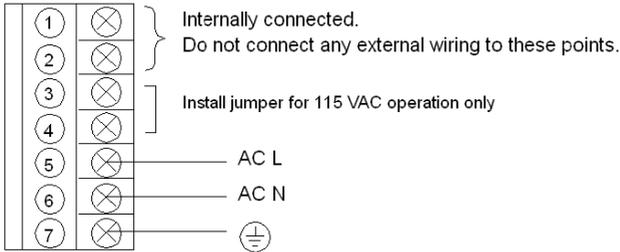

## **⚠ WARNING**

### UNINTENDED EQUIPMENT OPERATION

- Use only compatible combinations of power supplies in the Quantum backplane as indicated in the following compatibility matrix.
- Remove line power from this module prior to insertion or removal.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Compatibility Matrix

For proper operation, refer to this table:

Compatibility matrix					
Summable models	140CPS11420	140CPS11410	140CPS21400	140CPS41400	–
140CPS11420	Yes	Yes	No	No	–
140CPS11410	Yes	Yes	No	No	–
140CPS21400	No	No	Yes	Yes	–
140CPS41400	No	No	Yes	Yes	–
Redundant models	140CPS12420	140CPS12400	140CPS22400	140CPS42400	140CPS52400
140CPS12420	Yes	No	Yes	Yes	No
140CPS12400	No	Yes	No	No	Yes
140CPS22400	Yes	No	Yes	Yes	No
140CPS42400	Yes	No	Yes	Yes	No
140CPS52400	No	Yes	No	No	Yes

## 140 CPS 114 10 Specifications

### General Specifications

Operating mode	Standalone
	Summable
Internal power dissipation (in W)	$6.0 + 1.5 \times I_{OUT}$ (where $I_{OUT}$ is in A)

### Input

Input voltage	93 ... 138 VAC
	170 ... 276 VAC
Input frequency	47 ... 63 Hz
Input voltage total harmonic distortion	Less than 10% of the fundamental rms value
Input current	1.1 A @ 115 VAC 0.6 A @ 230 VAC
Inrush Current	38 A @ 115 VAC. 19 A @ 230 VAC
VA Rating	130 VA
Fusing (external)	2.0 A slow-blow recommended
Input Power Interruption	1/2 cycle @ full load and minimum rated line voltage / frequency. No less than 1 second between interruptions.

### Output to Bus

#### Output to Bus

Voltage	5.1 VDC
Current	8 A @ 60 °C min. Current not required
Protection	Over Current, Over Voltage



---

# Chapter 16

## 140 CPS 114 20: 115/230 VAC Standalone/Summable 11 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 114 20 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 114 20 Wiring Diagram	260
140 CPS 114 20 Specifications	262

## 140 CPS 114 20 Wiring Diagram

### Wiring Diagram

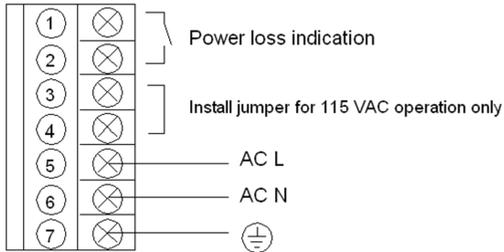

**NOTE:** A normally closed relay contact rated at 220 VAC, 6A / 30 VDC, 5A is available on terminals 1 and 2 on the power terminal strip. This contact set may be used to signal input power OFF. The relay de-energizes when input power drops below:

- 70 VAC, when input voltage is set to 115VAC.
- 140 VAC, when input voltage is set to 230VAC.

## **⚠ WARNING**

### **UNINTENDED EQUIPMENT OPERATION**

- Use only compatible combinations of power supplies in the Quantum backplane as indicated in the following compatibility matrix.
- Remove line power from this module prior to insertion or removal.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Compatibility Matrix

For proper operation, refer to this table:

Compatibility matrix					
Summable models	140CPS11420	140CPS11410	140CPS21400	140CPS41400	–
140CPS11420	Yes	Yes	No	No	–
140CPS11410	Yes	Yes	No	No	–
140CPS21400	No	No	Yes	Yes	–
140CPS41400	No	No	Yes	Yes	–
Redundant models	140CPS12420	140CPS12400	140CPS22400	140CPS42400	140CPS52400
140CPS12420	Yes	No	Yes	Yes	No
140CPS12400	No	Yes	No	No	Yes
140CPS22400	Yes	No	Yes	Yes	No
140CPS42400	Yes	No	Yes	Yes	No
140CPS52400	No	Yes	No	No	Yes

## 140 CPS 114 20 Specifications

### General Specifications

Operating mode	Standalone
	Summable
Internal power dissipation (electric losses)	11 W
Network power consumption	Electric losses + $(5.1 \times I_{out})^1$
Power factor	0.5
<sup>1</sup> : $I_{out}$ : sum of currents consumption by all modules in rack (in A)	

140 CPS 114 20 power supplies are designed to not require the external EMI filter, ferrite bead and Olflex cable.

### Input

Input voltage	93 ... 138 VAC
	170 ... 264 VAC
Input frequency	47 ... 63 Hz
Input voltage total harmonic distortion	Less than 10% of the fundamental rms value
Input current	1.2 A @ 115 VAC
	0.7 A @ 230 VAC
Inrush current	≤ 20 A @ 115 VAC
	≤ 25 A @ 230 VAC
VA rating	160 VA @ 11 A
Fusing (external)	2.0 A slow-blow
Input power interruption	1/2 cycle @ full load and minimum rated line voltage / frequency. No less than 1 s between interruptions.

## Output to Bus

Voltage			5.1 VDC
Max. current	Standalone		11 A @ 60 °C
	Summable	a) Two 140 CPS 114 20(total load capacity)	20 A @ 60 °C
		b) One 140 CPS 114 20 and one 140 CPS 114 10	16 A @ 60 °C
Min. current			not required
Protection			Over-current, Over-voltage



---

# Chapter 17

## 140 CPS 124 00: 115/230 VAC Standalone/Redundant 8 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 124 00 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 124 00 Wiring Diagram	266
140 CPS 124 00 Specifications	267

## 140 CPS 124 00 Wiring Diagram

### Wiring Diagram Figure

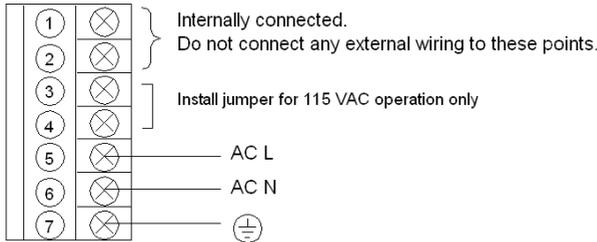

**NOTE:** When field wiring the power supply module, the maximum wire size that should be used is 1 - 14 AWG (2 mm<sup>2</sup>) or 2 - 16 AWG (1.5 mm<sup>2</sup>).

## ⚠ WARNING

### UNINTENDED EQUIPMENT OPERATION

- Use only compatible combinations of power supplies in the Quantum backplane as indicated in the following compatibility matrix.
- Remove line power from this module prior to insertion or removal.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Compatibility Matrix

For proper operation, refer to this table:

Compatibility matrix					
Summable models	140CPS11420	140CPS11410	140CPS21400	140CPS41400	–
140CPS11420	Yes	Yes	No	No	–
140CPS11410	Yes	Yes	No	No	–
140CPS21400	No	No	Yes	Yes	–
140CPS41400	No	No	Yes	Yes	–
Redundant models	140CPS12420	140CPS12400	140CPS22400	140CPS42400	140CPS52400
140CPS12420	Yes	No	Yes	Yes	No
140CPS12400	No	Yes	No	No	Yes
140CPS22400	Yes	No	Yes	Yes	No
140CPS42400	Yes	No	Yes	Yes	No
140CPS52400	No	Yes	No	No	Yes

## 140 CPS 124 00 Specifications

### General Specifications

Operating mode	Standalone
	Redundant
Internal power dissipation (electric losses)	9 W
Network power consumption	Electric losses + $(5.1 \times I_{out})^1$
Power factor	0.5
<sup>1</sup> : $I_{out}$ : sum of currents consumption by all modules in rack (in A)	

### Input

Input voltage	93 ... 138 VAC
	170 ... 276 VAC
Input frequency	47 ... 63 Hz
Input voltage total harmonic distortion	Less than 10% of the fundamental rms value
Input current	1.1 A @ 115 VAC
	0.6 A @ 230 VAC
Inrush current	38 A @ 115 VAC
	19 A @ 230 VAC
VA rating	130 VA
Fusing (external)	2.0 A slow-blow
Input power interruption	1/2 cycle @ full load and minimum rated line voltage / frequency. No less than 1 s between interruptions.

**Output to Bus**

Voltage		5.1 VDC	
Max. Current	Standalone	8 A @ 60°C	
	Redudant	a) Two 140 CPS 124 00	8 A @ 60°C
		b) Three 140 CPS 124 00	16 A @ 60°C
		c) One 140 CPS 124 00 and one 140 CPS 524 00	8 A @ 60°C
		d) One 140 CPS 124 00 and two 140 CPS 524 00	16 A @ 60°C
		e) Two 140 CPS 124 00 and one 140 CPS 524 00	16 A @ 60°C
Min Current		Not Required	
Protection		Over-current, over-voltage	

---

# Chapter 18

## 140 CPS 124 20: 115/230 VAC Standalone/Redundant 11 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 124 20 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 124 20 Wiring Diagram	270
140 CPS 124 20 Specifications	272

## 140 CPS 124 20 Wiring Diagram

### Wiring Diagram

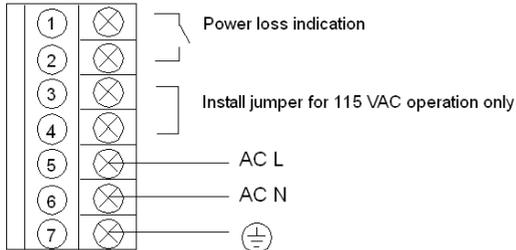

**NOTE:** A normally closed relay contact rated at 220 VAC, 6 A / 30 VDC, 5 A is available on terminals 1 and 2 on the power terminal strip. This contact set may be used to signal input power OFF. The relay de-energizes when input power drops below:

- 70 VAC, when input voltage is set to 115 VAC.
- 140 VAC, when input voltage is set to 230 VAC.

## **⚠ WARNING**

### **UNINTENDED EQUIPMENT OPERATION**

- Use only compatible combinations of power supplies in the Quantum backplane as indicated in the following compatibility matrix.
- Remove line power from this module prior to insertion or removal.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Compatibility Matrix

For proper operation, refer to this table:

Compatibility matrix					
Summable models	140CPS11420	140CPS11410	140CPS21400	140CPS41400	–
140CPS11420	Yes	Yes	No	No	–
140CPS11410	Yes	Yes	No	No	–
140CPS21400	No	No	Yes	Yes	–
140CPS41400	No	No	Yes	Yes	–
Redundant models	140CPS12420	140CPS12400	140CPS22400	140CPS42400	140CPS52400
140CPS12420	Yes	No	Yes	Yes	No
140CPS12400	No	Yes	No	No	Yes
140CPS22400	Yes	No	Yes	Yes	No
140CPS42400	Yes	No	Yes	Yes	No
140CPS52400	No	Yes	No	No	Yes

## 140 CPS 124 20 Specifications

### General Specifications

Operating mode	Standalone
	Redundant
Internal power dissipation (electric losses)	11 W
Network power consumption	Electric losses + $(5.1 \times I_{out})^1$
Power factor	0.5
<sup>1</sup> : $I_{out}$ : sum of currents consumption by all modules in rack (in A)	

140 CPS 124 20 power supplies are designed to not require the external EMI filter, ferrite bead and Olflex cable.

### Input

Input voltage	93 ... 138 VAC
	170 ... 263 VAC
Input frequency	47 ... 63 Hz
Input voltage total harmonic distortion	Less than 10% of the fundamental rms value
Input current	1.2 A @ 115 VAC
	0.7 A @ 230 VAC
Inrush current	≤20 A @ 115 VAC
	≤25 A @ 230 VAC
VA Rating	160 VA @ 11 A
Fusing (external)	2.0 A slow-blow
Input power interruption	1/2 cycle @ full load and minimum rated line voltage / frequency. No less than 1 s between interruptions.

## Output to Bus

Voltage		5.1 VDC	
Max. Current	Standalone	11 A @ 60°C	
	Redundant	a) Two 140 CPS 124 20	10 A @ 60°C
		b) Three 140 CPS 124 20	20 A @ 60°C
		c) One 140 CPS 124 20 and one 140 CPS x24 00	6 A @ 60°C
			9 A @ 40°C
		d) One 140 CPS 124 20 and two 140 CPS x24 00	12 A @ 60°C
	18 A @ 40°C		
e) Two 140 CPS 124 20 and one 140 CPS x24 00	16 A @ 60°C		
	19 A @ 40°C		
140 CPS x24 00 means 140 CPS 224 00 or 140 CPS 424 00.			
Min. current		Not required	
Protection		Over-current, over-voltage	



---

# Chapter 19

## 140 CPS 211 00: 24 VDC Standalone 3 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 211 00 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 211 00 Wiring Diagram	276
140 CPS 211 00 Specifications	277

## 140 CPS 211 00 Wiring Diagram

### Wiring Diagram

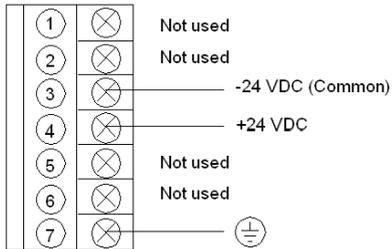

## DANGER

### ELECTRIC SHOCK

Ensure that the installation complies with wiring, grounding and electromagnetic standards defined in:

- national and local electrical code requirements,
- [Electrical installation guide](#)

**Failure to follow these instructions will result in death or serious injury.**

## 140 CPS 211 00 Specifications

### General Specifications

Operating mode	Standalone
Internal power dissipation (electric losses)	$2 + (1.8 \times I_{out})$
Network power consumption	Electric losses + $(5.1 \times I_{out})^1$
1: $I_{out}$ : sum of currents consumption by all modules in rack (in A)	

### Input

Input voltage	20 ... 30 VDC
Input current	1.6 A
Inrush current	30 A
Fusing (external)	2.5 A slow-blow

### Output to Bus

Voltage	5.1 VDC
Max. current	3 A
Min. current	0.3 A
Protection	Over-current, over-voltage



---

# Chapter 20

## 140 CPS 214 00: 24 VDC Standalone/Summable 7–8 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 214 00 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 214 00 Wiring Diagram	280
140 CPS 214 00 Specifications	282

## 140 CPS 214 00 Wiring Diagram

### Wiring Diagram Figure

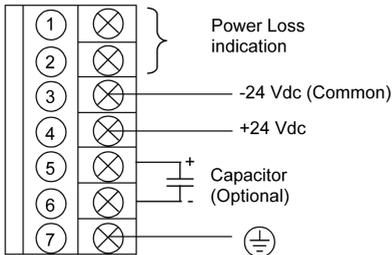

**NOTE:** 1. A normally closed relay contact rated at 220 Vac, 6 A / 30 Vdc, 5 A is available on terminals 1 and 2 on the power terminal strip. This contact set may be used to signal input power OFF. The relay de-energizes when input power drops below 18 Vdc.

2. Tolerance to input interruptions may be increased by adding a  $\geq 50$  Vdc electrolytic capacitor between terminals 5 and 6 on the power terminal strip. Refer to the hold-up capacitor timing chart for capacitor values *Input, page 282*.

3. When field wiring the power supply module, the maximum wire size that should be used is 1 - 14 AWG (2 mm<sup>2</sup>) or 2 - 16 AWG (1.5 mm<sup>2</sup>).

## WARNING

### UNINTENDED EQUIPMENT OPERATION

- Use only compatible combinations of power supplies in the Quantum backplane as indicated in the following compatibility matrix.
- Remove line power from this module prior to insertion or removal.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Compatibility Matrix

For proper operation, refer to this table:

Compatibility matrix					
Summable models	140CPS11420	140CPS11410	140CPS21400	140CPS41400	–
140CPS11420	Yes	Yes	No	No	–
140CPS11410	Yes	Yes	No	No	–
140CPS21400	No	No	Yes	Yes	–
140CPS41400	No	No	Yes	Yes	–
Redundant models	140CPS12420	140CPS12400	140CPS22400	140CPS42400	140CPS52400
140CPS12420	Yes	No	Yes	Yes	No
140CPS12400	No	Yes	No	No	Yes
140CPS22400	Yes	No	Yes	Yes	No
140CPS42400	Yes	No	Yes	Yes	No
140CPS52400	No	Yes	No	No	Yes

## 140 CPS 214 00 Specifications

### General Specifications

Operating mode	Standalone
	Summable
Internal power dissipation (electric losses)	$5 + (1.25 \times I_{out})$
Network power consumption	Electric losses + $(5.1 \times I_{out})^1$
<sup>1</sup> : $I_{out}$ : sum of currents consumption by all modules in rack (in A)	

### Input

Input voltage	20 ... 30 Vdc																																												
Input current	3.8 A																																												
Inrush current	25 A @ 24 Vdc																																												
Input ripple	2.4 Vdc peak-to-peak, 94 ... 189 Hz																																												
Input power interruption	<p>1 ms max. @ 24 Vdc (without capacitor)            Hold-up capacitor timing chart (with a capacitor):</p> <table border="1"> <caption>Approximate data from the hold-up capacitor timing chart</caption> <thead> <tr> <th>Capacitor size (mF)</th> <th>20 Vdc (ms)</th> <th>24 Vdc (ms)</th> <th>30 Vdc (ms)</th> </tr> </thead> <tbody> <tr> <td>100</td> <td>~20</td> <td>~100</td> <td>~100</td> </tr> <tr> <td>68</td> <td>~20</td> <td>~80</td> <td>~100</td> </tr> <tr> <td>47</td> <td>~20</td> <td>~60</td> <td>~100</td> </tr> <tr> <td>22</td> <td>~20</td> <td>~40</td> <td>~100</td> </tr> <tr> <td>10</td> <td>~20</td> <td>~25</td> <td>~100</td> </tr> <tr> <td>5.8</td> <td>~20</td> <td>~20</td> <td>~100</td> </tr> <tr> <td>4.7</td> <td>~20</td> <td>~15</td> <td>~100</td> </tr> <tr> <td>2.2</td> <td>~20</td> <td>~10</td> <td>~100</td> </tr> <tr> <td>1</td> <td>~20</td> <td>~5</td> <td>~100</td> </tr> <tr> <td>0</td> <td>~20</td> <td>~0</td> <td>~100</td> </tr> </tbody> </table>	Capacitor size (mF)	20 Vdc (ms)	24 Vdc (ms)	30 Vdc (ms)	100	~20	~100	~100	68	~20	~80	~100	47	~20	~60	~100	22	~20	~40	~100	10	~20	~25	~100	5.8	~20	~20	~100	4.7	~20	~15	~100	2.2	~20	~10	~100	1	~20	~5	~100	0	~20	~0	~100
Capacitor size (mF)	20 Vdc (ms)	24 Vdc (ms)	30 Vdc (ms)																																										
100	~20	~100	~100																																										
68	~20	~80	~100																																										
47	~20	~60	~100																																										
22	~20	~40	~100																																										
10	~20	~25	~100																																										
5.8	~20	~20	~100																																										
4.7	~20	~15	~100																																										
2.2	~20	~10	~100																																										
1	~20	~5	~100																																										
0	~20	~0	~100																																										
Fusing (external)	5.0 A slow-blow																																												

## Output to Bus

Voltage	5.1 Vdc
Max. current	<p>Operating curve:</p> <p>Output current (A)</p> <p>Ambient air temperature</p> <p>0 10 20 30 40 50 60 °C 32 50 68 86 104 122 140 °F</p>
Min. current	not required
Protection	Over-current, over-voltage



---

# Chapter 21

## 140 CPS 224 00: 24 VDC Standalone/Redundant 6–8 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 224 00 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 224 00 Wiring Diagram	286
140 CPS 224 00 Specifications	288

## 140 CPS 224 00 Wiring Diagram

### Wiring Diagram Figure

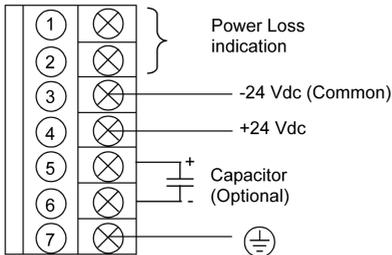

**NOTE:** 1. A normally closed relay contact rated at 220 Vac, 6 A / 30 Vdc, 5 A is available on terminals 1 and 2 on the power terminal strip. This contact set may be used to signal input power OFF. The relay de-energizes when input power drops below 18 Vdc.

2. Tolerance to input interruptions may be increased by adding a  $\geq 50$  Vdc electrolytic capacitor between terminals 5 and 6 on the power terminal strip. Refer to the hold-up capacitor timing chart for capacitor values *Input, page 288*.

3. When field wiring the power supply module, the maximum wire size that should be used is 1 - 14 AWG ( $2 \text{ mm}^2$ ) or 2 - 16 AWG ( $1.5 \text{ mm}^2$ ).

## WARNING

### UNINTENDED EQUIPMENT OPERATION

- Use only compatible combinations of power supplies in the Quantum backplane as indicated in the following compatibility matrix.
- Remove line power from this module prior to insertion or removal.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Compatibility Matrix

For proper operation, refer to this table:

Compatibility matrix					
Summable models	140CPS11420	140CPS11410	140CPS21400	140CPS41400	–
140CPS11420	Yes	Yes	No	No	–
140CPS11410	Yes	Yes	No	No	–
140CPS21400	No	No	Yes	Yes	–
140CPS41400	No	No	Yes	Yes	–
Redundant models	140CPS12420	140CPS12400	140CPS22400	140CPS42400	140CPS52400
140CPS12420	Yes	No	Yes	Yes	No
140CPS12400	No	Yes	No	No	Yes
140CPS22400	Yes	No	Yes	Yes	No
140CPS42400	Yes	No	Yes	Yes	No
140CPS52400	No	Yes	No	No	Yes

## 140 CPS 224 00 Specifications


### General Specifications

Operating mode	Standalone
	Redundant
Internal power dissipation (in W)	$7 + (1.5 \times I_{out}^1)$
Network power consumption	Electric losses + $(5.1 \times I_{out})$
<sup>1</sup> : $I_{out}$ : sum of currents consumption by all modules in rack (in A)	

### Input

Input voltage	20 ... 30 Vdc
Input current	3.8 A
Inrush current	25 A @ 24 Vdc
Input ripple	2.4 Vdc peak-to-peak, 94 ... 189 Hz
Input Power Interruption	<p>1 ms max. @ 24 Vdc (without capacitor)                      Hold-up capacitor timing chart (with a capacitor):</p> <p>Capacitor size (mF): 100, 68, 47, 22, 10, 5.8, 4.7, 2.2, 1, 0</p>
Fusing (external)	5.0 A slow-blow

## Output to Bus

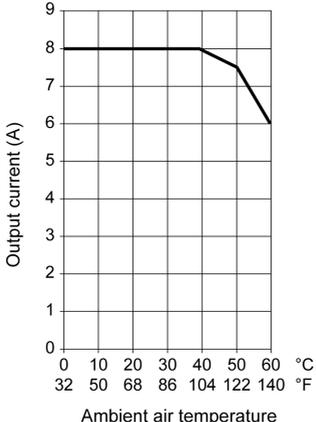Voltage			5.1 Vdc
Max. Current	Standalone	Operating curve:	8 A @ 40 °C (104 °F) 6 A @ 60 °C (140 °F)
			
	Redundant	a) Two 140 CPS x24 00	8 A @ 40 °C (104 °F) 6 A @ 60 °C (140 °F)
		b) Three 140 CPS x24 00	16 A @ 40 °C (104 °F) 12 A @ 60 °C (140 °F)
		c) One 140 CPS 224 00 and one 140 CPS x24 00	8 A @ 40 °C (104 °F) 6 A @ 60 °C (140 °F)
		d) One 140 CPS 224 00 and two 140 CPS x24 00	16 A @ 40 °C (104 °F) 12 A @ 60 °C (140 °F)
		e) Two 140 CPS 224 00 and one 140 CPS x24 00	16 A @ 40 °C (104 °F) 12 A @ 60 °C (140 °F)
140 CPS x24 00 means 140 CPS 224 00 or 140 CPS 424 00.			
Protection		Over-current, over-voltage	
Surge withland		2.3 x max. rated input voltage for 1.3 ms	



---

# Chapter 22

## 140 CPS 414 00: 48 VDC Standalone/Summable 7–8 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 414 00 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 414 00 Wiring Diagram	292
140 CPS 414 00 Specifications	294

## 140 CPS 414 00 Wiring Diagram

### Wiring Diagram Figure

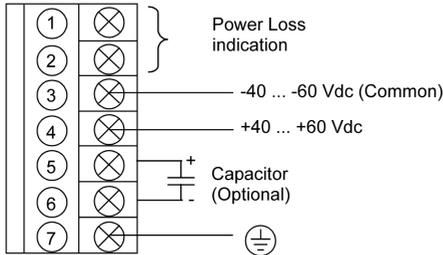

- NOTE:** 1. A normally closed relay contact rated at 220 Vac, 6 A / 30 Vdc, 5 A is available on terminals 1 and 2 on the power terminal strip. This contact set may be used to signal input power OFF or a power supply loss. The relay de-energizes when input power drops below 35 Vdc.
2. Tolerance to input interruptions may be increased by adding a  $\geq 85$  Vdc electrolytic capacitor between terminals 5 and 6 on the power terminal strip. Refer to the hold-up capacitor timing chart for capacitor values in the specification *Input*, [page 294](#).
3. When field wiring the power supply module, the maximum wire size that should be used is 1 - 14 AWG ( $2 \text{ mm}^2$ ) or 2 - 6 AWG ( $1.5 \text{ mm}^2$ ).

## **⚠ WARNING**

### **UNINTENDED EQUIPMENT OPERATION**

- Use only compatible combinations of power supplies in the Quantum backplane as indicated in the following compatibility matrix.
- Remove line power from this module prior to insertion or removal.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Compatibility Matrix

For proper operation, refer to this table:

Compatibility matrix					
Summable models	140CPS11420	140CPS11410	140CPS21400	140CPS41400	–
140CPS11420	Yes	Yes	No	No	–
140CPS11410	Yes	Yes	No	No	–
140CPS21400	No	No	Yes	Yes	–
140CPS41400	No	No	Yes	Yes	–
Redundant models	140CPS12420	140CPS12400	140CPS22400	140CPS42400	140CPS52400
140CPS12420	Yes	No	Yes	Yes	No
140CPS12400	No	Yes	No	No	Yes
140CPS22400	Yes	No	Yes	Yes	No
140CPS42400	Yes	No	Yes	Yes	No
140CPS52400	No	Yes	No	No	Yes

## 140 CPS 414 00 Specifications

### General Specifications

Operating mode	Standalone
	Summable
Internal power dissipation (in W)	$6 + (1.0 \times I_{out})$
Network power consumption	Electric losses + $(5.1 \times I_{out})^1$
<sup>1</sup> : $I_{out}$ : sum of currents consumption by all modules in rack (in A)	

### Input

Input voltage	40 ... 60 Vdc
Input current	1.2 A @ 48 Vdc
Inrush current	25 A @ 48 Vdc
Input power interruption	<p>13 ms max. @ 48 Vdc (without capacitor)                      Hold-up capacitor timing chart (with a capacitor):</p> <p>Capacitor size (mF): 47, 22, 10, 6.8</p> <p>Time (ms): 0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100</p> <p>Input Voltage (Vdc): 40, 45, 50, 55, 60</p> <p>Capacitor curves: 4.7, 2.2, 1, 0</p>
Fusing (external)	2.5 A slow-blow

## Output to Bus

Voltage	5.1 Vdc																								
Max. current	<p>Operating curve:</p> <p>The graph shows the relationship between output current and ambient air temperature. The y-axis represents Output current (A) from 0 to 9. The x-axis represents Ambient air temperature in both °C (0 to 60) and °F (32 to 140). The current is constant at 8A up to 50°C (122°F), after which it decreases linearly to 7A at 60°C (140°F).</p> <table border="1"> <thead> <tr> <th>Ambient air temperature (°C)</th> <th>Ambient air temperature (°F)</th> <th>Output current (A)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>32</td> <td>8</td> </tr> <tr> <td>10</td> <td>50</td> <td>8</td> </tr> <tr> <td>20</td> <td>68</td> <td>8</td> </tr> <tr> <td>30</td> <td>86</td> <td>8</td> </tr> <tr> <td>40</td> <td>104</td> <td>8</td> </tr> <tr> <td>50</td> <td>122</td> <td>8</td> </tr> <tr> <td>60</td> <td>140</td> <td>7</td> </tr> </tbody> </table>	Ambient air temperature (°C)	Ambient air temperature (°F)	Output current (A)	0	32	8	10	50	8	20	68	8	30	86	8	40	104	8	50	122	8	60	140	7
Ambient air temperature (°C)	Ambient air temperature (°F)	Output current (A)																							
0	32	8																							
10	50	8																							
20	68	8																							
30	86	8																							
40	104	8																							
50	122	8																							
60	140	7																							
Protection	Over-current, over-voltage																								



---

# Chapter 23

## 140 CPS 424 00: 48 VDC Standalone/Redundant 6–8 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 424 00 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 424 00 Wiring Diagram	298
140 CPS 424 00 Specifications	300

## 140 CPS 424 00 Wiring Diagram

### Wiring Diagram Figure

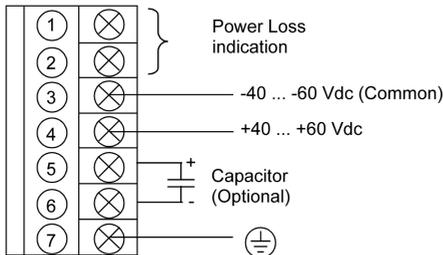

- NOTE:** 1. A normally closed relay contact rated at 220 Vac, 6 A / 30 Vdc, 5 A is available on terminals 1 and 2 of the power terminal strip. This contact set may be used to signal input power OFF or a power supply loss.
2. Tolerance to input interruptions may be increased by adding a  $\geq 85$  Vdc electrolytic capacitor between terminals 5 and 6 on the power terminal strip. Refer to the hold-up capacitor timing chart for capacitor values in the specification *Input, page 300*
3. When field wiring the power supply module, the maximum wire size that should be used is 1 - 14 AWG ( $2 \text{ mm}^2$ ) or 2 - 16 AWG ( $1.5 \text{ mm}^2$ ).

## WARNING

### UNINTENDED EQUIPMENT OPERATION

- Use only compatible combinations of power supplies in the Quantum backplane as indicated in the following compatibility matrix.
- Remove line power from this module prior to insertion or removal.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Compatibility Matrix

For proper operation, refer to this table:

Compatibility matrix					
Summable models	140CPS11420	140CPS11410	140CPS21400	140CPS41400	–
140CPS11420	Yes	Yes	No	No	–
140CPS11410	Yes	Yes	No	No	–
140CPS21400	No	No	Yes	Yes	–
140CPS41400	No	No	Yes	Yes	–
Redundant models	140CPS12420	140CPS12400	140CPS22400	140CPS42400	140CPS52400
140CPS12420	Yes	No	Yes	Yes	No
140CPS12400	No	Yes	No	No	Yes
140CPS22400	Yes	No	Yes	Yes	No
140CPS42400	Yes	No	Yes	Yes	No
140CPS52400	No	Yes	No	No	Yes

## 140 CPS 424 00 Specifications


### General Specifications

Operating mode	Standalone
	Redundant
Internal power dissipation (in W)	$7 + (1.5 \times I_{out})^1$
Network power consumption	Electric losses + $(5.1 \times I_{out})$
<sup>1</sup> : $I_{out}$ : sum of currents consumption by all modules in rack (in A)	

### Input

Input voltage	40 ... 60 Vdc
Input current	1.3 A @ 48 Vdc
Inrush current	25 A @ 48 Vdc
Input power interruption	<p>13 ms max. @ 48 Vdc (without capacitor)                      Hold-up capacitor timing chart (with a capacitor):</p> <p>Capacitor size (mF): 47, 22, 10, 6.8</p> <p>Time (ms): 0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100</p> <p>Input Voltage (Vdc): 40, 45, 50, 55, 60</p> <p>Capacitor curves: 4.7, 2.2, 1, 0</p>
Fusing (external)	2.5 A slow-blow

Output to Bus

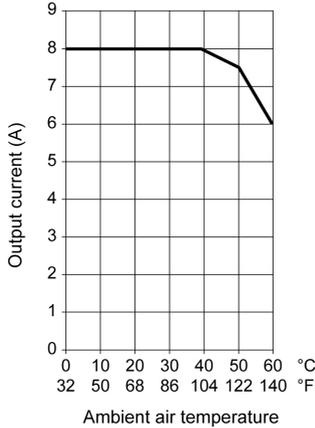Voltage			5.1 Vdc
Max. Current	Standalone	<p>Operating curve:</p>  <p>The graph plots Output current (A) on the y-axis (0 to 9) against Ambient air temperature on the x-axis (0 to 60 °C and 32 to 140 °F). The current remains constant at 8 A from 0 °C to 40 °C. Above 40 °C, the current decreases linearly to 6 A at 60 °C.</p>	<p>8 A @ 40 °C (104 °F) 6 A @ 60 °C (140 °F)</p>
	Redundant	<p>a) Two 140 CPS x24 00</p> <p>b) Three 140 CPS x24 00</p> <p>c) One 140 CPS 224 00 and one 140 CPS x24 00</p> <p>d) One 140 CPS 224 00 and two 140 CPS x24 00</p> <p>e) Two 140 CPS 224 00 and one 140 CPS x24 00</p>	<p>8 A @ 40 °C (104 °F) 6 A @ 60 °C (140 °F)</p> <p>16 A @ 40 °C (104 °F) 12 A @ 60 °C (140 °F)</p> <p>8 A @ 40 °C (104 °F) 6 A @ 60 °C (140 °F)</p> <p>16 A @ 40 °C (104 °F) 12 A @ 60 °C (140 °F)</p> <p>16 A @ 40 °C (104 °F) 12 A @ 60 °C (140 °F)</p>
140 CPS x24 00 means 140 CPS 224 00 or 140 CPS 424 00.			
Protection			Over-current, over-voltage



---

# Chapter 24

## 140 CPS 511 00: 125 VDC Standalone 3 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 511 00 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 511 00 Wiring Diagram	304
140 CPS 511 00 Specifications	305

## 140 CPS 511 00 Wiring Diagram

### Wiring Diagram

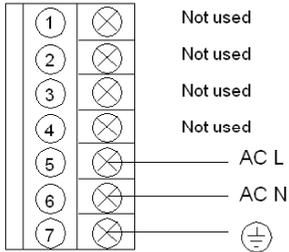

## DANGER

### ELECTRIC SHOCK

Ensure that the installation complies with wiring, grounding and electromagnetic standards defined in:

- national and local electrical code requirements,
- [\*Electrical installation guide\*](#)

**Failure to follow these instructions will result in death or serious injury.**

## 140 CPS 511 00 Specifications

### General Specifications

Operating mode	Standalone
Internal power dissipation (in W)	$2 + (1.8 \times I_{out})^1$
Network power consumption	Electric losses + $(5.1 \times I_{out})$
1: $I_{out}$ : sum of currents consumption by all modules in rack (in A)	

### Input

Input voltage	100 ... 150 VDC (including ripple)
Input current	0.4 A
Inrush current	10 A
Input power interruption	1 ms max.
Fusing (external)	1.5 A slow-blow

### Output to Bus

Voltage	5.1 VDC
Max. current	3 A
Protection	Over-current, over-voltage



---

# Chapter 25

## 140 CPS 524 00: 125 VDC Standalone/Redundant 8 A Power Supply Module

---

### Purpose

This chapter provides information on the 140 CPS 524 00 Power Supply module.


### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
140 CPS 524 00 Wiring Diagram	308
140 CPS 524 00 Specifications	309

## 140 CPS 524 00 Wiring Diagram

### Wiring Diagram Figure

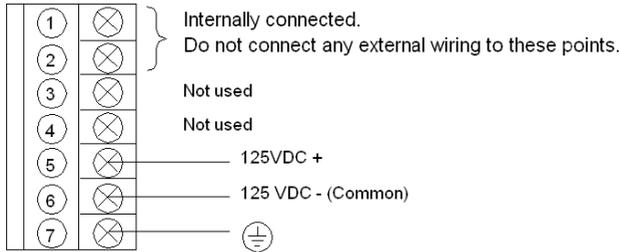

**NOTE:** When field wiring the power supply module, the maximum wire size that should be used is 1 - 14 AWG (2 mm<sup>2</sup>) or 2 - 16 AWG (1.5 mm<sup>2</sup>).

## ⚠ WARNING

### UNINTENDED EQUIPMENT OPERATION

- Use only compatible combinations of power supplies in the Quantum backplane as indicated in the following compatibility matrix.
- Remove line power from this module prior to insertion or removal.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### Compatibility Matrix

For proper operation, refer to this table:

Compatibility matrix					
Summable models	140CPS11420	140CPS11410	140CPS21400	140CPS41400	–
140CPS11420	Yes	Yes	No	No	–
140CPS11410	Yes	Yes	No	No	–
140CPS21400	No	No	Yes	Yes	–
140CPS41400	No	No	Yes	Yes	–
Redundant models	140CPS12420	140CPS12400	140CPS22400	140CPS42400	140CPS52400
140CPS12420	Yes	No	Yes	Yes	No
140CPS12400	No	Yes	No	No	Yes
140CPS22400	Yes	No	Yes	Yes	No
140CPS42400	Yes	No	Yes	Yes	No
140CPS52400	No	Yes	No	No	Yes

## 140 CPS 524 00 Specifications

### General Specifications

Operating mode	Standalone
	Redundant
Internal power dissipation (in W)	13 W
Network power consumption	Electric losses + $(5.1 \times I_{out})^1$
<sup>1</sup> : $I_{out}$ : sum of currents consumption by all modules in rack (in A)	

### Input

Input voltage	100 ... 150 VDC (including ripple)
Input current	0.5 A @ 125 VDC
Inrush current	28 A @ 125 VDC
Input power interruption	1 ms max.
Fusing (external)	2 A slow-blow

### Output to Bus

Voltage		5.1 VDC	
Max. Current	Standalone	8 A @ 60°C	
	Redundant	a) Two 140 CPS 524 00	8 A @ 60°C
		b) Three 140 CPS 524 00	16 A @ 60°C
		c) One 140 CPS 124 00 and one 140 CPS 524 00	8 A @ 60°C
		d) One 140 CPS 124 00 and two 140 CPS 524 00	16 A @ 60°C
		e) Two 140 CPS 124 00 and one 140 CPS 524 00	16 A @ 60°C
Min Current		Not Required	
Protection		Over-current, over-voltage	



---

# Part IV

## Racks(XBP) and Rack Expander (XBE)

---

### Introduction

This part provides information on the Quantum racks and rack expander.

### What Is in This Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
26	Selecting Racks (XBP)	313
27	140 XBE 100 00: Rack Expander	321



---

# Chapter 26

## Selecting Racks (XBP)

---

### Purpose

This chapter provides information on selecting Quantum Racks.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
General Information	314
140 XBP 002 00: Two Position Rack	315
140 XBP 003 00: Three Position Rack	316
140 XBP 004 00: Four Position Rack	317
140 XBP 006 00: Six Position Rack	318
140 XBP 010 00: Ten Position Rack	319
140 XBP 016 00: Sixteen Position Rack	320

## General Information

### Overview

Racks are designed to mechanically fasten and electrically connect modules used in drops. The rack contains a passive circuit board which permits modules to communicate with each other and to identify their slot numbers without further switch settings.


**NOTE:** To meet vibration/shock specifications, the rack must be mounted using all specified mounting holes. The rack is mounted using standard hardware (described below).

The recommended length for the mounting screws should be within the following range: 0.24 in. (6 mm) - 0.52 in. (13 mm)

The head height of the screws should not exceed 0.14 in. (3.5 mm).

## 140 XBP 002 00: Two Position Rack

### Two Position Rack

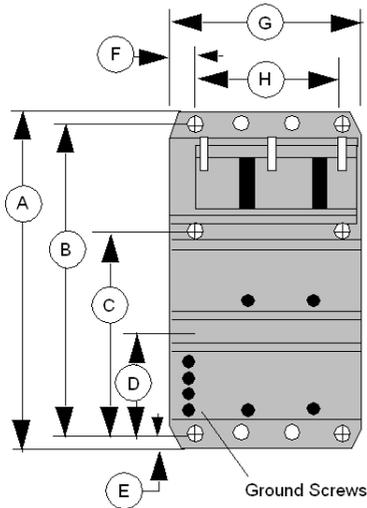

⊕=Mounting Hole  
Diameter: 8 mm (0.31 in)


○=Optional locations for Modbus Plus  
communication cable grounding.  
Diameter: 8 mm (0.31 in)

●=Threaded mounting holes for half and full  
height modules.  
Diameter: 4 mm (0.16 in)

- A 290 mm (11.42 in)
- B 270 mm (10.63 in)
- C 175.5 mm (6.91 in)
- D 94.5 mm (3.72 in)
- E 10 mm (0.39 in)
- F 15 mm (0.59 in)
- G 102.61 mm (4.04 in)
- H 72.44 mm (2.85 in)

## 140 XBP 003 00: Three Position Rack


### Three Position Rack

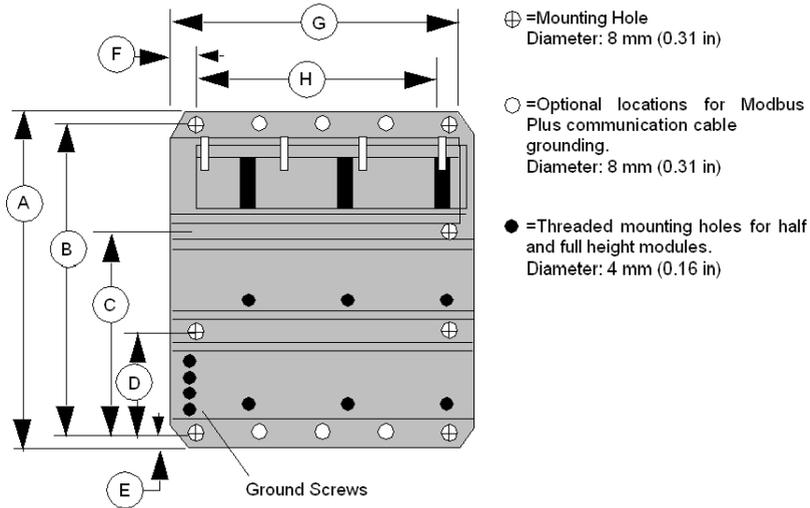

- A 290 mm (11.42 in)
- B 270 mm (10.63 in)
- C 175.5 mm (6.91 in)
- D 94.5 mm (3.72 in)
- E 10 mm (0.39 in)
- F 15 mm (0.59 in)
- G 143.13 mm (5.64 in)
- H 113.08 mm (4.45 in)

## 140 XBP 004 00: Four Position Rack

### Four Position Rack

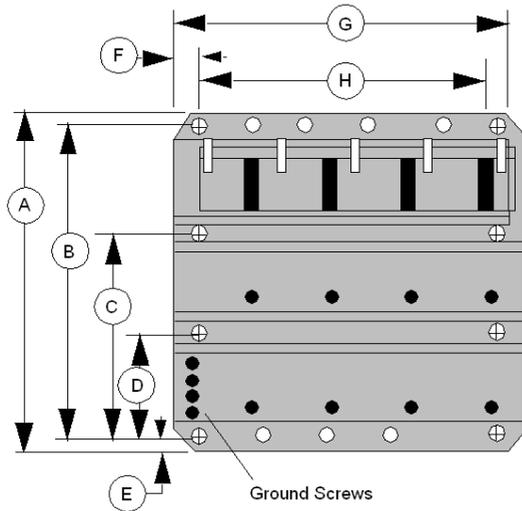


- ⊕ =Mounting Hole  
Diameter: 8 mm (0.31 in)
- =Optional locations for Modbus Plus communication cable grounding.  
Diameter: 8 mm (0.31 in)
- =Threaded mounting holes for half and full height modules.  
Diameter: 4 mm (0.16 in)

- A 290 mm (11.42 in)
- B 270 mm (10.63 in)
- C 175.5 mm (6.91 in)
- D 94.5 mm (3.72 in)
- E 10 mm (0.39 in)
- F 15 mm (0.59 in)
- G 183.69 mm (7.23 in)
- H 153.72 mm (6.05 in)

## 140 XBP 006 00: Six Position Rack

### Six Position Rack

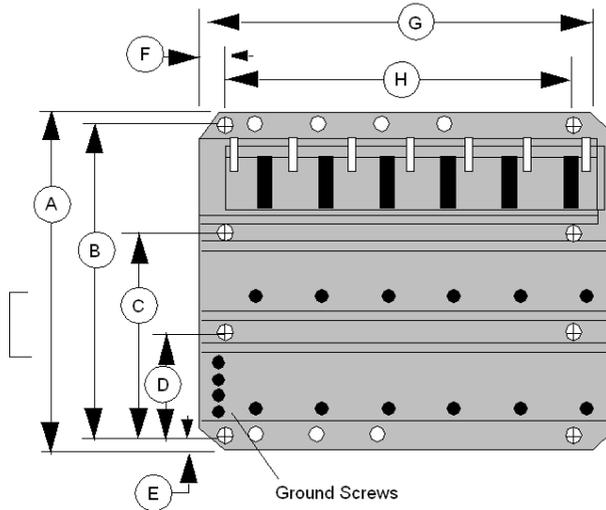


- ⊕ =Mounting Hole  
Diameter: 8 mm (0.31 in)
- =Optional locations for Modbus Plus communication cable grounding.  
Diameter: 8 mm (0.31 in)
- =Threaded mounting holes for half and full height modules.  
Diameter: 4 mm (0.16 in)

- A 290 mm (11.42 in)
- B 270 mm (10.63 in)
- C 175.5 mm (6.91 in)
- D 94.5 mm (3.72 in)
- E 10 mm (0.39 in)
- F 15 mm (0.59 in)
- G 265.1 mm (10.44 in)
- H 235 mm (9.25 in)

## 140 XBP 010 00: Ten Position Rack

### Ten Position Rack

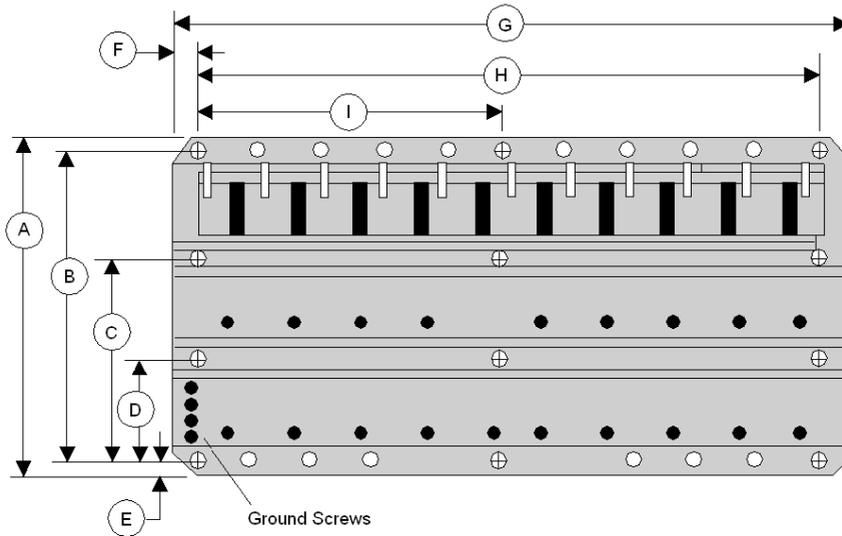

⊕=Mounting Hole  
Diameter: 8 mm (0.31 in)


○=Optional locations for Modbus Plus communication cable grounding.  
Diameter: 8 mm (0.31 in)

●=Threaded mounting holes for half and full height modules.  
Diameter: 4 mm (0.16 in)

- A 290 mm (11.42 in)
- B 270 mm (10.63 in)
- C 175.5 mm (6.91 in)
- D 94.5 mm (3.72 in)
- E 10 mm (0.39 in)
- F 15 mm (0.59 in)
- G 427.66 mm (16.84 in)
- H 397.56 mm (15.65 in)
- I 198.78 mm (7.82 in)

## 140 XBP 016 00: Sixteen Position Rack

### Sixteen Position Rack

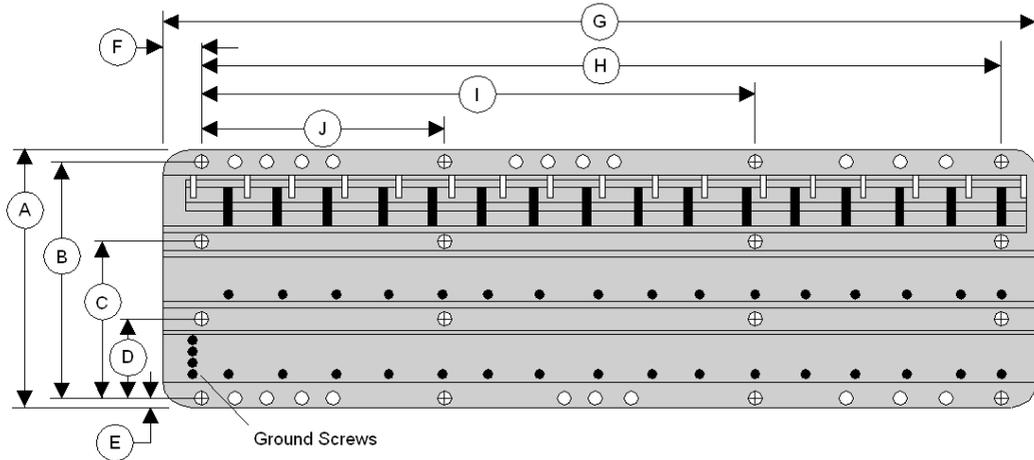

- ⊕ =Mounting Hole  
Diameter: 8 mm (0.31 in)
- =Optional locations for Modbus Plus communication cable grounding.  
Diameter: 8 mm (0.31 in)
- =Threaded mounting holes for half and full height modules.  
Diameter: 4 mm (0.16 in)

- A 290 mm (11.42 in)
- B 270 mm (10.63 in)
- C 175.5 mm (6.91 in)
- D 94.5 mm (3.72 in)
- E 10 mm (0.39 in)
- F 15 mm (0.59 in)
- G 670.74 mm (26.42 in)
- H 641.4 mm (25.25 in)
- I 427.6 mm (16.83 in)
- J 213.8 mm (8.42 in)

---

# Chapter 27

## 140 XBE 100 00: Rack Expander

---

### Purpose

This chapter provides information on the 140 XBE 100 00 module.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
General Information	322
Presentation	324
Operation Guidelines	325
140 XBE 100 00 Specifications	326

## General Information


### Function

The Rack Expander acts as a repeater for data signals from a primary Quantum rack. Since power is not provided to the secondary rack over the expander cable, power supplies are required in both racks.

The Rack Expander does not have any LEDs to display its status. The active LEDs of the modules in the secondary rack and their associated diagnostic status bits indicate proper operation, including the Rack Expander.

### Basic Configuration

The rack containing the CPU or RIO drop adapter is called the Primary rack, and the adjacent rack is designated as the Secondary rack. Each rack requires its own power supply.

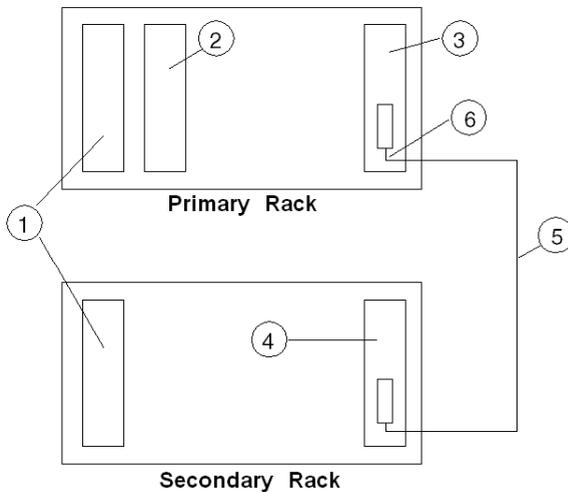

- 1 Power Supplies
- 2 CPU or RIO Adapter
- 3 First Rack Expander (140 XBE 100 00)
- 4 Second Rack Expander (140 XBE 100 00)
- 5 Rack Expander Cable (140 XCA 717 0•)
- 6 Cable end marked as "Primary"

**NOTE:** Install the cable when the racks are powered OFF.

## CAUTION

### UNINTENDED EQUIPMENT OPERATION

- The communication cable is polarized. The cable end marked "Primary" must be connected to the rack that includes the CPU or RIO adapter.
- The communications cable must be connected to the Rack Expander module before it is hot swapped into a powered rack.
- Do not hot swap Rack Expanders modules while modules in secondary rack are operating.

**Failure to follow these instructions can result in injury or equipment damage.**

### Features

- Enhances system performance requiring fewer remote I/O drops for the CPU to service.
- Enables a Quantum CPU to handle up to 27,648 discrete I/O.
- Makes it easy to plan for future I/O expansion by leaving an I/O slot empty for module insertion.
- Cost effective for local I/O by eliminating the need for a remote I/O head and drop.
- Cost effective by eliminating the need for an additional remote I/O drop.

### Part Numbers

The following table provides necessary part numbers.


Rack Expander	140 XBE 100 00
Rack Expander (conformally coated)	140 XBE 100 00C
Expander Cable, 3' (1 m)	140 XCA 717 03
Expander Cable, 6' (2 m)	140 XCA 717 06
Expander Cable, 9' (3 m)	140 XCA 717 09

## Presentation

### Function

With the 140 XBE 100 00 Rack Expander you can add a second rack to a local or remote drop. A custom communications cable, 3.0 m (9.84 ft) maximum, provides the data communication transfer.

### Rack Expander

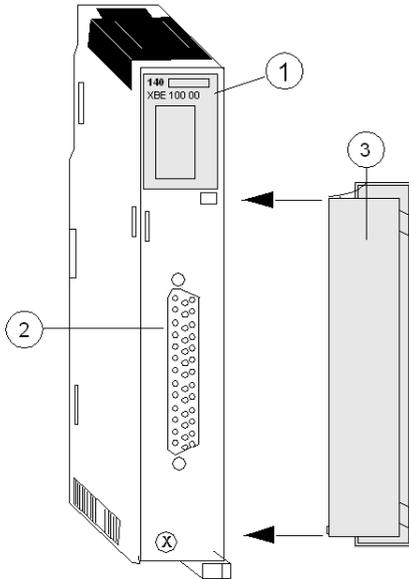

- 1 Module number, module description and color code
- 2 Connector
- 3 Removable door

## Operation Guidelines

### Rack Expander Guidelines

- The same 140 XBE 100 00 Rack Expander modules are used for the primary and secondary racks. The end of the Rack Expander cable marked "Primary" always connects to the Rack Expander module in the primary rack.
- The system can use any Quantum type power supply. Each rack can have a different type of power supply.
- Loss of power in the secondary rack will not shut down the entire drop. Only modules located in the "Secondary" rack will lose power.
- Rack expander modules can be located in any slot in the rack and do not have to be placed in corresponding slots in the primary and secondary racks.
- I/O modules that have downloadable executive firmware, such as the ESI module, are allowed in the secondary rack—except when downloading their execs. Executive firmware cannot be downloaded to modules in the secondary rack.
- It may be necessary to update the CPU or RIO drop executive firmware. See the Executive Firmware section in Specifications.
- The Rack Expander will not be recognized by the programming panel software. It will look like an unfilled slot in the PLC I/O map.
- The Rack Expander will allow configuration or I/O mapping of additional modules in the local drop containing a CPU or RIO drop adapter—up to the drop word limit or physical slot address limitation.
- Option modules, such as NOMs, NOEs and CHSs must reside in the primary rack.
- Any Interrupt module can be located in the secondary rack, but the interrupt mode is not supported.

If the primary rack power supply goes **OFF**, and the secondary rack power supply remains **ON**, the behavior of the outputs on the secondary rack is not guaranteed. Outputs could either go to the *Off* state or adopt their *Timeout* state as defined by the user.

If the power supply of the secondary rack goes **OFF**, and the primary rack power supply remains **ON**, the **I/O Health bit** of the modules located in this rack could indicate a healthy module.

### CAUTION

#### UNINTENDED EQUIPMENT OPERATION - UNKNOWN OUTPUT STATE

- The Timeout State must be configured as USER DEFINED with a VALUE of 0 for all modules in the secondary rack regardless of the configuration.
- The same primary power source must be used for the primary and secondary racks.

**Failure to follow these instructions can result in injury or equipment damage.**

## 140 XBE 100 00 Specifications

### General Specifications

Number of connected racks	2
Maximum distance	3 m
rack requirements	For rack sizes (3-, 4-, 6-, 10- and 16-slot)
Slots used	1
Number of rack expander modules allowed	1/rack
LEDs	None
Required addressing	The rack expander looks like an unfilled slot in the PLC I/O map.
Power consumption	2.5 W
Bus current required	500 mA
Connector	3-pin D-type

### Compatibility

Primary rack	No restrictions
Secondary rack	Quantum I/O modules can be used in the secondary rack, unless otherwise noted in the I/O documentation.
Executive firmware	140 CPU •13 0• - Version 2.2
	140 CPU •34 1• - Version 1.03
	140 CPU •34 1•A - Any version
	140 CPU 424 02 - Version 2.15
	140 CPU 6•1 •0 - Any version
	140 CRA 93• 0• - Version 1.2

### Max. Words/Drop

Local I/O	64 in / 64 out <b>Note:</b> For CPU (for example 140 CPU 65150) there is no limitation of I/O words on local rack.
Remote I/O	64 in / 64 out

---

# Part V

## Simulator (XSM) and Battery (XCP) Module

---

### Introduction

This part provides information on Quantum Simulator (XSM) and Battery (XCP) Module.

### What Is in This Part?

This part contains the following chapters:

Chapter	Chapter Name	Page
28	Simulator Modules (XSM)	329
29	140 XCP 900 00: Battery Module	339



---

# Chapter 28

## Simulator Modules (XSM)

---

### Purpose

This chapter provides information on Quantum Simulator Modules (XSM).

### What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
28.1	140 XSM 010 00: Two Channels In / One Channel Out Analog Simulator	330
28.2	140 XSM 002 00: 16 Point Discrete Input Simulator	336

# Section 28.1

## 140 XSM 010 00: Two Channels In / One Channel Out Analog Simulator

---

### Purpose

This section provides information on the 140 XSM 010 00 analog simulator.

### What Is in This Section?

This section contains the following topics:

Topic	Page
Presentation	331
140 XSM 010 00 Wiring Diagram	333
140 XSM 010 00 Specifications	335

## Presentation

### Function


The 140 XSM 010 00 module simulates 4 ... 20 mA field current loops. It provides two adjustable 4 ... 20 mA analog signals and one fixed 24 VDC output. The simulator also measures and displays voltages from 0 ... 5 VDC.

The simulator module includes the following:

- An internal 24 VDC power supply
- A 0 ... 5 VDC meter
- Two 10-turn potentiometers

**NOTE:** The 140 XSM 010 00 is not a field-operational module. It should be used only for testing, simulating and calibrating Quantum current input modules.

Illustration

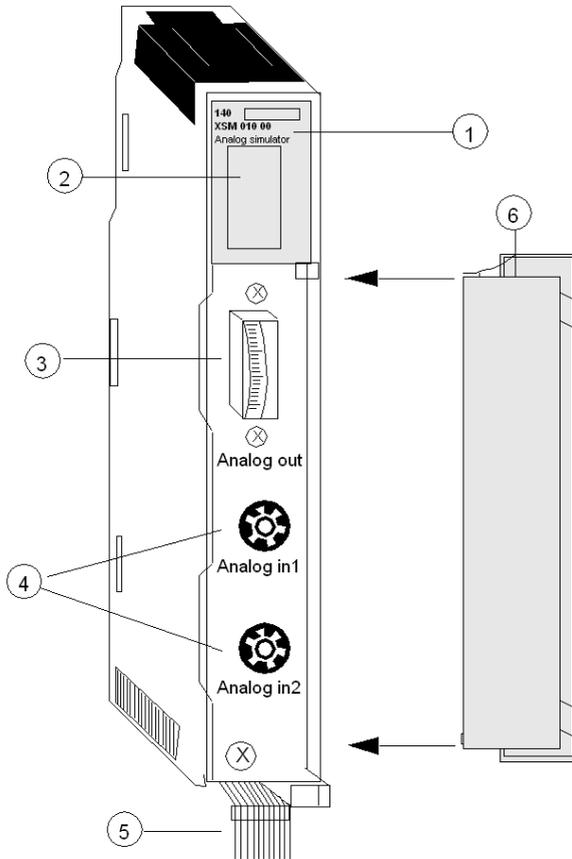


- 1 Model number, module description, color code
- 2 LED display
- 3 Voltmeter
- 4 Potentiometers
- 5 Color-coded leads
- 6 Removable door

**NOTE:** The 140 XSM 010 00 can be placed in any slot in the Quantum.

## 140 XSM 010 00 Wiring Diagram

### Sample Wiring Diagram

The following diagram shows a typical connection between the simulator, a 140 ACI 030 00 input module and a 140 ACO 020 00 output module. The simulator provides a variable 4 ... 20 mA input to the input module. The input can then be read by a Quantum CPU, and, if required, sent to an output module. For the output module to operate properly, the main current loop must be active, with 24 VDC supplied between terminals 9 and 10 with a 249 Ω voltage drop resistor.

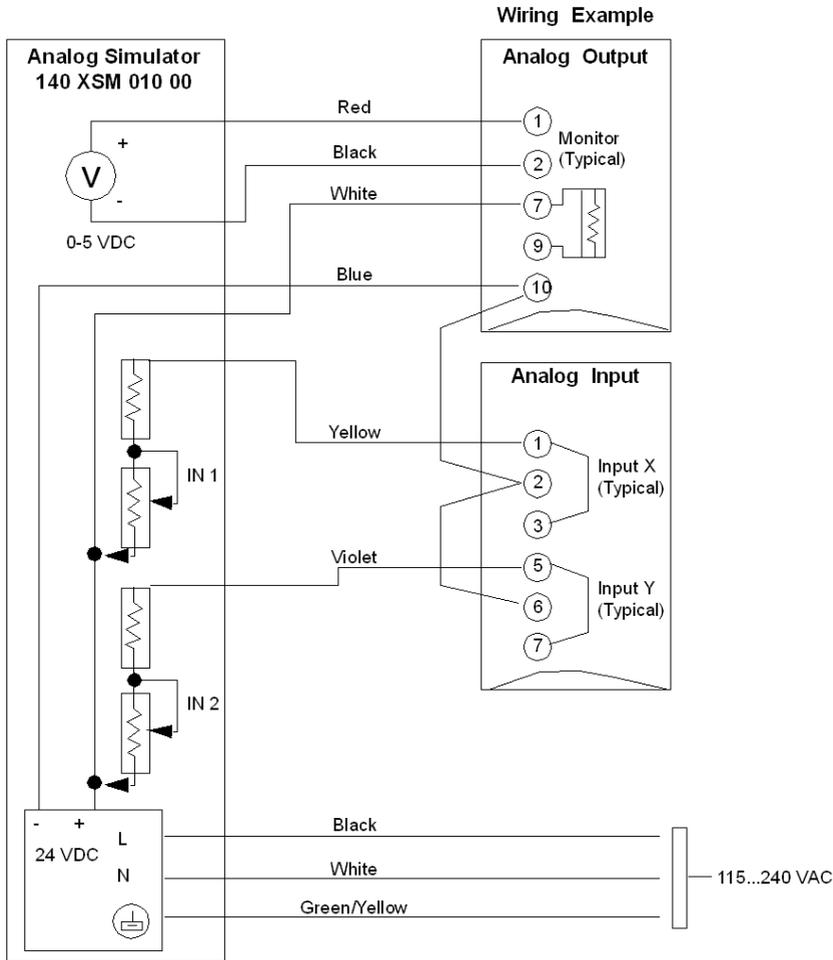

**140 XSM 010 00 Generic Wiring Diagram for the 140 A•I 030 00 Input Modules, 140 A•O 020 00 Output Modules, and the 140 AMM 090 00 Input/Output Module**

**NOTE:** For a more detailed description of these modules, refer to the Discrete and Analog I/O Reference Manual Quantum I/O Analog IN Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*), Quantum I/O Analog OUT Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*) and Quantum I/O Analog IN / OUT Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*).

## 140 XSM 010 00 Specifications

### Specifications

Voltage	Operating	100 ... 240 VAC, 50/60 Hz
	Continuous output	24 VDC, 400 mA max
Operating current		300 mA @ 120 VAC
Voltmeter range		0 ... 5 VDC
10-turn potentiometer output	variable current	4 ... 20 mA
	variable voltage	1 ... 5 VDC
Internal fusing		None
Bus current required		None

## Section 28.2

### 140 XSM 002 00: 16 Point Discrete Input Simulator


---

#### Presentation

#### Function

The 140 XSM 002 00 simulator consists of 16 toggle switches that can generate up to 16 binary input signals to the 140 DAI 540 00 and the 140 DAI 740 00 AC input modules.

**Illustration**

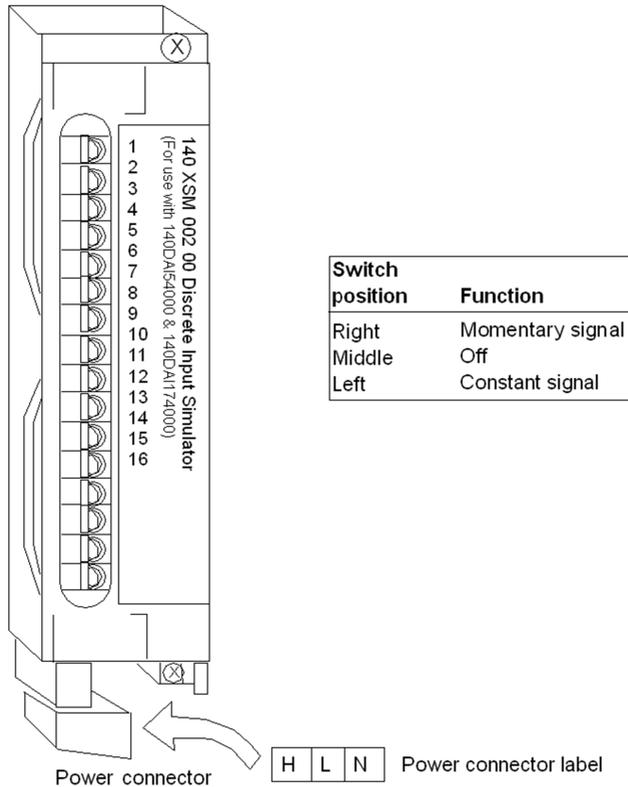

**NOTE:** Voltage source range is 24 ... 240 VAC.

**⚠ DANGER**

**HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

When using this simulator module with the 140 DAI 540 00 or 140 DAI 740 00 input modules, do not to come in contact with the supplied 115 or 230 VAC located at the bottom of the simulator module.

**Failure to follow these instructions will result in death or serious injury.**



---

# Chapter 29

## 140 XCP 900 00: Battery Module

---

### Purpose

This chapter provides information on Quantum 140 XCP 900 00 Battery module.

### What Is in This Chapter?


This chapter contains the following topics:

Topic	Page
Presentation	340
140 XCP 900 00 Indicators	342
Installation and Maintenance	343
140 XCP 900 00 Specifications	345

## Presentation

### Illustration

The following figure shows the battery module components.

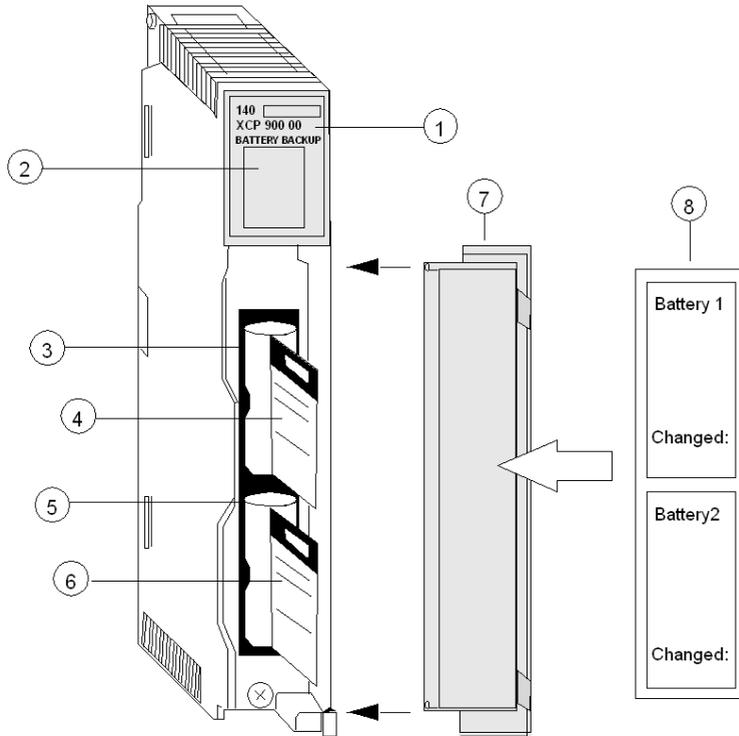

- 1 Model Number, Module Description, Color Code
- 2 LED Display
- 3 Battery Slot 1 (with battery installed)
- 4 Battery Access Tape (for removal/replacement)
- 5 Battery Slot 2 (with battery installed)
- 6 Battery Access Tape (for removal/replacement)
- 7 Removable Door
- 8 Customer Identification Label (Fold label and place it inside door)

### Battery Backup


The 140 XCP 900 00 provides RAM backup power for expert modules. One non-rechargeable 3.6 V lithium battery is provided and is accessible from the front of the module in Battery Slot 1 (the upper slot) for easy removal when it is necessary to change it.

**NOTE:** Extended backup is provided when a second battery is installed in Battery Slot 2 (the lower slot).

## 140 XCP 900 00 Indicators

### Illustration

The battery module has three LED indicators.

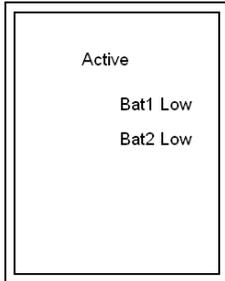

### Description

LEDs	Color	Indication when on
Active	Green	Bus communication is present.
Bat1 Low	Red	Battery 1 voltage is low.
Bat2 Low	Red	Battery 2 voltage is low.

**NOTE:** The Bat1 Low and Bat2 Low LEDs turn on when a battery is:

- not installed
- installed backwards
- or in need of replacement

## Installation and Maintenance


### Battery Installation and Replacement Considerations

The following procedure describes the installation of a battery.

Step	Action
1	Remove the insulating strip from the plus (+) pole of the battery before inserting it into the module. This strip is used to insulate the battery when on the shelf. <b>Note:</b> The battery installed in the module, when shipped, has the insulating strip in place. Remove this strip and re-install the battery before operation.
2	When single battery backup is required, install the battery in Battery Slot 1. The circuitry is designed so Battery 1 supplies the current until it is used up. Battery 2 (when installed) then assumes the load requirement without interruption. Battery status is indicated via LEDs and status bytes.
3	When the controller is in operation, the batteries can be replaced at any time. <b>Note:</b> When the controller is powered OFF, battery replacement can be done without RAM loss only when a second functioning battery is installed.

### Battery

This diagram shows the battery

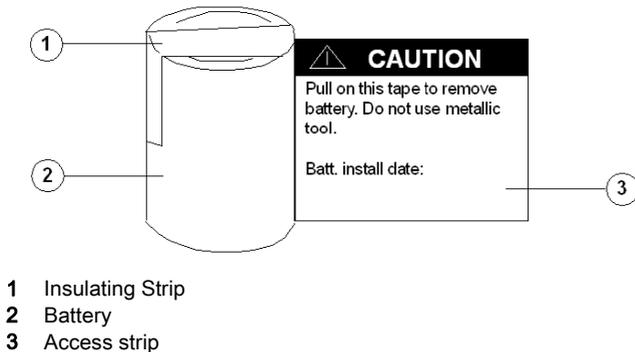

### Installing/Removing a Battery

The following procedure describes how to install or remove a battery.

Step	Action
1	Remove the insulating strip from the new battery.
2	If necessary, remove the old battery. Detach it from its housing (on the front of the module), by pulling the battery access strip until the battery pops out.
3	Replace it with the new battery using the reverse of the procedure in step 2.

## CAUTION

### EQUIPMENT DAMAGE

- Use insulated objects to remove or replace a battery in this module.
- Maintain proper polarity when connecting and inserting new batteries into the 140 XCP 900 00.

**Failure to follow these instructions can result in injury or equipment damage.**

## 140 XCP 900 00 Specifications

### Specifications

Battery type	C, 3 V lithium
Maximum load current	100 mA
Service life	5.5 Ah
Shelf life	10 years with 0.5% loss of capacity/year
Battery part number	990 XCP 990 00

### Service life

To determine the service life of a specific configuration, the current consumption of all available expert modules must be summed, refer to the following table. Place the value as determined in the equation below. The result will be the expected service life in days for a given system configuration.

$$ServiceLife = \frac{5.5Ah}{24h \times totalcurrent (mA)} = \frac{1}{4 \times I}$$

Where I is the total battery current load of all modules in the rack (in A).

The following table shows the modules and their associated current consumption:

Module	Current Consumption (A)
ERT 854 00	70
ESI 062 00	150
ESI 062 10	150
MMB 102 00	200
MMB 104 00	200
MMD 102 00	200
MMD 104 00	200

**Calculating Service life example**

Considering that the XCP 900 00 battery box provides battery backup for the RAM ESI 062 10 and two MMB 102 00 modules.

The service life can be calculated as follow:

$$\frac{5.5Ah}{24h \times (150 \times 10^{-6} + 2 \times 200 \times 10^{-6})A} = 417days$$

**NOTE:** If a module is operated from two batteries, the service life is also doubled.

---

# Appendices

---



## Introduction

This appendices provide additional information on the Quantum Automation System.

## What Is in This Appendix?

The appendix contains the following chapters:

Chapter	Chapter Name	Page
A	Miscellaneous Components	349
B	Power and Grounding Guidelines	363
C	Field Wiring Terminal Strip / Module Keying Assignment	393
D	CableFast Cabling	402
E	ConneXium Ethernet Cabling System	469
F	Agency Approvals and Conformal Coating	475
G	System Specifications	487



---

# Appendix A

## Miscellaneous Components

---

### Introduction

This appendix provides information on the various miscellaneous components of the Quantum system, with illustrations and descriptions.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Racks and Brackets Tables	350
Cables	351
Spare Parts Table	352
Illustrated Miscellaneous Components	353

## Racks and Brackets Tables

### Racks

Part Number	Module Slots	Weight
140 XBP 002 00	2	0.23 kg (0.5 lb)
140 XBP 003 00	3	0.34 kg (0.75 lb)
140 XBP 004 00	4	0.45 kg (1.0 lb)
140 XBP 006 00	6	0.64 kg (1.4 lb)
140 XBP 010 00	10	1.0 kg (2.2 lb)
140 XBP 016 00	16	1.58 kg (3.5 lb)

### Mounting Brackets

Part Number	Description
140 XCP 401 00	125 mm (4.92in) Bracket
140 XCP 402 00	20 mm (0.79in) Bracket

## Cables

### Cabling

Description	Part Number	Length
RS-232 programming cable	990 NAA 263 20	2.7 m (12 ft)
	990 NAA 263 50	15.5 m (50 ft)
Modbus Plus trunk cable	490 NAA 271 01	30 m (100 ft)
	490 NAA 271 02	152 m (500 ft)
	490 NAA 271 03	304 m (1000 ft)
	490 NAA 271 04	456 m (1500 ft)
	490 NAA 271 06	1520 m (5000 ft)
Modbus Plus drop cable	990 NAD 211 10	2.4 m (8 ft)
	990 NAD 211 30	6 m (20 ft)
Modbus Plus drop cable (left side)	990 NAD 218 10	2.4 m (8 ft)
	990 NAD 218 30	6 m (20 ft)
Modbus Plus drop cable (right side)	990 NAD 219 10	2.4 m (8 ft)
	990 NAD 219 30	6 m (20 ft)
Modbus Plus plastic DIO tap	990 NAD 230 00	
Modbus Plus ruggedized DIO tap	990 NAD 230 10	
Prefabricated RG-6 S908 RIO drop cable	AS-MBII-003	14 m (50 ft)
	AS-MBII-004	43 m (140 ft)

## Spare Parts Table


### Miscellaneous Spare Parts Table

The following table shows the miscellaneous spare parts for the Quantum modules.

Spare Part Number	Description
140 CPS 111 00	AC Power Supply Door Label
140 CPS 1•4 •0	AC Power Supply Door Label
140 CPS 211 00	DC Power Supply Door Label
140 CPS 2•4 00	DC Power Supply Door Label
140 XTS 005 00	IP20 7 Pos Connector
140 XTS 001 00	IP20 40 Pos Connector

## Illustrated Miscellaneous Components


### 99 0 NAD 218-0 Connector Orientation

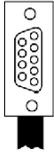

990NAD218X0


### 140 XCP 200 00 Coding Kit

The coding kit contains six white sets of plastic keys and 12 yellow sets.

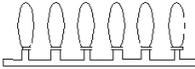


### 140 XCP 500 00 Empty Module

The empty module below is without a terminal strip.

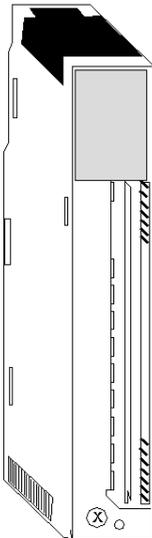


### 140 XCP 510 00 Empty Module

The empty module below is without the terminal strip and with a door cover.

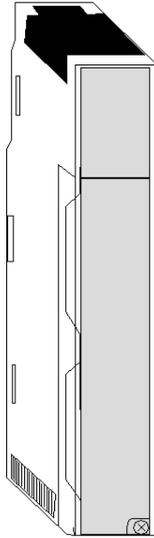


### 140 XCP 600 00 Terminal Strip Jumper Kit

The terminal strip jumper kit contains 12 jumpers.

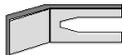


### 140 XTS 001 00 40-pin Field Wiring Terminal Strip

The 40-pin field wiring terminal strip has a screw-down bolted cover.

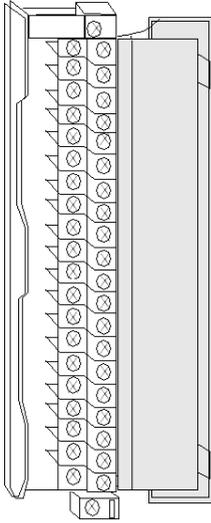


Customer Identification Label

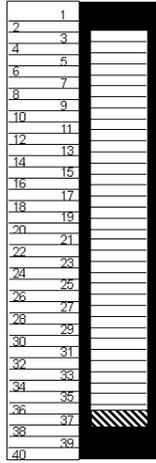


### 140 XTS 002 00 40-pin Field Wiring Terminal Strip

The 140 XTS 002 00 differs from the 140 XTS 001 00 in that it does not have the clear plastic cover over the screw-down bolts.

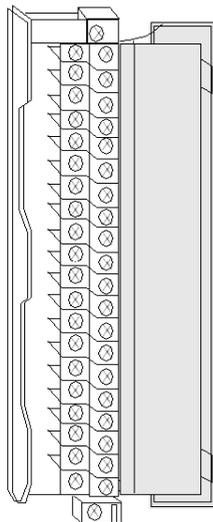


Customer Identification Label

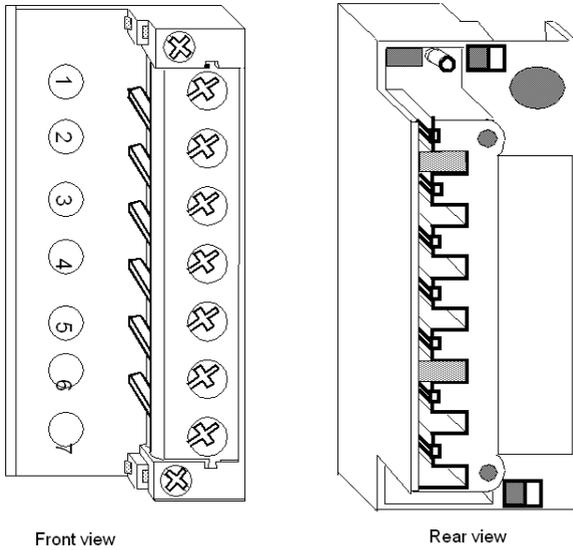


**140 XTS 005 00 Seven-pin Field Wiring Terminal Strip****990 XCP 900 00 Battery**

### 990 XCP 980 00 CPU Battery

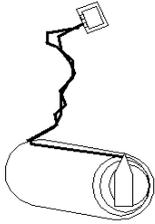


### 990 NAD 230 00 Modbus Plus Tap

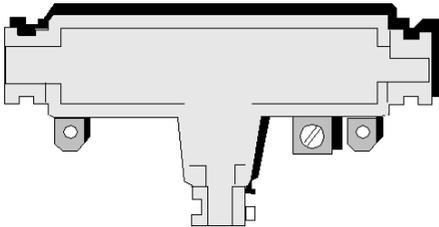

### 990 NAD 230 20/21 Modbus Plus Super Tap




**990 NAD 230 10 Ruggedized Modbus Plus Tap**

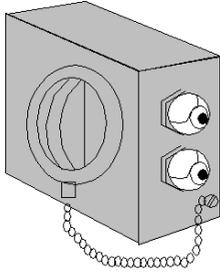


**990 NAD 230 11 Terminator**



**990 NAA 215 10 Programming Cable**

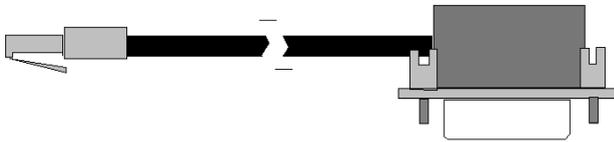


990 XTS 003 00 200 Series I/O Conversion Connector


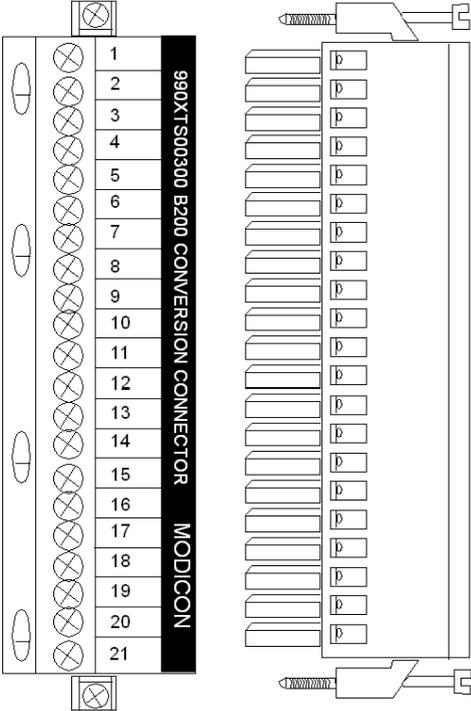


Front View


Side View

MA-0185-100 Remote I/O Tap

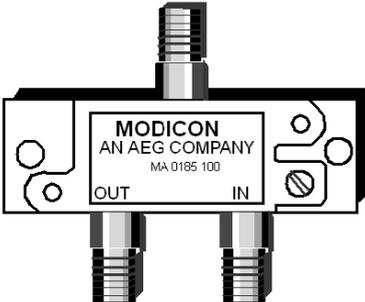

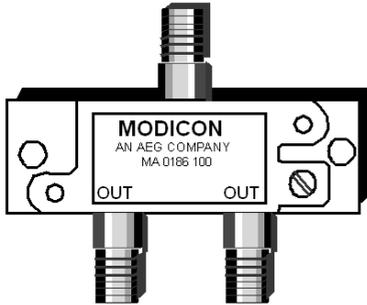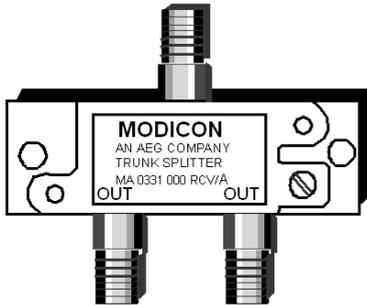
**MA-0186-100 Remote I/O Splitter****MA-0331-100 Remote I/O Trunk Splitter****MA-0329-001/MA-0329-002 Remote I/O F Connectors**

The MA-0329-001 F connector supports quad shield RG 6 cable, and the MA-0329-002 F connector supports non-quad shield RG6 cable.

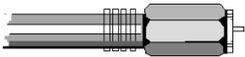

**043509446/52-0487-000 Remote I/O BNC Connectors**

The 043509446 BNC connector supports quad shield RG 6 cable, and the 52-0487-000 BNC connector supports non-quad shield RG 6 cable.

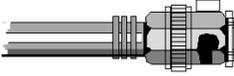

---

# Appendix B

## Power and Grounding Guidelines

---

### Introduction

This appendix provides information of power and grounding considerations for AC and DC powered systems, grounding and closed system installation.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
General Information	364
Batteries as DC power supplies	366
AC Power and Grounding Considerations	367
DC Power and Grounding Considerations	371
Closed System Installation	377
Modbus Plus Termination and Grounding	379
Fiber Repeaters	382
Grounding of RIO Networks	384
Analog Grounding Consideration	387

## General Information

### Overview

#### DANGER

##### **ELECTRIC SHOCK**

The user is responsible for compliance with national and local electrical code requirements with respect to grounding of all equipment. Read, understand and implement the wiring and grounding requirements in this section.

**Failure to follow these instructions will result in death or serious injury.**

The required power and grounding configurations for AC powered and DC powered systems are shown in the following illustrations. Also shown are power and grounding configurations of AC and DC systems required for CE\* compliance.

**NOTE:** Each rack shown has its own ground connection; that is, a separate wire returning to the main grounding point, rather than "daisy chaining" the grounds between power supplies or mounting plates.

The main grounding point is the local common connection of the panel ground, equipment ground, and earth grounding electrode.

### CE Compliance

The CE mark indicates compliance with the European Directive on Electromagnetic Compatibility (EMC) (89/336/EEC) and the Low Voltage Directive (73/23/EEC).

**NOTE:** In order to maintain CE compliance, the Quantum system must be installed in accordance to these instructions.

### Chassis Grounding

A chassis ground wire is required for each rack. The wire is connected between one of four ground screws (located on the rack) and the main ground point of the power system. This wire should be green (or green with a yellow stripe) and the AWG rating must be (at a minimum) sized to meet the fuse rating of the supply circuit.

### Power Supply Grounding

On each power supply connector there is a ground connection. The preferred connection is between the power supply connector ground terminal and one of the rack ground screws. This wire should be green (or green with a yellow stripe) and at a minimum the same AWG rating as the power connections to the supply.

In racks with multiple power supplies, each supply should have a ground connection between its input connector and the rack ground screws.

**NOTE:** It is recommended that the power supply, feeding the I/O modules, is grounded at the main ground point.

### Other Equipment Grounding

Other equipment in the installation should not share the grounding conductor of the system. Each piece of equipment should have its own grounding conductor returning to the main grounding point from which the equipment power originates.

### Systems with Multiple Power Feeds

In systems with multiple power feeds, the grounding should proceed in the same manner as single feed systems. However, a zero volt potential difference must be maintained between the equipment grounding conductors of the separate systems to prevent current flow on communication cables.

## Batteries as DC power supplies

### Overview


Power Supplies usually provide the adequate isolation from high **and** low frequency RF noise because of filtered outputs. Batteries provide only good filtering abilities against low frequency noise.

To protect battery powered networks, additional RFI filters are required such as:

- CURTIS F2800 RFI filters
- TRI-MAG, Inc. FL Series Filters or equivalent

## AC Power and Grounding Considerations


### AC Powered Systems

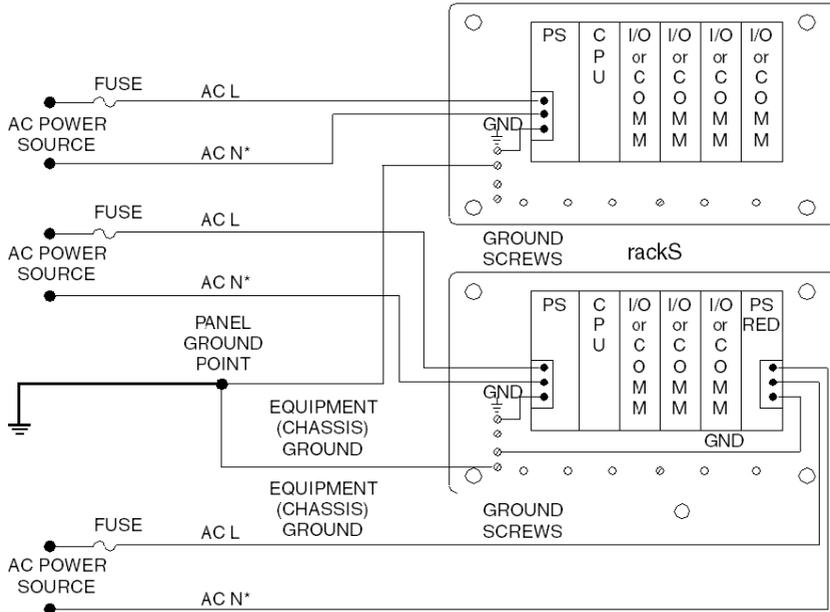

**NOTE:** \*AC N should be earth grounded. If it is not earth grounded, it must be fused (refer to local codes).

**AC System with CE Compliance**

**NOTE:** 140 CPS 111 00, 140 CPS 114 20 and 140 CPS 124 20 power supplies are designed to not require the external EMI filter, ferrite bead and Olflex cable.

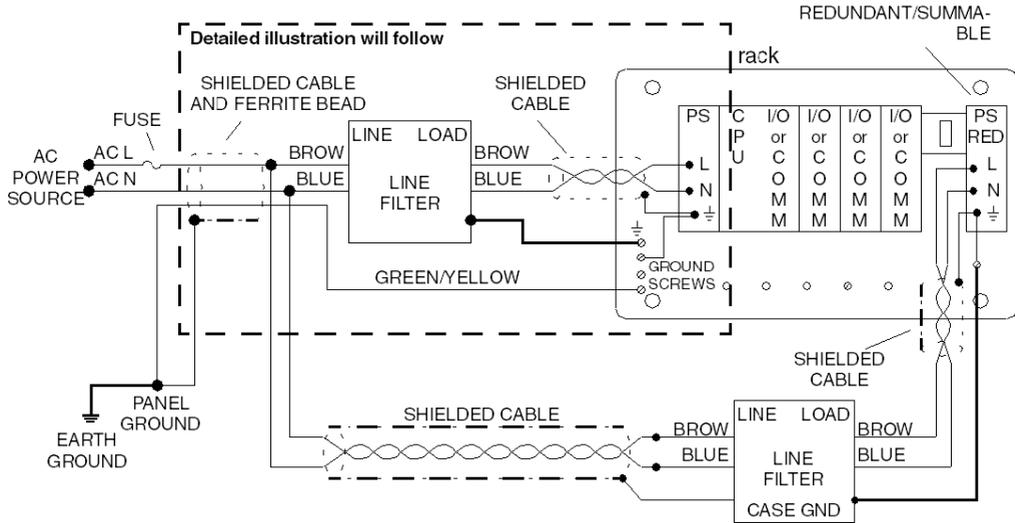


**NOTE:** To maintain CE compliance with the European Directive on EMC (89/336/EEC), the AC power supplies must be installed per the European Directive on EMC (89/336/EEC).

**NOTE:** 140 XTS 001 00 and 140 XTS 005 00 connector models must be used in systems that must meet closed system requirements as defined in EN 61131-2 (without relying upon an external enclosure).

External Line Filters must be protected by a separate enclosure which meets the requirements of IEC 529, Class IP20.

**Detail**

The following figure shows the details of an AC powered system with CE compliance.

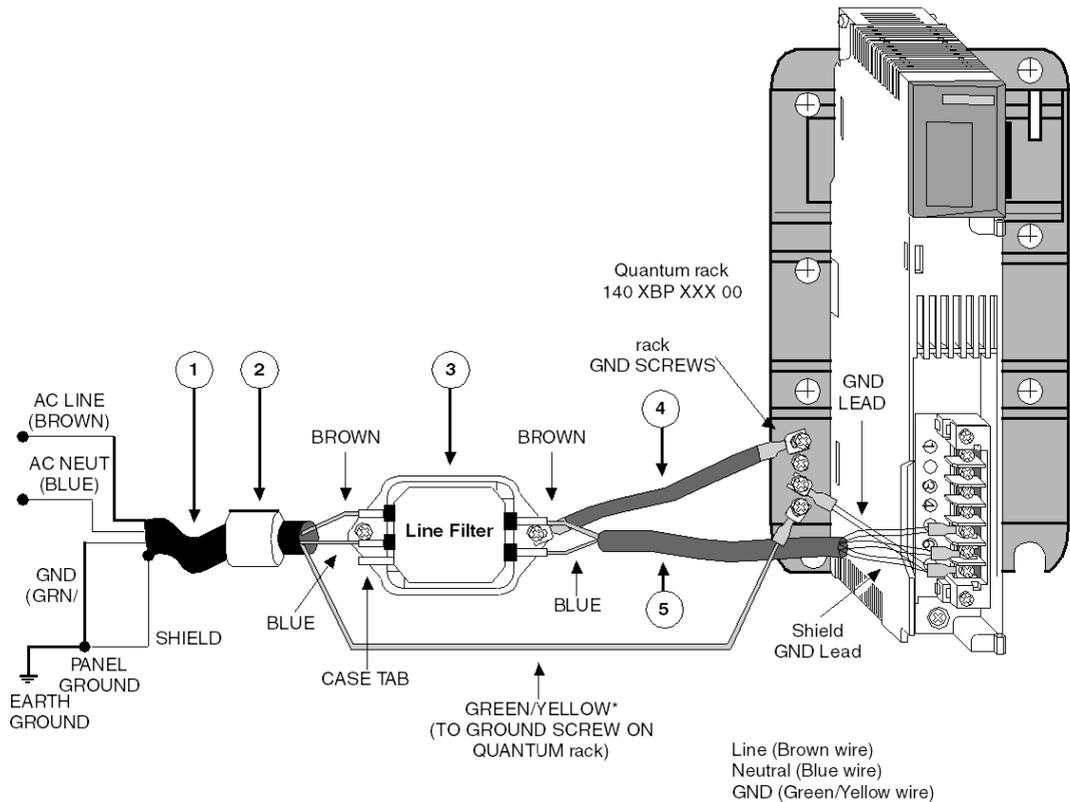

**NOTE:** Only one ground wire per rack is required. In redundant and summable systems, this lead is not connected for the additional line filter/power supply.

**NOTE:** For detailed wiring diagrams, refer to the part Power Supply Modules Power Supply Modules ([see page 225](#))


## Part List

Callout	Vendor or equivalent	Part Number	Description	Instruction
1	Oflex-Series 100 cy	35005	Line Cord	Terminate the shield at panel ground; the filter end of the shield is not terminated.
2	Stewart Fairite	28 B 0686-200 2643665702	Ferrite Bead	Install next to the filter and fasten with tie wraps at both ends of the ferrite bead.
3	Schaffner	FN670-3/06	Line Filter (fast on terminals) Dimensions: Length:85 mm (3.4 in) Width: 55 mm (2.2 in) Height: 40 mm (1.6 in) Mounting Holes: 5.3 mm (0.2 in) diameter 75 mm (3 in) centerline mounted. Fast on terminals: 6.4 mm (0.25 in)	Install next to the power supply.
4	NA	NA	Ground Braid Flat braid 134 mm (0.5 in) with a maximum length of 100 mm (4 in)	NA
5	Oflex Series 100cy	35005	Shield Cable Maximum length: 215 mm (8.5 in)	Third lead (green/yellow) is not used; terminate the shield at the power supply ground terminal.

## DC Power and Grounding Considerations

### 24 VDC Powered System Figure


The following figure shows a 24 VDC powered system.

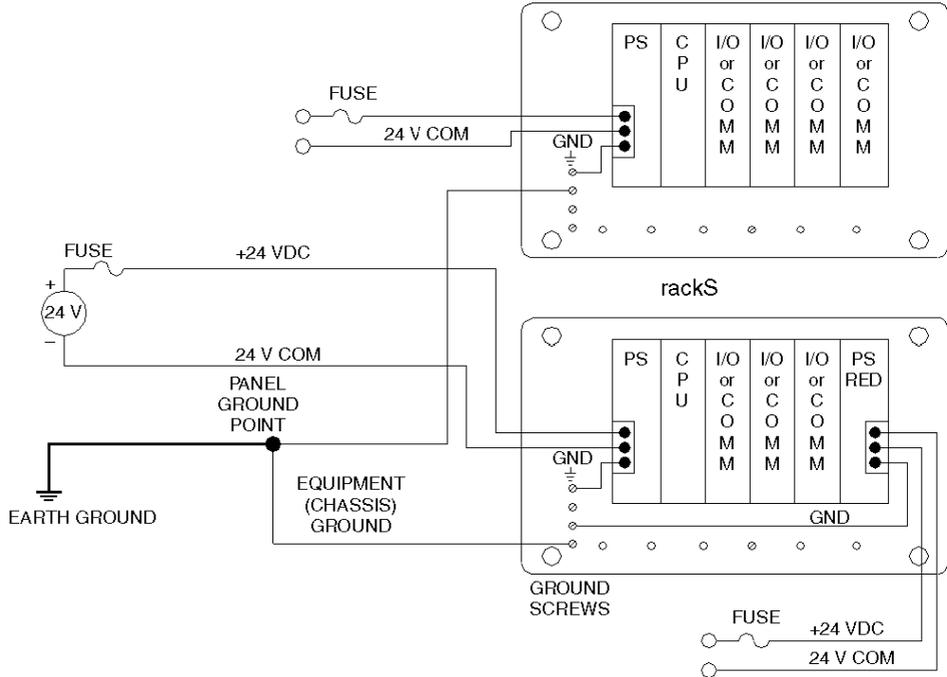

**NOTE:** It is recommended to earth ground the 24 VDC power supply.

### 24 VDC Powered System for CE Compliance

The following figure shows a 3 A, 24 VDC powered system for CE compliance.

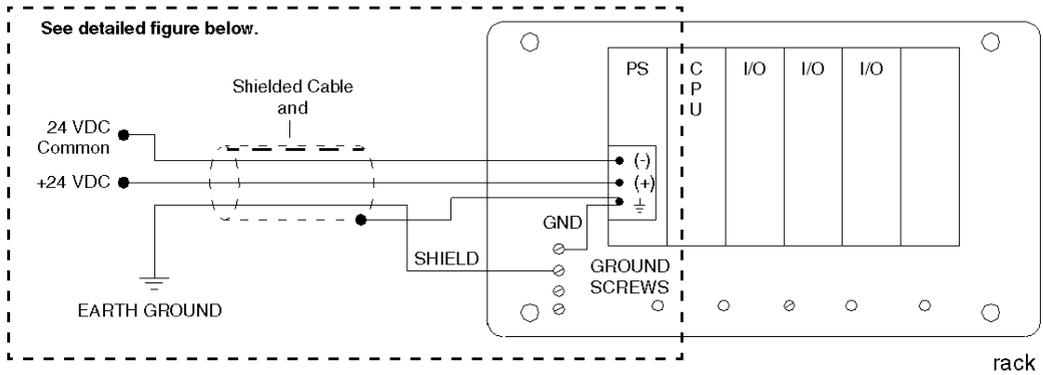

## **CAUTION**


### **CE MARK NONCOMPLIANCE**

The 140 CPS 211 00, the 140 CRA 211 20, and the 140 CRA 212 20 must be installed per the European Directive on EMC (89/336/EEC) and the Low Voltage Directive (73/23/EEC).

**Failure to follow these instructions can result in injury or equipment damage.**

## 24 VDC Detailed Figure

The following figure shows the detailed installation of a 3 A, 24 VDC powered system for CE compliance.

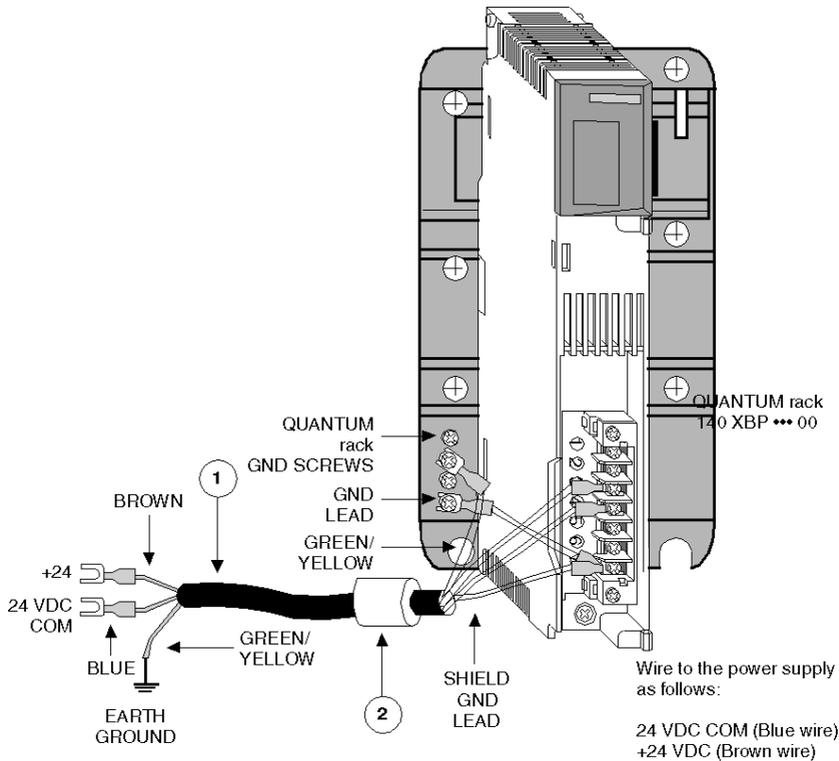


**NOTE:** For detailed wiring diagrams, refer to the part Power Supply Modules Power Supply Modules ([see page 225](#))

Parts List.

Callout	Vendor (or equivalent)	Part Number	Description	Instruction
1	Offlex Series 100cy	35005	Line Cord	Terminate the shield at the power supply ground terminal
2	Seward Fairite	28 BO686-200 2643665702	Ferrite Bead	Install next to the filter and fasten with tie wraps at Both ends of the ferrite bead.

### 125 VDC Powered System Figure

The following figure shows a 125 VDC powered system for CE compliance.

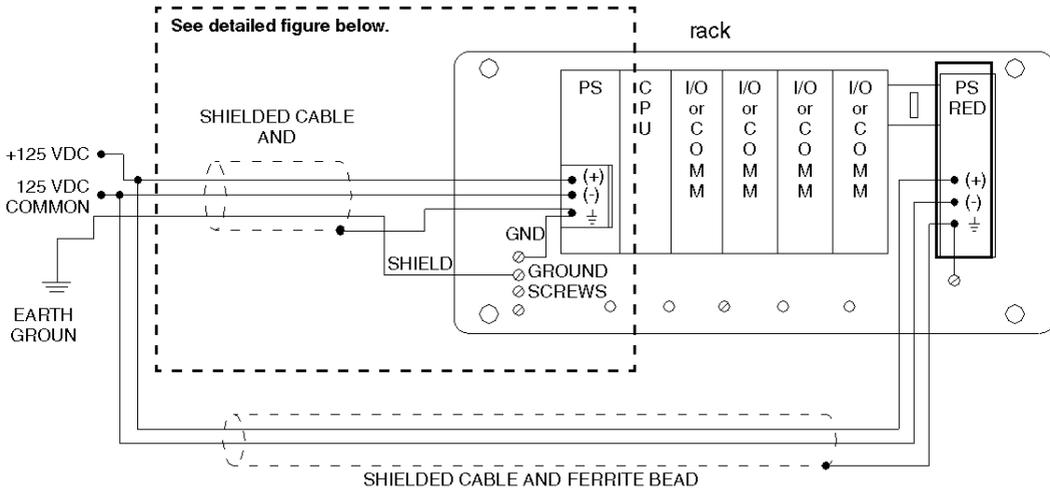

## **⚠ CAUTION**


### **CE MARK NONCOMPLIANCE**

The 140 CPS 511 00 & the 140 CPS 524 00 must be installed per the European Directive on EMC (89/336/EEC) and the Low Voltage Directive (73/23/EEC).

**Failure to follow these instructions can result in injury or equipment damage.**

### 125 VDC Detailed Figure

The following figure shows the detailed installation for the 125 VDC powered system for CE compliance.

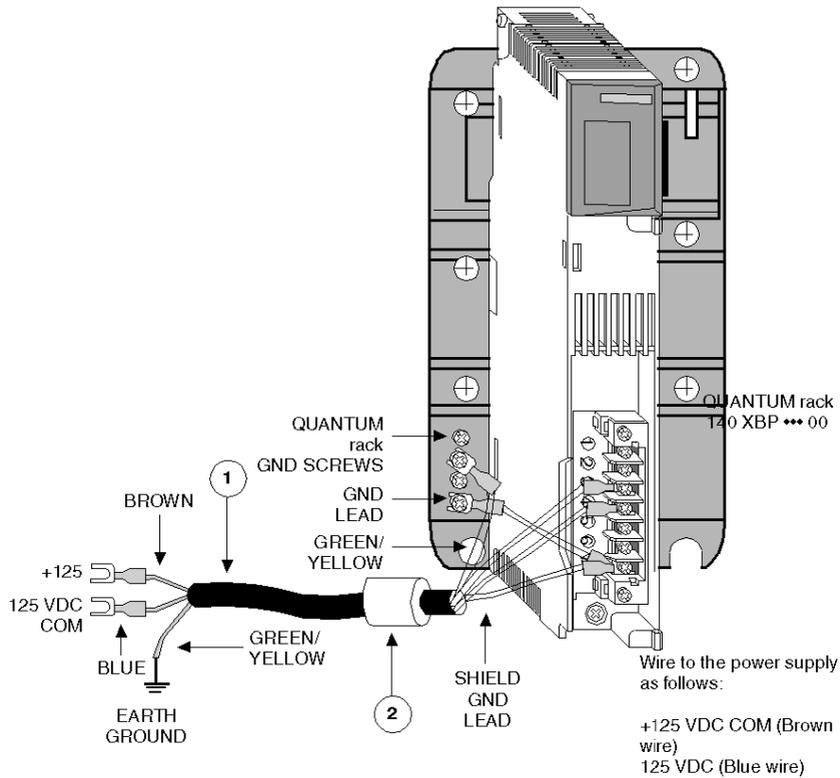

**NOTE:** For detailed wiring diagrams of power supply modules, refer to the part Part Power Supplies ([see page 225](#))

Parts List.

Callout	Vendor (or equivalent)	Part Number	Description	Instruction
1	Offlex Series 100cy	35005	Line Cord	Terminate the shield at the power supply ground terminal
2	Sreward Fairite	28 BO686-200 2643665702	Ferrite Bead	Install next to the filter and secure with tie wraps at Both ends of the ferrite bead.

 **CAUTION**

**EUROPEAN COMPLIANCE**

The 140 CPS 511 00 & the 140 CPS 524 00 must be installed per the European Directive on EMC (89/336/EEC) and the Low Voltage Directive (73/23/EEC).

**Failure to follow these instructions can result in injury or equipment damage.**


## Closed System Installation

### Overview

For installations that must meet closed system requirements as defined in EN 61131-2 (without relying upon an external enclosure) in which an external line filter is used, it must be protected by a separate enclosure that meets the requirements of IEC 529, Class IP20.

### AC/DC Installation

The following figure shows an AC/DC powered systems that meets CE closed system compliance.

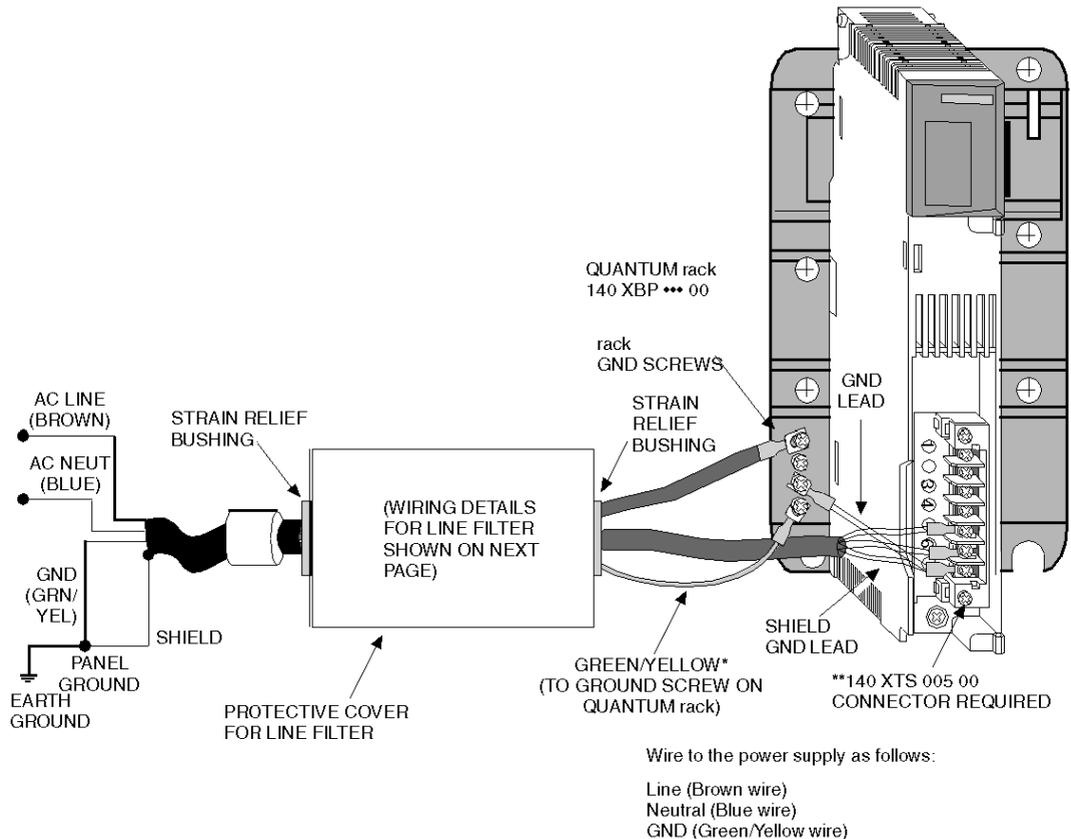

\* Only one ground wire per rack is required. In redundant and summable systems, this lead is not connected for the additional line filter/power supply


\*\* Connectors 140 XTS 005 00 (for power supplies) and 140 XTS 001 00 (for I/O modules) must be ordered separately

**NOTE:** For detailed wiring diagrams, refer to the part Power Supply Modules Power Supply Modules (*see page 225*)

### Protective Cover

The protective cover must completely enclose the line filter. Approximate dimensions for the cover are 12.5 x 7.5 cm. Wire entry/exit shall be through strain relief bushings.

### Line Filter Connections

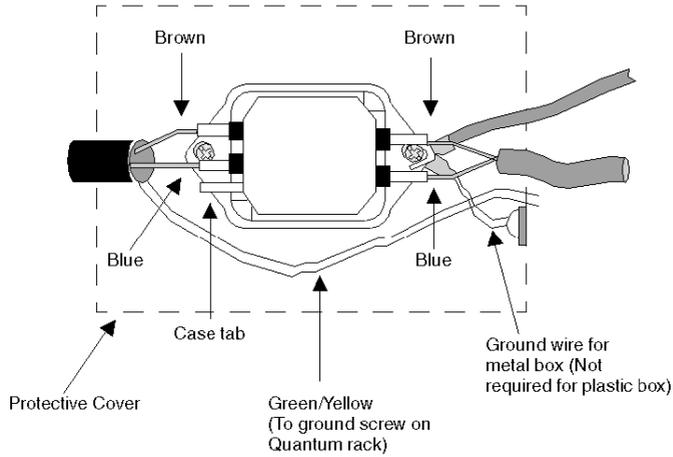


## Modbus Plus Termination and Grounding

### How Taps Have to Be Terminated

A tap is required at each site on the trunk cable to provide connections for the trunk cable and drop cable. Each tap contains an internal terminating resistor that can be connected by two jumpers. Two jumper wires are included in the tap package, but are not installed. At the taps at the two ends of a cable section, you must connect both of the jumpers to provide the proper terminating impedance for the network. Taps at inline sites must have both jumpers removed. The impedance is maintained regardless of whether a node device is connected to the drop cable. Any connector can be disconnected from its device without affecting the network impedance.


The diagram shows a Modbus Plus Network connection with terminating resistors and grounding.

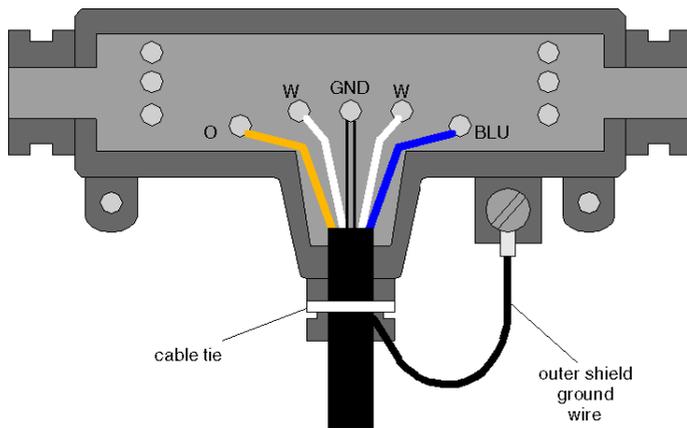

### Grounding at the Tap

Each tap has a grounding screw for connection to the site panel ground. Schneider Electric drop cables have a grounding lug in the cable package. This must be betightly crimped or soldered on the cable and connected to the grounding screw on the tap.

The diagram shows a drop cable, connected and grounded with a tap.

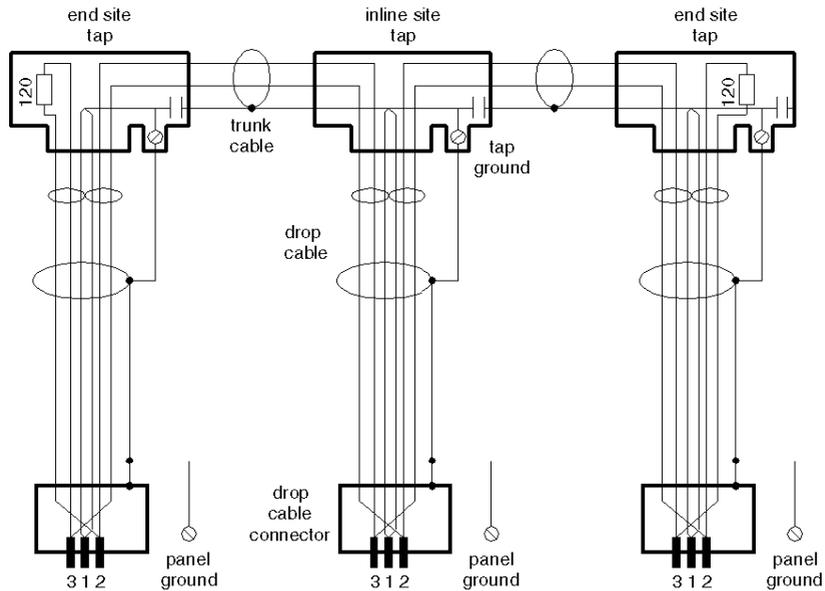


The node device end of the drop cable has a lug which must be connected to the node device's panel ground. The network cable must be grounded through this connection at each node site, even when the node device is not present. The ground point must not be left open. No other grounding method can be used.

## Grounding at the Device Panel

Modbus Plus network drop cables require a ground connection to the rack. The connection is made by means of a metal loop clamp that grounds the cable shield to the ground point.

The following figure shows the Modbus Plus grounding at the device panel.

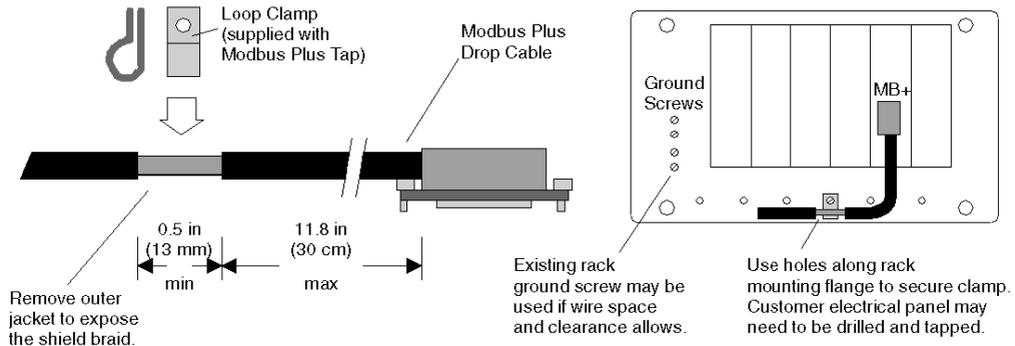

**NOTE:** To maintain CE compliance with the European Directive on EMC (89/336/EEC), the Modbus Plus drop cables must be installed in accordance with these instructions.

## Preparing the Cable for Grounding

This table shows the steps to prepare the cable for grounding

Step	Action
1	Determine the distance from the cable's end connector to the intended ground point on your rack or panel
2	Stripping of the cable's outer jacket <b>Note:</b> Keep in mind, that the maximum allowable distance from the ground point to the cable's end connector is 11.8 in (30 cm)
3	Remove 0.5 -1 in (13-25 mm) of the cable's outer jacket to expose the shield braid as shown in the figure above. )
4	If the panel has a suitable ground point for mounting the cable clamp, install the clamp at that point

## Fiber Repeaters

### Grounding a Modbus Plus Fiber Repeater

Step	Action
1	Connect the Repeater to the site ground <b>Result:</b> The Repeater obtains it's ground through the chassis ground screw or DC (-) wire.
2	Use a continuity tester to verify, that the repeater is grounded to the site ground.

### Connecting AC Power to the Repeater


Step	Action
1	Remove the power at it's source.
2	If necessary install a different plug on the cable for the power source at your site. <b>Note:</b> The AC power cable supplied with the repeater is keyed for North American 110-120 VAC outlets.
3	Remove the AC power cable from the repeater
4	Set the power selector plug to the 110-120 VAC or 220-240 VAC position for the power source at your site. To do this: <ol style="list-style-type: none"> <li>1. Remove the power selector plug by prying under it's tab using a small screw driver.</li> <li>2. Set the plug to the proper voltage position as shown on the plug body.</li> <li>3. Reinsert the plug.</li> </ol>
5	Insert the AC power cable in the rear panel connector.
6	Insert the AC power cable into the power source.

### Connecting DC Power to the Repeater

Step	Action
1	Remove the power at it's source.
2	Connect the source to the DC power terminals, observing the proper polarity.

### RIO Shield-to-chassis Switch

RIO cable shield must be set to specify the NRP relationship to chassis ground. Jumper switch is shipped in neutral position as indicated on the picture below:

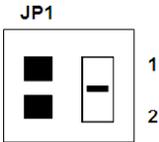

It have to be placed :

Switch position	Function
1	<p>NRP acts as a drop on CRP side (RIO cable shield is isolated from chassis ground by a capacitor) -i.e if low frequency is a problem.</p> <p>JP1</p>
2	<p>NRP acts as a head on CRA side (RIO cable shield is connected directly to chassis ground) - i.e. the same ground as the main RIO head.</p> <p>JP1</p>

## Grounding of RIO Networks

### Overview

The Remote I/O communication is based on single point grounding, that is located at the head. Coaxial cable and taps have no additional connection to the ground to help eliminate low frequency ground loops.

### Missing grounding

A cable system must be grounded at all times to ensure proper operation of the nodes on the network. The cable system is grounded by the RIO head processor. But if the cable is removed, the ground connection doesn't work anymore.

### Ground Blocks


Ground blocks provide grounding, even if the cable is removed.

Additional properties are as follows:

- Low insertion loss  
Only if five or more are used, they have to be considered in the trunk attenuation with 0.2 dB each. The impedance is 75  $\Omega$  and the return loss >40 dB.
- Wide application frequency

## Ground Block structure

The ground block 60-0545-000 consists of two female in-line F connectors and a separate screw hole binding for attaching a ground wire. The grounding block has two mounting holes, allowing it to be mounted to a flat surface.

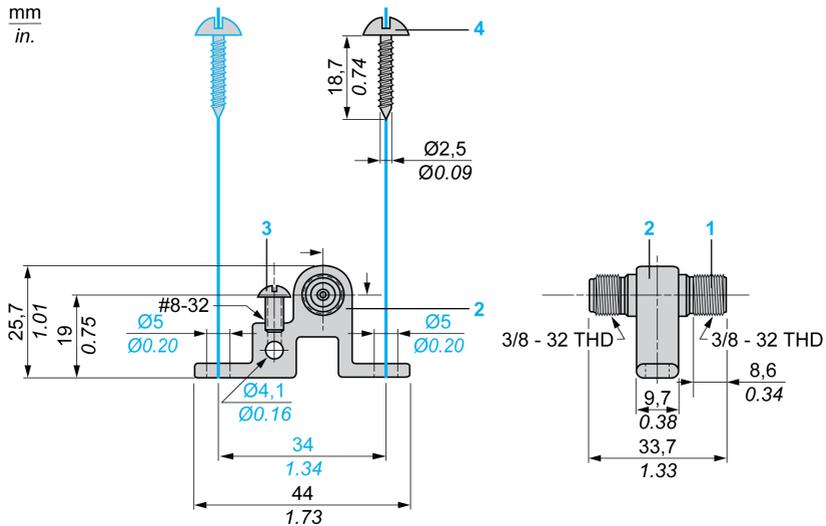

- 1 Female in-line F connector
- 2 Grounding block
- 3 Locking screw (for ground wire)
- 4 Mounting screw

**NOTE:** Local building codes may require the cable shield tied to ground, whenever the cable system exits and/or enters a new building (NEC Article 820-33).

### Surge protection

Surge protection is available for coaxial network trunks that span between buildings and are exposed to lightning. The recommended product has internal gas discharge surge protectors that absorb very high currents induced into the cable system by near-lightning strikes. The device indicated has insertion loss of less than 0.3 dB at the network operating frequency. The unused drop ports must be terminated with a 52-0402-000 Port Terminator. If desired, shrink tubing may be used to seal the F connections.

The device should be accessible for maintenance, and be protected from the elements if installed outside. The threaded stud should be connected to building ground.

The recommended product is Relcom Inc. p/n CBT-22300G. Contact information is:

Relcom Inc.

2221 Yew Street Forest Grove, Oregon 97116, USA

Tel: (800) 382-3765

[www.relcominc.com](http://www.relcominc.com)

## Analog Grounding Consideration

### Overview

For the Analog Input Modules (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*), the earthing must be done by the analog wires. Analog wires must be grounded directly when entering the cabinet. You may use an analog cable grounding rail. This section describes this approach.


### Principle

High frequency interference can only be discharged via large surfaces and short cable lengths.


### Guidelines

Follow these wiring guidelines:

- Use shielded, twisted-pair cabling.
- Expose 2.5 cm (1 inch) as shown:

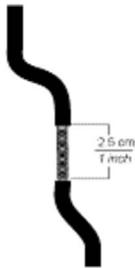

- Make sure the wire is properly grounded (connection between the grounding bar and the clamps).

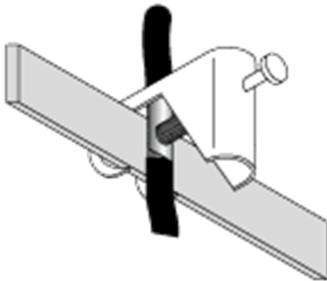


**NOTE:** It is strongly recommended to use the STB XSP 3000 grounding kit and, either the STB XSP 3010 or the STB XSP 3020 clamp kits.



### Assembly of the STB XSP 3000 Kit



The followed kit is used to have a high quality of the analog signal.

The following table describes the STB XSP 3000 grounding kit.

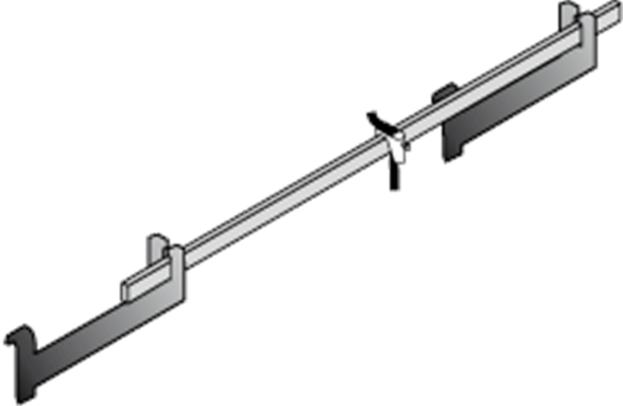Elements	Description
Side Supports and grounding bar	<p data-bbox="323 328 1059 376">The following illustration describes the assembly of the side supports and the grounding bar.</p> 

The following table describes the step to assemble the STB XSP 3000 grounding kit:

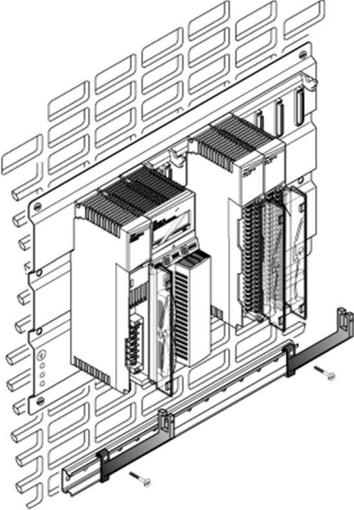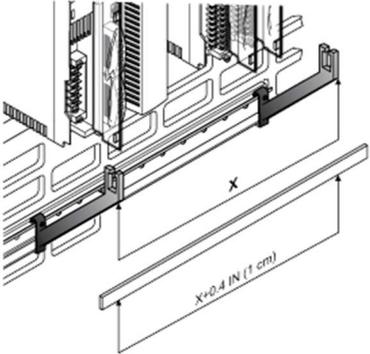Step	Description
1	<p data-bbox="353 261 961 285">Push the side supports against the walls and tighten the screws.</p> 
2	<p data-bbox="353 859 732 883">Choose the length of the grounding bar.</p> 
3	<p data-bbox="353 1292 989 1317">Insert the functional grounding terminal block and tighten the screw</p>  <p data-bbox="852 1325 906 1344">Screw</p> <p data-bbox="852 1401 1039 1442">Functional Grounding Terminal Block</p>

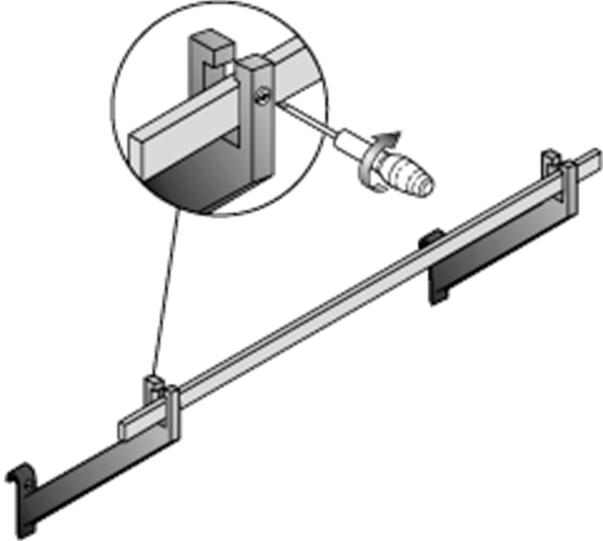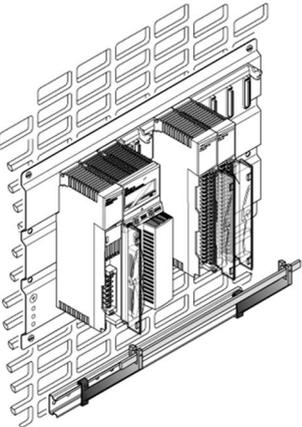Step	Description
4	<p data-bbox="323 204 724 228">Fix the grounding bar at the side supports.</p> 
5	<p data-bbox="323 833 998 857">The following figure describes the final assembly of the STB XSP 3000.</p> 


### STB XSP 3010 Kit and STB XSP 3020

The following table describes the different cable sections (in AWG and mm<sup>2</sup>):

Reference	AWG	mm <sup>2</sup>
STB XSP 3010	16 to 9	1.5 to 6.5
STB XSP 3020	10 to 7	5 to 11

### Final Assembly

The following figure shows the final assembly:

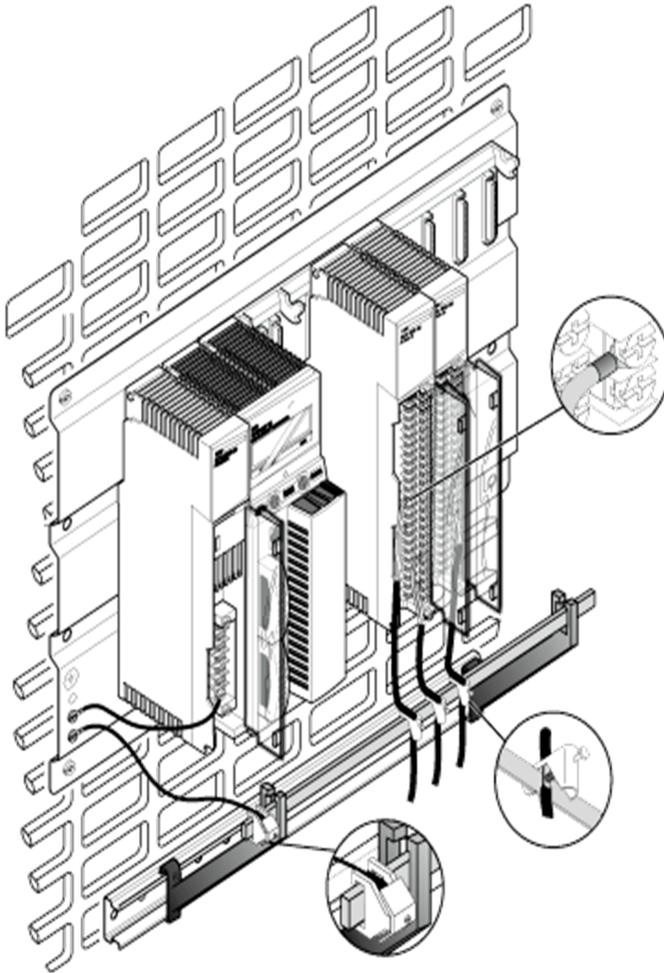



---

# Appendix C

## Field Wiring Terminal Strip / Module Keying Assignment

---

### Purpose

This appendix provides information on Field Wiring Terminal Strip / Module Keying Assignment of I/O modules

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
General Information	394
Illustration	395
Primary Keying	397
Secondary Keying	399

## General Information

### Location

Field wiring terminal strips and module housings are slotted on the left and right sides of the PCB card slot to accept keying pins (see *I/O Module Figure, page 395*).

### Purpose

To prevent plugging the terminal strip into the wrong module, once wiring connections have been made. Keying is implemented at the discretion of the user.

**NOTE:** Schneider Electric recommends that module key coding be part of the system installation procedure.

### Primary Keying

Primary keying is provided on the right side of the module, marked A through F (top and bottom positions are coded the same). Primary keying provides module class coding. Primary codes have been pre-defined, according to the following tables.

### Secondary Keying


Secondary keying is provided on the left side of the module, marked 1 through 6. Secondary keying codes are user-definable and may be used to identify module personality within module classes, or other unique site requirements.

The user may also use personality keying to differentiate between like module types (i.e., 140 DAO 840 00 and 140 DAO 842 10 both have the same primary keying pin combinations), using the white keys for each code.

## Illustration

### I/O Module Figure

The following figure shows the I/O module and the terminal strip.

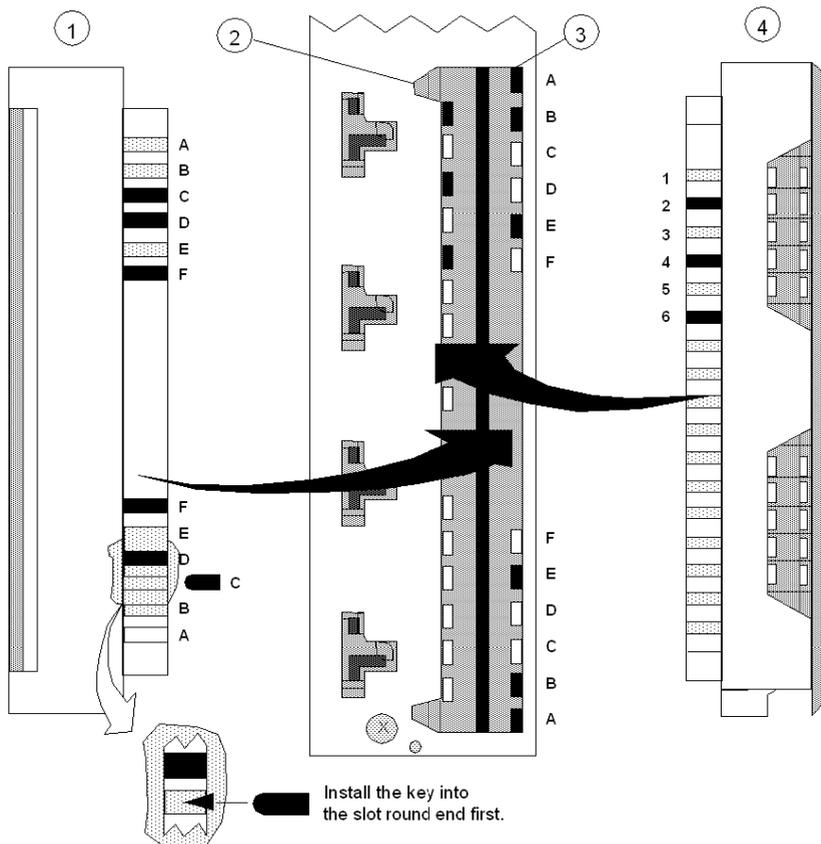

- 1 Right side of Terminal Strip
- 2 Secondary Key Slots
- 3 Primary Key Slots
- 4 Left side of Terminal Strip

**NOTE:** The primary / secondary keys shown (in black) in this example reflect the recommended coding of a 24 VDC module in slot 6 to its field wiring terminal strip.

To support keying, I/O modules accepting terminal strips come with 12 customer-installable primary keys (six yellow keys each for the module and terminal strip) and six secondary keys (three white keys each for the module and terminal strip). In the following table, check the Primary Module and Terminal Strip Coding columns for key locations.

To implement the user-optional secondary keying code (designed to help prevent the mismatching of terminal strips to I/O modules of identical type), 17 slot positions have been provided in modules and terminal strips to support a variety of coding schemes.

In addition (by using the secondary keying code), the user may key the field wiring terminal to the position where the module is installed in a rack, using the white keys for each code. To determine a unique module code and terminal strip code, refer to the *Primary Keying Table*, [page 397](#).

## Primary Keying

### Primary Keying Table

The following table shows the primary module and terminal strip keying for the I/O modules.

Module Class	Module Part Number	Module Coding	Terminal Strip Coding
5 VDC	140 DDI 153 10	ABC	DEF
	140 DDO 153 10		
9 ... 12 VDC	Unassigned	ABD	CEF
24 VDC	140 DDI 353 00	ABE	CDF
	140 DDI 353 10		
	140 DDM 390 00		
	140 DDO 353 00		
	140 DDO 353 10		
	140 HLI 340 00		
	140 SDI 953 00S		
	140 SDO 953 00S		
10 ... 60 VDC	140 DDI 841 00	ABF	CDE
	140 DDI 853 00		
	140 DDO 843 00		
125 VDC	140 DDI 673 00	ACD	BEF
	140 DDM 690 00		
	140 DDO 885 00		
24 VAC	140 DAI 340 00	ACE	BDF
	140 DAI 353 00		
48 VAC	140 DAI 440 00	ACF	BDE
	140 DAI 453 00		
	140 DAO 842 20		
115 VAC	140 DAI 540 00	ADE	BCF
	140 DAI 543 00		
	140 DAI 533 00		
	140 DAM 590 00		
	140 DAO 840 10		

Module Class	Module Part Number	Module Coding	Terminal Strip Coding
230 VAC	140 DAI 740 00	ADF	BCE
	140 DAO 840 00		
	140 DAO 842 10		
	140 DRA 840 00		
Relay	140 DRC 830 00	AEF	BCD
Analog I/O	140 ACI 030 00	BCD	AEF
	140 SAI 940 00S		
	140 AVI 030 00		
	140 ACO 020 00	BCE	ADF
	140 AVO 020 00	BCF	ADE
TC In / RTD / PT100 In	140 ARI 030 10	BDE	ACF
	140 ATI 030 00		
Analog In/Out	140 AMM 090 00	BDF	ACE
Intelligent/ Special Purpose	140 EHC 105 00	BEF	ACD
	140 EHC 202 00		
	Unassigned	CDE	ABF
	Unassigned	CDF	ABE
	Unassigned	CEF	ABD
	Unassigned	DEF	ABC

## Secondary Keying

### Secondary Keying Table

The following table shows the secondary keying and rack positions.

rack Position	Module Coding	Terminal Strip Coding
1	123	456
2	124	356
3	125	346
4	126	345
5	134	256
6	135	246
7	136	245
8	145	236
9	146	235
10	156	234
11	234	156
12	235	146
13	236	145
14	245	136
15	246	135
16	256	134





# Appendix D

## CableFast Cabling

### Introduction

This appendix provides information to the CableFast cabling system.

### What Is in This Chapter?

This chapter contains the following topics:


Topic	Page
General Information	403
140 CFA 040 00 Quantum CableFast Cabling Block	409
140 CFB 032 00 Quantum CableFast Cabling Block	412
140 CFC 032 00 Quantum CableFast Cabling Block	416
140 CFD 032 00 Quantum CableFast Cabling Block	424
140 CFE 032 00 Quantum CableFast Cabling Block	427
140 CFG 016 00 Quantum CableFast Cabling Block	429
140 CFH 008 00 Quantum CableFast Cabling Block	435
140CFI00800 Quantum CableFast Cabling Block	440
140CFJ00400 Quantum CableFast Cabling Block	447
140CFK00400 Quantum CableFast Cabling Block	455
CableFast Cables	463
CableFast Accessories	468

## General Information

### Overview

The CableFast wiring system consists of pre-wired Quantum field wiring terminal strips in various cable lengths, terminated with D-type connectors. The D connectors plug into DIN rail-mounted terminal blocks offered in straight-through or special application versions. Cables and terminal blocks are ordered separately. Terminal blocks may be used with any cable length. Pigtail cable versions are also available.

### Quantum I/O Modules with CableFast Components

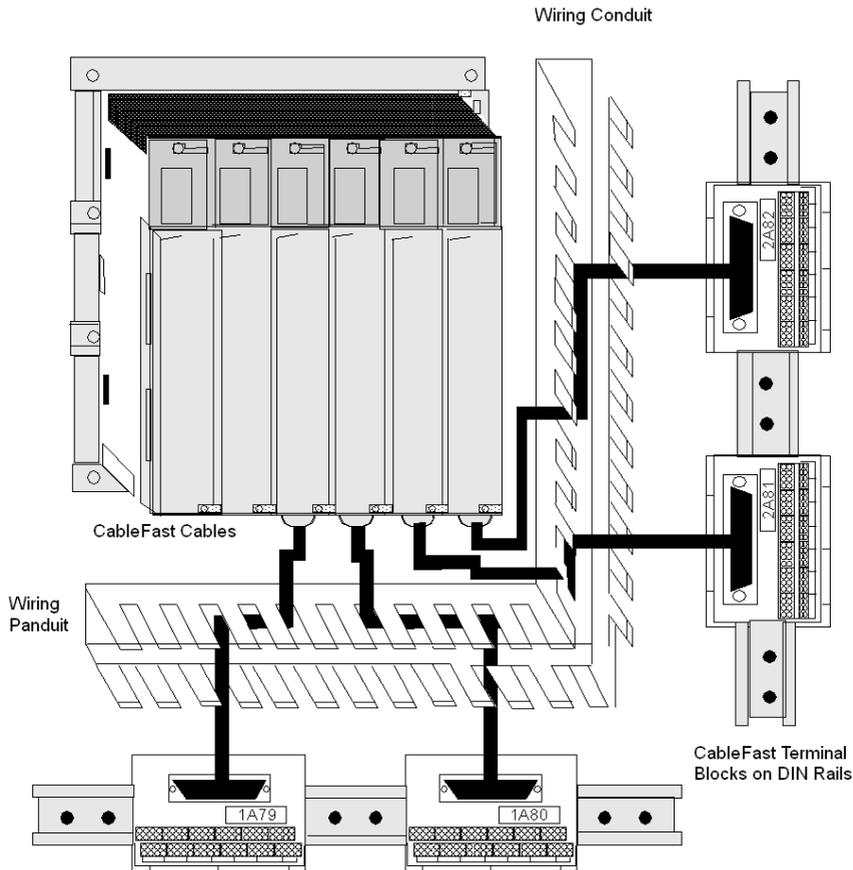

**NOTE:** Make sure that the wiring conduits are large enough to support 3.65 m (12 ft) cables.

## CableFast System Specifications

Power ratings	150 VAC/VDC @ 0.5 A/point	
	150 VAC/VDC @ 2.0 A/point *	
	* Requires the 140 CFG 016 00 terminal block and the 140 XTS 012 ** cable	
Dielectric withstanding voltage	1060 VAC and 1500 VDC	
Creepage and clearance	per IEC 1131, UL 508, CSA 22.2 #142-1987	
Terminal block wire size/terminal	One wire	2.5 mm <sup>2</sup> (12 AWG)
	Two wires)	1.0 mm <sup>2</sup> (6 AWG) and above (See below for the maximum number of wires allowed per terminal.
	<b>Note:</b> It is recommended that no more than two wires be used at one time.	
	Wire Size	Number of Wires
	#24	4
	#22	4
	#18	3
	#16	2
	#14	1
#12	1	
Terminal screw	size	M3
	screwdriver head size	3.3 mm (0.13 in) flat head min.
	screw type	Captive
	screw finish	Tin plate (197 micro in min.)
	torque	0.8 Nm (7.2 lb-in)
System flammability rating	94 V-2	
Temperature	Operating	0 ... 60 °C (32 ... 140 °F)
	Storage	-40 ... +65 °C (-40 ... +149 °F)
Humidity	0 ... 95% RH noncondensing	
Altitude	6,666 ft. (2000 m) full operation	
Shock	+/-15 g peak, 11 ms, half sine wave	
Vibration	10 ... 57 Hz @ 0.075 mm displacement	
	57 ... 150 Hz @ 1 g, total 10 sweeps	
Mounting configuration	DIN rail mount, NS35/7.5 and NS32	

## Terminal Block Selection Guide

	140 CFA 040 00	140 CFB 032 00	140 CFC 032 00	140 CFD 004 00	140 CFE 032 00	140 CFG 016 00	140 CFH 008 00	140 CFI 008 00	140 CFJ 004 00	140 CFK 004 00
140 ACI 030 00	X						X	X		
140 ACO 020 00	X								X	X
140 ACI 040 00	X									
140 ACO 130 00	X									
140 ARI 030 10	X									
140 ATI 030 00	X (see note 3)									
140 AMM 090 00	X									
14 AVI 030 00	X						X	X		
140 AVO 020 00	X									X
140 DAI 340 00	X					X				
140 DAI 353 00	X	X	X	X						
140 DAI 440 00	X					X				
140 DAI 453 00	X	X	X	X						
140 DAI 540 00	X					X				
140 DAI 543 00	X									
140 DAI 553 00	X	X	X	X						
140 DAI 740 00	CableFast not allowed									
140 DAI 753 00										
140 DAM 590 00	X see note 1									
140 DAO 840 00	–					X (see note 2)				
140 DAO 840 10						X (see note 2)				
140 DAO 842 10	–					X (see note 2)				
140 DAO 842 20	–					X (see note 2)				
140 DAO 853 00	X see note 1									
140 DDI 153 10	X		X							
140 DDI 364 00	not compatible with cable fast. See in the related chapter of the I/O reference guide for recommended cables									

	140 CFA 040 00	140 CFB 032 00	140 CFC 032 00	140 CFD 004 00	140 CFE 032 00	140 CFG 016 00	140 CFH 008 00	140 CFI 008 00	140 CFJ 004 00	140 CFK 004 00
140 DDI 353 00	X	X	X							
140 DDI 353 10	X									
140 DDI 673 00	X									
140 DDI 841 00	X									
140 DDI 853 00	X	X	X	X						
140 DDM 390 00	X									
140 DDM 690 00	X see note 1									
140 DDO 153 10	X									
140 DDO 353 00	X		X		X					
140 DDO 353 01	X		X		X					
140 DDO 353 10	X									
140 DDO 364 00	not compatible with cable fast. See in the related chapter of the I/O reference guide for recommended cables									
140 DDO 843 00						X see note 2				
140 DDO 885 00	X see note 1									
140 DRA 840 00	X see note 1									
140 DRC 830 00	X see note 1									
140 DSI 353 00	X									
140 DVO 853 00	X									
140 SAI 940 00S	not compatible with cable fast.									
140 SDI 953 00S	X									
140 SDO 953 00S	X									

X = Valid Selections.

**NOTE:** These are the maximum load current capacities of the 140 CFA 040 00 and 140 CFG 016 00:

1. When using the 140 CFA 040 00 terminal block, the indicated module outputs are limited to 0.5 A/point @ 150 VAC maximum and 0.5 A/point @ 150 VDC maximum.
2. When using the 140 CFG 016 00 terminal block and either the 140 XTS 012 •• or 140 XTS 102 •• high power cable, the indicated module output ratings are 2 A per point, 150 VAC maximum and 2 A per point, 150 VDC maximum.

3. The 140 CFA 040 00 block does not incorporate an isometric barrier and is not recommended for use with 140 ATI 030 00 TC module. Without such a barrier, temperature readings may vary up to 2 degrees from one end of the block to the other. If the application can tolerate this temperature difference, the block (and module) remote CJC may be used.

### CableFast Terminal Blocks


The following includes descriptions for the terminal blocks discussed in this Appendix.

This table includes descriptions for the following terminal blocks.

Block Number	Block Description
140 CFA 040 00	The A block is a straight through point to point connection on the terminal block. Wiring of this block is identical to wiring the Quantum I/O connector (140 XTS 002 00).
140 CFB 032 00	The B block is used for individually fused 2-wire digital inputs. This terminal block is designed to help prevent a single point error from affecting the remaining inputs. It is not recommended for 1-wire inputs powered from the field.
140 CFC 032 00	The C block provides connection for 32 group fused input or output points. The block may be used for 1- or 2-wire inputs or outputs, and features a fuse per group, four groups total. Users select input or output mode via four switches located on the module. (The default is input mode.)
140 CFD 032 00	The D block is used for sensors requiring either 2- or 3-wire electrical interface. A fuse per group is supplied to accommodate the I/O module (4) groups.
140 CFE 032 00	The E block provides connection for 32 individually fused 24 VDC outputs. 1- and 2-wire interfacing may be selected. Field power must be supplied to the four groups.
140 CFG 016 00	The G block is a high power output block used on both AC and DC circuits requiring up to 2 A. Individual fusing is provided and may be used in both 1- and 2-wire installations. It is also used for isolated AC modules.
140 CFH 008 00	The H block is used for analog inputs, with individual fusing provided per channel. This interface provides plus, minus, shield, and power supply interface for both field and loop power configurations.
140 CFI 008 00	The I block is used for analog inputs. This interface provides plus, minus, shield, and power supply interface for both field and loop power configurations.
140 CFJ 004 00	The J block is used for analog outputs, with individual fusing provided per channel. This interface provides plus, minus, shield, and power supply interface for both field and loop power configurations.
140 CFK 004 00	The K block is used for analog outputs. This interface provides plus, minus, shield, and power supply interface for both field and loop power configurations.

### CableFast Terminal Block Features

CableFast terminal blocks have the following features.

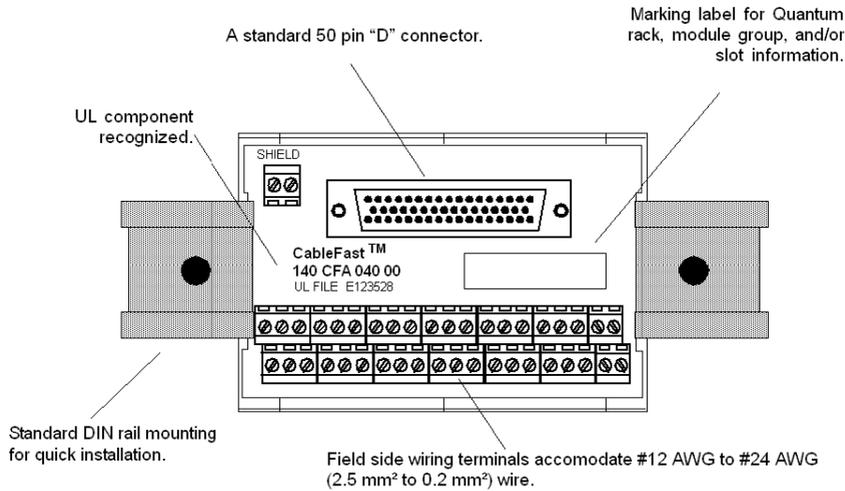

### CableFast Terminal Block Stacking Convention

The following figure and table show the stacking convention used by CableFast terminal blocks.

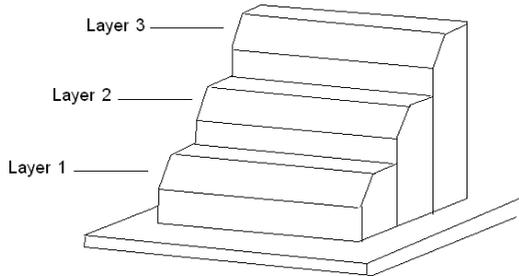


Table of Stacking Convention

Signal			Layer 3
Positive	Signal	Signal	Layer 2
Negative	Positive	Negative	Layer 1


## 140 CFA 040 00 Quantum CableFast Cabling Block

### Overview

The A block is a straight-through point-to-point connection on the terminal block. Wiring this block (and other CableFast cabling blocks) is identical to wiring the Quantum I/O connector (140 XTS 002 00).

### 140 CFA 040 00 Terminal Block

The following terminal block is unique to the 140 CFA 040 00 module.

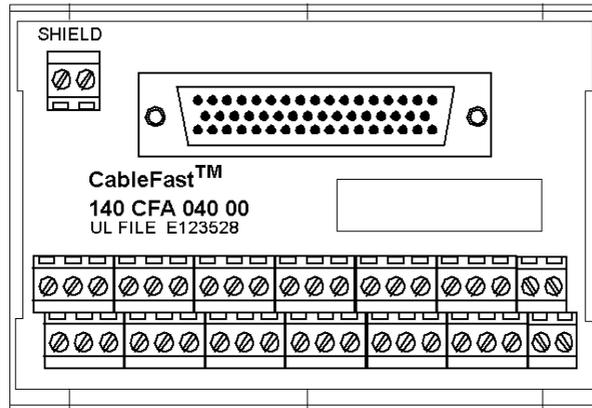



### Application Notes

The following are the application notes for the 140 CFA 040 00 terminal block.

1. **Configuration** – two columns
2. **Compatibility** – this terminal block provides straight through (point-to-point) connection.

**NOTE:** You may use this terminal block with Quantum I/O modules except the 140 ATI 030 00 thermocouple module.


140 CFA 040 00 Dimensions

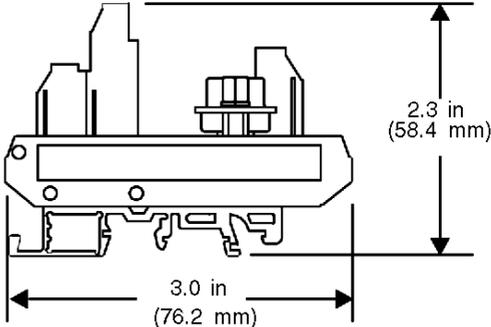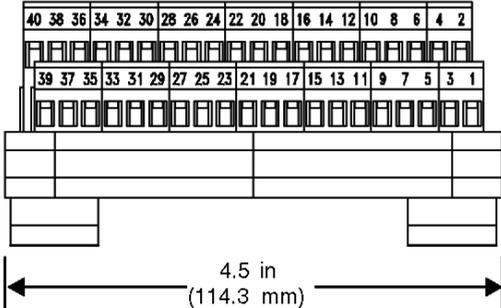

## 140 CFA 040 00 Wiring Diagram

The wiring of the 140 CFA 040 00  
block is identical to  
that of the 140 XTS 002 00  
Quantum I/O connector.

Refer to the module wiring  
diagrams.

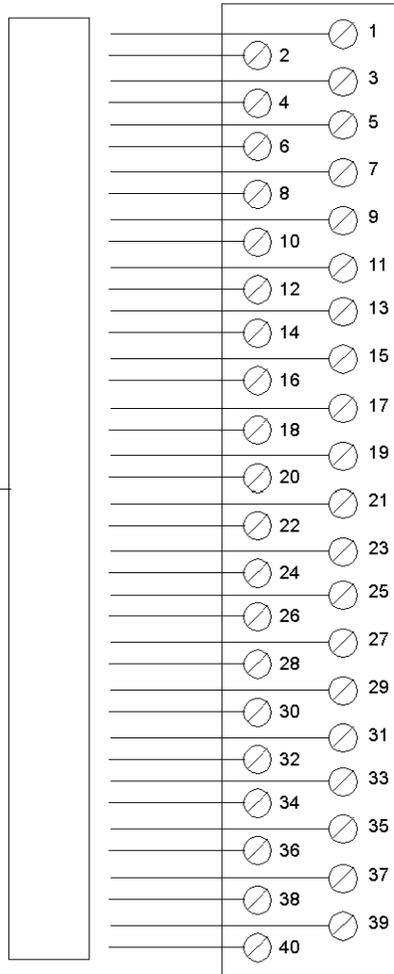


## 140 CFB 032 00 Quantum CableFast Cabling Block

### Overview

The B block is used for individually fused 2-wire digital inputs. This CableFast terminal block is designed to help prevent a single point error from affecting the remaining inputs. It is not recommended for sourced 1-wire inputs (powered from the field).

### Terminal Block

The following figure shows the terminal block for the 140 CFB 032 00 module.

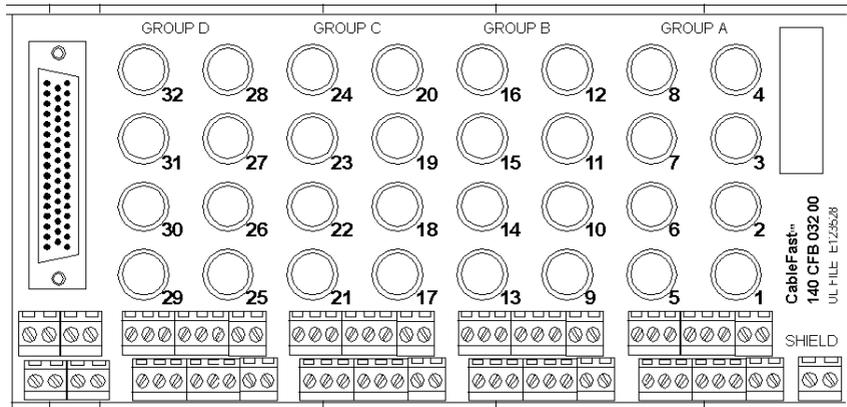


### Application Notes

The following are the application notes for the 140 CFB 0320 0 terminal block.

- 1. Configuration** – arranged in four groups of eight I/O points. Two terminals per point help prevent disruption of service due to a single point error.
- 2. Compatibility** – this terminal block provides individual 32 point 0.8 A fusing for the following input modules: 140 DAI 353 00, 140 DAI 453 00, 140 DAI 553 00, 140 DDO 153 10, 140 DDI 353 00, and 140 DDI 853 00.


## Dimensions

The following figures show the dimensions for the 140CFB03200 terminal block.

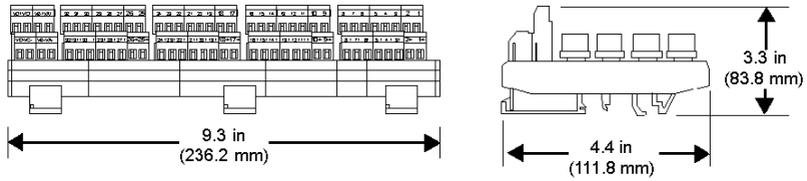

### Wiring of Input Modules


The following figure shows the 140 CFB 032 00 wiring for the following input modules:  
 140 DAI 353 00, 140 DAI 453 00, 140 DAI 553 00, 140 DDI 353 00, and 140 DDI 853 00.

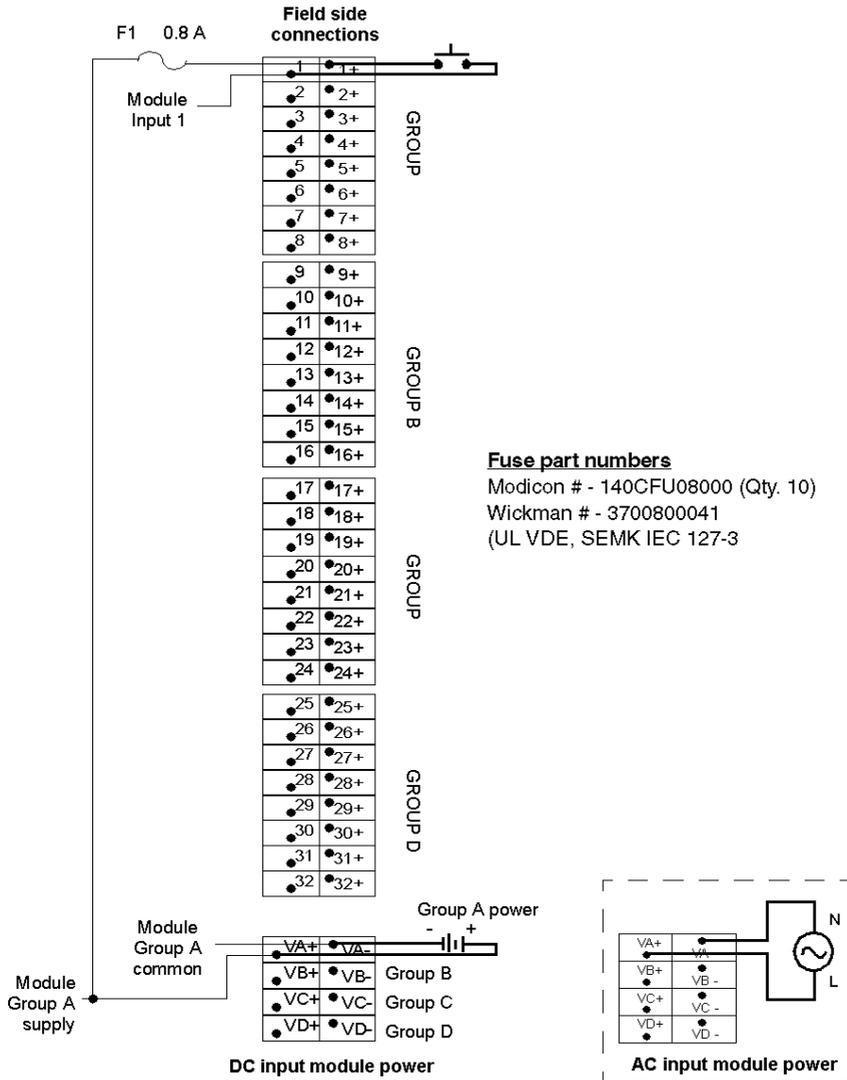

**NOTE:** The terminal block commoning strip, Modicon # 140 CFX 001 10 (Qty. 10) can be used to jumper the power between groups.

### Wiring of Output Module

The following figure shows the 140 CFB 032 00 wiring for the 140 DDO 153 10 output module.

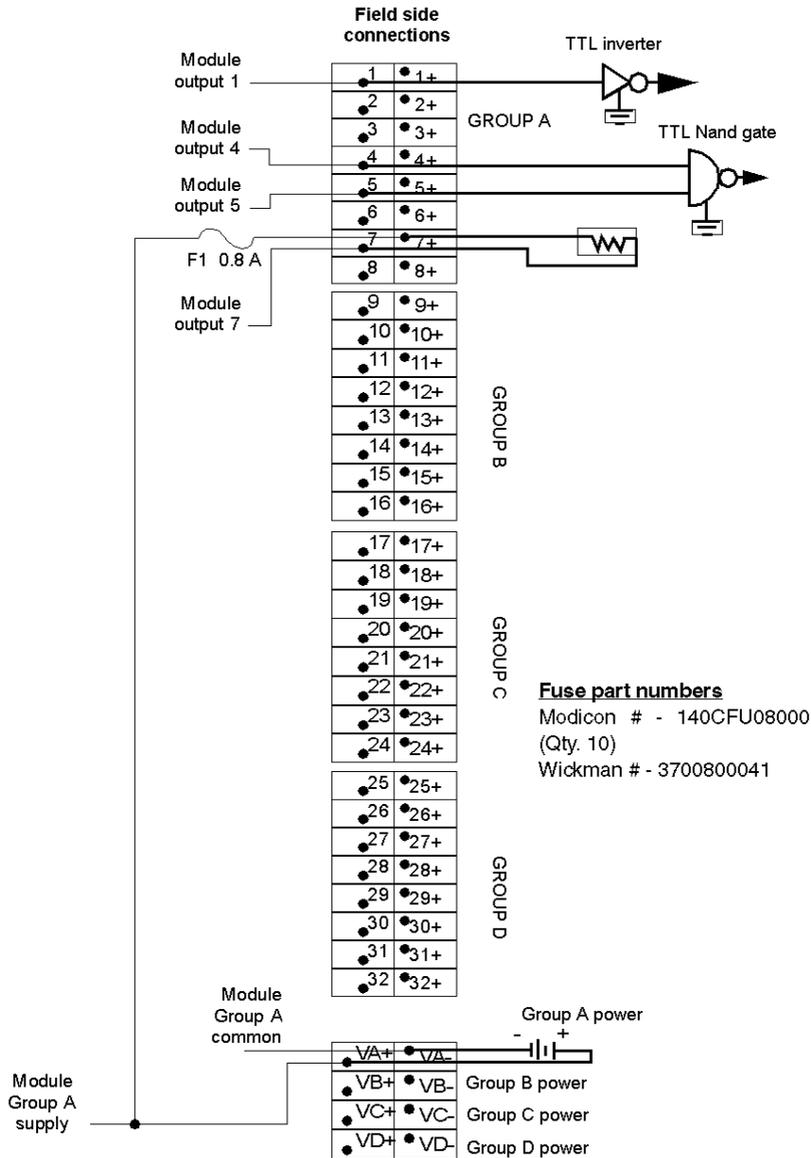

**NOTE:** The terminal block commoning strip, Modicon # 140 CFX 001 10 (Qty. 10) can be used to jumper the power between groups.


## 140 CFC 032 00 Quantum CableFast Cabling Block

### Overview

The C block provides connections for 32 group fused input or output points. You may use this CableFast terminal block for 1- or 2-wire inputs or outputs, and features a fuse per group – up to a total of four groups. Users select input or output mode via four switches located on the module. (The default is input mode.)

### Terminal Block

The following figure shows the terminal block for the 140 CFC 032 00 module.

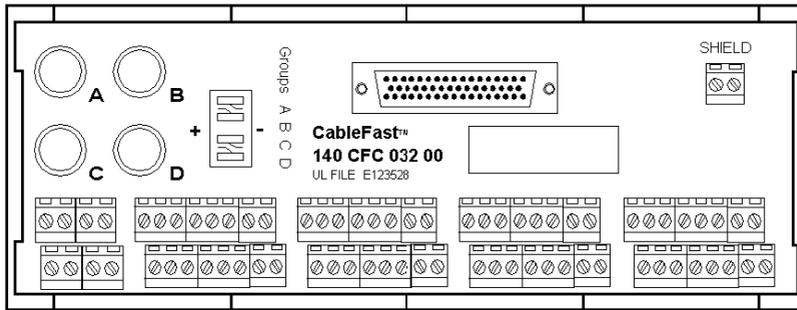

## Application Notes

The following are the application notes for the 140 CFC 032 00 module.

- 1. Configuration** – arranged in four groups of eight I/O points (two terminals per point). This block may be used for one- and two-wire inputs or outputs. The input and output mode is selected via four switches located on the block.
- 2. Compatibility** – this terminal block provides 0.8 A group fusing for the following discrete modules:


The following table shows the modules provided with 0.8 A group fusing.

Module	Mode	Switch setting	Fuse rating
140 DAI 353 00	Input	+	0.8 A
140 DAI 453 00	Input	+	0.8 A
140 DAI 553 00	Input	+	0.8 A
140 DDI 153 10	Input	-	0.8 A
140 DDI 353 00	Input	+	0.8 A
140 DDI 853 00	Input	+	0.8 A
140 DDO 153 10	Output	+	4 A
140 DDO 353 00	Output	-	4 A

**NOTE:** Select input or output mode with the four switches located on the terminal.


## Dimensions

The following figures show the dimensions for the 140 CFC 032 00 terminal block block. All four switches must be set to the same position.

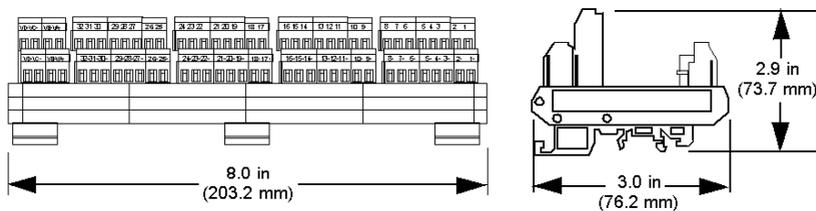

### Wiring for Input Modules


The following shows the 140 CFC 032 00 wiring for the following input modules: 140 DAI 353 00, 140 DAI 453 00, 140 DAI 553 00, 140 DDI 353 00, and 140 DDI 853 00.

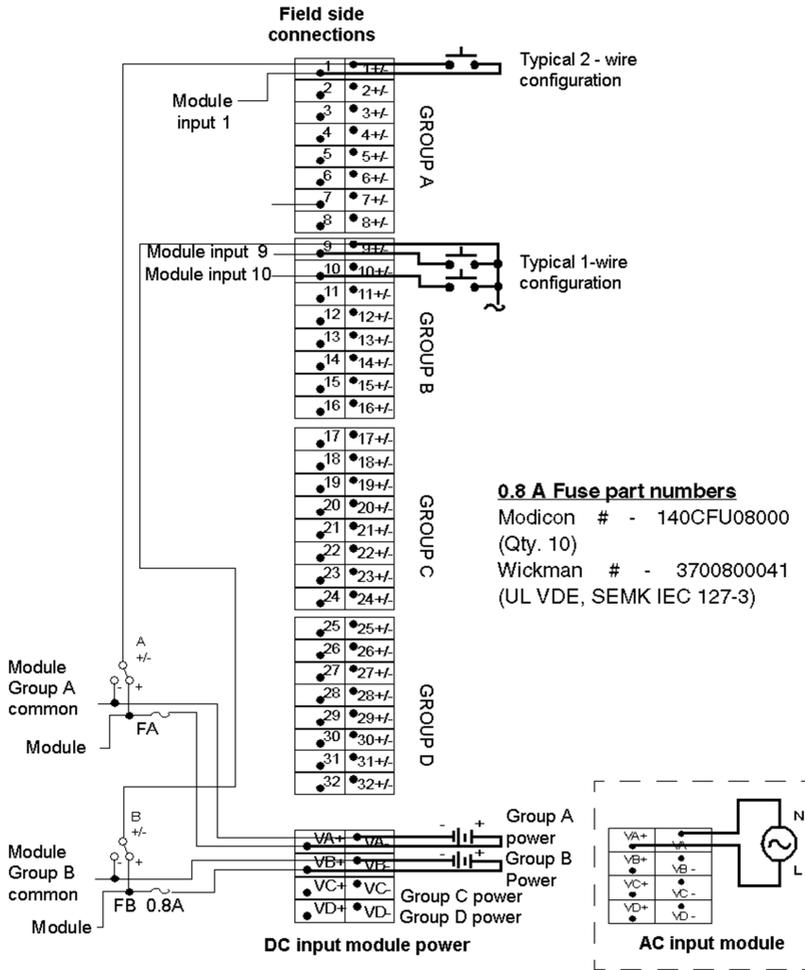

**NOTE:** The terminal block commoning strip, Modicon # 140 CFX 001 10 (Qty. 10), can be used to jumper the power between groups.

## Wiring for 140 DDI 153 10 Input Module


The following figure shows the 140 CFC 032 00 wiring for the 140 DDI 153 10 input module.

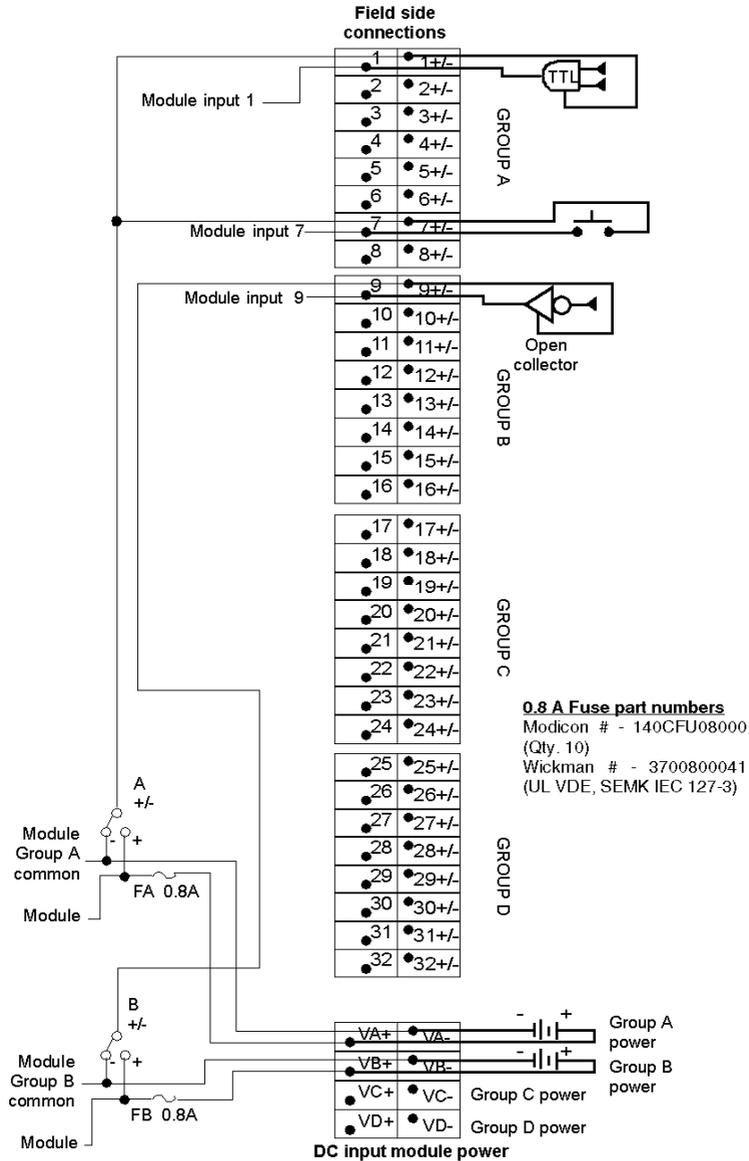

**NOTE:** The terminal block commoning strip, Modicon # 140 CFX 001 10 (Qty. 10), can be used to jumper the power between groups.

### Wiring for 140 DDO 153 10 Output Module

The following figure shows the 140 CFC 032 00 wiring for the 140 DDO 153 10 output module.

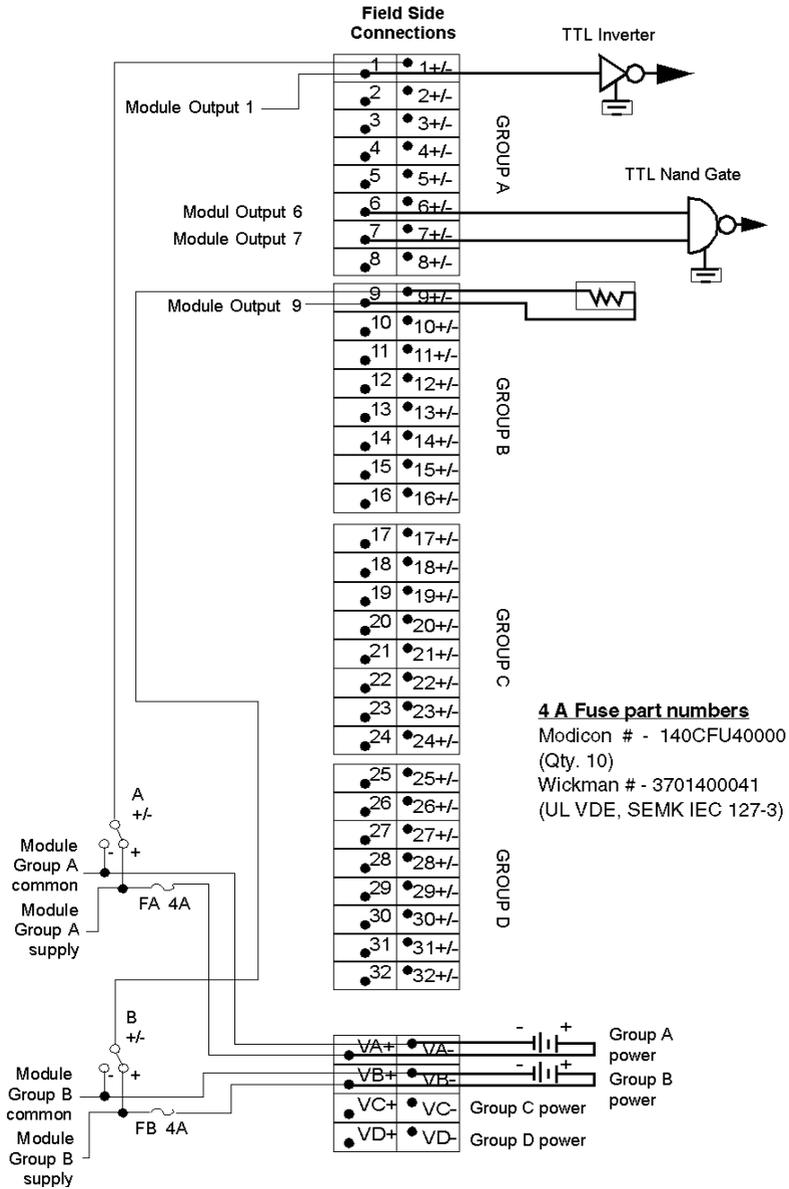


**NOTE:**

1. The 140 CFC 032 00 is shipped with Modicon the 140 CFU 080 00 (0.8 A) fuse installed. Check that the Modicon 140CFU40000 (4 A) fuse is installed when the 140 CFC 032 00 and the 140 DDO 153 00 are wired together.
2. The terminal block commoning strip, Modicon 140 CFX 001 10 (Qty. 10), can be used to jumper the power between groups.

### Wiring for 140 DDO 353 0X Output Module

The following figure shows the 140 CFC 032 00 wiring for the 140 DDO 353 00 and 140 DDO 353 01 output modules.

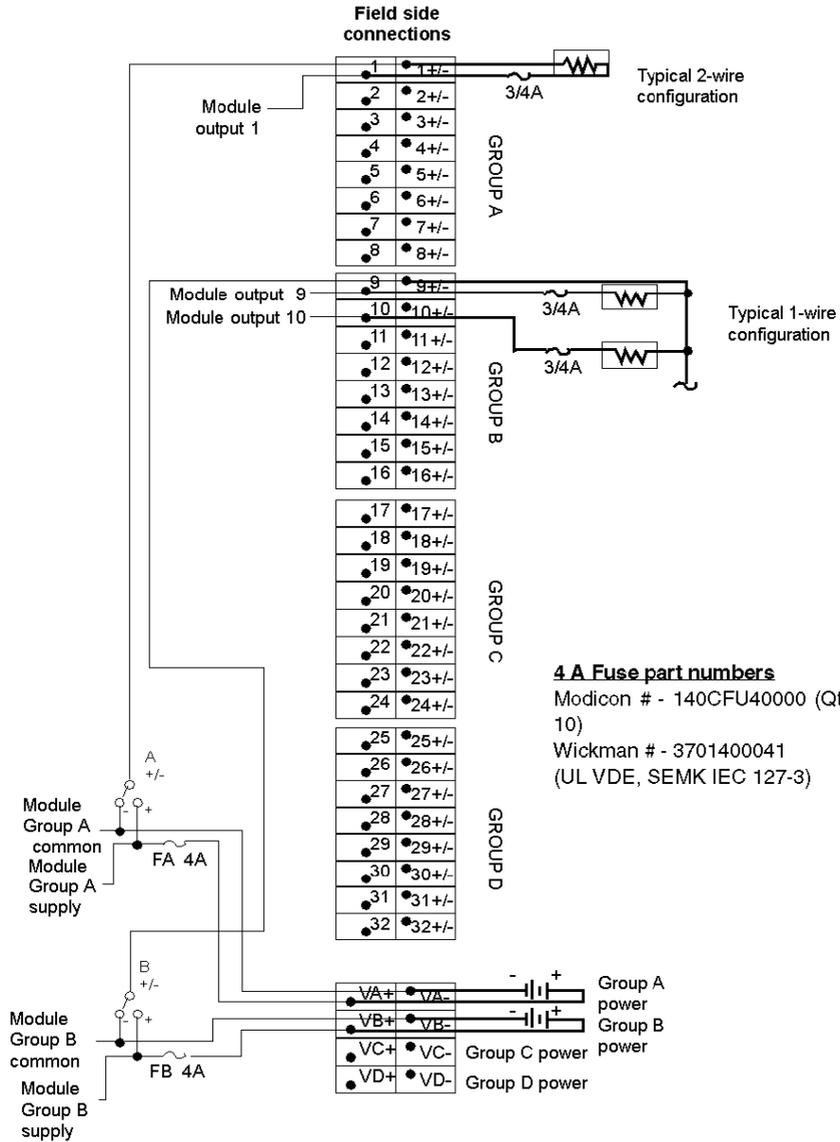

**NOTE:**

1. The 140 CFC 032 00 is shipped with the Modicon 140 CFU 080 00 (0.8 A) fuse installed. Make sure the Modicon 140 CFU 400 00 (4 A) fuse is installed when the 140 CFC 032 00 and the 140 DDO 353 00 are wired together.
2. The terminal block commoning strip, Modicon 140 CFX 001 10 (Qty. 10), can be used to jumper the power between groups.


## 140 CFD 032 00 Quantum CableFast Cabling Block

### Overview

The CableFast cabling D block is used for sensors requiring either 2- or 3-wire electrical interfaces. A fuse per group is supplied to accommodate the I/O module (4) groups.

### Terminal Block

The following figure shows the 140 CFD 032 00 terminal block.

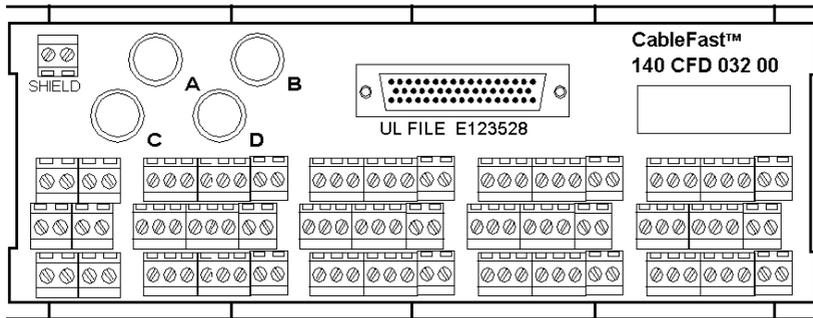


### Application Notes

The following are the application notes for the 140 CFD 032 00 module.

- 1. Configuration** – arranged in four groups of eight I/O points. Each input is allocated three terminals.
- 2. Compatibility** – this terminal block provides 0.8 A group fusing connection points for 3- and 2-wire proximity switches and is used with the following modules: 140 DAI 353 00, 140 DAI 453 00, 140 DAI 553 00, 140 DDI 353 00, and 140 DDI 853 00.


## Dimensions

The following shows the dimensions for the 140 CFD 032 00 module.

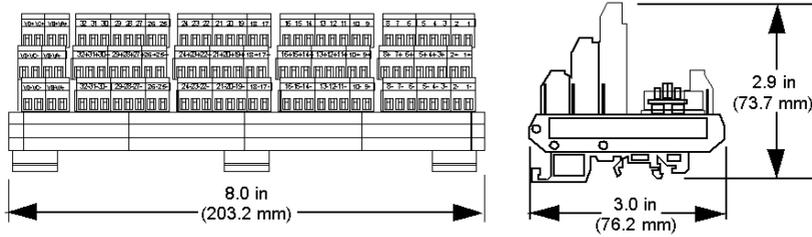

Wiring

The following figure shows the wiring for the 140 CFD 032 00 module.

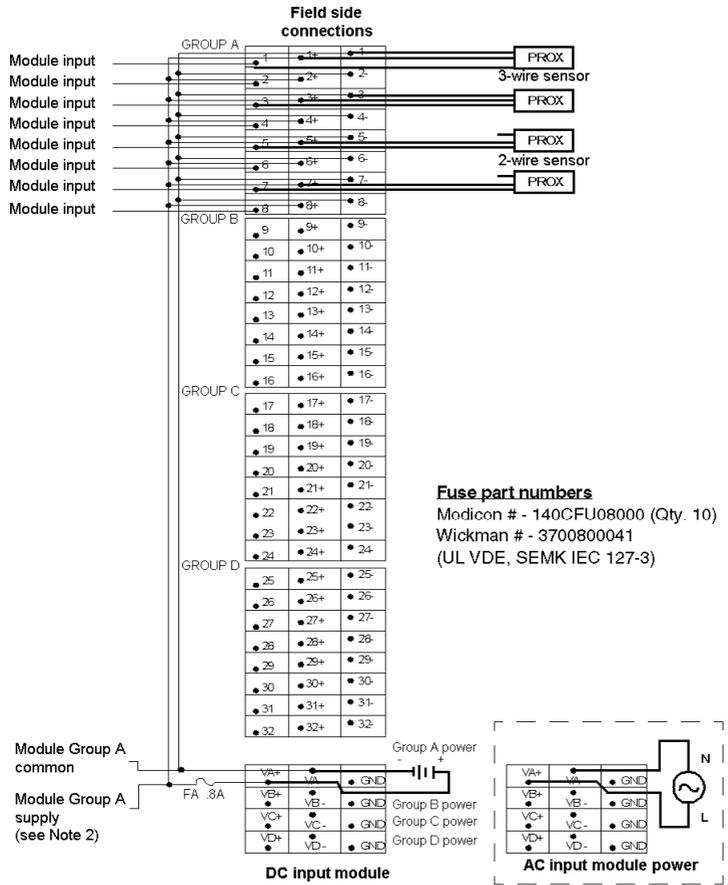

**NOTE:**

1. The GND (ground) terminal points are not connected.
2. The terminal block commoning strip, Modicon # 140 CFX 001 10 (Qty. 10), can be used to jumper the power between groups.


## 140 CFE 032 00 Quantum CableFast Cabling Block

### Overview

The CableFast E cabling block provides connections for 32 individually fused 24 VDC outputs. 1- and 2-wire interfacing may be selected. Field power must be supplied to the four groups.

### Terminal Block

The following figure shows the 140 CFE 032 00 terminal block.

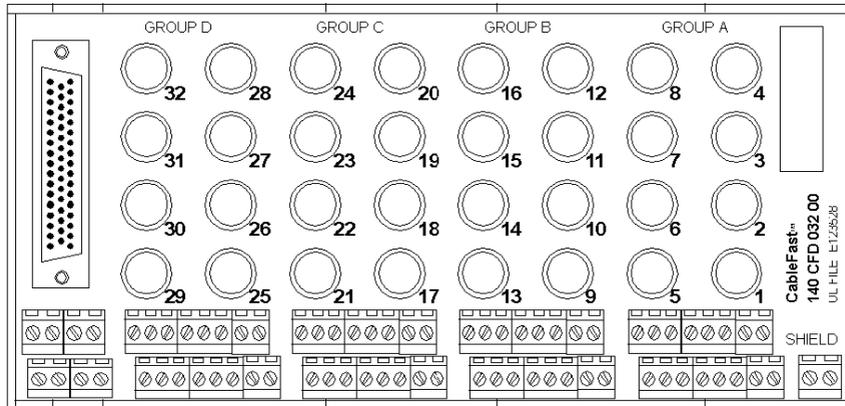


### Application Notes

The following are the application notes for the 140 CFE 032 00 module.

- 1. Configuration** – arranged in four groups of eight I/O points. Two terminals per point help prevent disruption of service due to a single point error.
- 2. Compatibility** – this terminal block provides individual 32-point 0.8 A fusing for the 140 DDO 353 00 and the 140 DDO 353 01 modules.


### Dimensions

The following shows the dimensions for the 140 CFE 032 00 module.

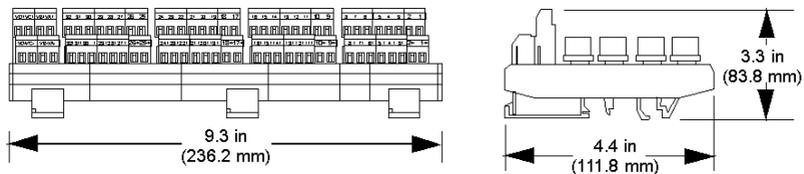

## Wiring Diagram

The following figure shows the wiring for the 140 CFE 032 00 module.

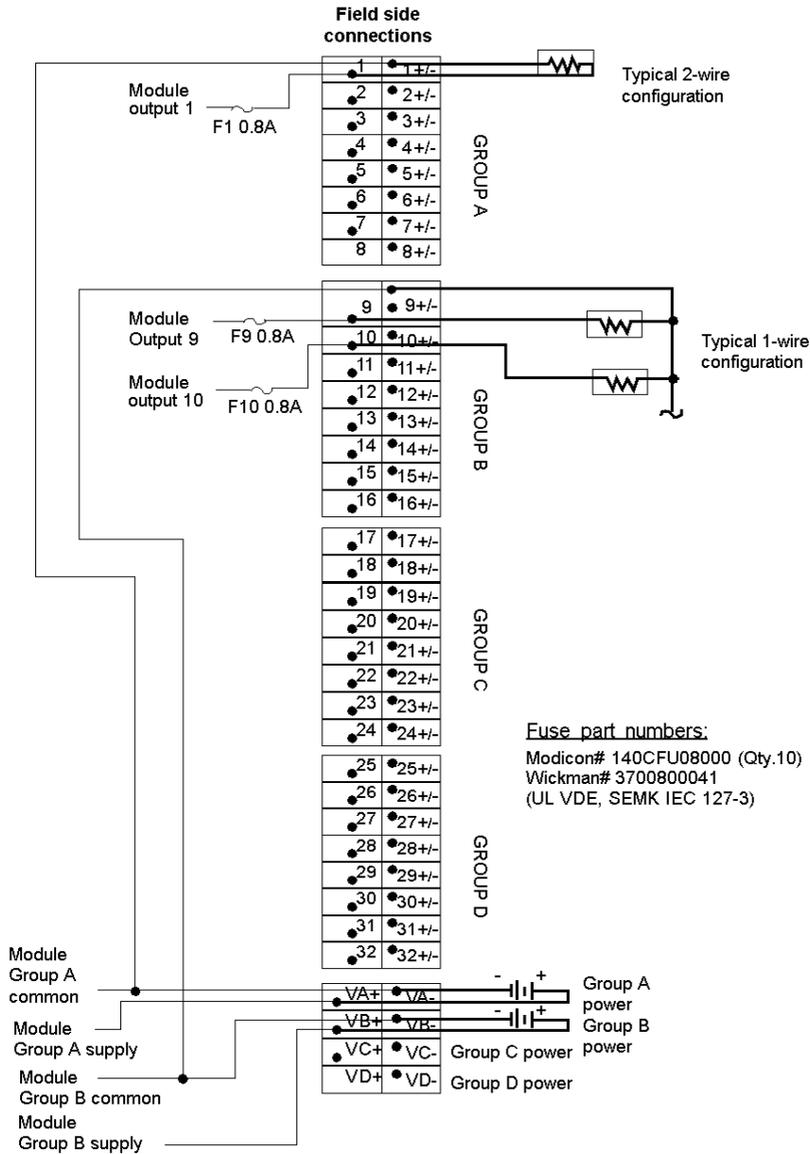

**NOTE:** The terminal block commoning strip, Modicon # 140 CFX 001 10 (QTY. 10), can be used to jumper the power between groups.


## 140 CFG 016 00 Quantum CableFast Cabling Block

### Overview

The G CableFast cabling block is a high-power output block used on both AC and DC circuits requiring up to 2 A. Individual fusing is provided and may be used in both 1- and 2-wire installations. It is also used for isolated AC modules.

### Terminal Block

The following figure shows the 140 CFG 016 00 terminal block.

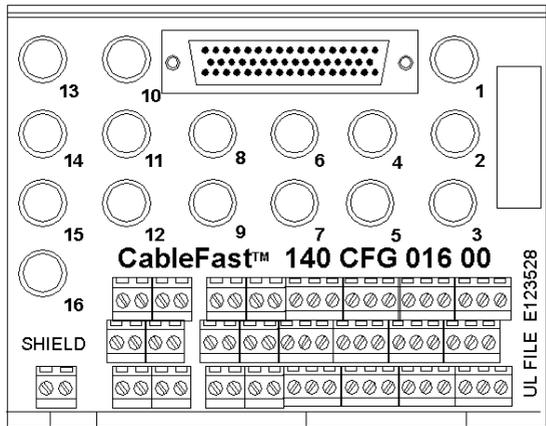


### Application Notes

The following are the application notes for the 140 CFG 016 00 module.

1. **Configuration** – Arranged in 16 isolated I/O points.
2. **Compatibility** – This terminal block provides individual 16-point 4 A fused connection points for the following modules: 140 DAI 340 00, 140 DAI 440 00, 140 DAI 540 00, 140 DAO 840 00, 140 DAO 840 10, 140 DAO 842 10, 140 DAO 842 20, and 140 DDO 843 00.


**Dimensions**

The following figures show the dimensions for the 140 CFG 016 00 module.

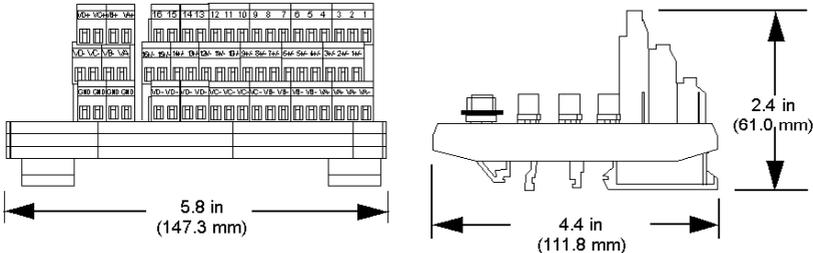

## Wiring for Isolated AC Input Mode

The following figure shows the 140 CFG 016 00 wiring for the input (isolated AC input mode) modules: 140 DAI 340 00, 140 DAI 440 00, and 140 DAI 540 00.

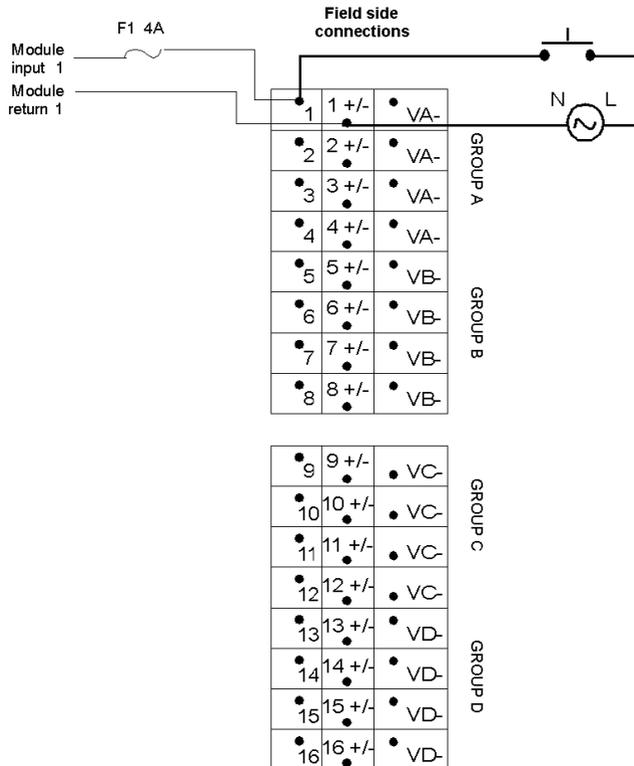

### Fuse part numbers

Modicon # - 140CFU40000  
(Qty. 10)  
Wickman # - 3701400041  
(UL VDE, SEMK IEC 127-3)


• VA+	• VA-	• GND
• VB+	• VB-	• GND
• VC+	• VC-	• GND
• VD+	• VD-	• GND

### NOTE:

1. The terminal block commoning strip, Modicon # 140 CFX 001 10 (Qty. 10), can be used to jumper the power between groups.
2. The GND (ground) terminal points are not connected.

### Wiring for Isolated Output Mode

The following shows the 140 CFG 016 00 wiring for the 140 DAO 840 00 and 140 DAO 840 10 output modules (isolated output mode).

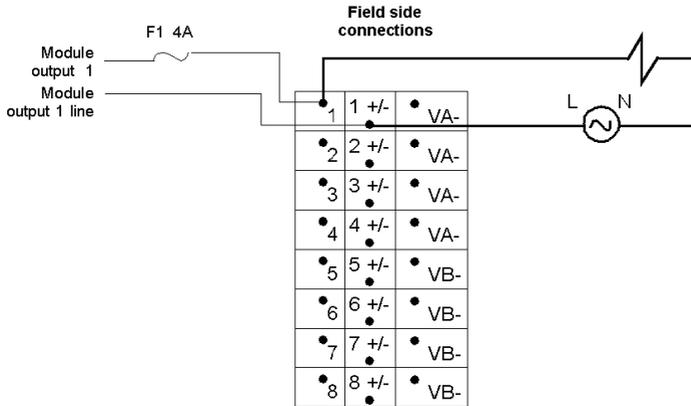

**Fuse part numbers**

Modicon # - 140CFU40000  
(Qty. 10)

Wickman # - 3701400041  
(UL VDE, SEMK IEC 127-3)

9	9 +/-	VC-
10	10 +/-	VC-
11	11 +/-	VC-
12	12 +/-	VC-
13	13 +/-	VD-
14	14 +/-	VD-
15	15 +/-	VD-
16	16 +/-	VD-


VA+	VA-	GND
VB+	VB-	GND
VC+	VC-	GND
VD+	VD-	GND

**NOTE:**

1. The terminal block commoning strip, Modicon # 140 CFX 001 10 (Qty. 10), can be used to jumper the power between groups.
2. The GND (ground) terminal points are not connected

## Wiring for Grouped AC Output Mode

The following figure shows the 140 CFG 016 00 wiring for the 140 DAO 842 10 and 140 DAO 842 20 output modules (grouped AC output mode).

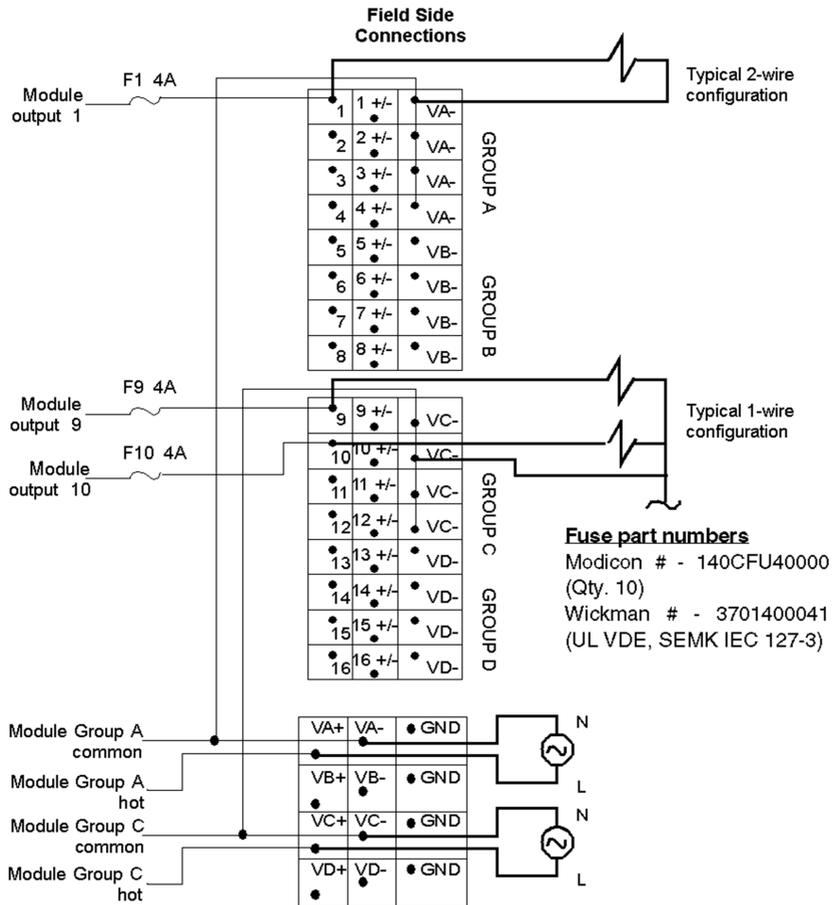


### NOTE:

1. The terminal block commoning strip, Modicon # 140 CFX 001 10 (Qty. 10), can be used to jumper the power between groups.
2. The GND (ground) terminal points are not connected.

### Wiring for Grouped DC Output Mode

The following figure shows the 140 CFG 016 00 wiring for the 140 DDO 843 00 (grouped DC output mode) module.

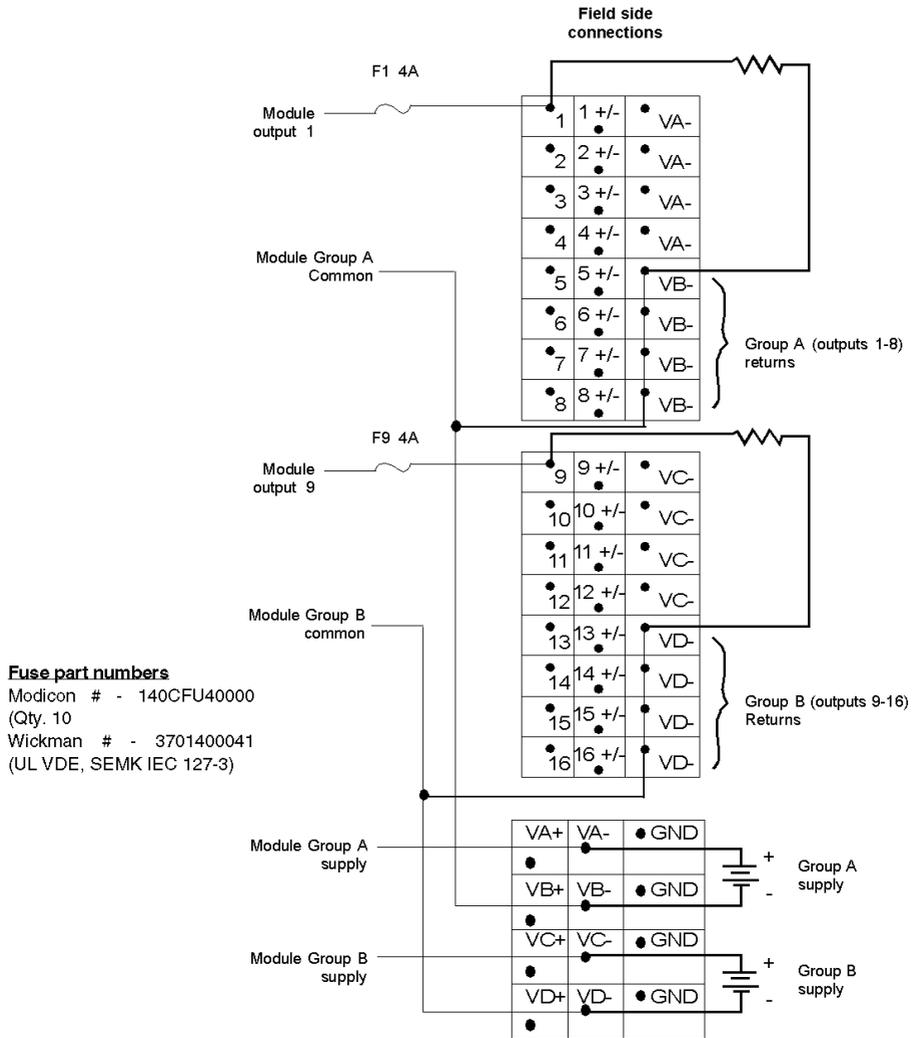

**NOTE:**

1. The terminal block commoning strip, Modicon # 140 CFX 001 10 (Qty. 10), can be used to jumper the power between groups.
2. The GND (ground) terminal points are not connected.


## 140 CFH 008 00 Quantum CableFast Cabling Block

### Overview

The H CableFast cabling block is used for analog inputs, with individual fusing provided per channel. This interface provides plus, minus, shield, and power supply interface for both field and loop power configurations.

### Terminal Block

The following figure shows the 140 CFH 008 00 terminal block.

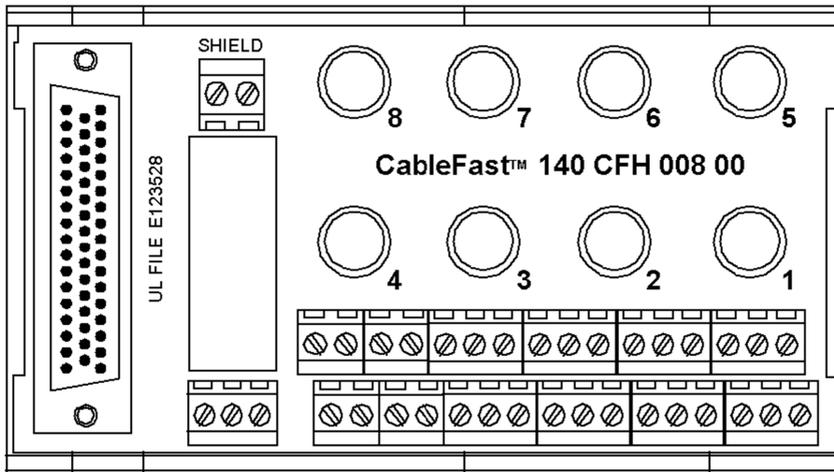


### Application Notes

The following are the application notes for the 140 CFH 008 00 module.

- 1. Configuration** – eight analog inputs with a common loop supply. Each point is allocated four terminals.
- 2. Compatibility** – this terminal block provides individually 0.063 A fused connection point sets for the 140 ACI 030 00 and 140 AVI 030 00 analog input modules.


**Dimensions**

The following figures show the dimensions for the 140 CFH 008 00 module.

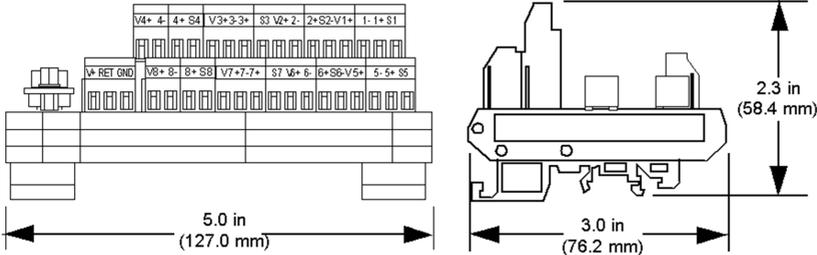

## Wiring Diagram (Source Grounding)

The following figure shows the wiring for the 140 CFH 008 00 (source grounding) module.

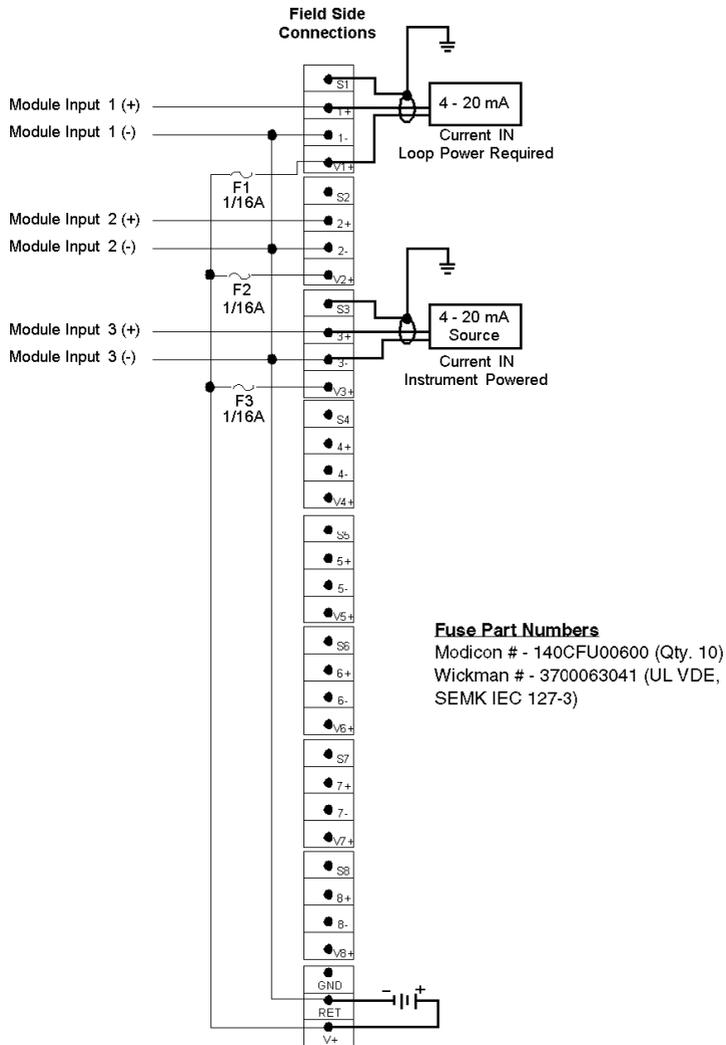


### NOTE:

1. When using a single power supply, there will be no channel-to-channel isolation of input points.
2. For the required jumper options for the 140 ACI 030 00 and the 140 AVI 030 00, see the wiring diagrams for said modules.
3. The GND (ground) terminal point is not connected.

## Wiring Diagram (Instrument Grounding)

The following figure shows the wiring (instrument grounding) for the 140 CFH 008 00 module.

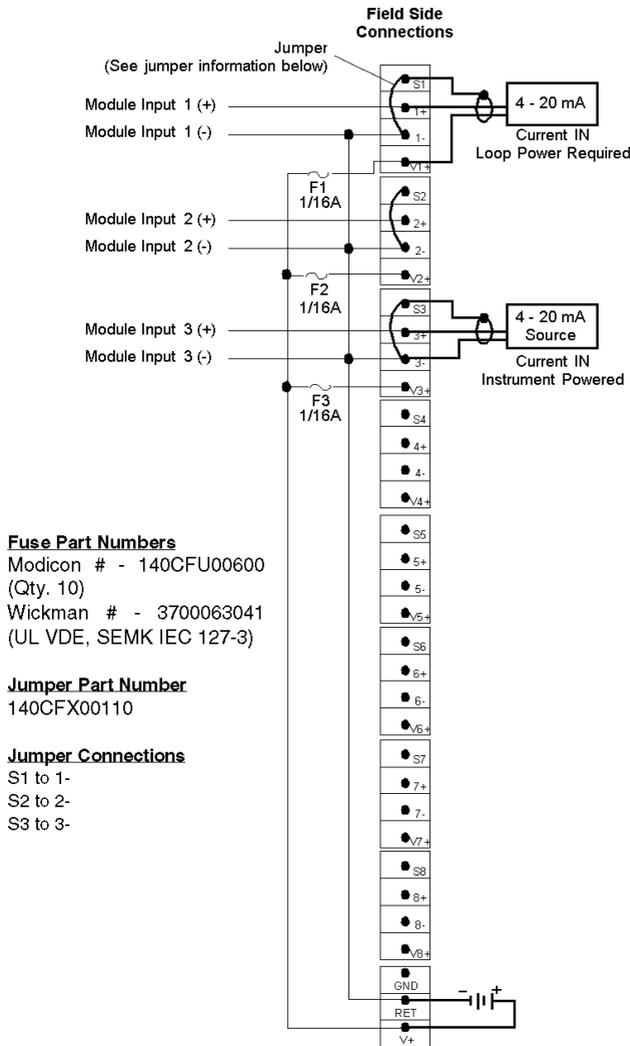

### Fuse Part Numbers

Modicon # - 140CFU00600  
(Qty. 10)  
Wickman # - 3700063041  
(UL VDE, SEMK IEC 127-3)

### Jumper Part Number

140CFX00110

### Jumper Connections


S1 to 1-  
S2 to 2-  
S3 to 3-

### NOTE:

- If you use a single power supply, there will be no channel-to-channel isolation of the input points.
- For the required jumper options for the 140 ACI 030 00 and the 140 AVI 030 00, see the wiring diagrams for said modules.
- The GND (ground) terminal point is not connected.

## Wiring Diagram (Chassis Grounding)

The following figure shows the wiring (chassis grounding) for the 140 CFH 008 00 module.

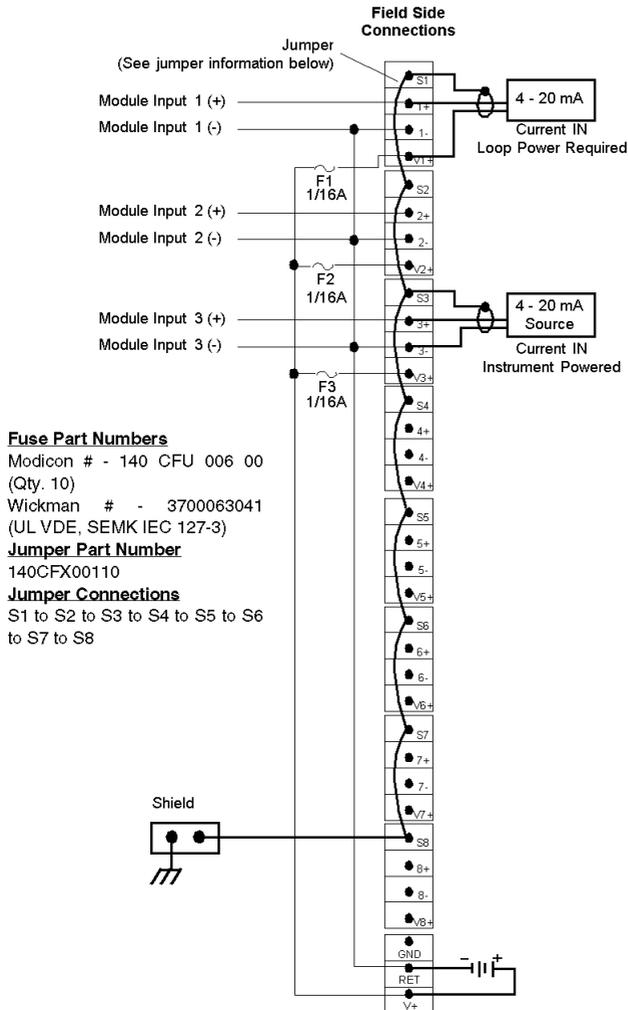

### NOTE:

1. When using a single power supply, there will be no channel-to-channel isolation of input points.
2. For the required jumper options for the 140 ACI 030 00 and the 140 AVI 030 00, see the wiring diagrams for said modules.
3. The GND (ground) terminal point is not connected.

## 140CFI00800 Quantum CableFast Cabling Block

### Overview

The I block is used for analog inputs. This interface provides plus, minus, shield, and power supply interfaces for both field and loop power configurations.

See Common Features of the CableFast Cabling System (*see page 403*) for information on common specifications and features of CableFast cabling blocks.


### Application Notes

The following are the application notes for the 140CFI00800 module.

- 1. Configuration** – Eight analog inputs with a common loop supply. Each point is allocated four terminals.
- 2. Compatibility** – This terminal block provides eight connection point sets for the 140ACI03000 and 140AVI03000 analog input modules.


### Dimensions

The following figures show the dimensions for the 140CFI00800 module.

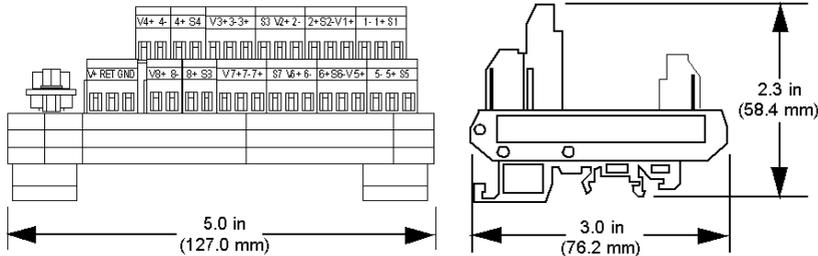

### Wiring Diagram (Source Grounding)

The following figure shows the wiring for the 140CFI00800 (source grounding) module.

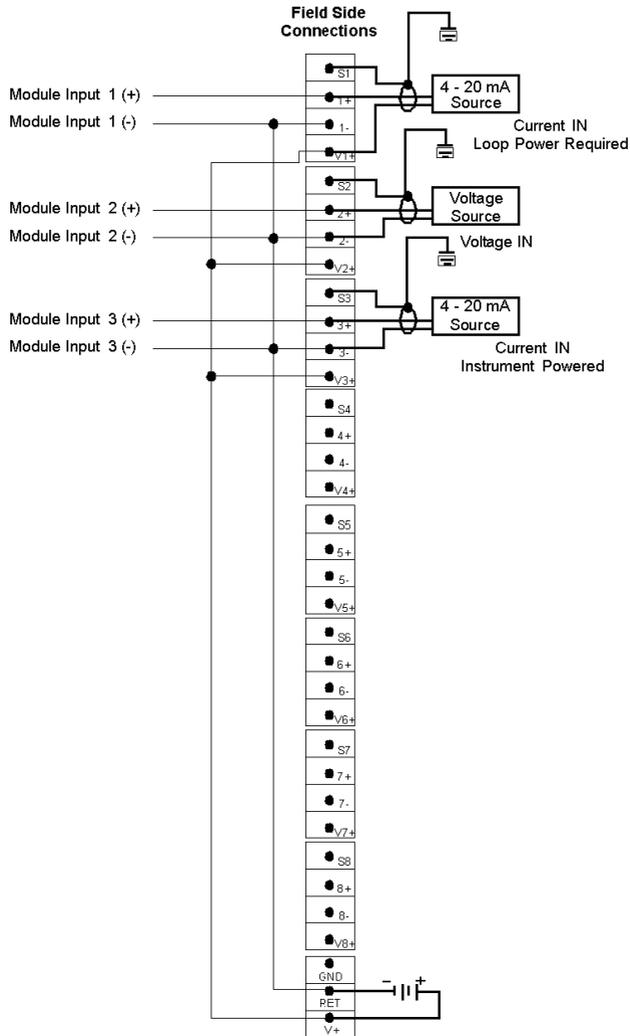


**NOTE:**

1. When using a single power supply, there will be no channel-to-channel isolation of input points.
2. For the required jumper options for the 140ACI03000 and the 140AVI03000, see the wiring diagrams in ACI03000 I/O Module (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*) and AVI03000 I/O Module (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*).
3. The GND (ground) terminal point is not connected.

### Wiring Diagram (Instrument Grounding)

The following figure shows the wiring for the 140CFI00800 (instrument grounding) module.

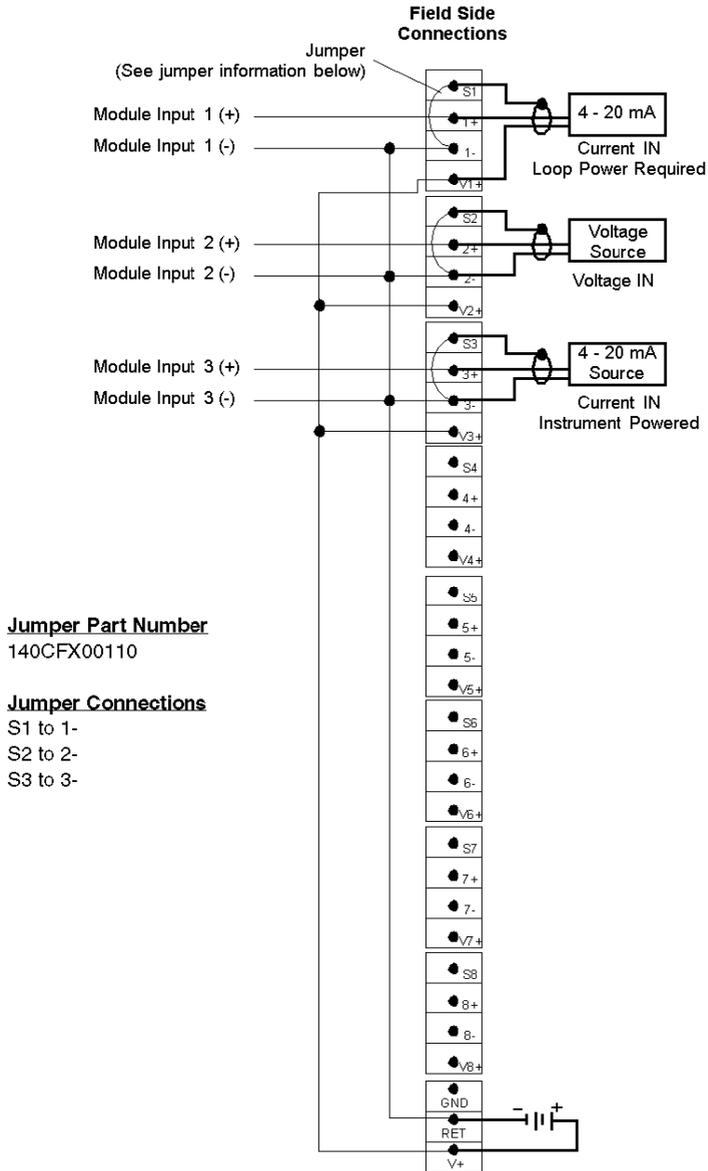


**NOTE:**

1. When using a single power supply, there will be no channel-to-channel isolation of input points.
2. For the required jumper options for the 140ACI03000 and the 140AVI03000, see the wiring diagrams in ACI03000 I/O Module (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*) and AVI03000 I/O Module (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*).
3. The GND (ground) terminal point is not connected.

## Wiring Diagram (Chassis Grounding)

The following figure shows the wiring for the 140CFI00800 (chassis grounding) module.

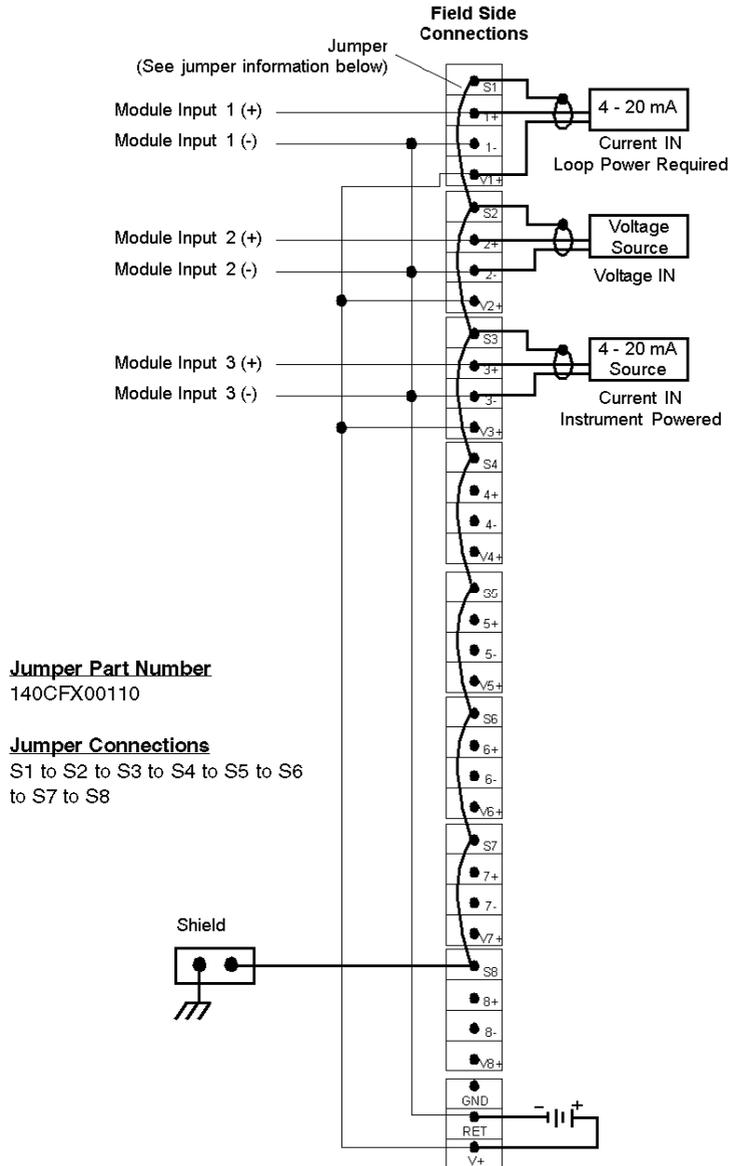

**NOTE:**

1. When using a single power supply, there will be no channel-to-channel isolation of input points.
2. For the required jumper options for the 140ACI03000 and the 140AVI03000, see the wiring diagrams in ACI03000 I/O Module (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*) and AVI03000 I/O Module (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*).
3. The GND (ground) terminal point is not connected.

## 140CFJ00400 Quantum CableFast Cabling Block


### Overview

The J block is used for analog outputs, with individual fusing provided per channel. This interface provides plus, minus, shield, and power supply interfaces for both field and loop power configurations.

See Common Features of the CableFast Cabling System (*see page 403*) for information on common specifications and features of CableFast cabling blocks.

### Terminal Block

The following figure shows the 140CFJ00400 terminal block.

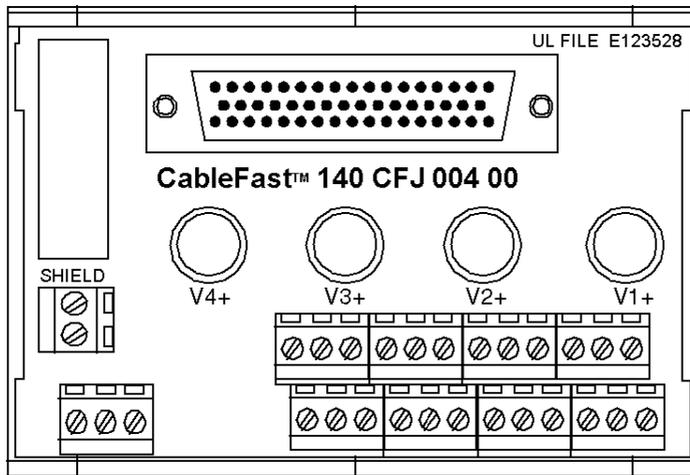



### Application Notes

The following are the application notes for the 140CFJ00400 module.

- 1. Configuration** – Four analog outputs with a common loop supply. Each point is allocated six terminals.
- 2. Compatibility** – This terminal block provides four individually 0.063 A fused connection point sets for the 140ACO02000 analog output module.


### Dimensions

The following figures show the dimensions for the 140CFJ00400 module.

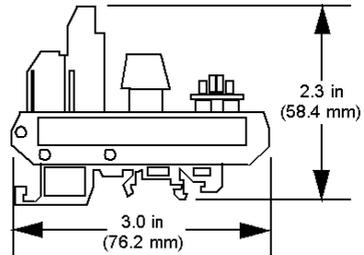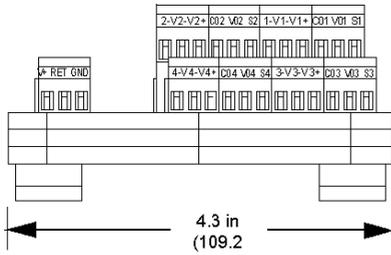

### Wiring Diagram (Source Grounding)

The following figure shows the wiring for the 140CFJ00400 (source grounding) module.

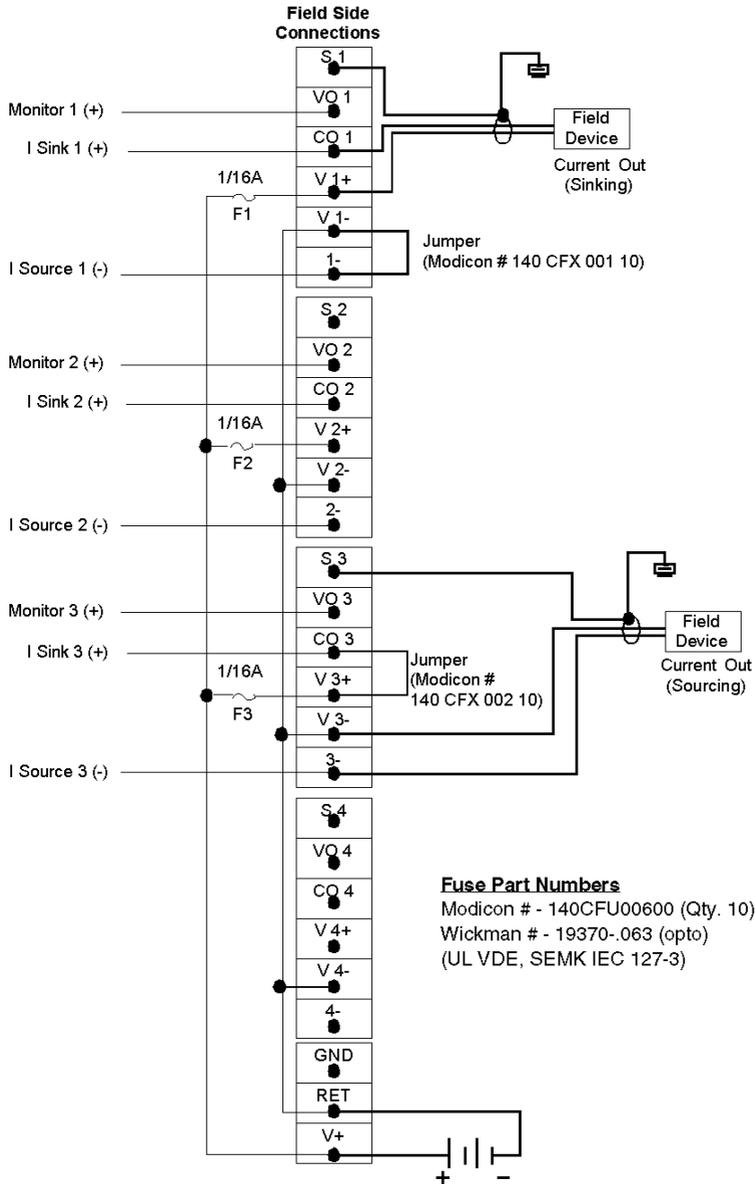


**NOTE:**

1. When using a single power supply, there will be no channel-to-channel isolation of input points.
2. For the required jumper options for the 140ACO02000, see the wiring diagrams in ACO02000 map, wiring diagram (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*).
3. The GND (ground) terminal point is not connected.

### Wiring Diagram (Instrument Grounding)

The following figure shows the wiring for the 140CFJ00400 (instrument grounding) module.

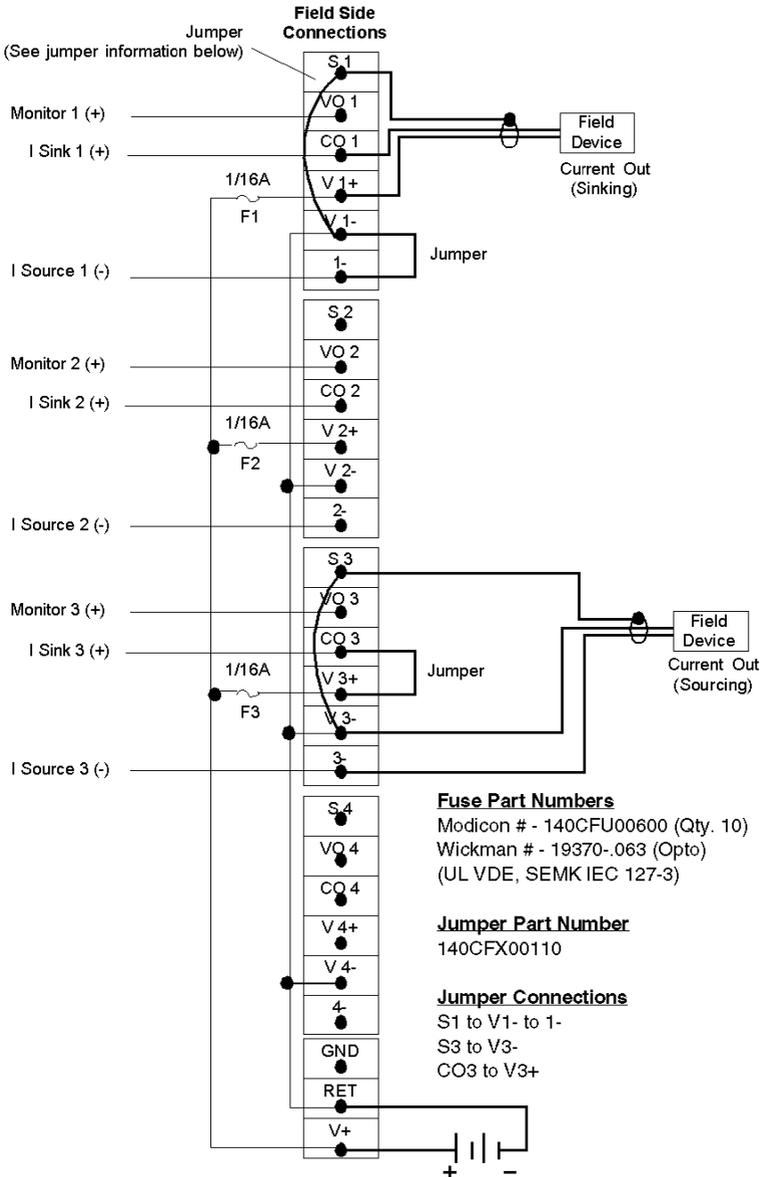


**NOTE:**

1. When using a single power supply, there will be no channel-to-channel isolation of input points.
2. For the required jumper options for the 140ACO02000, see the wiring diagrams in ACO02000 map, wiring diagram (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*).
3. The GND (ground) terminal point is not connected.

### Wiring Diagram (Chassis Grounding)

The following figure shows the wiring for the 140CFJ00400 (chassis grounding) module.

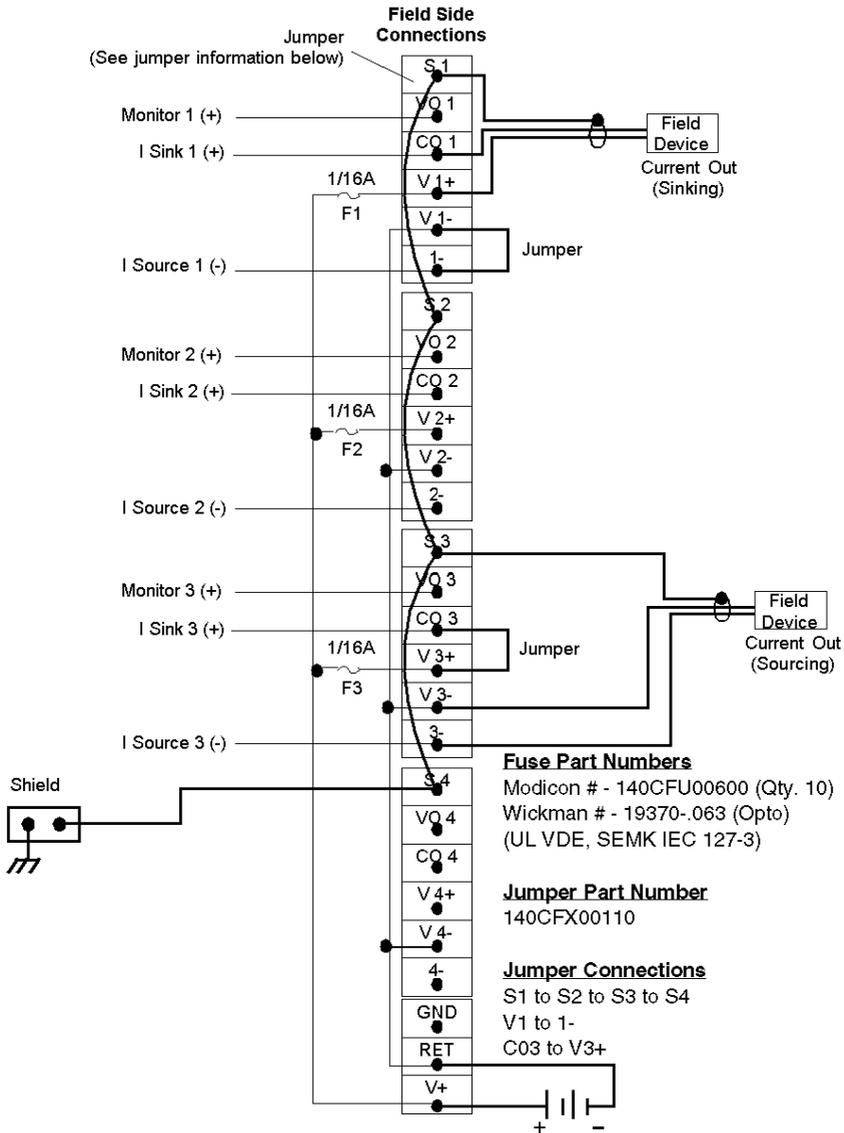

**NOTE:**

1. When using a single power supply, there will be no channel-to-channel isolation of input points.
2. For the required jumper options for the 140ACO02000, see the wiring diagrams in ACO02000 map, wiring diagram (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*).
3. The GND (ground) terminal point is not connected.

## 140CFK00400 Quantum CableFast Cabling Block


### Overview

The K block is used for analog outputs. This interface provides plus, minus, shield, and power supply interface for both field and loop power configurations.

See Common Features of the CableFast Cabling System (*see page 403*) for information on common specifications and features of CableFast cabling blocks.

### Terminal Block

The following figure shows the 140CFK00400 terminal block.

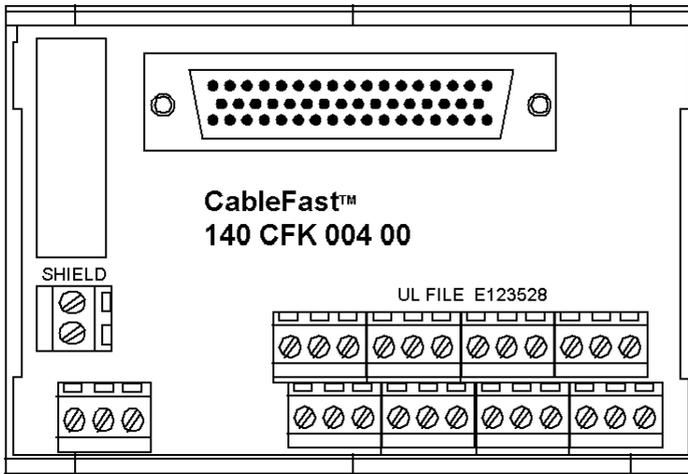



### Application Notes

The following are the application notes for the 140CFK00400 module.

- 1. Configuration** – Four analog outputs with a common loop supply. Each point is allocated four terminals.
- 2. Compatibility** – This terminal block provides four individually unfused connection point sets for the 140ACO02000 and 140AVO02000 analog output modules.


### Dimensions

The following figures show the dimensions for the 140CFK00400 module.

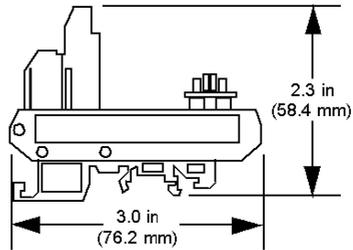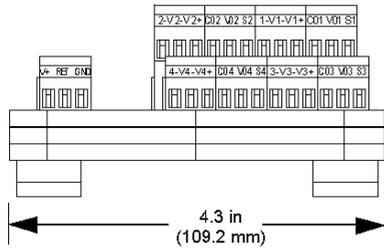

### Wiring Diagram (Source Grounding)

The following shows the wiring for the 140CFK00400 (source grounding) module.

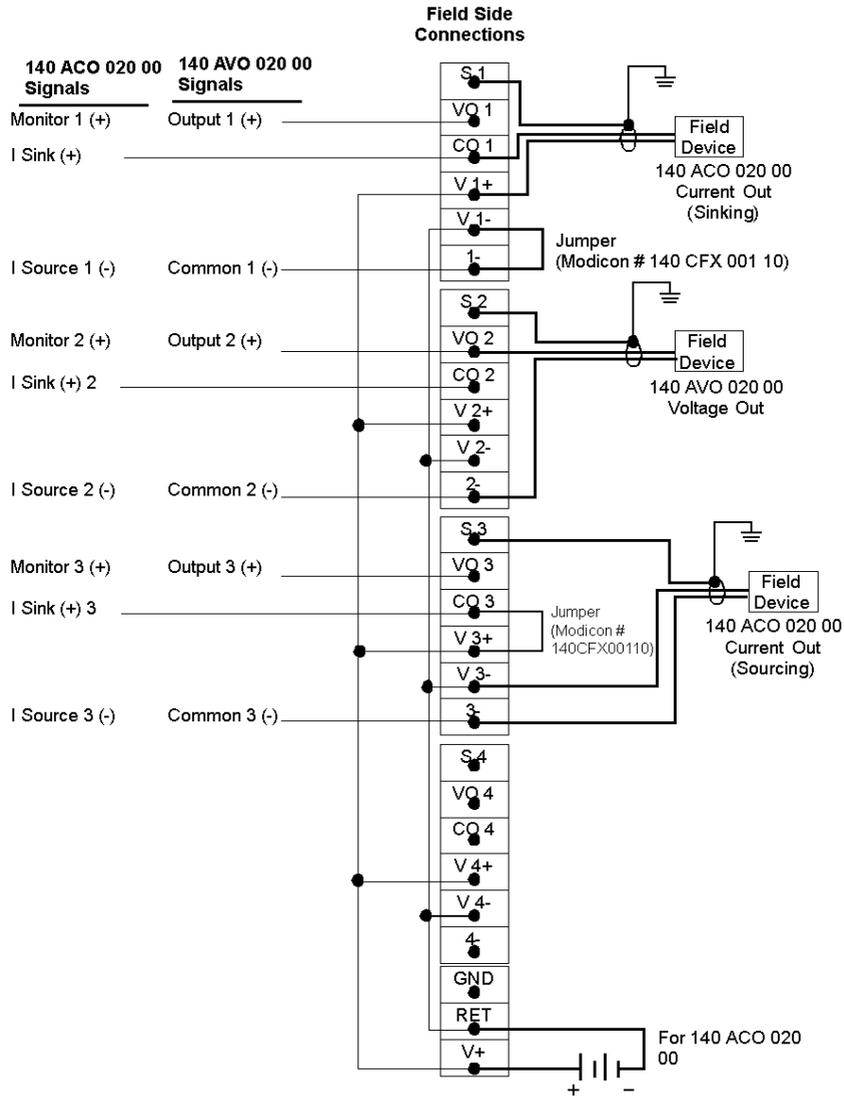


**NOTE:**

1. When used with the 140AVO02000 analog voltage out module, the master override connections and range select must be made on the Quantum I/O connector.
2. When using a single power supply, there will be no channel-to-channel isolation of input points.
3. For the required jumper options for the 140ACO02000, see wiring diagram in ACO02000 I/O Module (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*).
4. The GND (ground) terminal point is not connected.

### Wiring Diagram (Instrument Grounding)

The following figure shows the wiring for the 140CFK00400 (instrument grounding) module.

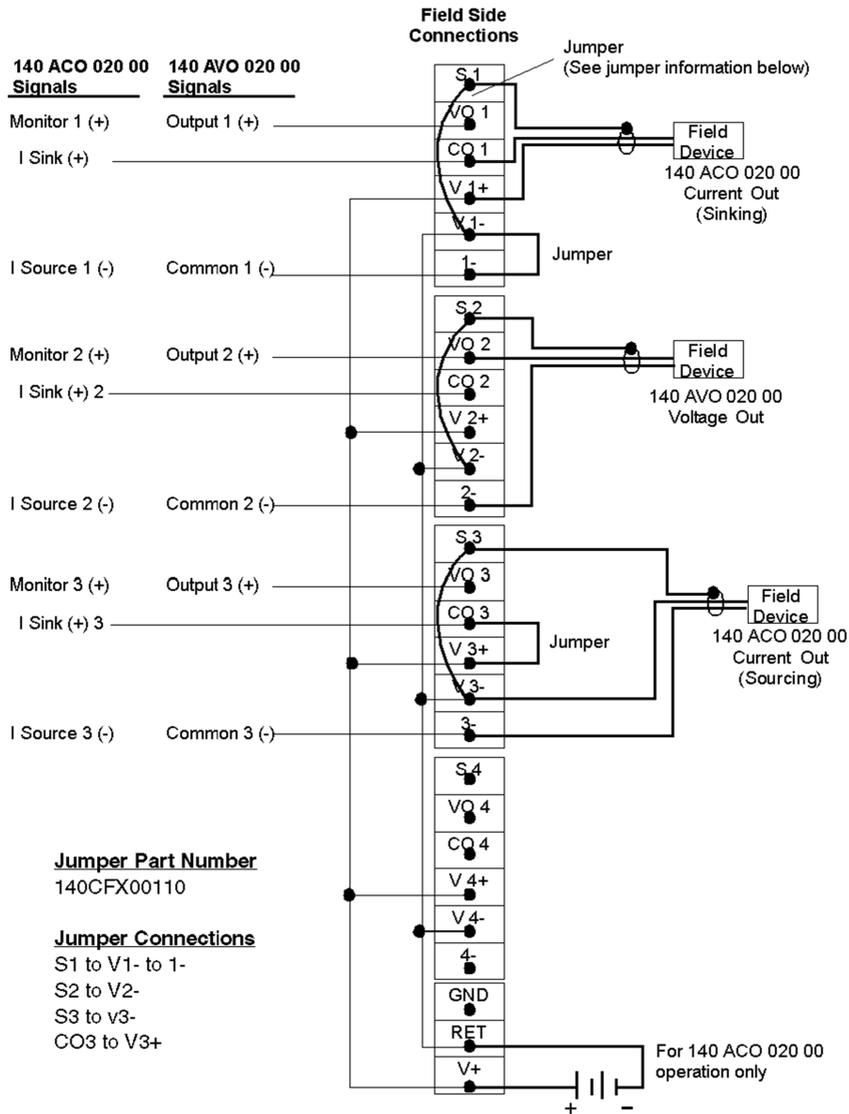

**NOTE:**

1. When used with the 140AVO02000 analog voltage out module, the master override connections and range select must be made on the Quantum I/O connector.
2. When using a single power supply, there will be no channel-to-channel isolation of input points.
3. For the required jumper options for the 140ACO02000 and the AVO02000, see wiring diagrams in ACO02000 I/O Module (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*) and the AVO02000 module (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*).
4. The GND (ground) terminal point is not connected.



**NOTE:**

1. When used with the 140AVO02000 analog voltage out module, the master override connections and range select must be made on the Quantum I/O connector.
2. When using a single power supply, there will be no channel-to-channel isolation of input points.
3. For wiring the 140ACO02000 and the 140AVO02000, see the wiring diagrams in ACO02000 I/O Module (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*) and AVO02000 module (*see Quantum using EcoStruxure™ Control Expert, Discrete and Analog I/O, Reference Manual*).
4. The GND (ground) terminal point is not connected.

## CableFast Cables

### Cable Specifications


Standard Power	
Cable Diameter	0.43 in. nominal (10.9 mm)
Number of Conductors	8-#20 AWG (0.8 mm), 7/28 tinned annealed copper; semi rigid PVC32-#26 AWG (0.4 mm), 7/34 tinned annealed copper; semi rigid PVC
Bend Radius (I.D.)	0.75 in. min. (19.0 mm)
High Power	
Cable Diameter	0.55 in. nominal (14.0 mm)
Number of Conductors	8-#18 AWG (1.0 mm), 16/30 tinned annealed copper; semi rigid PVC32-#20 AWG (0.8 mm), 10/30 tinned annealed copper; semi rigid PVC
Bend Radius (I.D.)	38.1 mm (1.50 in) min.
Common Specifications	
Cable Jacket	Jacket color: black, 0.040 in wall min, flexible PVC
Wire Strip Length	8 mm (0.32 in)
Wire Marking	See the wire color coding table
Wire Rating	300 V, 105 °C UL rated 2517, CSA Type AWM 1/2 FT1
Cable Rating	300 V, 105 °C rated
Shielding	Aluminum/polyester tape (aluminum side out) attached at connector body (360 °).#22 AWG, 7/30 drain wire.Shield resistance 16.55 Ω/M ft nominal
Agency Approval	UL-758; AWM style 2517 VW-1 and CSA C22:210.2; AWM I/II A/B FT1

### Cable Lengths

Cable Lengths	Terminated		Pigtail
	Standard Power	High Power	High Power
0.91 m (3 ft)	X	X	
1.82 m (6 ft)	X	X	X
2.73 m (9 ft)	X	X	
3.64 m (12 ft)	X	X	
4.6 m (15 ft)			X

### Inner Wire Color Codes


The following diagram represents the physical mapping of colors on the standard cablefast wires:

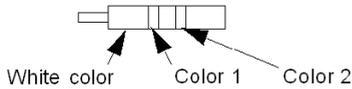

The following table describes the colors mapping of the standard cablefast wires:

Wire/ Pin #	AWG for Standard Power Cable	AWG for High Power Cable	Color	Wire/ Pin #	AWG for Standard Power Cable	AWG for High Power Cable	Color
1	26	20	Black	21	26	20	White/Blue
2	26	20	Brown	22	26	20	White/Violet
3	26	20	Red	23	26	20	White/Gray
4	26	20	Orange	24	26	20	White/ Black/ Brown
5	26	20	Yellow	25	26	20	White/ Black/ Red
6	26	20	Green	26	26	20	White/ Black/ Orange
7	26	20	Blue	27	26	20	White/ Black/ Yellow
8	26	20	Violet	28	26	20	White/ Black/ Green
9	20	18	Black	29	20	20	Yellow
10	20	18	Brown	30	20	18	Green
11	26	20	Gray	31	26	18	White/ Black/ Blue
12	26	20	White	32	26	20	White/ Black/ Violet
13	26	20	White/ Black	33	26	20	White/ Black/ Gray
14	26	20	White/ Brown	34	26	20	White/ Brown/ Red
15	26	20	White/ Red	35	26	20	White/ Brown/ Orange
16	26	20	White/ Orange	36	26	20	White/ Brown/ Yellow
17	26	20	White/Yellow	37	26	20	White/ Brown/ Green
18	26	20	White/ Green	38	26	20	White/ Brown/ Blue
19	20	18	Red	39	20	18	Blue
20	20	18	Orange	40	20	18	Violet

The following diagram represents the physical mapping of colors on the substitution cablefast wires:

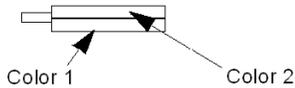


The following table describes the colors mapping of the substitution cablefast wires:

Wire/ Pin #	AWG for Standard Power Cable	AWG for High Power Cable	Color	Wire/ Pin #	AWG for Standard Power Cable	AWG for High Power Cable	Color
1	26	20	Black	21	26	20	White/Blue
2	26	20	Brown	22	26	20	White/Violet
3	26	20	Red	23	26	20	White/Gray
4	26	20	Orange	24	26	20	Black/ Brown
5	26	20	Yellow	25	26	20	Black/ Red
6	26	20	Green	26	26	20	Black/ Orange
7	26	20	Blue	27	26	20	Black/ Yellow
8	26	20	Violet	28	26	20	Black/ Green
9	20	18	Black	29	20	20	Yellow
10	20	18	Brown	30	20	18	Green
11	26	20	Gray	31	26	18	Black/ Blue
12	26	20	White	32	26	20	Black/ Violet
13	26	20	White/ Black	33	26	20	Black/ Gray
14	26	20	White/ Brown	34	26	20	Brown/ Red
15	26	20	White/ Red	35	26	20	Brown/ Orange
16	26	20	White/ Orange	36	26	20	Brown/ Yellow
17	26	20	White/Yellow	37	26	20	Brown/ Green
18	26	20	White/ Green	38	26	20	Brown/ Blue
19	20	18	Red	39	20	18	Blue
20	20	18	Orange	40	20	18	Violet

### 140 XTS Terminated Cables

Part Number	Cable Type		Cable Description
	Standard Power	High Power	
140 XTS 002 03	X		CableFast system cable with Quantum I/O connector, 0.9 m (3 ft) and D-sub connector
140 XTS 012 03		X	
140 XTS 002 06	X		CableFast system cable with Quantum I/O connector, 1.8 m (6 ft) and D-sub connector
140 XTS 012 06		X	
140 XTS 002 09	X		CableFast system cable with Quantum I/O connector, 2.7 m (9 ft) and D-sub connector
140 XTS 012 09		X	
140 XTS 002 12	X		CableFast system cable with Quantum I/O connector, 3.7 m (12 ft) and D-sub connector
140 XTS 012 12		X	


### I/O Connector

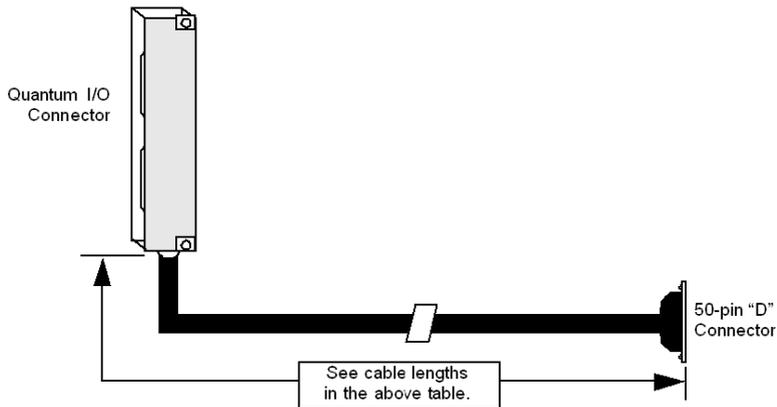

### 140 XCA 102 Pigtails

Part Number	Cable Type		Cable Description
	Standard Power	High Power	
140 XCA 102 06		X	CableFast system cable, 6 ft (1.8 m), with D-sub connector and pigtails
140 XCA 102 15		X	CableFast system cable, 4.6 m (15 ft), with D-sub connector and pigtails


### Pigtail Leads

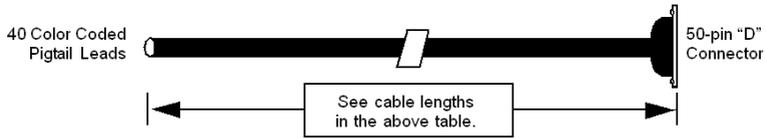

### 140 XTS 102 Pigtails

Part Number	Cable Type		Cable Description
	Standard Power	High Power	
140 XTS 102 06		X	CableFast system cable with Quantum I/O connector, 1.8 m (6 ft), and pigtail cable
140 XTS 102 15		X	CableFast system cable with Quantum I/O connector, 4.6 m (15 ft), and pigtail cable

### I/O Connector for Pigtail Leads

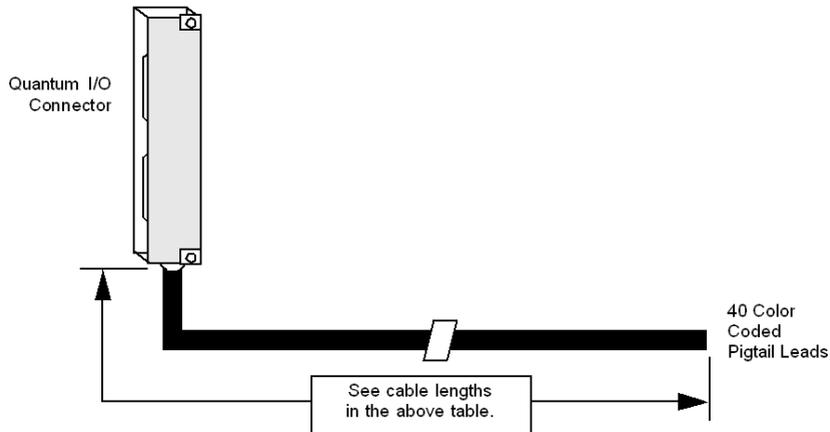

## CableFast Accessories

### Overview

The following information pertains to the CableFast accessories.


### Accessories

The following table shows the part numbers and descriptions for CableFast Accessories.

Part Number	Description	Quantity
140CFU40000	Fuse Kit, Wickmann 4 A	10
140CFU08000	Fuse Kit, Wickmann 0.8 A	10
140CFU00600	Fuse Kit, Wickmann 0.063 A	10
140CFX00110	Terminal Block Common Strip, 10 Position (see below)	10

### Terminal Block Common Strip

The following figure shows the terminal block common strip.

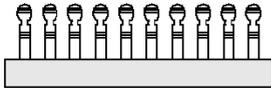


### Jumper, Fuse Replacement

Fuse replacement information is given in the following table.

Part Number	Description	Quantity
140 CFX 002 10	Jumper, Fuse Replacement (see below)	10

The following figure shows a jumper.

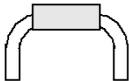

**NOTE:** The jumper is used instead of fuses as a disconnect device.

---

# Appendix E

## ConneXium Ethernet Cabling System

---

### Purpose

This appendix provides an overview on the ConneXium Ethernet Cabling System.

**NOTE:** For further details see *ConneXium Ethernet Cabling System Quick Reference Guide*

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Introduction	470
Configuration	472

## Introduction

### The ConneXium NxS Switch

The internal switch control intelligence of a ConneXium NxS permits the redundant coupling of several network segments to a higher network segment.

The switch learns up to 2000 addresses, allowing the connection of several independent subnetworks. When reset, the switch deletes the learned addresses.

Ports' link integrity is provided through link testing in accordance with IEEE 802.3. Additionally, if the receive cable pair signals are incorrectly connected (if RD+ and RD- are switched), the NxS automatically detects it and reverses the connection polarity. The ConneXium NxS switch uses shielded RJ-45 connectors that are internally wired in the accordance with the MDI-X specification.


### Installation and Security Instructions

<b><i>NOTICE</i></b>
<b>IMPROPER POWER SUPPLY</b> As electricity is used to operate this equipment, comply in every detail with the safety requirements specified in the operating instructions regarding the voltages to apply. <b>Failure to follow these instructions can result in equipment damage.</b>


<b><i>NOTICE</i></b>
<b>NON-SELV SUPPLY VOLTAGES</b> The ConneXium Switches 10/100 Mbps 5TX/2FL or 7TX units are designed for operation with safety extra-low voltage. Accordingly, connect only safety extra-low voltages (SELV) conforming to IEC950/EN60950/VDE0805 to the supply voltage connections. <b>Failure to follow these instructions can result in equipment damage.</b>

**Hardware**

The following figure describes the interfaces, display elements, and controls of the ConneXium Switch 10/100 Mbps 5TX/2FX.

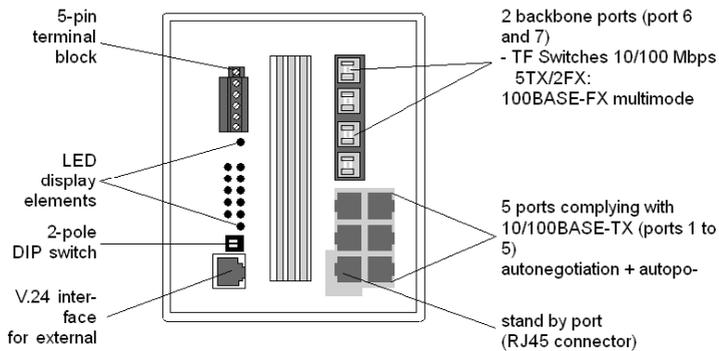

The following figure describes the interfaces, display elements, and controls of the ConneXium Switch 10/100 Mbps 7TX.

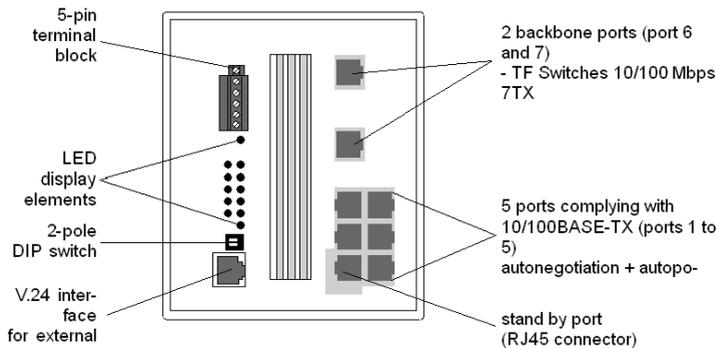

## Configuration

### Line Structure

The NxS switches enable backbones in line structures to be built up. Cascading is carried out using the backbone ports.

### Redundant Ring Structure

With the redundancy manager function of the NxS modules you can close the two ends of a line structured backbone to a redundant ring. The NxS switches are integrated into the ring via the backbone ports (ports 6 and 7). If one section becomes inoperable the reaction time comes to less than 0.5 s at up to 50 NxS modules being cascaded.

### Redundant Coupling of Network Segments


The built-in control intelligence of the NxS allows the redundant coupling of network segments.

The connection of two network segments is realized via two separate paths. The NxS switches in the redundant line get the redundancy function assigned by the DIP switch setting standby.


The NxS modules in the redundant line and the NxS switches in the main line share their operating states via the control line (crossover Ethernet cable).

If the communication can not be established on the main line the redundant NxS modules enable the redundant line within 0.5 s. If the main line is okay again, the NxS switches in the main line inform the redundant NxS modules about this. The main line will be enabled and the redundant line will be disabled within 0.5 s.


The following figure shows an optical line structure.

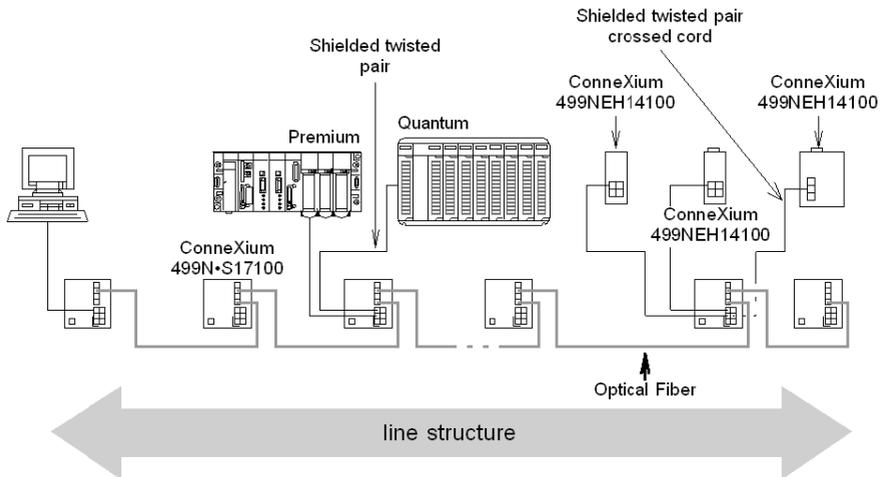

The following figure shows a redundant ring structure.

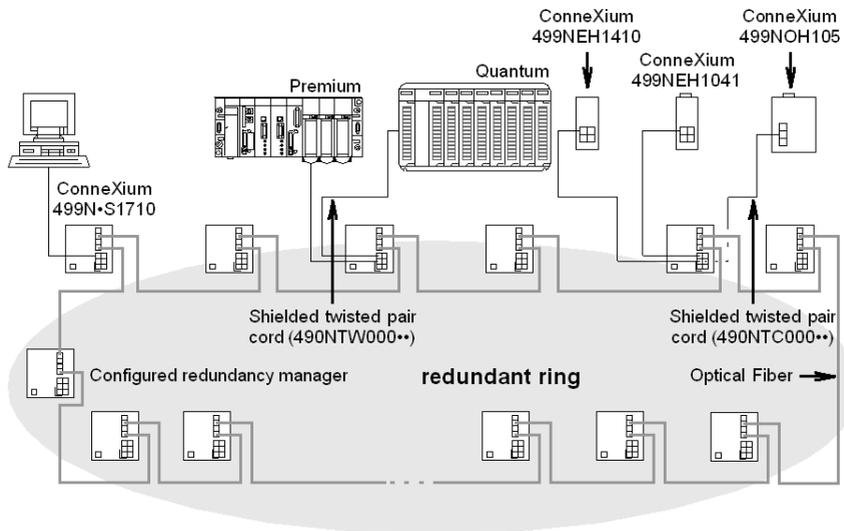

The following figure shows a redundant coupling of optical rings.

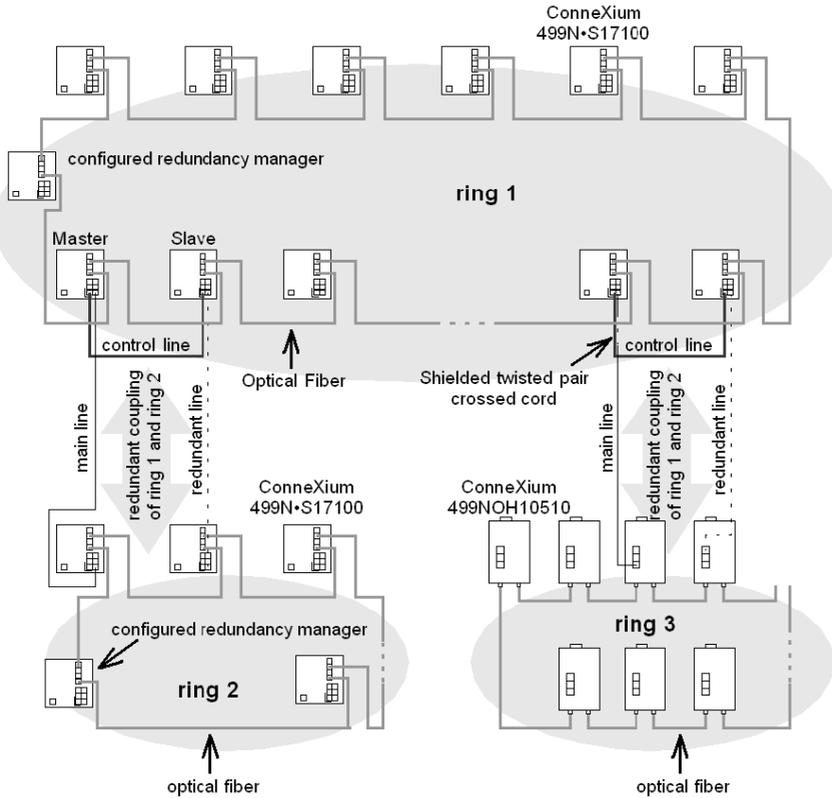

---

# Appendix F

## Agency Approvals and Conformal Coating

---

### Introduction

This appendix provides information on agency approvals and includes conformal coating availability of the indicated Quantum products.

The table below describes the headings used in the tables in this chapter.

Heading	Description
UL 508	certified by Underwriters Laboratories according to UL 508
c-UL (UL for Canada)	certified by Underwriters Laboratories according to relevant Canadian standards (CSA)
CSA 22.2-142	certified by Canadian Standards Association according to CSA 22.2 n° 142
FM (Class I, Division 2)	certified by Factory Mutual for Hazardous Locations Class 1 Division 2
CE	compliant to the EMC and Low Voltage European Directives

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Agency Approvals: Power Supply	476
Agency Approvals: CPU	477
Agency Approvals: I/O	478
Agency Approvals: DIO Drops	480
Agency Approvals: RIO Heads and Drops	481
Agency Approvals: Ethernet Modules	482
Agency Approvals: NOM	483
Agency Approvals: Motion Modules	484
Agency Approvals: Battery and Simulator Modules	485

## Agency Approvals: Power Supply

### Power Supplies Table

The following table provides the agency approvals and conformal coating availability for the power supplies of the indicated Quantum products.

Quantum Part Numbers	Availability of a conformal coated version	Agency Approval Status				
		UL 508	c-UL (UL for Canada)	CSA 22.2-142	FM Class I, Div 2	CE
140 CPS 111 00	y	y	y	y	y	y
140 CPS 114 00	y	y	y	y	y	y
140 CPS 114 10	y	y	y	y	y	y
140 CPS 114 20	y	y	y	y	y	y
140 CPS 124 00	y	y	y	y	y	y
140 CPS 124 20	y	y	y	y	y	y
140 CPS 211 00	y	y	y	y	y	y
140 CPS 214 00	y	y	y	y	y	y
140 CPS 224 00	y	y	y	y	y	y
140 CPS 414 00	y	y	y	y	y	y
140 CPS 424 00	y	y	y	y	y	y
140 CPS 511 00	y	y	y	y	y	y
140 CPS 524 00	y	y	y	y	y	y

## Agency Approvals: CPU

### CPUs Table

The following table provides the agency approvals and conformal coating availability for the CPUs of the indicated Quantum products.

Quantum Part Numbers	Availability of a Conformal Coated Version	Agency Approval Status				
		UL 508	c-UL (UL for Canada)	CSA 22.2-142	FM Class I, Div 2	CE
140 CPU 311 10	y	y	y	y	y	y
140 CPU 434 12U	y	y	y	y	n	y
140 CPU 534 14U	y	y	y	y	n	y
140 CPU 651 50	y	y	y	y	*CSA	y
140 CPU 651 60	y	y	y	y	*CSA	y
140 CPU 651 60S	y	Scheduled	Scheduled	Scheduled	Scheduled	Scheduled
140 CPU 652 60	y	y	y	y	*CSA	y
140 CPU 658 60	y	y	y	y	y	y
140 CPU 670 60	y	y	y	y	*CSA	y
140 CPU 671 60	y	y	y	y	*CSA	y
140 CPU 671 60S	y	Scheduled	Scheduled	Scheduled	Scheduled	Scheduled
140 CPU 672 60	y	Scheduled	Scheduled	Scheduled	Scheduled	Scheduled
140 CPU 672 61	y	Scheduled	Scheduled	Scheduled	Scheduled	Scheduled
140 CPU 678 61	y	y	y	y	y	y

\*CSA Certified by Canadian Standards Association for Hazardous Locations Class 1 Division 2 according to CSA 22.2 n°213.

## Agency Approvals: I/O

### I/O Table

The following table provides the agency approvals and conformal coating availability for the I/O of the indicated Quantum products

Quantum Part Numbers	Availability of a conformal coated version	Agency Approval Status				
		UL 508	c-UL (UL for Canada)	CSA 22.2-142	FM Class I, Div 2	CE
140 ACI 030 00	y	y	y	y	y	y
140 ACI 040 00	y	y	y	y	y	y
140 ACO 020 00	y	y	y	y	y	y
140 ACO 130 00	y	y	y	y	y	y
140 AII 330 00	y	y	y	y	y	y
140 AII 330 10	y	y	y	y	y	y
140 AIO 330 00	y	y	y	y	y	y
140 AMM 090 00	y	y	y	y	y	y
140 ARI 030 10	y	y	y	y	y	y
140 ATI 030 00	y	y	y	y	y	y
140 AVI 030 00	y	y	y	y	y	y
140 AVO 020 00	y	y	y	y	y	y
140 DAI 340 00	y	y	y	y	y	y
140 DAI 353 00	y	y	y	y	y	y
140 DAI 440 00	y	y	y	y	y	y
140 DAI 453 00	y	y	y	y	y	y
140 DAI 540 00	y	y	y	y	y	y
140 DAI 543 00	y	y	y	y	y	y
140 DAI 553 00	y	y	y	y	y	y
140 DAI 740 00	y	y	y	y	y	y
140 DAI 753 00	y	y	y	y	n	y
140 DAM 590 00	y	y	y	y	y	y
140 DAO 840 00	y	y	y	y	y	y
140 DAO 840 10	y	y	y	y	y	y
140 DAO 842 10	y	y	y	y	y	y
140 DAO 842 20	y	y	y	y	y	y
140 DAO 853 00	y	y	y	y	n	y
140 DDI 153 10	y	y	y	y	y	y

Quantum Part Numbers	Availability of a conformal coated version	Agency Approval Status				
		UL 508	c-UL (UL for Canada)	CSA 22.2-142	FM Class I, Div 2	CE
140 DDI 353 00	y	y	y	y	n	y
140 DDI 353 10	y	y	y	y	y	y
140 DDI 673 00	y	y	y	y	y	y
140 DDI 841 00	y	y	y	y	n	y
140 DDI 853 00	y	y	y	y	n	y
140 DDM 390 00	y	y	y	y	y	y
140 DDM 690 00	y	y	y	y	y	y
140 DDO 153 10	y	y	y	y	y	y
140 DDO 353 00	y	y	y	y	y	y
140 DDO 353 01	y	y	y	y	y	y
140 DDO 353 10	y	y	y	y	y	y
140 DDO 364 00	y	y	y	y	y	y
140 DDO 843 00	y	y	y	y	y	y
140 DDO 885 00	y	y	y	y	y	y
140 DII 330 00	y	y	y	y	y	y
140 DIO 330 00	y	y	y	y	y	y
140 DRA 840 00	y	y	y	y	y	y
140 DRC 830 00	y	y	y	y	y	y
140 DSI 353 00	y	y	y	y	y	y
140 DVO 853 00	y	y	y	y	y	y
140 SAI 940 00S	y	Scheduled	Scheduled	Scheduled	Scheduled	Scheduled
140 SDI 953 00S	y	Scheduled	Scheduled	Scheduled	Scheduled	Scheduled
140 SDO 953 00S	y	Scheduled	Scheduled	Scheduled	Scheduled	Scheduled

## Agency Approvals: DIO Drops

### DIO Drops Table

The following table provides the agency approvals and conformal coating availability for the DIO drops of the indicated Quantum products.

Quantum Part Numbers	Availability of a conformal coated version	Agency Approval Status				
		UL 508	c-UL (UL for Canada)	CSA 22.2-142	FM Class I, Div 2	CE
140 CRA 211 10	y	y	y	y	y	y
140 CRA 211 20	y	y	y	y	y	y
140 CRA 212 10	y	y	y	y	y	y
140 CRA 212 20	y	y	y	y	y	y

## Agency Approvals: RIO Heads and Drops

### RIO Heads and Drops Table

The following table provides the agency approvals and conformal coating availability for the RIO Heads and Drops of the indicated Quantum products.

Quantum Part Numbers	Availability of a conformal coated version	Agency Approval Status				
		UL 508	c-UL (UL for Canada)	CSA 22.2-142	FM Class 1, Div 2	CE
140 CRA 931 00	y	y	y	y	y	y
140 CRA 931 01	y	y	y	y	y	y
140 CRA 932 00	y	y	y	y	y	y
140 CRP 931 00	y	y	y	y	y	y
140 CRP 932 00	y	y	y	y	y	y

## Agency Approvals: Ethernet Modules

### Ethernet Modules Table

The following table provides the agency approvals and conformal coating availability for the Ethernet modules of the indicated Quantum products.

Quantum Part Numbers	Availability of a conformal coated version	Agency Approval Status				
		UL 508	c-UL (UL for Canada)	CSA 22.2-142	FM Class I, Div 2	CE
140 NOE 211 00	y	y	y	y	y	y
140 NOE 211 10	y	y	y	y	y	y
140 NOE 251 00	y	y	y	y	y	y
140 NOE 251 10	y	y	y	y	y	y
140 NOE 311 00	y	y	y	y	y	y
140 NOE 351 00	y	y	y	y	y	y
140 NOE 511 00	y	y	y	y	y	y
140 NOE 551 00	y	y	y	y	y	y
140 NOE 771 00	y	y	y	y	y	y
140 NOE 771 01	y	y	y	y	n	y
140 NOE 771 10	y	y	y	y	y	y
140 NOE 771 11	y	y	y	y	y	y
140 NWM 100 00	y	y	y	y	y	y

## Agency Approvals: NOM

### NOM modules Table

The following table provides the agency approvals and conformal coating availability for the NOM modules of the indicated Quantum products.

Quantum Part Numbers	Availability of a conformal coated version	Agency Approval Status				
		UL 508	c-UL (UL for Canada)	CSA 22.2-142	FM Class I, Div 2	CE
140 NOM 211 00	y	y	y	y	y	y
140 NOM 212 00	y	y	y	y	y	y
140 NOM 252 00	y	y	y	y	y	y

## Agency Approvals: Motion Modules

### Motion Modules Table

The following table provides the agency approvals and conformal coating availability for the Motion Modules of the indicated Quantum products.

Quantum Part Numbers	Availability of a conformal coated version	Agency Approval Status				
		UL 508	c-UL (UL for Canada)	CSA 22.2-142	FM Class I, Div 2	CE
140 MMS 425 01	y	y	y	y	y	y
140 MMS 535 02	y	y	y	y	y	y
140 MSB 101 00	y	y	y	y	y	y

## Agency Approvals: Battery and Simulator Modules

### Battery and Simulator Table

The following table provides the agency approvals and conformal coating availability for the battery and simulators modules of the indicated Quantum products.

Quantum Part Numbers	Availability of a conformal coated version	Agency Approval Status				
		UL 508	c-UL (UL for Canada)	CSA 22.2-142	FM Class I, Div 2	CE
140 XCP 900 00	y	y	y	y	y	y
140 XSM 002 00	n	y	y	y	n	y
140 XSM 010 00	n	y	y	y	n	y



---

# Appendix G

## System Specifications

---

### Purpose

This appendix provides an overview on the Quantum System Specifications.

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Mechanical and Electrical Specifications	488
Power Supply Specifications	489
I/O Module Specifications	490
Operating and Storage Conditions	491

## Mechanical and Electrical Specifications

### Mechanical Specifications

Weight	1 kg (2 lb) max
Dimensions (H x D x W)	250 x 103.85 x 40.34 mm (9.84 x 4.09 x 1.59 in)
Wire Size	1-14 AWG or 2-16 AWG max. 20 AWG min.
Material (Enclosures and Bezels)	Polycarbonates
Space Requirements	1 rack slot (only HE-CPU's need 2 rack slots)

### Electrical Specifications

RFI Immunity (IEC 1000-4-3)	80 ...1000 MHz, 10 V/m
Ground Continuity (IEC 1000-4-5)	2 kV shield to ground
Electrostatic Discharge (IEC 1000-4-2)	8 kV air / 4 kV contact
Flammability	Wiring connector: 94V-0 module enclosure: 94V-1

### Agency Approvals

UL 508
CSA 22.2-142
Factory Mutual Class 1, Div 2
European Directive on EMC 89/336/EEC (CE)

**NOTE:** Quantum system modules contain static-sensitive components. Each module is labeled with the following static-sensitive symbol.



## Power Supply Specifications

### AC/DC Power Supplies

Fast transients (IEC 1000-4-4)	2 kV common mode
Damped oscillatory transients	2 kV common mode.
	1 kV differential mode
Surge withstand capability (transients) (IEC 1000-4-5)	2 kV common mode
	1 kV differential mode
Nonperiodic peak input voltage	2.3 times nominal for 1.3 ms (Nominal = DC average or AC peak)

## I/O Module Specifications

### I/O Modules with Operating Voltages Less than 24 V

Fast transients (IEC 1000-4-4)	0.5 kV common mode
Damped oscillatory transients	1 kV common mode
	0.5 kV differential mode
Surge withstand capability (transients) (IEC 1000-4-5)	1 kV common mode
	0.5 kV differential mode

### I/O Modules with 24 to 48 V Operating Voltages

Fast transients (IEC 1000-4-4)	1 kV
Damped oscillatory transients	2 kV common mode
	1 kV differential mode
Surge withstand capability (transients) (IEC 1000-4-5)	1 kV common mode
	0.5 kV differential mode

### I/O Modules with Operating Voltages Greater than 48 V

Fast transients (IEC 1000-4-4)	2 kV
Damped oscillatory transients	2 kV common mode
	1 kV differential mode
Surge withstand capability (transients) (IEC 1000-4-5)	2 kV common mode
	1 kV differential mode

## Operating and Storage Conditions

### Operating Conditions

Temperature	0 ... 60 °C (32 ... 140 °F)
Humidity	90 ... 95% RH non-condensing at 6 °C
Chemical interactions	Enclosures and terminal strips are made of polycarbonates. This material can be damaged by strong alkalis and various hydrocarbons, esters, halogens and ketones in combination with heat. Common products containing these include detergents, PVC products, petroleum products, pesticides, disinfectants, paint removers, and spray paints.
Altitude	2,000 m. When the altitude exceeds this, reduce the 60 °C maximum operating temperature by 6 °C/1000 m of additional elevation.
Vibration	10 ... 57 Hz at 0.075 mm constant displacement amplitude 57 ... 150 Hz at 1 g
Shock	+/-15 g peak, 11 ms, half-sine wave

### Storage Conditions

Temperature	-40 ... 85 °C. C -40 ... 185 °F
Humidity	0 ... 95% RH noncondensing at 60 °C
Free Fall	1 m (3 ft)

### Gas Resistance in Conformally Coated Modules

This table shows the results of the mixed flowing gas test, 22 days exposure

Standard	Gas	Test Requirement	Actual Exposure
EIA364-65 Level III	CL2 (chlorine)	20 PPB, +/- 5 PPB	20 PPB
	NO2 (nitric oxide)	200 PPB, +/- 50 PPB	1250 PPB
	H2S (hydrogen sulfide)	100 PPB, +/- 20 PPB	100 PPB
	SO2 (sulfur oxide)	N/A	300 PPB
ISA-S71.04 (GX Severe)	CL2 (chlorine)	10 PPB	20 PPB
	NO2 ((nitric oxide)	1250 PPB	1250 PPB
	H2S (hydrogen sulfide)	50 PPB	100 PPB
	O2 (sulfur oxide)	300 PPB	300 PPB





## 0-9

- 140 CFC 032 00
  - wiring diagram for 140 DDI 153 10, *419*
- 140CFA04000, *409*
- 140CFB03200, *412*
- 140CFC03200, *417*
- 140CFD03200, *424*
- 140CFE03200, *427*
- 140CFG01600, *429*
- 140CFH00800, *435*
- 140CFI00800, *440*
- 140CFJ00400, *447*
- 140CFK00400, *455*
- 140CFU00600, *468*
- 140CFU04000, *468*
- 140CFU08000, *468*
- 140CFX00110, *468*
- 140CPS11100, *243, 247*
- 140CPS11400, *251*
- 140CPS11410, *255*
- 140CPS11420, *259*
- 140CPS12400, *265*
- 140CPS12420, *269*
- 140CPS21100, *275*
- 140CPS21400, *279*
- 140CPS22400, *285*
- 140CPS41400, *291*
- 140CPS42400, *297*
- 140CPS51100, *303*
- 140CPS52400, *307*
- 140CPU31110, *126*
- 140CPU43412A, *129*
- 140CPU43412U, *129*
- 140CPU53414A/U, *132*
- 140CPU53414B/U, *135*
- 140CPU65150, *171*
- 140CPU65160, *175*
- 140CPU65160S, *179*
- 140CPU65260, *181*
- 140CPU65860, *185*
- 140CPU67060, *188*
- 140CPU67160, *191*
- 140CPU67160S, *194*
- 140CPU67260, *196*
- 140CPU67261, *199*
- 140CPU67861, *202*
- 140DAI34000, *431*
- 140DAI35300, *418*
- 140DAI44000, *431*
- 140DAI45300, *418*
- 140DAI54000, *431*
- 140DAI55300, *418*
- 140DAO84000, *432*
- 140DAO84010, *432*
- 140DAO84210, *433*
- 140DAO84220, *433*
- 140DDI35300, *418*
- 140DDI85300, *418*
- 140DDO15310, *420*
- 140DDO3530X, *422*
- 140DDO84300, *434*
- 140XBE10000, *321*
- 140XBP00200, *315*
- 140XBP00300, *316*
- 140XBP00400, *317*
- 140XBP00600, *318*
- 140XBP01000, *319*
- 140XBP01600, *320*
- 140XCP20000, *353*
- 140XCP50000, *353*
- 140XCP51000, *354*
- 140XCP60000, *354*
- 140XCP90000, *339*
- 140XSM00200, *336*
- 140XSM01000, *330*
- 140XTS00100, *355*
- 140XTS00200, *356*
- 43509446, *362*
- 490NAA27101, *351*
- 490NAA27102, *351*
- 490NAA27103, *351*
- 490NAA27104, *351*

490NAA27106, *351*  
52-0487-000, *362*  
990NAA26320, *351*  
990NAA26350, *351*  
990NAD21110, *351*  
990NAD21130, *351*  
990NAD21810, *351*  
990NAD21830, *351*  
990NAD21910, *351*  
990NAD21930, *351*  
990NAD23000, *351*  
990NAD23010, *351*

## A

adapter module, *139*  
AS-MBII-003, *351*  
AS-MBII-004, *351*

## B

batteries  
    140CPU6xxxx, *168*  
    990XCP90000, *353*  
    990XCP98000, *353*  
    changing, *211*  
    TSXBATM02, *211*  
    TSXBATM03, *211*  
battery for PCMCIA cards  
    lifetime, *215*  
battery for Quantum CPUs  
    lifetime, *99*  
BME CRA 312•0, *139*  
BME XBP xxxx, *139*

## C

CableFast, *402*  
cabling blocks, *402*  
compliance, *475*  
configuring discrete I/O modules, *75*  
CRC (cyclic redundancy check), *144*  
cyclic redundancy check (CRC), *144*

## D

diagnosing Hot Standby, *157*  
diagnosing processors, *97*  
discrete simulator module, *336*  
double code execution, *143*  
double code generation, *143*

## E

EIO adapter module, *139*  
Ethernet, *46*  
Ethernet backplane compatibility, *139*

## G

grounding, *363*

## H

Hot Standby  
    diagnosing, *157*  
Hot Standby (HSBY)  
    CPU, *139*  
    safety CPU , *146*

## I

installing modules, *79*  
installing racks, *79*

## K

key switches, *158*  
keypads, *152*

## L

Low End CPU  
    illustration, *102*

## M

MA-0329-001, *361*  
MA-0329-002, *361*

memory cards, *205*  
memory Cards, *206*  
menus  
    high-end CPUs, *157*  
Modbus bus, *49, 155*  
    SubD ports, *111*  
Modbus Plus network, *49*

## N

network support, *35*

## P

power supply modules, *225*  
process Safety time (PST), *144*  
PST (process Safety time), *144*

## Q

Quantum Safety CPU  
    internal 1oo2 architecture, *143*

## R

rack, *350*  
racks, *30*  
    operating guidelines, *325*

## T

terminal blocks  
    coding, *393*  
TSXMCPC001M, *206*  
TSXMCPC002M, *206*  
TSXMCPC004M, *206*  
TSXMCPC512K, *206*  
TSXMFPP001M, *206*  
TSXMFPP002M, *206*  
TSXMFPP004M, *206*  
TSXMFPP512K, *206*  
TSXMRPC001M, *206*  
TSXMRPC001M7, *206*  
TSXMRPC002M, *206*  
TSXMRPC003M, *206*

TSXMRPC007M, *206*  
TSXMRPC768K, *206*  
TSXMRPM004M, *206*  
TSXMRPM008M, *206*

## W

watchdog, *144*  
wiring accessories, *353*  
    140CFU00600, *468*  
    140CFU04000, *468*  
    140CFU08000, *468*  
    140CFX00110, *468*  
    490NAA27101, *351*  
    490NAA27102, *351*  
    490NAA27103, *351*  
    490NAA27104, *351*  
    490NAA27106, *351*  
    990NAA26320, *351*  
    990NAA26350, *351*  
    990NAD21110, *351*  
    990NAD21130, *351*  
    990NAD21810, *351*  
    990NAD21830, *351*  
    990NAD21910, *351*  
    990NAD21930, *351*  
    990NAD23000, *351*  
    990NAD23010, *351*  
    AS-MBII-003, *351*  
    AS-MBII-004, *351*  
    ConneXium Ethernet, *469*  
wiring configurations, *61*

## X

X80 EIO adapter module, *139*  
XSM00200, *336*

