

# MICRO-100 Battery System Tester User Manual



## NOTES:

- Carefully read the user manual before using, and keep it well for future reference.
- Carefully check the device parts list before using. For any doubt, contact Lancol distributor immediately.
- Due to the product upgrade, tiny difference between the user manual and the device will not be further noticed. Take the device as standard.

Sale & Service address:

Energy Power Save CO.,LTD.

442/2, Chan Road, Thung Watdon, Sathon, Bangkok, Thailand 10120

Tel: +66-(02) -114 7145-9 Auto 5Line Ext. Sales Email : info@7-mars.com

Website: <http://www.7-mars.com>

## Table of Contents

Chapter 1 Product Summary .....	1
1.1 Product Profile .....	1
1.2 Product Function .....	1
1.3 Technical Parameters .....	2
1.4 Working Environment Requirement .....	3
Chapter 2 Tester Structure.....	4
Chapter 3 Operation .....	5
3.1 Pre-Test .....	5
3.1.1 Connect Tester.....	5
3.1.2 Key Description .....	5
3.2 Tester Startup.....	6
3.3 Select Language.....	6
3.4 Battery Test.....	6
3.4.1 IN-VEHICLE or OUT-OF-VEHICLE .....	7
3.4.2 Select Battery Charge State .....	8
3.4.3 Select Battery Type.....	8
3.4.4 Battery System Standard and Rating .....	10
3.4.5 Battery Test Result.....	12
3.5 Cranking Test.....	14
3.6 Charging System and Rectifier Diode Test.....	15
Chapter 4 Daily Maintenance .....	19
4.1 Eliminate Common Fault .....	19
4.1.1 Screen Not Light.....	19

## Chapter 1 Product Summary

### 1.1 Product Profile

MICRO-100 Battery Tester adopts currently the world's most advanced conductance testing technology to easily, quickly and accurately measure the actual cold cranking amps capability of the vehicle starting battery, healthy state of the battery itself, and common fault of the vehicle starting system and charging system, which can help maintenance personnel to find the problem quickly and accurately, thus to achieve quick vehicle repair.

1. Test all automotive cranking lead acid battery, including ordinary lead acid battery, AGM flat plate battery, AGM spiral battery, and Gel battery, etc.
2. Directly detect bad cell battery.
3. Polarity reverse connection protection, reverse connection will not damage the tester or affect the vehicle and battery.
4. Directly test the battery with loss of electricity, no need to full charge before testing.
5. Testing standards include currently the world's majority of battery standards, CCA, BCI, CA, MCA, JIS, DIN, IEC, EN, SAE, GB.
6. Support multi-languages, customer can select different language package, which includes: Chinese Simple, Chinese Traditional, English, Japanese, Russian, Spanish, French, Italian, German, etc. Other languages can also be customized according to user's need.

### 1.2 Product Function

Main functions of MICRO-100 battery tester include: battery test, cranking test, charging test and other additional functions.

**Battery test** is mainly targeted to analyze the battery healthy status to calculate the actual cold cranking capability of the battery and the aging extent, which provide reliable analysis evidence for the test and maintenance of the battery. It notifies the user to replace battery in advance when the battery getting aged.

**Cranking test** is mainly to test and analyze the starting motor. Through testing

the actual required cranking current and cranking voltage of the starting motor, it can find out whether the starting motor works fine. There are several reasons why the starting motor is abnormal: lubricating system fault causing the starting loaded torque increasing or rotor friction of the starting motor causing the increasing friction of the starting motor itself.

**Charging test** is to check and analyze the charging system, including generator, rectifier, rectifier diode, etc., thus to find out whether the output voltage of the generator is normal, the rectifier diode works fine and the charging current is normal. Suppose one of the above mentioned parts is not in normal situation, it will lead to over charge or incomplete charge of the battery, thus the battery will be quickly damaged and also greatly shorten the using life of other loaded electrical appliance.

**Additional functions** include: Set language, voltmeter and screen brightness adjustment.

### 1.3 Technical Parameters

#### 1. Cold Cranking Amps Measure Range:

Measure Standard	Measure Range
CCA	100-800
BCI	100-800
CA	100-800
MCA	100-800
JIS	26A17—130E41L
DIN	100-560
IEC	100-560
EN	100-800
SAE	100-800
GB	100-560

2. Voltage Measure Range: 8-30VDC

#### **1.4 Working Environment Requirement**

Working Environment Temp.: -20°C-60°C

It is applicable for automotive manufacturers, automotive maintenance and repair workshops, automotive battery factories, automotive battery distributors, and educational organizations, etc.

## Chapter 2 Tester Structure

MICRO-100 mainly consists of battery tester main unit and testing cables.  
MICRO-100 Battery Tester main unit cover is made of ABS acid-resistant plastic.



## Chapter 3 Operation

### 3.1 Pre-Test

#### 3.1.1 Connect Tester

Shake the clamps back and forth to make sure they are well connected. Tester requires the two clamps are well connected with the battery poles, otherwise, the test cannot go on. When enter the battery test program, screen prompts "**Check Connection**", do clean the poles and re-connect in the right way.




Tester has reverse connection protection function. When clamps are reversely connected, tester screen will not light, but it damages neither the tester nor the automotive load.

**NOTE:** For parallel connected batteries, break off the cathode connection first, then do single test to each battery. Suppose cathode connection is not cut off, there will be error in test result.

#### 3.1.2 Key Description

-   **Up / Down keys**  
Select upwards or downwards via white UP and DOWN keys.
-  **Return key**  
Return to previous menu via blue RETURN key.
-  **OK key**  
Confirm the selection via green OK key

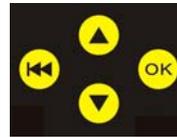

### 3.2 Tester Startup

Tester automatically starts up after the clamps are correctly connected, and displays the Lancol startup interface (Default voltmeter is ON) refer to figure 1.


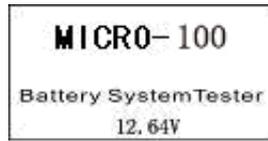


Figure 1, Startup Interface with Voltmeter on

At the middle bottom of the startup interface, it displays the voltmeter value, which can be used as DC voltmeter. DC Voltmeter test range is 8-30DCV, out of which will damage the tester.

### 3.3 Select Language

Press UP/DOWN key to select the Language, Include English, Franch, germany, spanish, Italy etc.

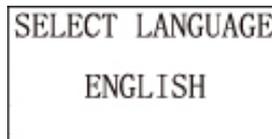

### 3.4 Battery Test

After entering battery test program, tester displays the tester model and version approx. 2 seconds, see figure 3.




Figure 3, Interface with tester model and version

Tester will display the following contents in a sequence, select accordingly.

### 3.4.1 IN-VEHICLE or OUT-OF-VEHICLE

Press UP/DOWN key to select the battery location, in vehicle or out of vehicle, then press OK key to confirm.

**IN-VEHICLE** means battery is connected with vehicle generator or vehicle electrical appliance.

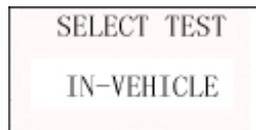

When surface charge detected by the tester, it prompts "SURFACE CHARGE, TURN LIGHTS ON"




Turn lights on as prompted to eliminate battery surface charge, tester will then display the following messages in a sequence:





Now the tester detects the surface charge has been eliminated, turn lights off as prompted, then press OK key. The tester will recover automatic test

**OUT-OF-VEHICLE** means battery is not connected with any of the vehicle loaded, i.e. battery connection is cut off.


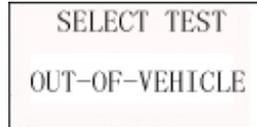


### 3.4.2 Select Battery Charge State

After selecting the battery location, tester will prompt to select the battery charge state, i.e. Before Charge or After Charge.

Press UP/DOWN key to select battery charge state, then press OK key to confirm. In this way, it ensures a more accurate test result.

In Vehicle, select Before Charge for Cold Vehicle and After Charge for Hot Vehicle.

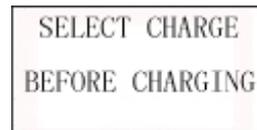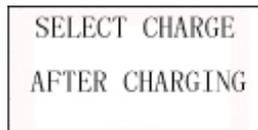

### 3.4.3 Select Battery Type

After the battery charge status selected, tester will prompt to select battery type, i.e. Regular Flooded, AGM Flat Plate or AGM Spiral, and Gel battery. Press UP/DOWN key to select battery type, then press OK key to confirm.

SELECT TYPE  
REGULAR FLOODED

SELECT TYPE  
AGM FLAT PLATE

SELECT TYPE  
GEL

SELECT TYPE  
AGM SPIRAL

When it's IN-VEHICLE test, battery installation way shall also be selected, e.g. TOP, SIDE or REMOTE (This selection is no need for OUT-OF-VEHICLE), then press OK key to confirm. REMOTE is adopted for some in vehicle battery which is too tightly installed to use the test clamps to connect the battery poles.

SELECT TYPE  
TOP POST

SELECT TYPE  
SIDE POST

SELECT TYPE

REMOTE

**NOTE:** For REMOTE test, there will be a little tolerance. For any doubt, take off the battery and select "OUT-OF-VEHICLE" to re-test.

### 3.4.4 Battery System Standard and Rating

MICRO-100 battery tester will test each battery according to the selected system and rating.

Use UP/DOWN key to select according to the **actual system standard and rating** marked on the battery. Use UP/DOWN key to select according to the actual system standard and rating marked on the battery. See in the below picture, the arrow indicated location.



**CCA:** Cold Cranking Amps, specified by SAE&BCI, most frequently used value for starting battery at 0°F (-18°C).

**BCI:** Battery Council International standard


**CA:** Cranking Amps standard, effective starting current value at 0°C

**MCA:** Marine Cranking Amps standard, effective starting current value at 0°C.

**JIS:** Japan Industrial Standard, displayed on the battery as combination of the numbers and letters, e.g. 55D23,80D26.


**DIN:** German Auto Industry Committee Standard

- IEC:** Internal Electro technical Commission Standard  
**EN:** European Automobile Industry Association Standard  
**SAE:** Society of Automotive Engineers Standard  
**GB:** China National Standard

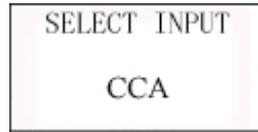

Rating range as following:

Measure Standard	Measure Range
CCA	100-800
BCI	100-800
CA	100-800
MCA	100-800
JIS	26A17—130E41L
DIN	100-560
IEC	100-560
EN	100-800
SAE	100-800
GB	100-560

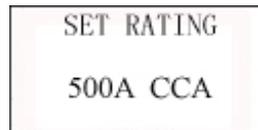

Input correct test standard and rating, press OK key, tester starts to test, and dynamic interface "TESTING" prompted. See below:



It takes around 3 seconds to display the battery test result.

### 3.4.5 Battery Test Result

Battery test result includes 5 types as following:

#### 1) Good Battery

SOH:96%	SOC:98%
12.64V	490A
Rating	500A
GOOD BATTERY	

The battery is without any problem, please be relaxed to use!

**NOTE:** SOH means State of Health

SOC means State of Charge

#### 2) Good, Recharge

SOH:78%	SOC:30%
12.20V	440A
Rating	500A
GOOD, RECHARGE	

Good battery but low current, recharge before using.

### 3) Replace

SOH:46%	SOC:80%
12.68V	340A
Rating	500A
REPLACE	

The battery is near to or already reached the end of the using life, replace battery, otherwise, bigger danger will be followed.

### 4) Bad Cell, Replace

SOH:0%	SOC:20%
10.60V	0A
Rating	500A
BAD CELL, REPLACE	

Battery interior damaged, broken cell or short circuit, replace battery.

### 5) Charge, Retest

SOH:39%	SOC:20%
12.08V	310A
Rating	500A
CHARGE-RETEST	

Unstable battery shall be recharged and retested to avoid error. If same test result appears after recharge and retest, the battery is regarded as damaged, replace the battery.


**Attention:** If "Replace" resulted from IN-VEHICLE mode, it might be the reason that vehicle cable is not well connected with the battery. Ensure to cut off the cable and retest the battery under OUT-OF-VEHICLE before making a decision to replace battery.

**NOTE:** After testing, if need to return, press RETURN key to directly return to the startup interface.


After testing: if it's "IN-VEHICLE" test state, press OK key will bring to Cranking Test.

### 3.5 Cranking Test

Tester prompts as following:

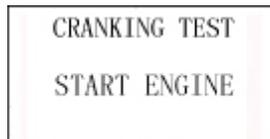

Starting the engine as prompted, tester will automatically complete the cranking test and display the result.

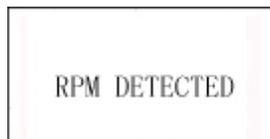

Normally, cranking voltage value lower than 9.6V is regarded as abnormal and it is OK if it is higher than 9.6V.

Test result of the tester includes actual cranking voltage and actual cranking time.

TIMES	780ms
CRANKING	NORMAL
	10.13V

When cranking test is abnormal, battery test result will also be displayed at the same time.

TIMES	1020ms
CRANKING	LOW
REPLACE	9.12V

This is for the convenience of the maintenance personnel to quickly know the whole state of the starting system according to the data. After testing finished, do not shut down the engine, press OK key to enter Charging Test.

### 3.6 Charging System and Rectifier Diode Test


When enter the charging test, tester will prompt "Charging Test?"

CHARGING TEST ?
-----------------


Press OK key again to start the charging test.

**NOTE:** Do not shut down the engine during the test. All electrical appliance and device are in OFF state. Turn on/off any electrical appliance in the vehicle during the test will affect the accuracy of the test result.


Tester will do the following tests in a sequence:

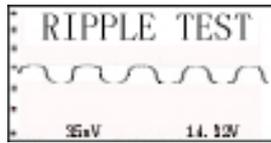

For ripple test, tester will display the real time ripple and meanwhile, shows ripple volt and charging volt values at the bottom line. It takes approx. 6 seconds for the ripple test. After the ripple test, tester will automatically start the loaded voltage test.

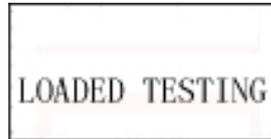

Loaded Volt Test takes approx. 3 seconds, then it hints "Step on accelerator to increase engine rotating speed"

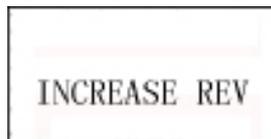

Operate accordingly to increase the engine rotating speed to 3000turns or above, and keep for 5 seconds. Tester starts the charging volt test after increase rev detected.



After the test finished, tester displays the effective charging volts, ripple test result and charging test result.

CHARGING	NORMAL
LOADED	14.18V
LOADED	14.36V
RIPPLE	NORMAL

NOTE: If no increase rev detected, it shall be the fault of generator regulator or connection with battery failed. Tester will try 3 times to further detect, if still failed, it will skip the increase rev detect and the test result displays "No Volt Output". See below:

NO OUTPUT	
LOADED	12.81V
LOADED	12.81V
RIPPLE	NORMAL

Check the connection between generator and battery, then retest.

**Charging Test Result:**

**1) Charging Volt: Normal**

Charging system shows the generator output normal, no problem detected.

**2) Charging Volt: Low**

Charging volt of the charging system is low.

Check drive belt of the generator whether slip or running off. Check the connection between generator and battery is normal or not.

If both of the drive belt and the connection are in good condition, follow the manufacturer's suggestion to eliminate generator fault.

**3) Charging Volt: High**

Generator output volt is high.

Since most of the vehicle generators are using internal regulator, the generator assembly has to be replaced.(Some old style cars are using external regulator, then directly replace the regulator.)

The normal high volt of the voltage regulator is maximum  $14.7 \pm 0.5V$ . If charging volt is too high, it will overcharge the battery. Therefore the battery life will be shortened and troubles will be caused.

**4) No Volt Output:**

No generator volt output is detected. Check the generator connection cable and the belt whether they are normal.

**5) Diode Test:**

Through the test of charging current ripple, tester will find out whether the diode is normal or not. When ripple volt is too high, it proves at least one diode is damaged. Check and replace the diode. Till now, all tests have been done.

## **Chapter 4 Daily Maintenance**

### **4.1 Eliminate Common Fault**

#### **4.1.1 Screen Not Light**

- Check connection with the battery whether it's well or reverse connected.
- Check the test cable whether break off or drop down.

## **Warranty Clause**

The warranty clause is only applicable to users and distributors who purchased Lanco products via the regular process.

Within 1 years since the delivery, Lanco guarantee the products damaged due to the material or craft defects. Any damage to the device or part due to abuse, unauthorized change, usage other than designed to, operation not following the user manual, etc. is out of the warranty. Compensation for the auto instrument damage due to the device defect is limited to repair or replacement, Lanco is not responsible for any indirect or accidental loss. Lanco will clarify the device damage according to the specified test method. Any distributor, employee and business representative of Lanco are not entitled to do any confirmation, presentation or promise related to Lanco products.

## **Statement of Disclaimer**

The above warranty clause can substitute for any other form of warranty clauses.

## **Purchase Order**

Replaceable parts and optional parts are available from Lanco authorized suppliers. Purchase order should include:

Order quantity

Part Number

Part Name

## **Customer Service Center**

Any question during the operation, please call to 86-28-85272353 or 13708091072.

For maintenance and repair, please send back to Lanco with Warranty Card, Product Qualified Card, Purchase Invoice and problem description. Lanco will maintain and repair the device for free when it is within the warranty. Otherwise, Lanco will charge the maintenance and repair and the shipping.

Lanco address:

Chengdu Lanco High-Tech company,

Lanco Industrial Park, North district, Gangda avenue, Xiandai industrial Port,

Statement: Lanco reserves the rights to make any change to product designs and specifications without notice. The actual object may differ a little from the descriptions in the manual in physical appearance, color and configuration. We have tried our best to make the descriptions and illustrations in the manual as accurate as possible, and defects are inevitable, if you have any question, please contact local dealer or after-sale service center of Lanco, Lanco does not bear any responsibility arising from misunderstandings.

Sale & Service address:

Energy Power Save CO.,LTD.

442/2, Chan Road, Thung Watdon, Sathon, Bangkok, Thailand 10120

Tel: +66-(02) -114 7145-9 Auto 5Line Ext. Sales Email : info@7-mars.com

Website: <http://www.7-mars.com>