## ITECH

# LTECH

## DMX512 DECODER

IT-924











www.ltech-led.com

## Product introduction

- 1. Designed for Hi-power multiple channels application, 24 channels output, and up to 1728W output power.
- 2. Easy operation with digital display and the touch buttons.
- 3. 3-pin XLR, 5-pin XLR, RJ45 and green terminal DMX interface with photoelectric isolation, improve signal transmission efficiency and anti-interference ability, the green terminal also has signal amplifier function.
- 4. With RDM remote management protocol, the operations can be completed via the RDM master console, such as parameters browsing & setting, DMX address setting, equipment recognition, etc.
- 5. With short circuit, over current and over temp, protection, as well as warning function when fault.
- 6. With firmware upgrade function.
- 7. With fast self-testing function.
- 8. High/low PWM frequency for optional
- 9. 16bit (65536 levels) / 8bit (256 levels) grey level optional.























protection

protection

Input voltage :

### ITECH

## Technical specs

Model: IT-924

Input signal : DMX512/RDM

Current load : 3A × 24CH Max 72A

Output power: [0~36W...72W] × 24CH Max. 1728W

12~24Vdc

DMX interface : 3-pin XLR, 5-pin XLR, RJ45, Green terminal

Grey level : 8bit (256 levels) / 16bit (65536 levels)

Photoelectric isolation: Yes

Protection · Short circuit / Over current / Over temperature

Working temperature : -30°C~65°C

Dimensions: L300×W122×H39mm Package size : L313×W127×H41mm

Weight (G.W.): 1180q










ITECH


## Product size

Unit: mm

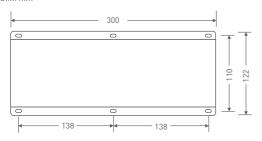



Main component description

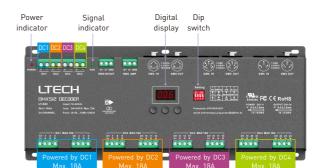


### Digital display



· Digital display will enter the locked mode without operating after 15s.



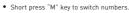

• Press "^""v" key to adjust value.


Dip switch



1	2	3	4
Bit	PWM Hz	DIM	Screen
T	T	T	T
16	Hig	Smooth	30S off
4	4	4	Α
8	Low	Std	Enable



DMX/RDM input & output

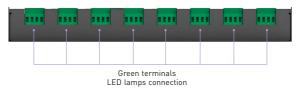


LTECH




## Wiring diagram


### 1 DMX console connection:

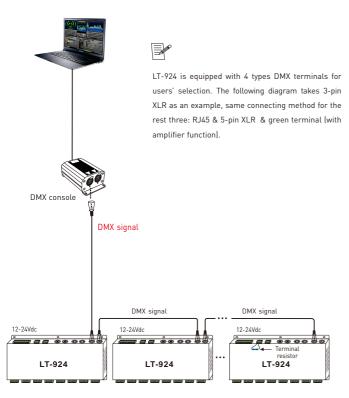

\* If the recoil effect occurs because of longer signal line or bad line quality, please try to connect 0.25W 90-120 $\Omega$  terminal resistor at the end of each line.

### 2. Connecting LED lights:

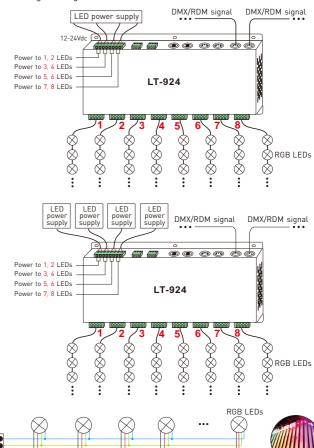

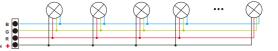

## ITECH

### 3. The connection diagram of 4 kinds of DMX/RDM terminals:




5-pin XLR connected in parallel



3-pin XLR connected in parallel



Green terminal connected in parallel

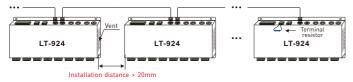


Rj45 connected in parallel

These 4 terminals can be connected in a mixed way.

Installation attention: please reserve enough ventilation distance between decoders (>20mm), be sure not to block the vent, or will affect lifetime of decoder for poor heat dissipation.

### 4. The connection diagram of AMP signal amplifier terminal:

\* Connecting with green terminal or an extra amplifier will be needed when more than 32 decoders are connected or use overlong signal line (as shown below). Signal amplifier should not be more than 5 times continuously.

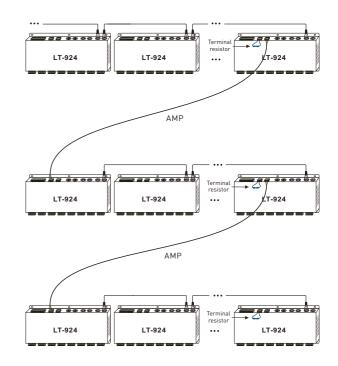

ITECH



### Attention:


- 1. The product shall be installed and serviced by the qualified person.
- 2. This product is non-waterproof. Please avoid the sun and rain. When installed outdoors please ensure it is mounted in a water proof enclosure.
- Good heat dissipation will prolong the working life of the controller. Please ensure good ventilation.
- Please check if the output voltage of the LED power supply used comply with the working voltage of the product.
- Please ensure that adequate sized cable is used from the controller to the LED lights to carry the current. Please also ensure that the cable is secured tightly in the connector.
- 6. Ensure all wire connections and polarities are correct before applying power to avoid any damages to the LED lights.
- 7. If a fault occurs, please return the product to your supplier. Do not attempt to fix this product by yourself.

## Warranty Agreement:

- 1. We provide lifelong technical assistance with this product:
  - A 5-year warranty is given from the date of purchase. The warranty is for free repair or replacement if cover manufacturing faults only.
  - For faults beyond the 5-year warranty, we reserve the right to charge for time and parts.
- 2. Warranty exclusions below:
  - Any man-made damages caused from improper operation, or connecting to excess voltage and overloading.
  - The product appears to have excessive physical damage.
  - Damage due to natural disasters and force majeure.
  - Warranty label, fragile label and unique barcode label have been damaged.
  - The product has been replaced by a brand new product.
- Repair or replacement as provided under this warranty is the exclusive remedy to the customer. We shall not be liable for any incidental or consequential damages for breach of any stipulation in this warranty.
- Any amendment or adjustment to this warranty must be approved in writing by our company only.

## Work with RDM editor

LT-924 can work with LTECH RDM editor (Model: WiFi-RDM01) to realize changing the parameters by long-range setting, wiring diagram as below:

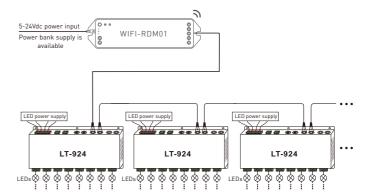





## RDM editor App interface instruction

Download the App, setting LT-924 parameters (dimming range, brightness, boot fade time etc.) after well connecting the RDM editor, more details, please check the manual of WiFi-RDM01.

Well installation of products first, then working with WiFi -RDM01 to realize setting parameters and firmware upgrade by App.







- a: click"Add", edited the address in corresponding box.
- b: Click"ID", get more product details.
- c: Click" 🚣 ", enter edited interface
- d: Click"No.", issue the recognizing command.

Supporting WiFi-RDM01 upgrade and DMX driver upgrade.

\* No further notice if any changes in the manual.

Product function depends on the goods.

Please feel free to contact your supplier if any question.